
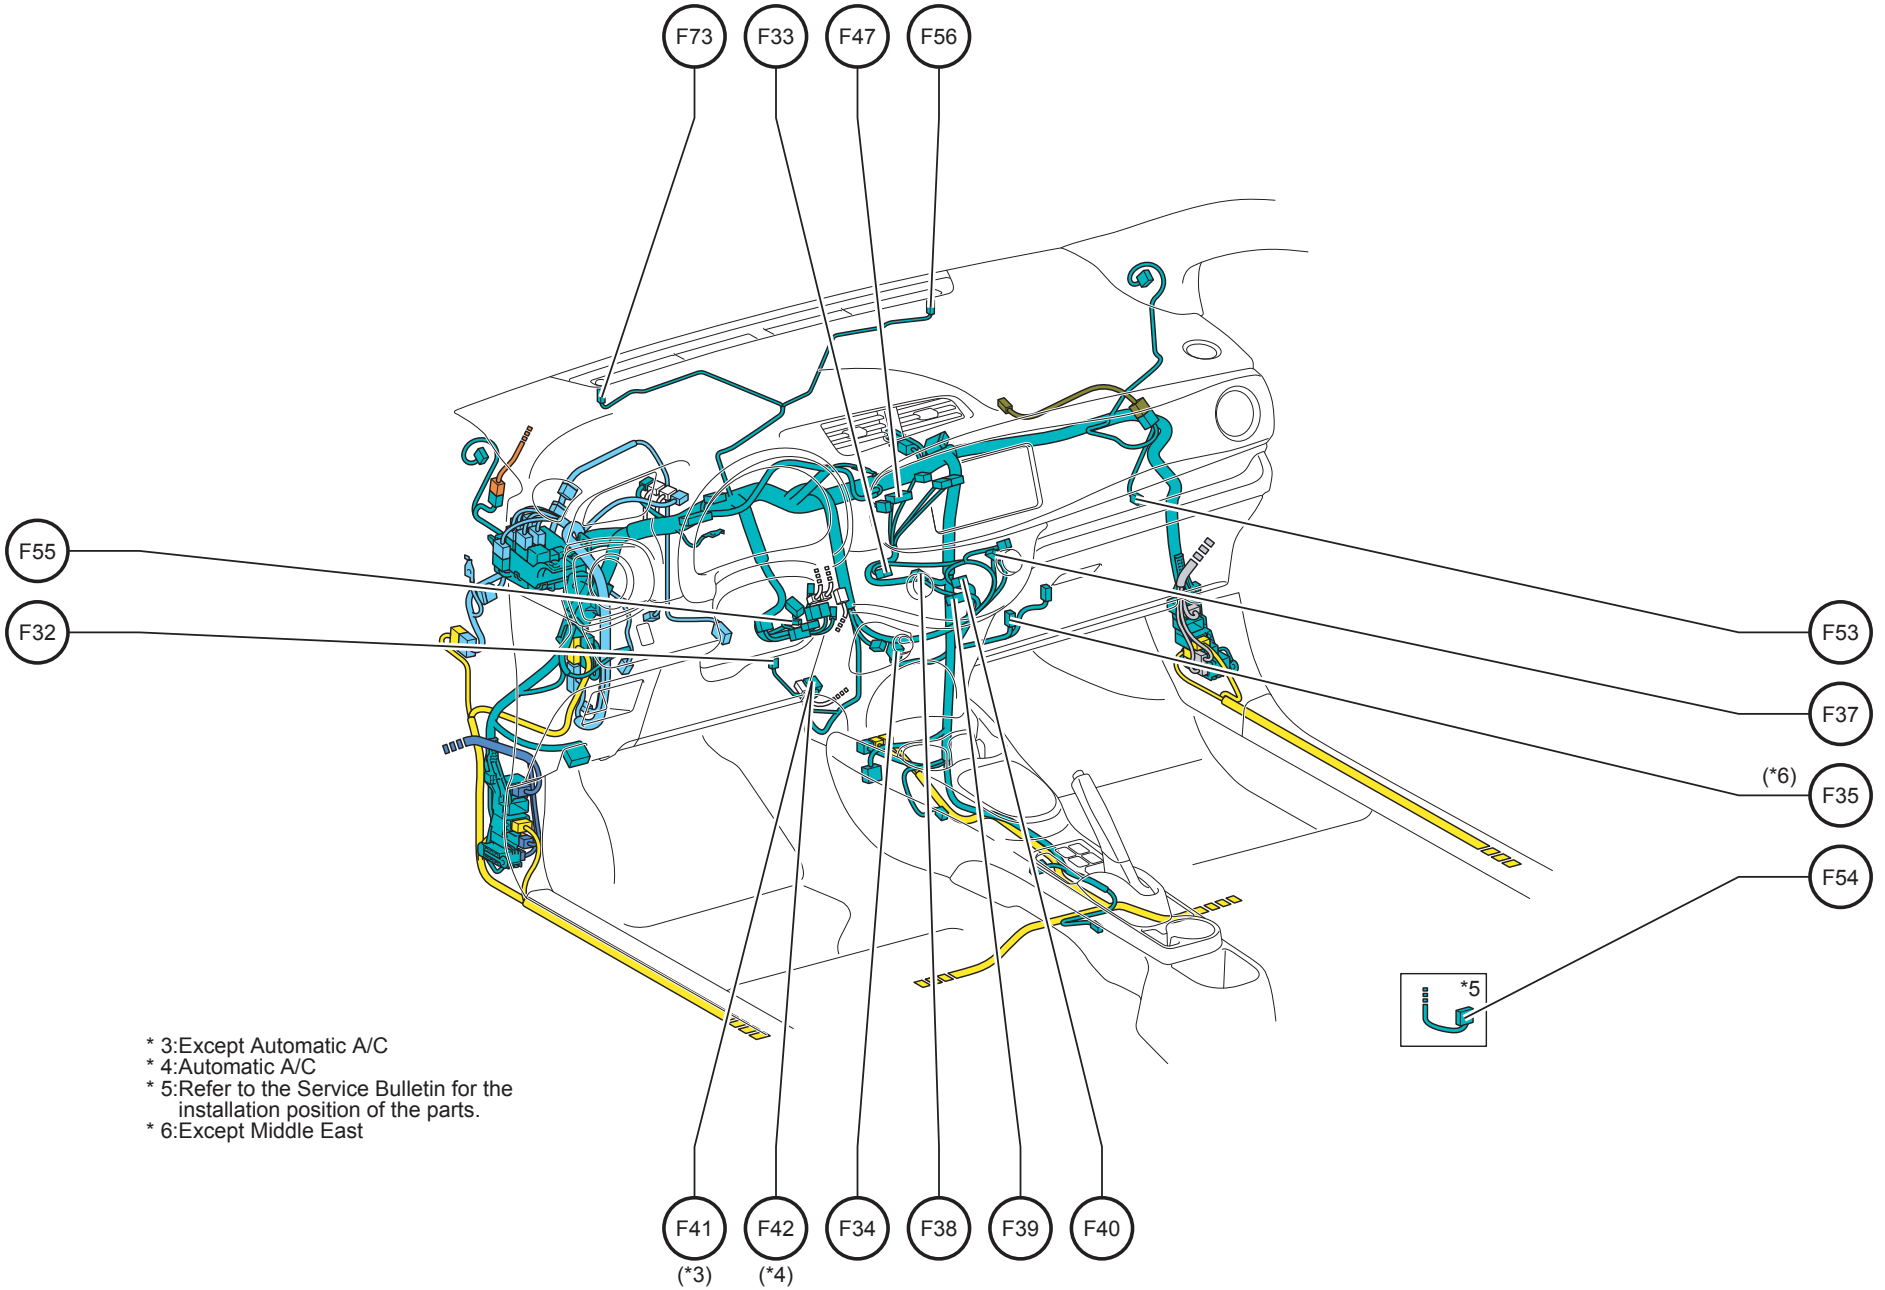



* 3:Except Automatic A/C
* 4:Automatic A/C
* 5:Refer to the Service Bulletin for the installation position of the parts.
* 6:Except Middle East

F 32 No. 1 Cooler Thermistor
F 33 Cooler (Room Temperature Sensor) Thermistor
F 34 Blower Assembly
F 35 Blower with Fan Motor Sub-Assembly
F 37 No. 3 Heater Control Sub-Assembly
F 38 No. 1 Heater Control Sub-Assembly
F 39 No. 2 Heater Control Sub-Assembly
F 40 A/C Control Assembly
F 41 A/C Amplifier Assembly
F 42 A/C Amplifier Assembly
F 47 Radio Receiver Assembly
F 53 No. 1 Stereo Jack Adapter Assembly
F 54 Transponder Key ECU Assembly
F 55 Transponder Key Amplifier
F 56 Theft Warning Indicator Light Assembly
F 73 Automatic Light Control Sensor


F 32
White




F 33
Black




F 34
Black

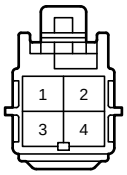


F 35
Black

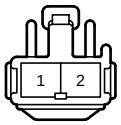


F 37
Black

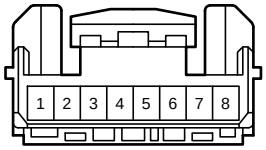


F 38
White

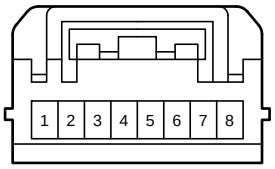


F 39
White

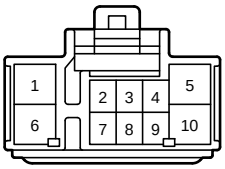


F 40
Black

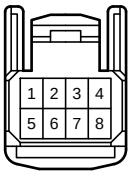


F 41
Black

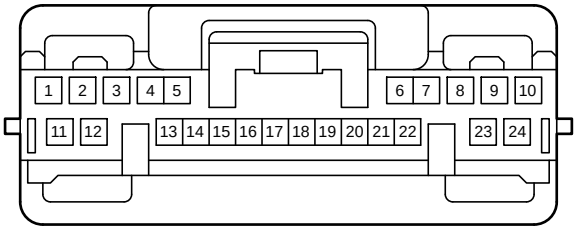


F 42
White

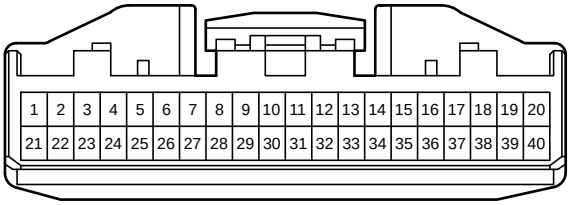


F 47
White

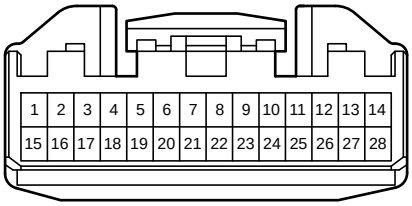


F 53
Black

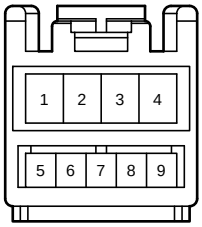


F 54
Black

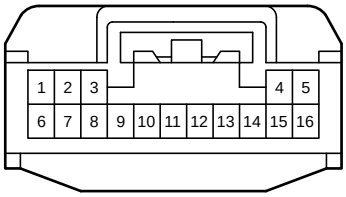

F 55
Black

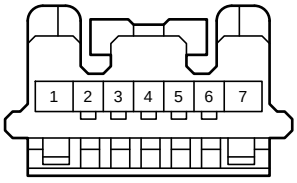

F 56
Black

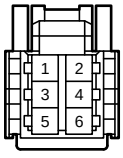

F 73
White

