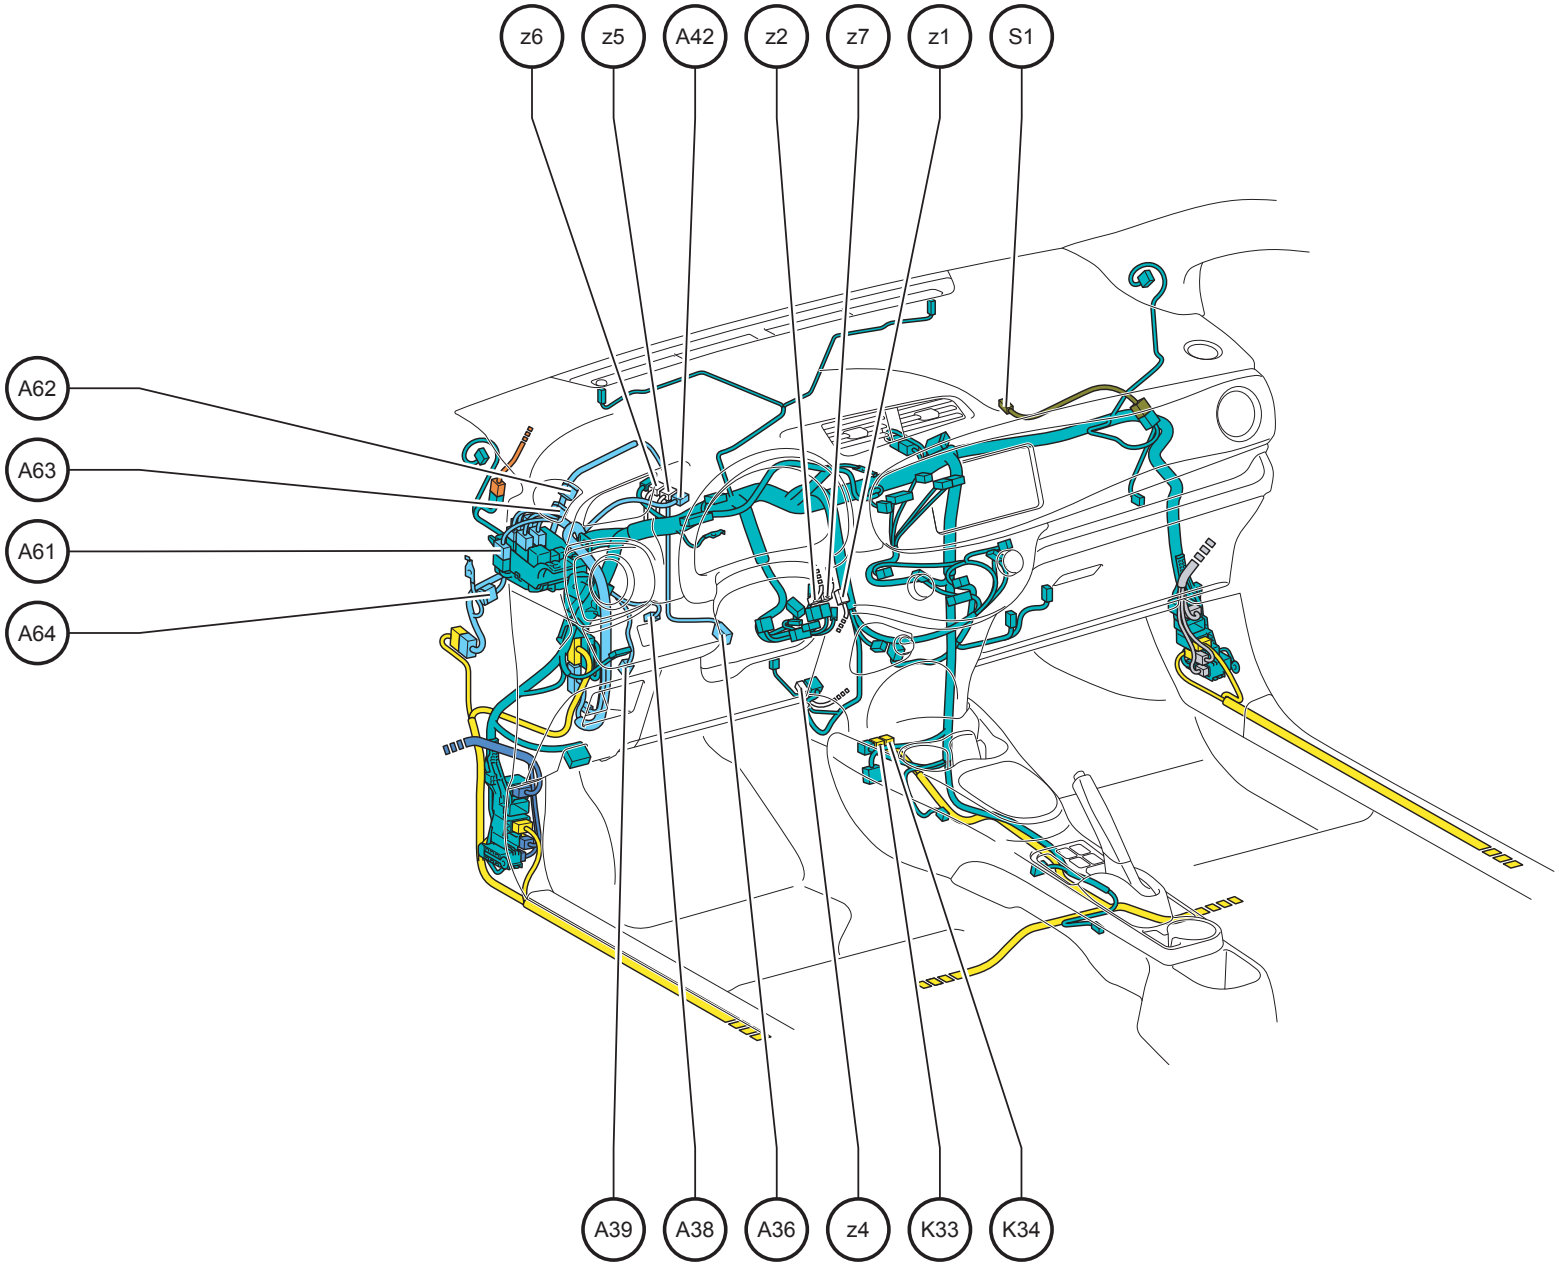

z6
z5
A42
z2
z7
z1
S1
A62
A63
A61
A64
A39
A38
A36
z4
K33
K34


A 36 Accelerator Pedal Sensor Assembly
A 38 Stop Light Switch Assembly
A 39 Clutch Start Switch Assembly
A 42 Power Steering ECU Assembly
A 61 Junction Connector
A 62 Junction Connector
A 63 Junction Connector
A 64 Junction Connector

K 33 Airbag Sensor Assembly
K 34 Airbag Sensor Assembly


S 1 Instrument Panel Passenger without Door Airbag Assembly

z 1 Driver Side Squib Circuit (Horn Button Assembly) , Spiral with Sensor Cable Sub-Assembly
z 2 Steering Pad Switch Assembly
z 4 A/C Amplifier Assembly , A/C Blower Assembly
z 5 Power Steering ECU Assembly , Power Steering Motor Assembly
z 6 Power Steering ECU Assembly , Power Steering Torque Sensor
z 7 Cruise Control Switch Wire , Spiral with Sensor Cable Sub-Assembly


A 36
Black

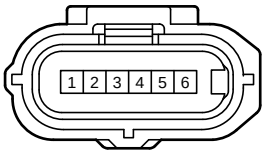


A 38
White

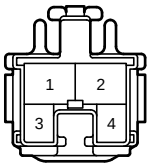


A 39
Black




A 42
White

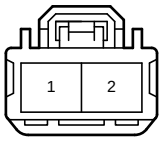


A 61
Blue

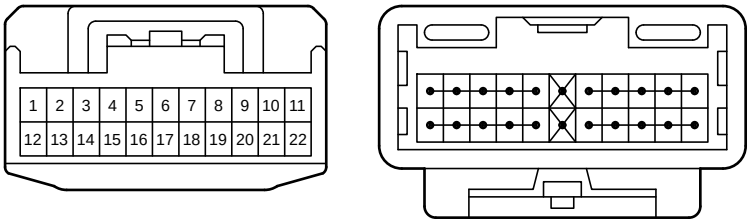


A 62
White

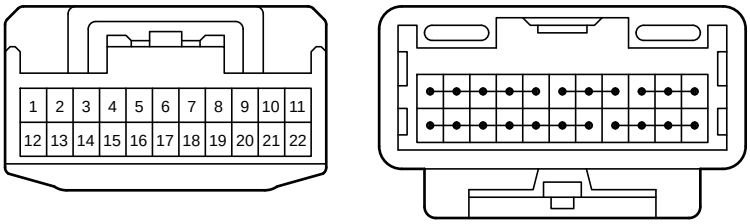


A 63
White

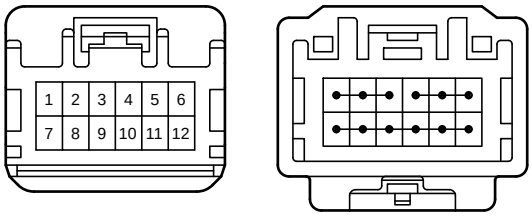


A 64
White

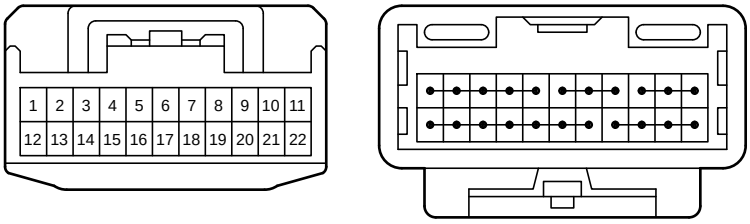


K 33
Yellow

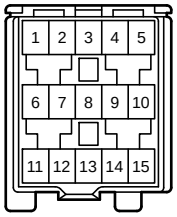


K 34
Yellow

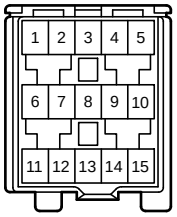


S 1
Orange

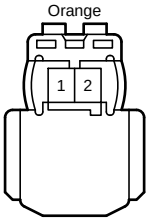


z 1
Orange




z 2
White

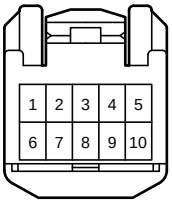


z 4
White

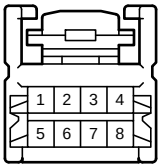

z 5
Gray

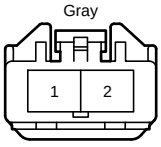

z 6
White

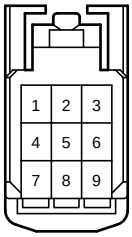

z 7
White

