



F125(A), F126(B), F127(C), F128(D), F129(E)
Radio and Display Receiver Assembly
F130(F), F131(G), F132(H), F133(I), F134(J)
Navigation Receiver Assembly
(BAT)
(IG)
(ACC)
15A DOME
10A GAUGE
5A ACC
ACC1
IG
REV
+B1
GND1
PKB
B86 Back-Up Light Switch Assembly
B88(B) Park/Neutral Position Switch Assembly
F22 Parking Brake Switch Assembly
F7
BA1
(M/T)
(A/T)
(*1)
(*2)
(*25)
(*26)
(*27)
(*28)

F125(A), F126(B), F127(C), F128(D), F129(E)
Radio and Display Receiver Assembly
F130(F), F131(G), F132(H), F133(I), F134(J)
Navigation Receiver Assembly

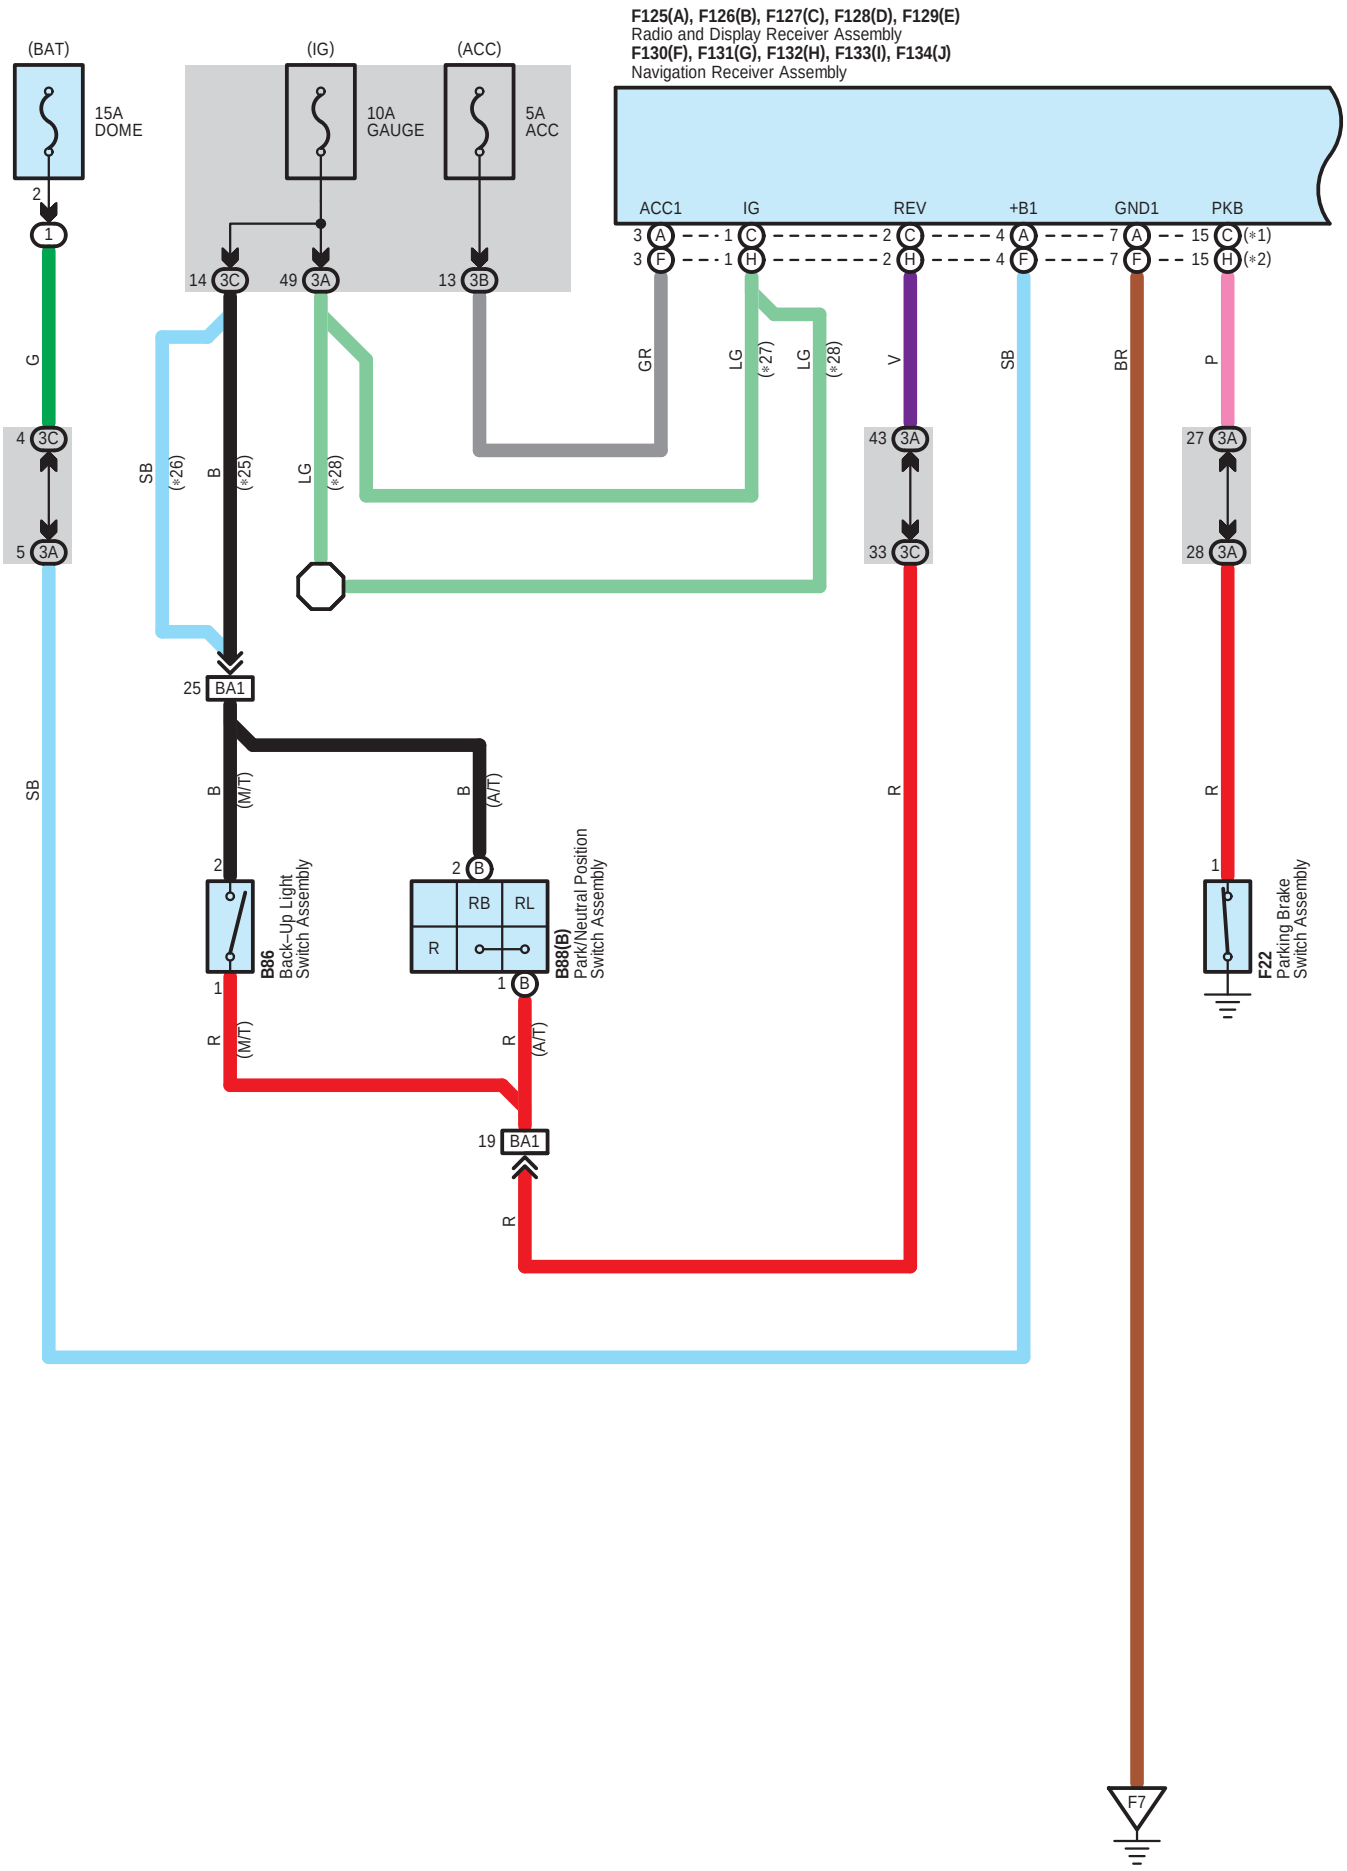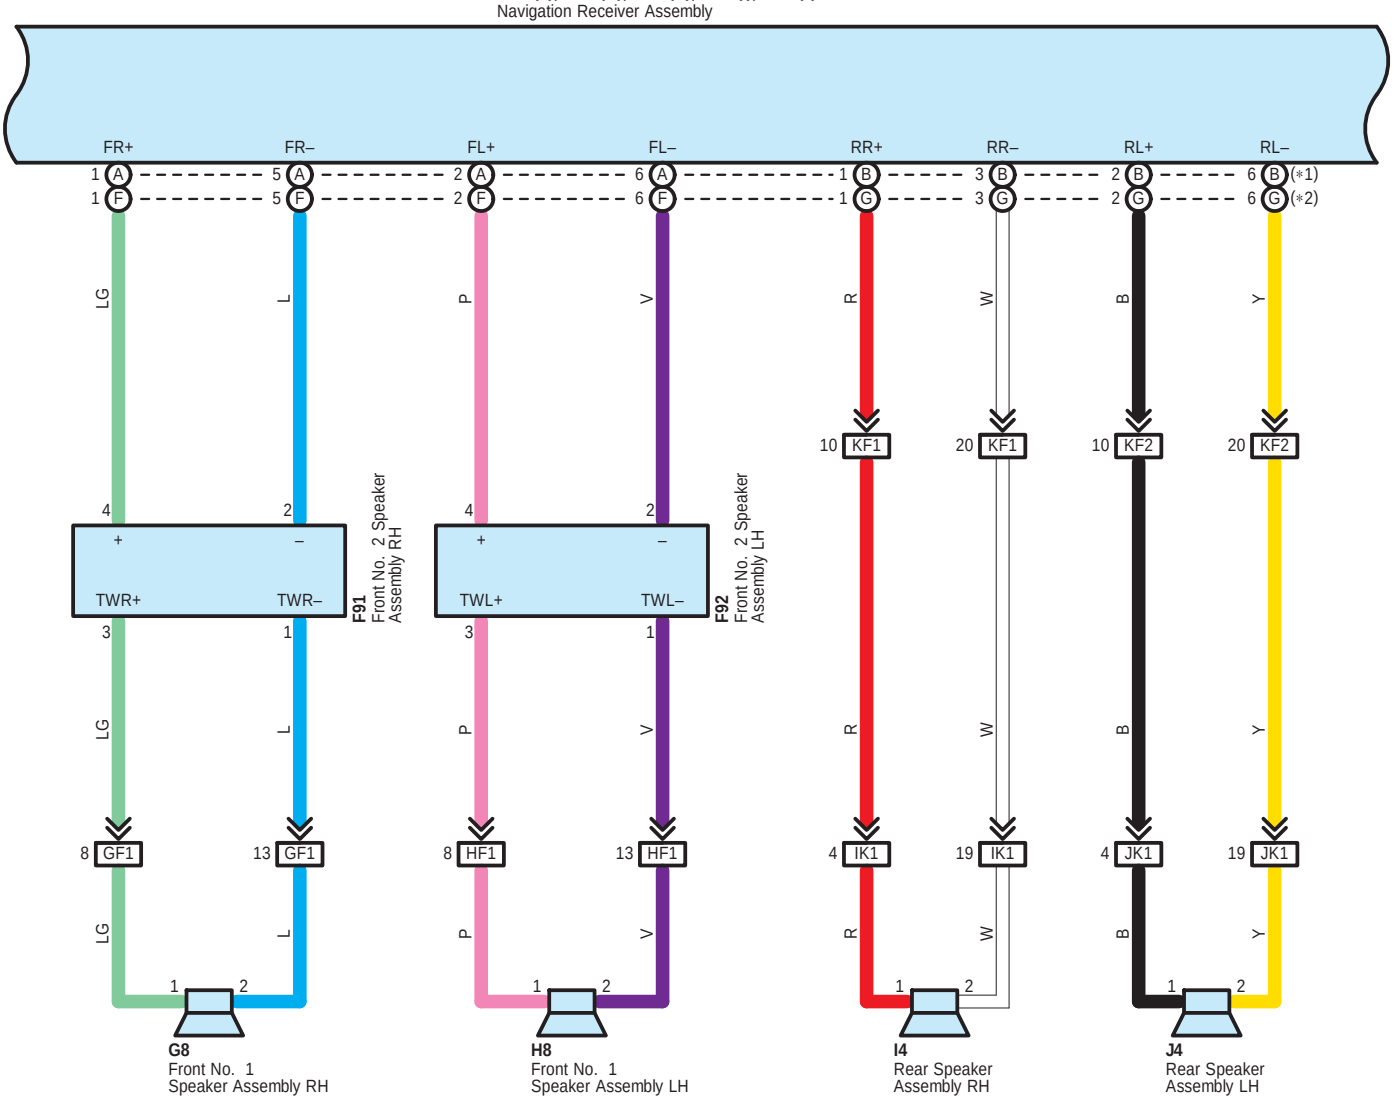



∗ 1 : Radio and Display Receiver Type
∗ 2 : Navigation Receiver Type
∗25 : Before Jan. 2017 Production
∗26 : From Jan. 2017 Production
∗27 : Before Oct. 2017 Production
∗28 : From Oct. 2017 Production

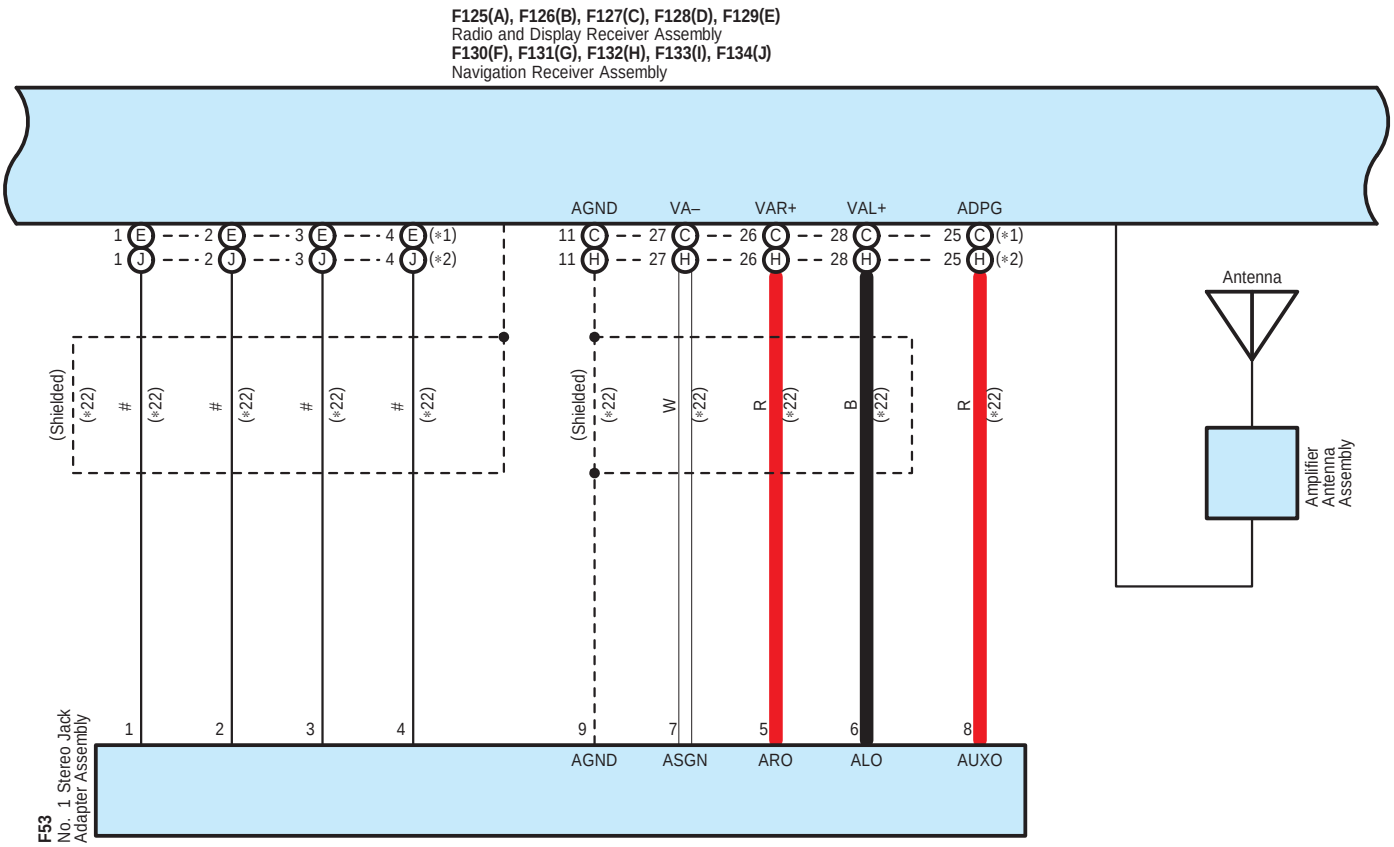



∗ 1 : Radio and Display Receiver Type
∗ 2 : Navigation Receiver Type
∗11 : w/ Microphone
∗22 : No. 1 Stereo Jack Adapter Assembly

: There is no wire color information.

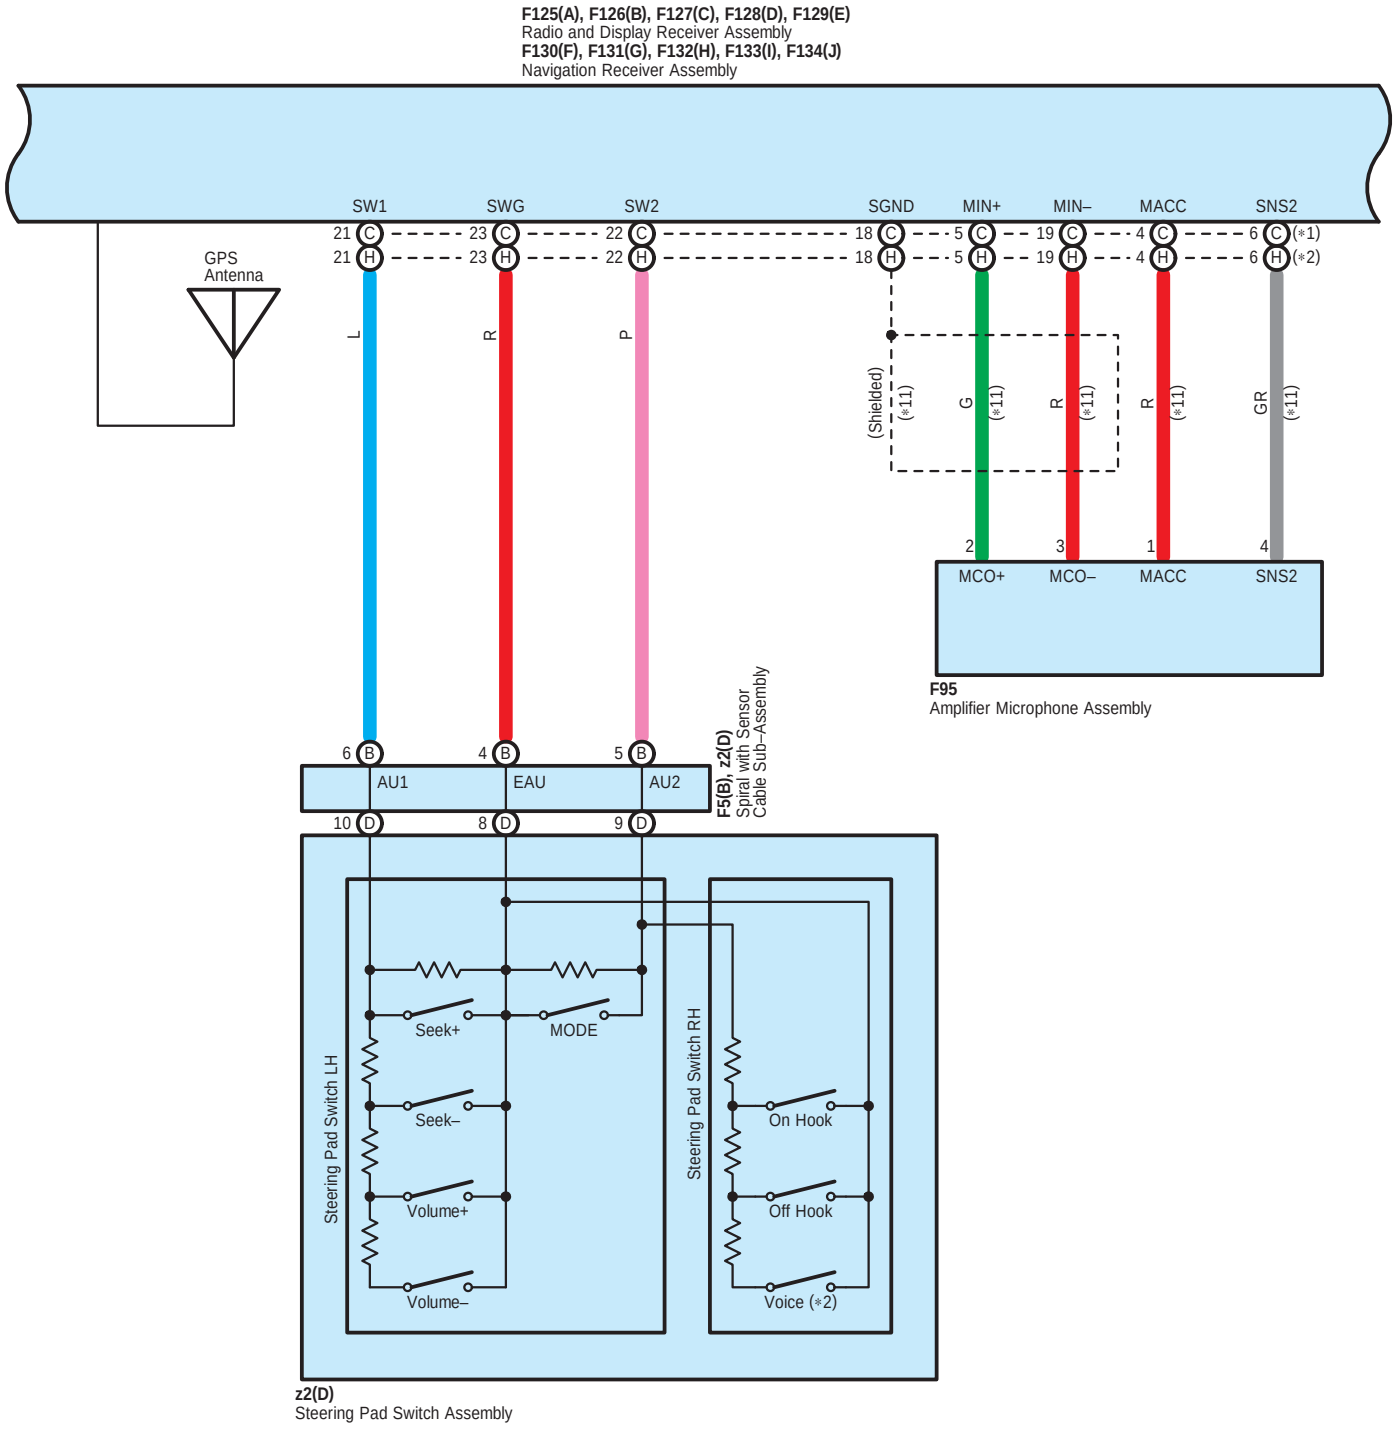

F125(A), F126(B), F127(C), F128(D), F129(E)
Radio and Display Receiver Assembly
F130(F), F131(G), F132(H), F133(I), F134(J)
Navigation Receiver Assembly
SW1
SWG
SW2
SGND
MIN+
MIN–
MACC
SNS2
GPS Antenna
L
R
P
(Shielded)
G
R
R
GR
(∗11)
(∗1)
(∗2)
MCO+
MCO–
MACC
SNS2
F95
Amplifier Microphone Assembly
AU1
EAU
AU2
F5(B), z2(D)
Spiral with Sensor Cable Sub–Assembly
Seek+
MODE
Seek–
Volume+
Volume–
Steering Pad Switch LH
Steering Pad Switch RH
On Hook
Off Hook
Voice (∗2)
z2(D)
Steering Pad Switch Assembly

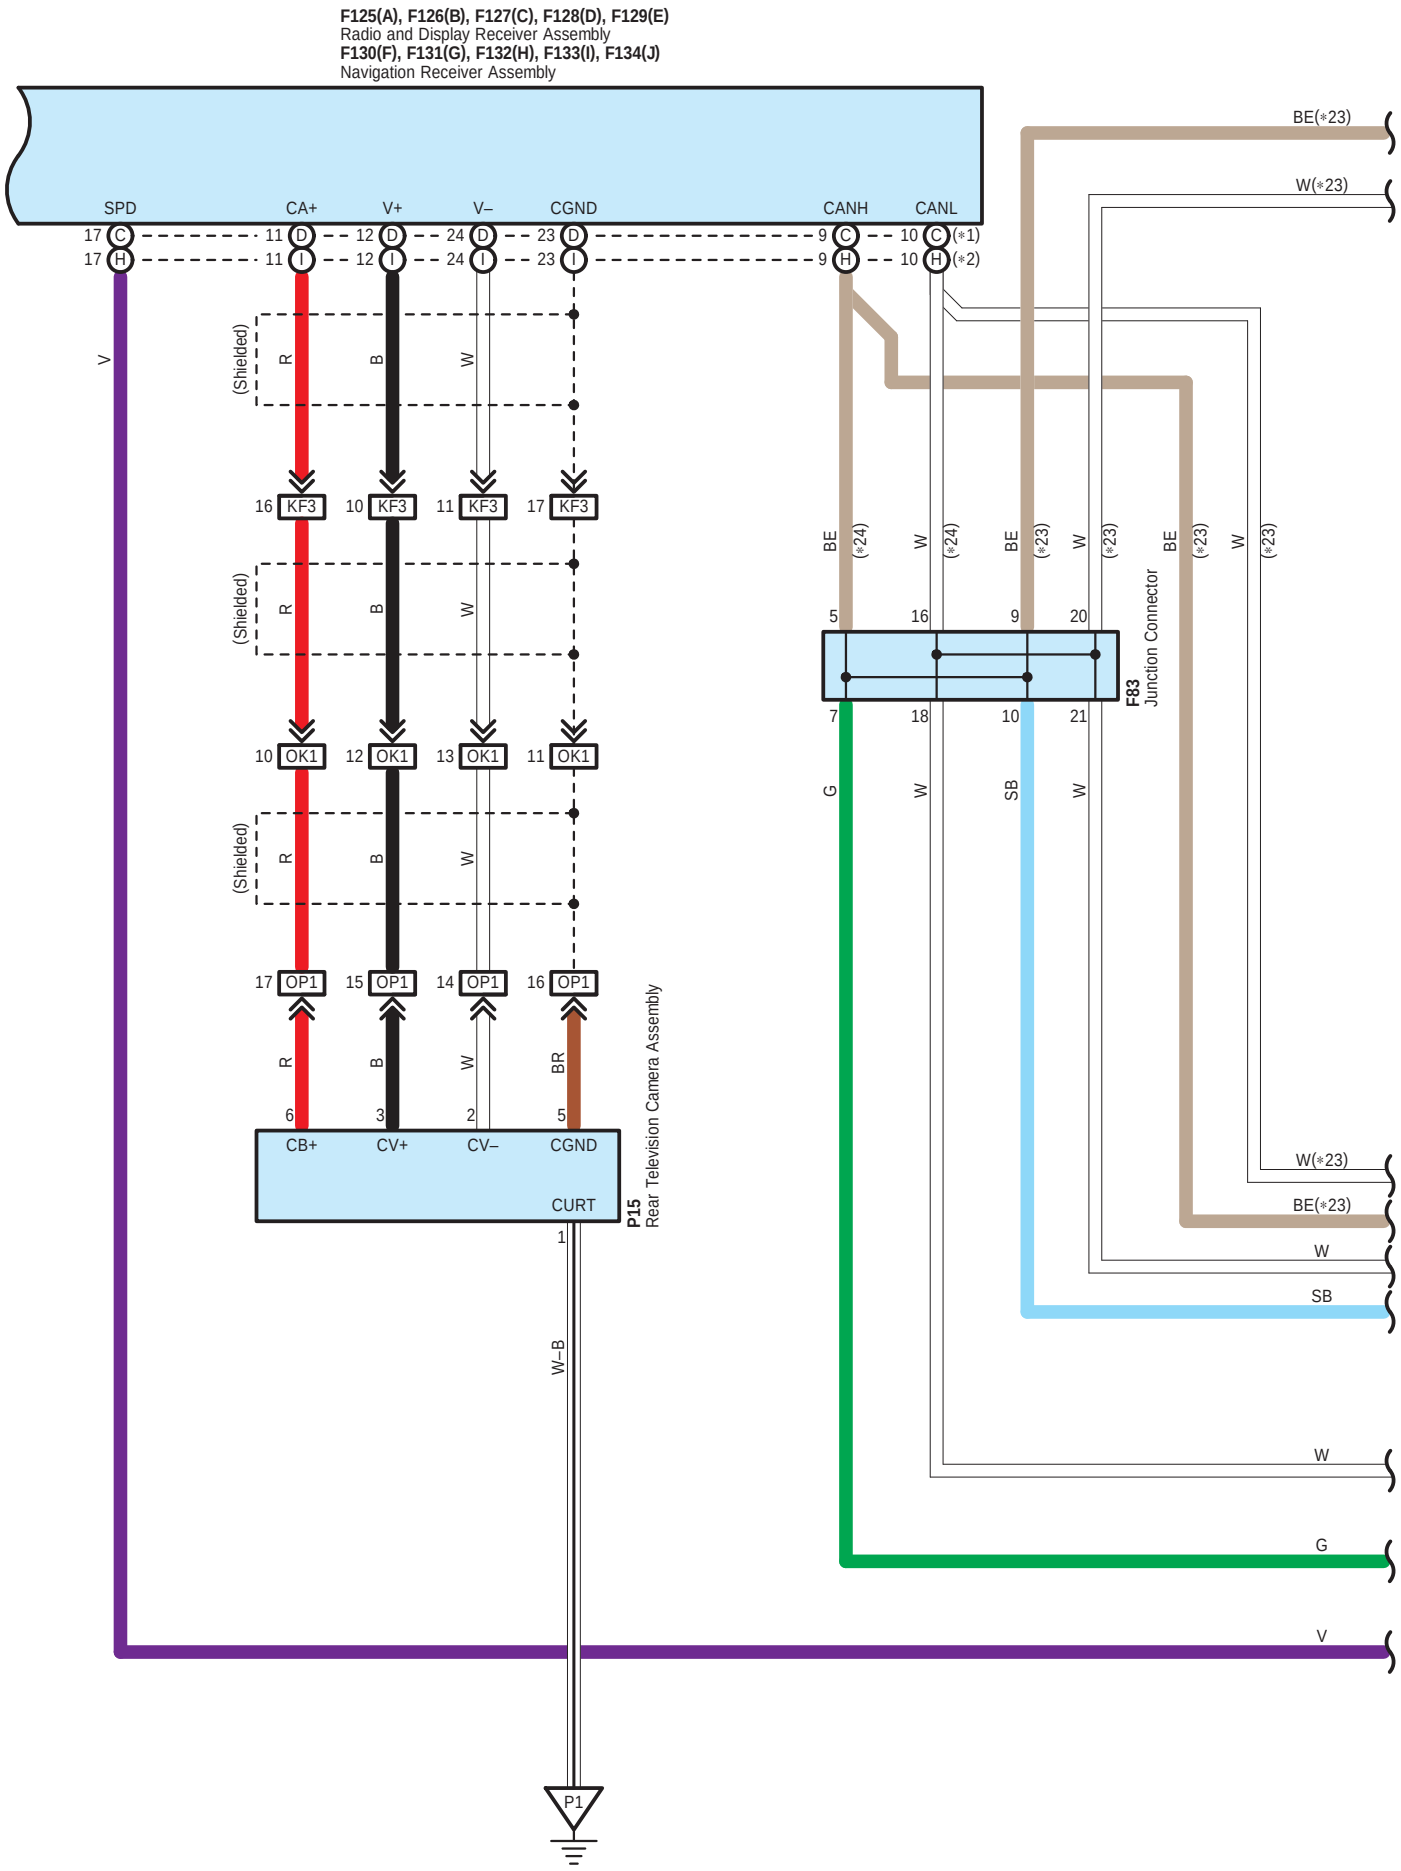
F125(A), F126(B), F127(C), F128(D), F129(E)
Radio and Display Receiver Assembly
F130(F), F131(G), F132(H), F133(I), F134(J)
Navigation Receiver Assembly
SPD
CA+
V+
V–
CGND
CANH
CANL
BE(*23)
W(*23)
(Shielded)
KF3
OK1
OP1
CB+
CV+
CV–
CGND
CURT
P15
Rear Television Camera Assembly
F83
Junction Connector
W–B
P1
V
G
W
SB
BE
BR

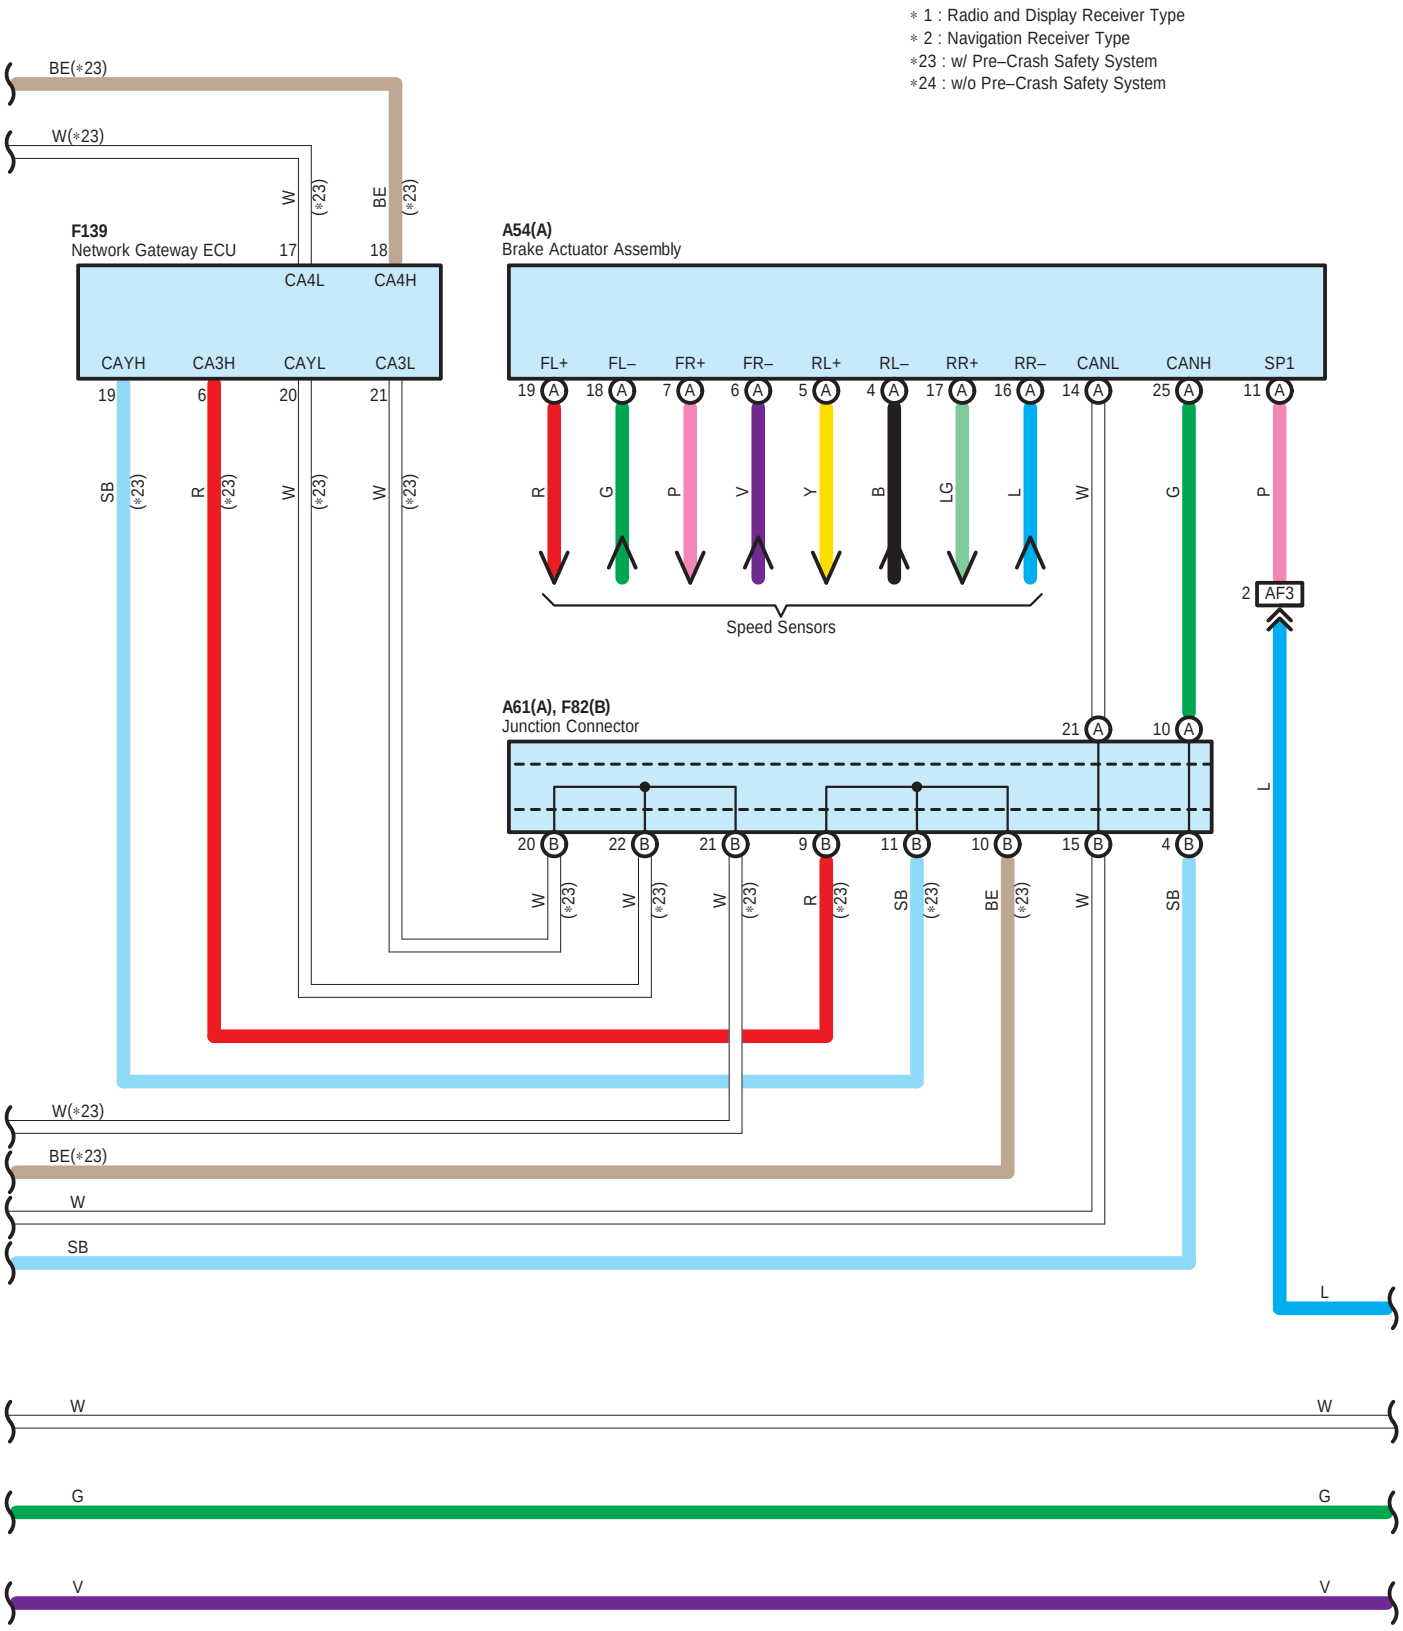

∗ 1 : Radio and Display Receiver Type
∗ 2 : Navigation Receiver Type
∗23 : w/ Pre–Crash Safety System
∗24 : w/o Pre–Crash Safety System
BE(∗23)
W(∗23)
F139
Network Gateway ECU
CA4L
CA4H
CAYH
CA3H
CAYL
CA3L
A54(A)
Brake Actuator Assembly
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANL
CANH
SP1
Speed Sensors
AF3
A61(A), F82(B)
Junction Connector
W(∗23)
BE(∗23)
W
SB
L
W
G
V

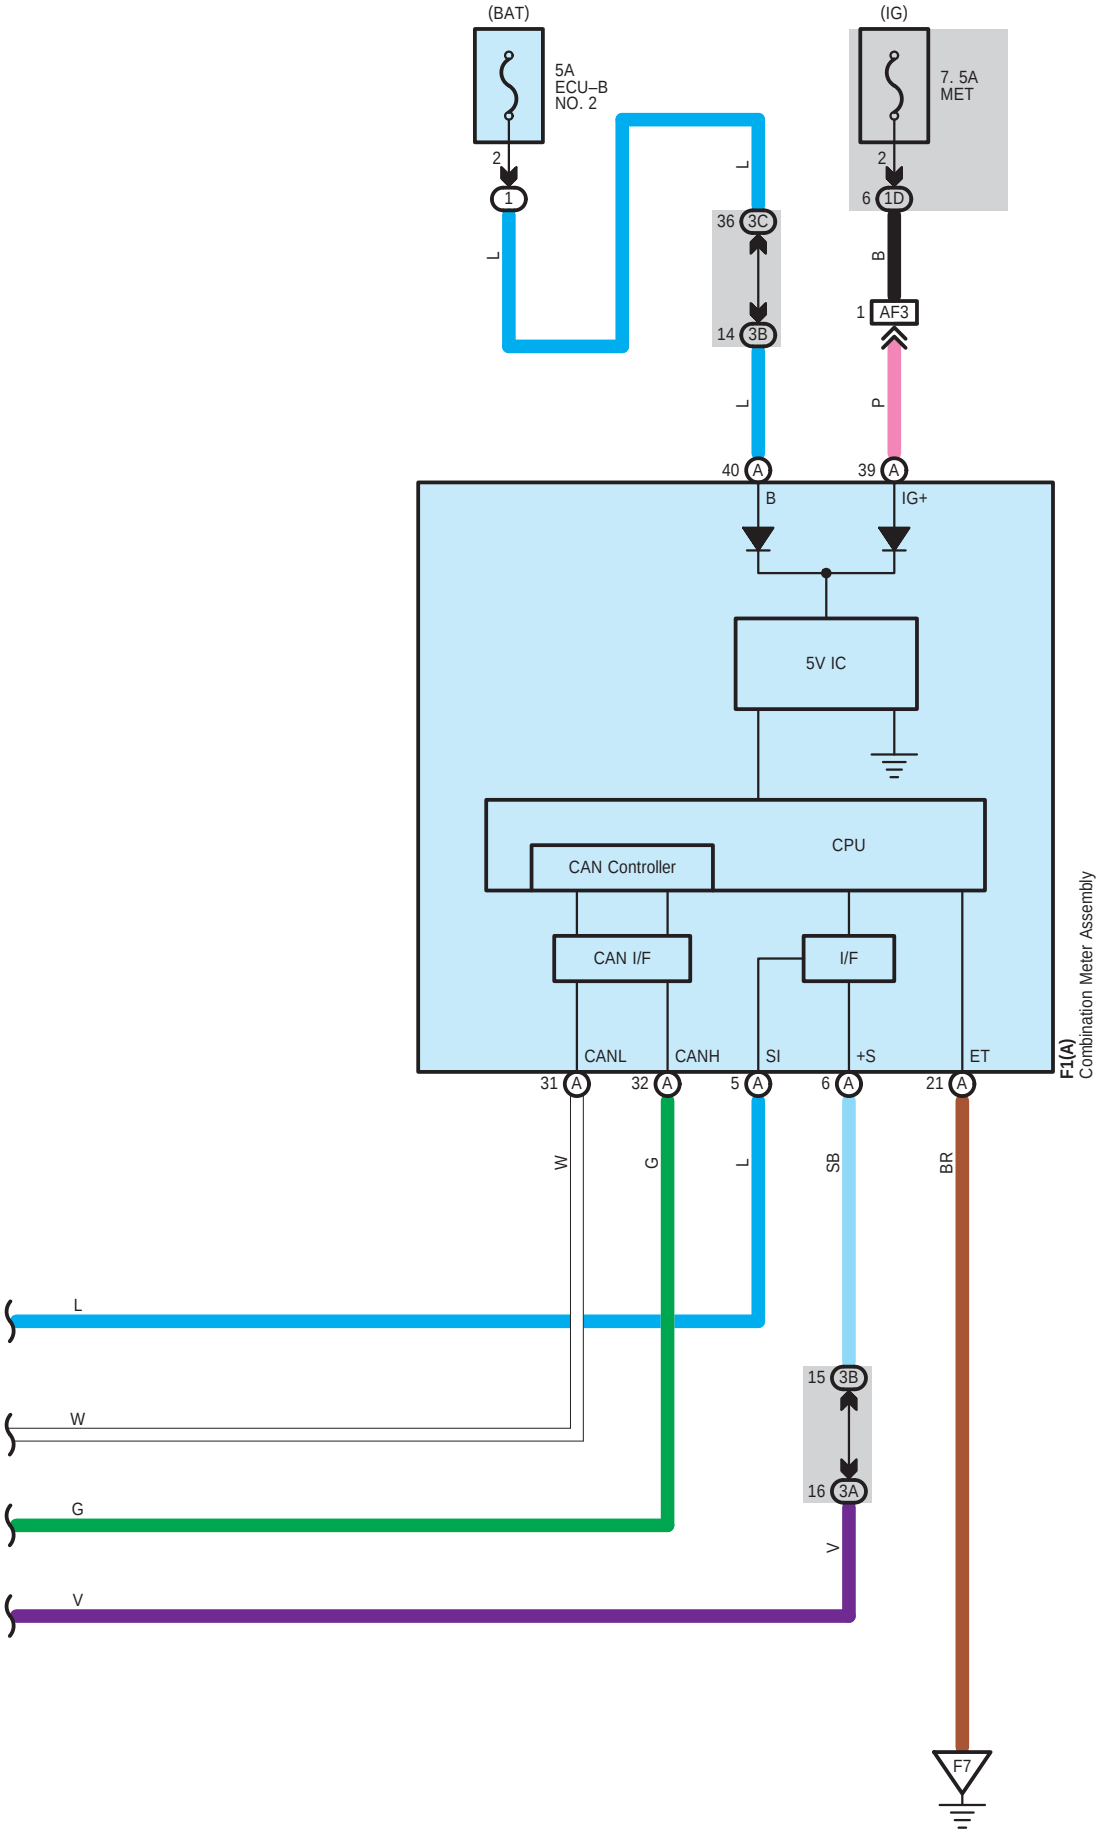
(BAT)
5A
ECU–B
NO. 2
2
1
L
L
36
3C
14
3B
L
40
A
B
(IG)
7. 5A
MET
2
6
1D
B
1
AF3
P
39
A
IG+
5V IC
CPU
CAN Controller
CAN I/F
I/F
CANL
CANH
SI
+S
ET
31
A
32
A
5
A
6
A
21
A
F1(A)
Combination Meter Assembly
W
G
L
SB
BR
L
W
G
V
15
3B
16
3A
V
F7


A 54
Black

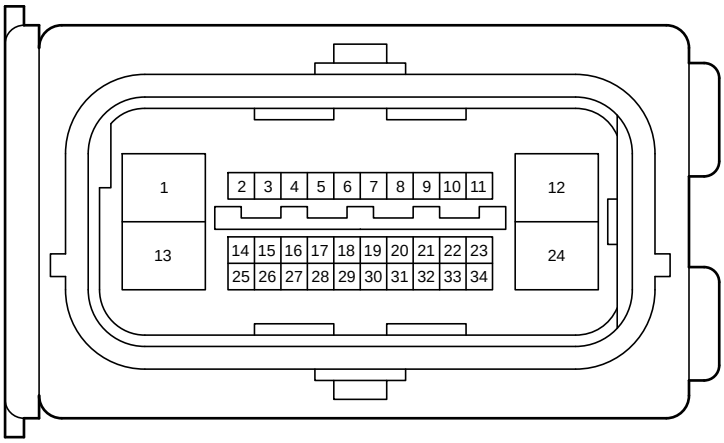


A 61
Blue

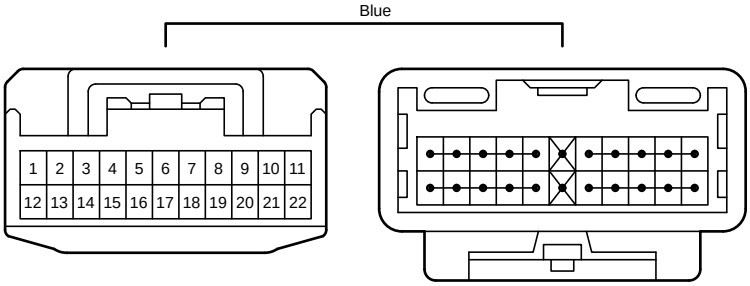


B 86
Gray

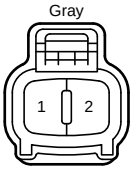


B 88
Gray

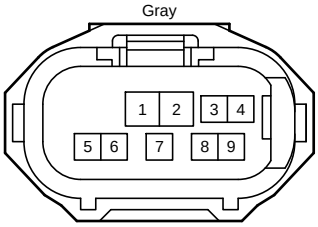

F 1
Black

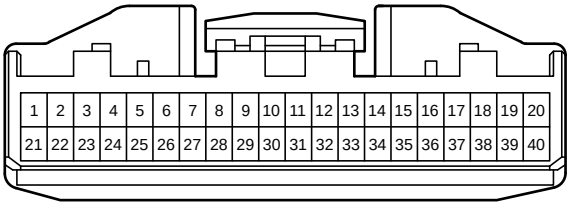


F 5
Black

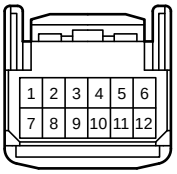


F 22
White




F 53
Black

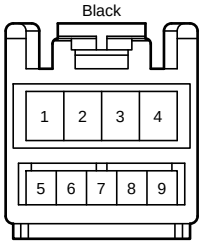


F 82
Blue

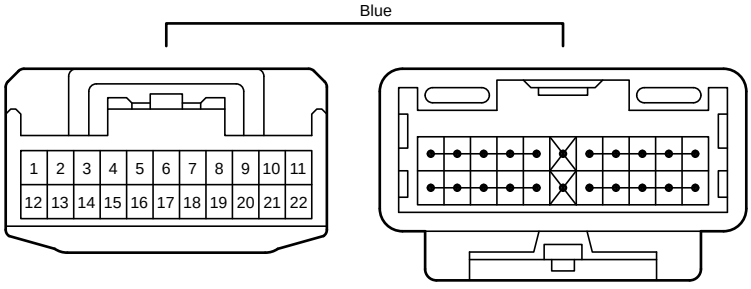


F 83
Gray

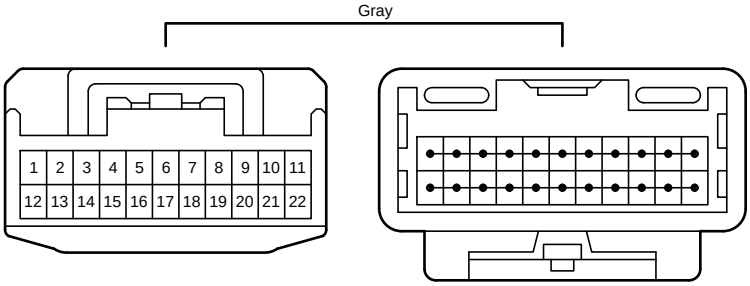


F 91
White




F 92
White



F 95
White

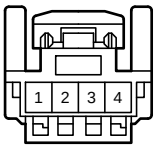


F125
Green

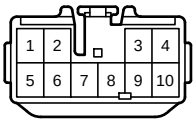


F126
Green




F127
White

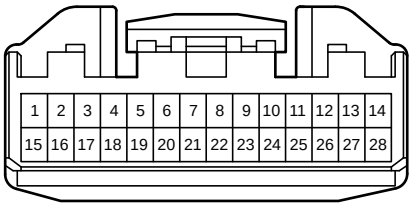


F128
White

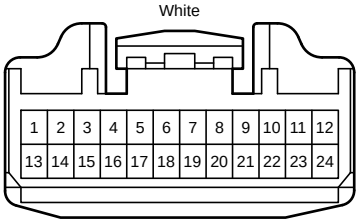


F129
Gray

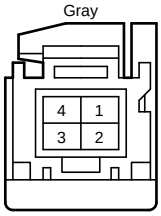


F130
Green

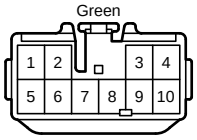


F131
Green

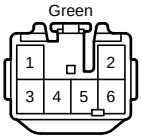


F132
White

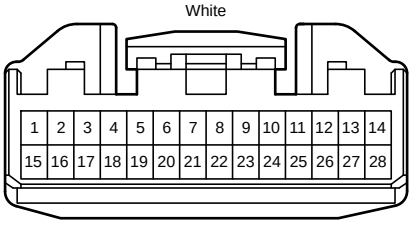


F133
White

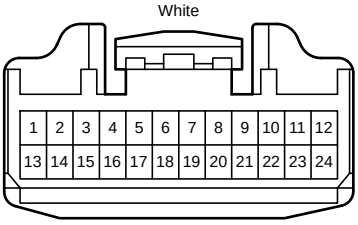


F134
Gray

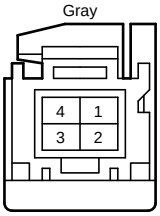


F139
Black

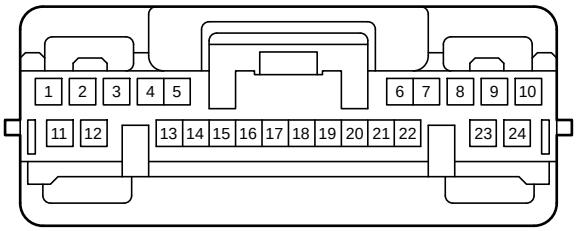


G 8
White




H 8
White




I 4
White




J 4
White




P 15
Gray

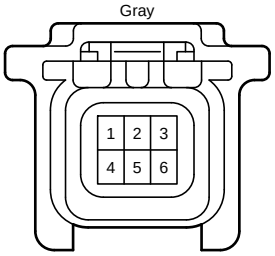


z 2
White

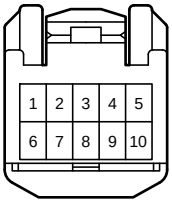


1D
White

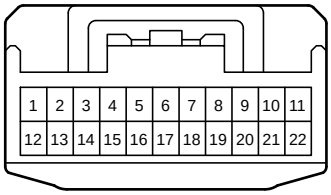


3A
White

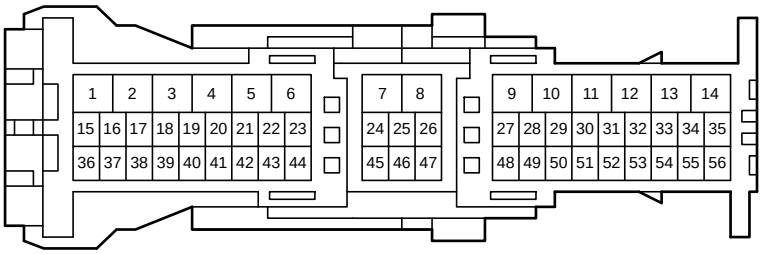


3B
White

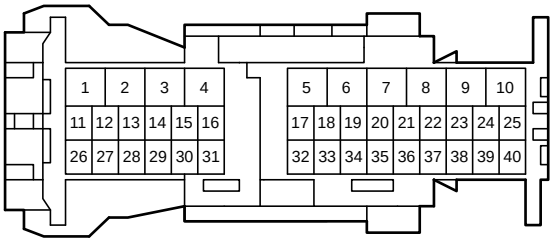


3C
White

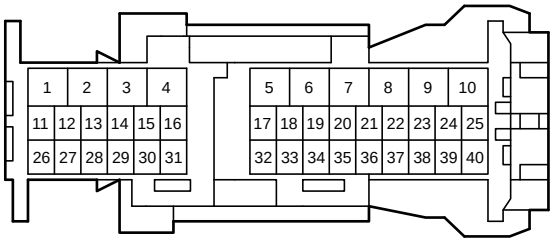


AF3
Black

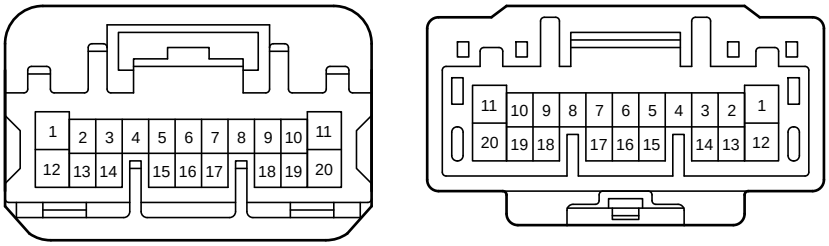


BA1
White

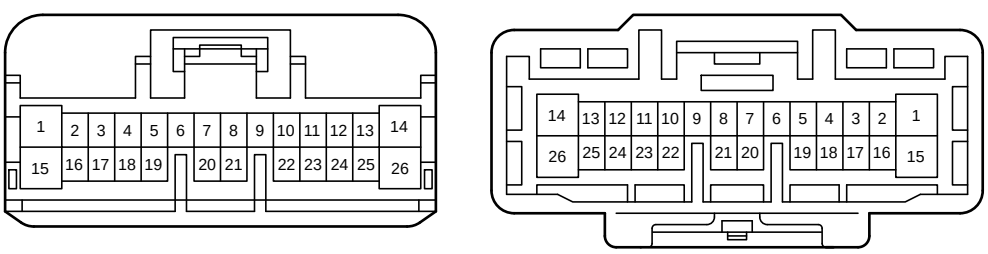


GF1
White

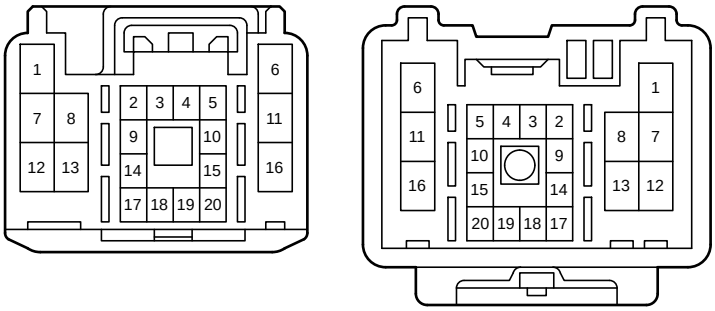


HF1
White

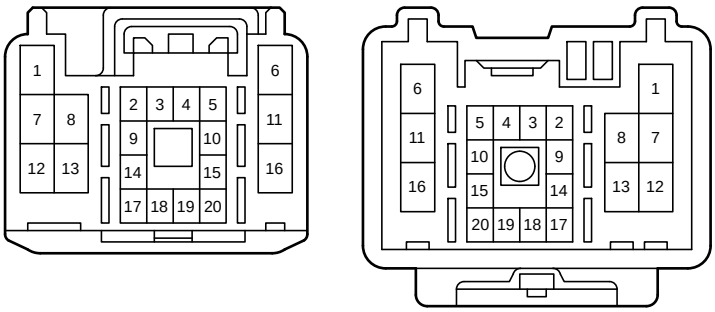


IK1
White

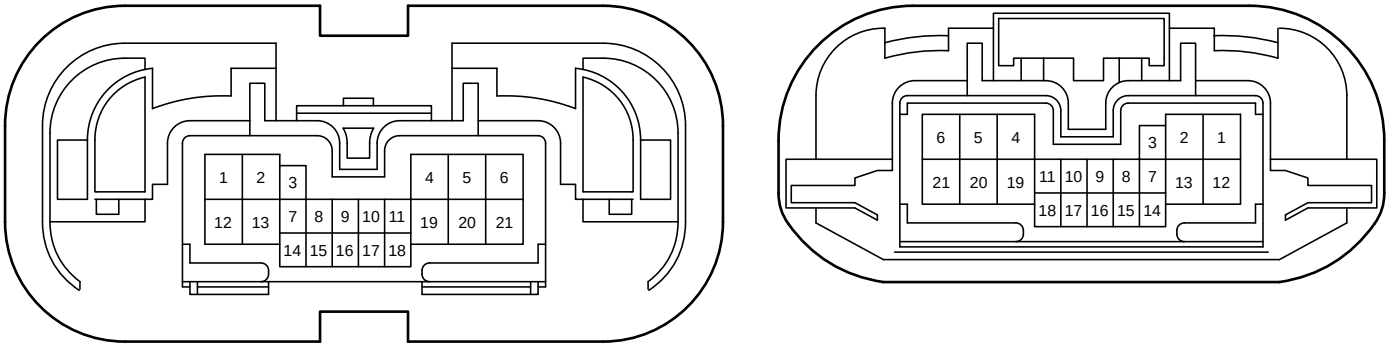


JK1
White

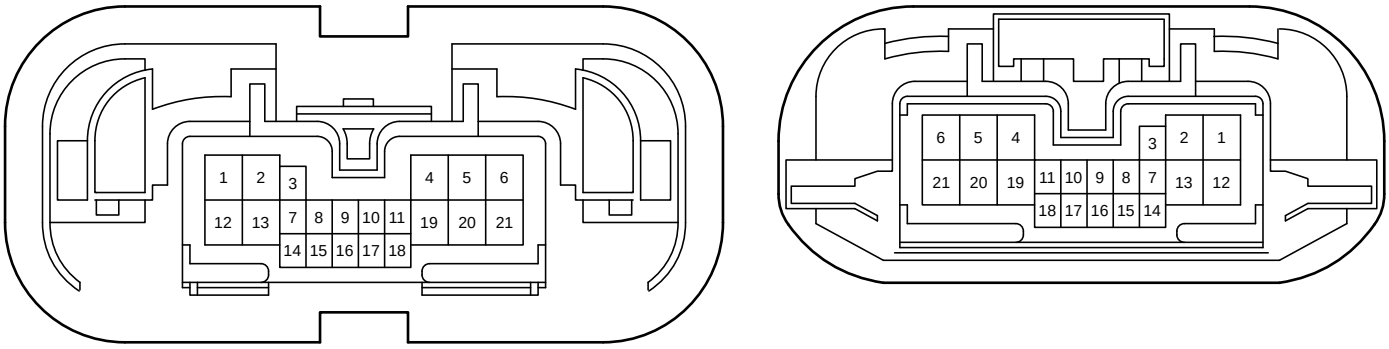


KF1
White

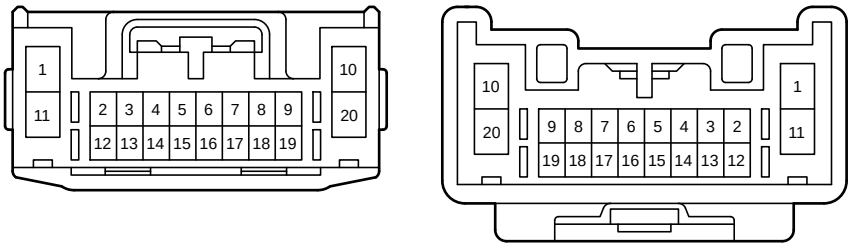


KF2
White

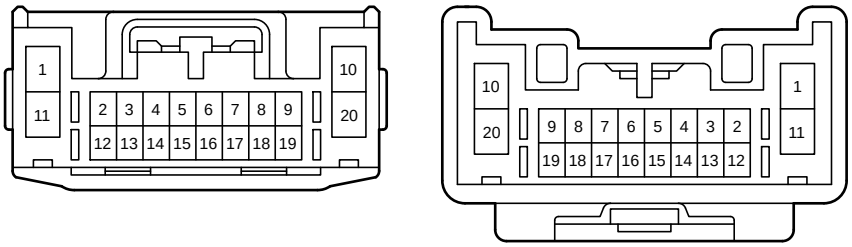


KF3
White

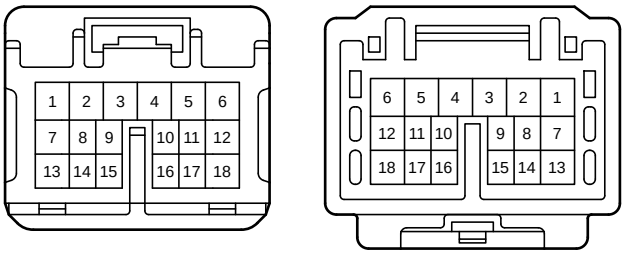

OK1
White

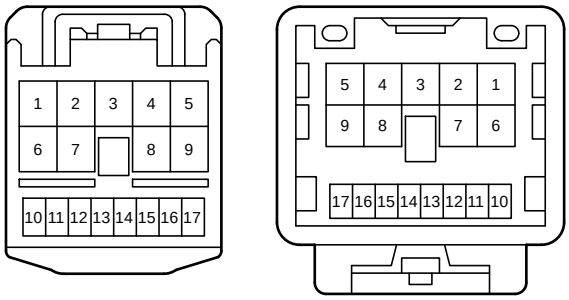

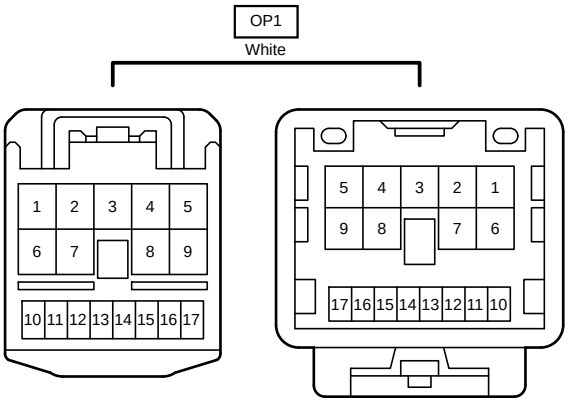
OP1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10