



(BAT)
15A
DOME
2
1
G
4 3C
5 3A
(ACC)
5A
ACC
13 3B
GR
SB
F47(C), F107(A), F108(B), F112(F), F124(G)
Radio Receiver Assembly
ACC1
+B1
GND1
FR+
FR–
3 A
4 A
7 A
1 A
5 A
BR
F7
LG
(*18, *22)
LG
(*23)
L
(*23)
L
(*18, *22)
8 GF1
13 GF1
LG
(*18, *22)
LG
L
L
(*18, *22)
1
2
G8
Front No. 1
Speaker
Assembly RH
4
3
1
2
F120
Short Connector
(Front No. 2 Speaker Assembly RH)

F47(C), F107(A), F108(B), F112(F), F124(G)
Radio Receiver Assembly

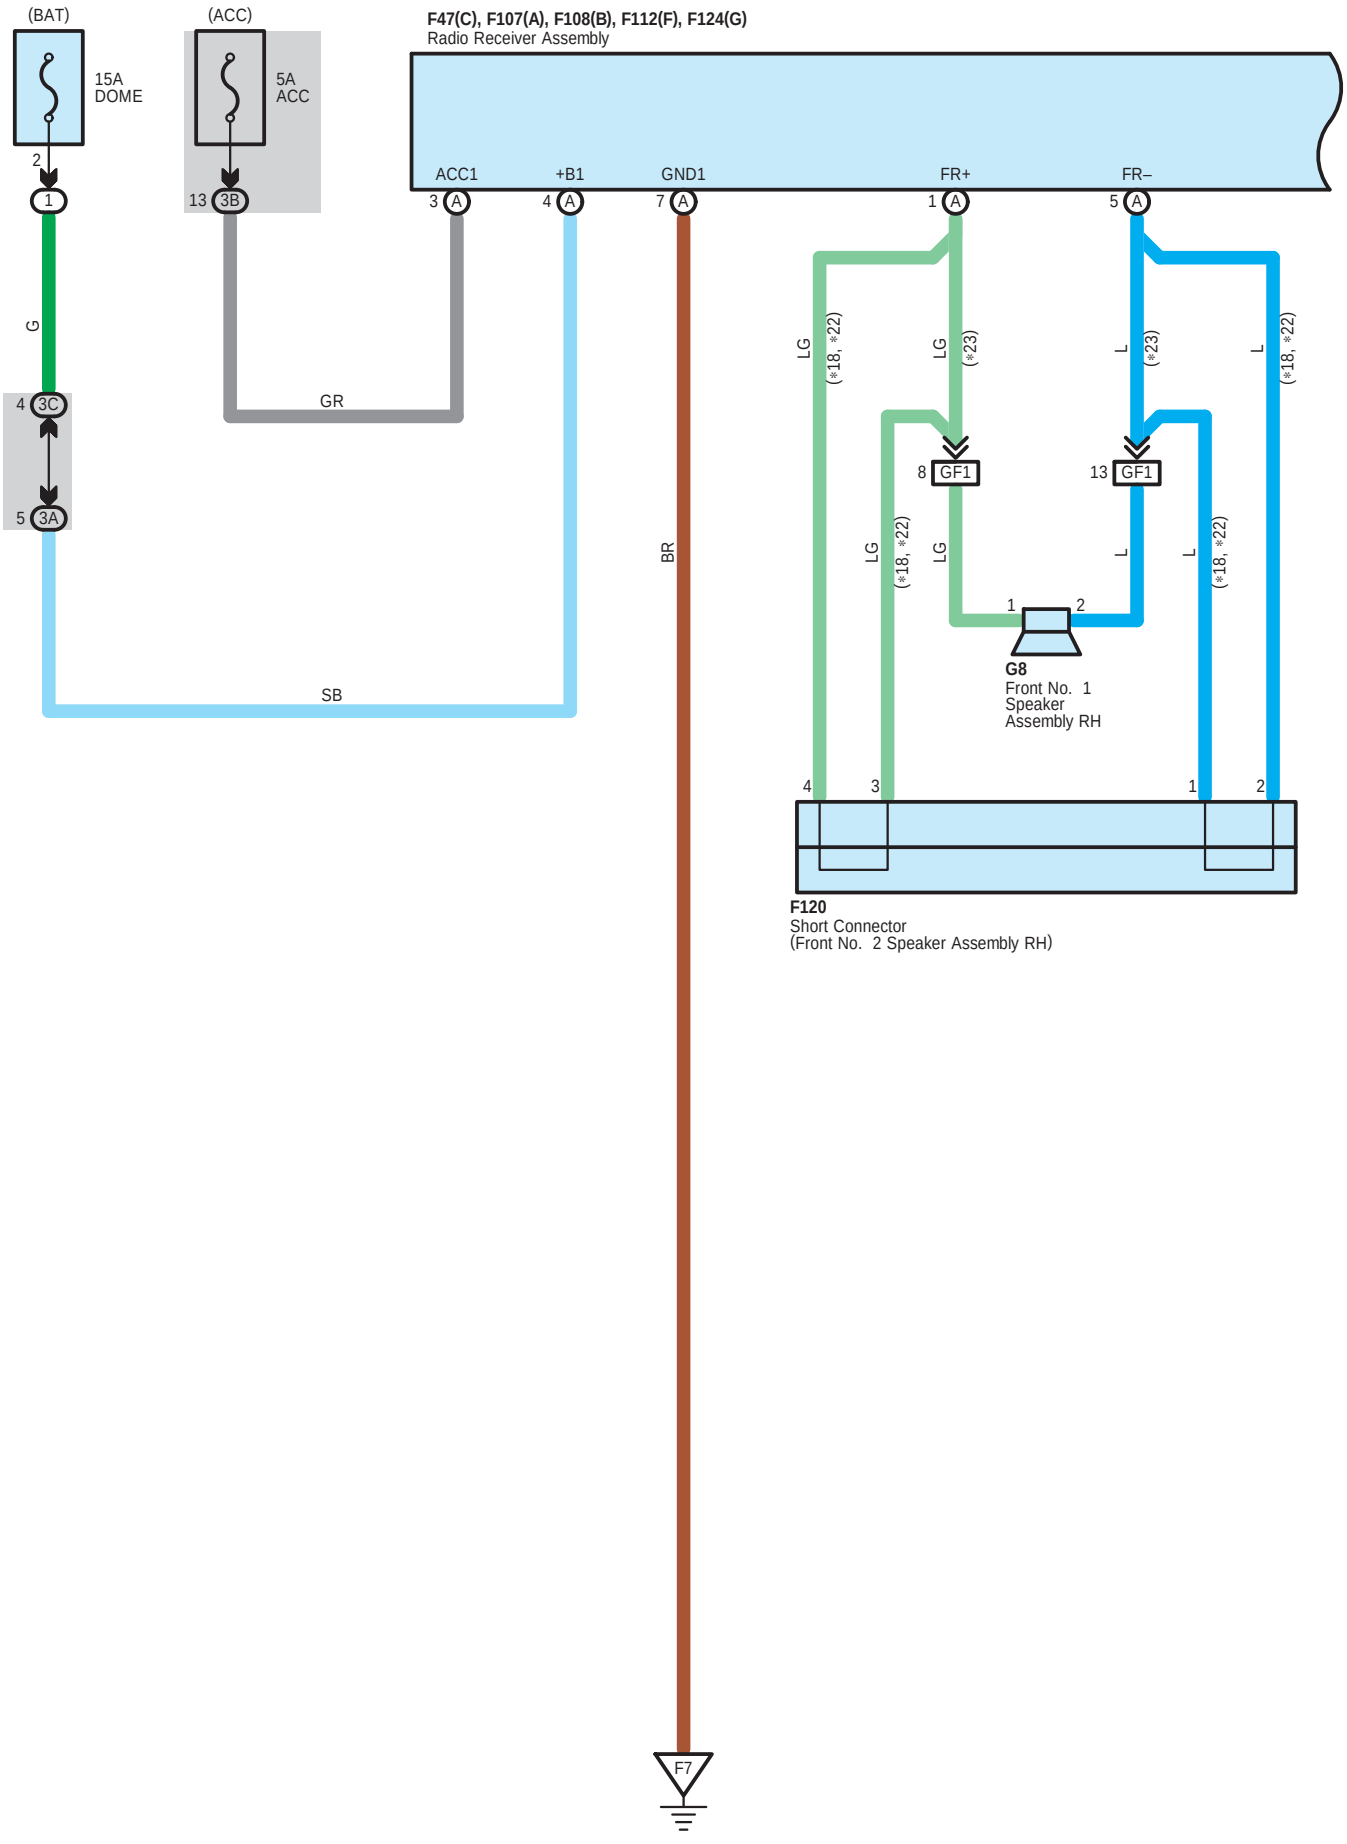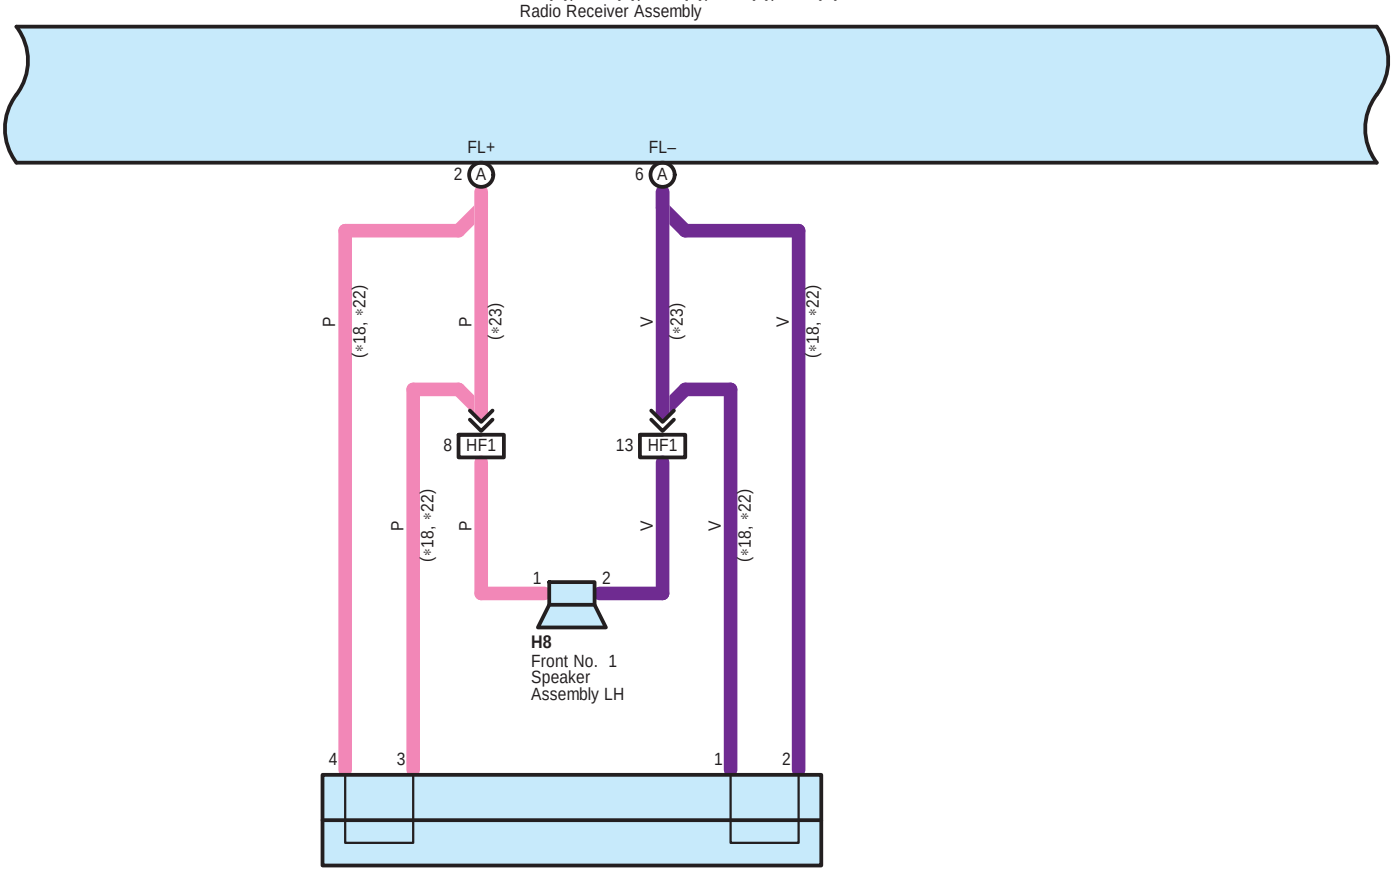


*18 : Australia
*22 : Middle East
*23 : General


F47(C), F107(A), F108(B), F112(F), F124(G)
Radio Receiver Assembly

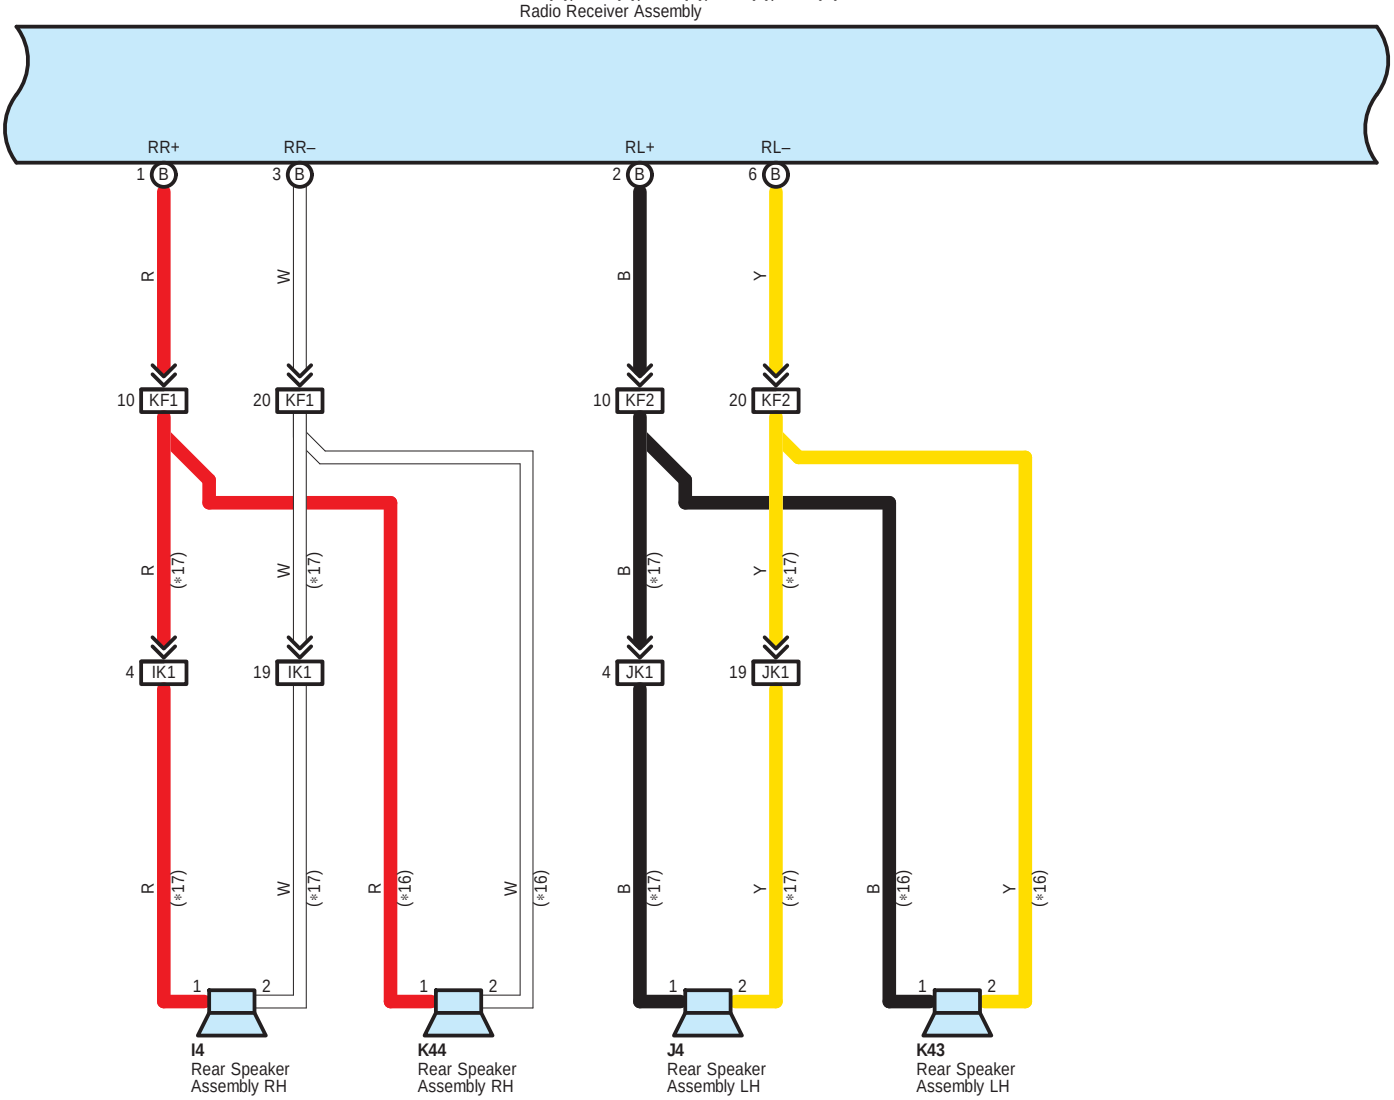



∗16 : 3–Door
∗17 : 5–Door
∗24 : w/ No. 1 Stereo Jack Adapter Assembly
∗29 : Before Feb. 2012 Production
∗30 : From Feb. 2012 Production

: There is no wire color information.

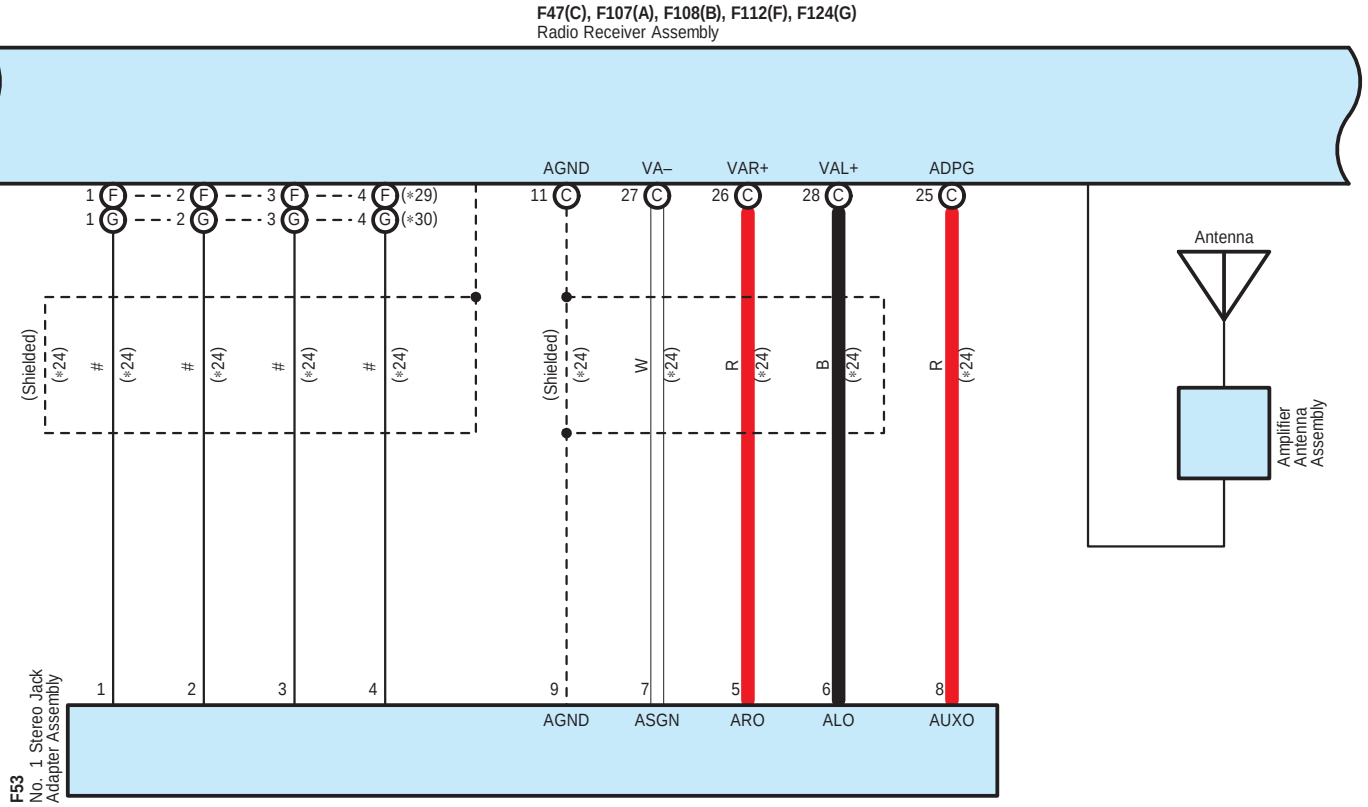

F47(C), F107(A), F108(B), F112(F), F124(G)
Radio Receiver Assembly
AGND
VA–
VAR+
VAL+
ADPG
1 F
2 F
3 F
4 F (*29)
1 G
2 G
3 G
4 G (*30)
11 C
27 C
26 C
28 C
25 C
(Shielded)
(*24)
#
W
R
B
Antenna
Amplifier Antenna Assembly
F53
No. 1 Stereo Jack Adapter Assembly
1
2
3
4
9
7
5
6
8
AGND
ASGN
ARO
ALO
AUXO

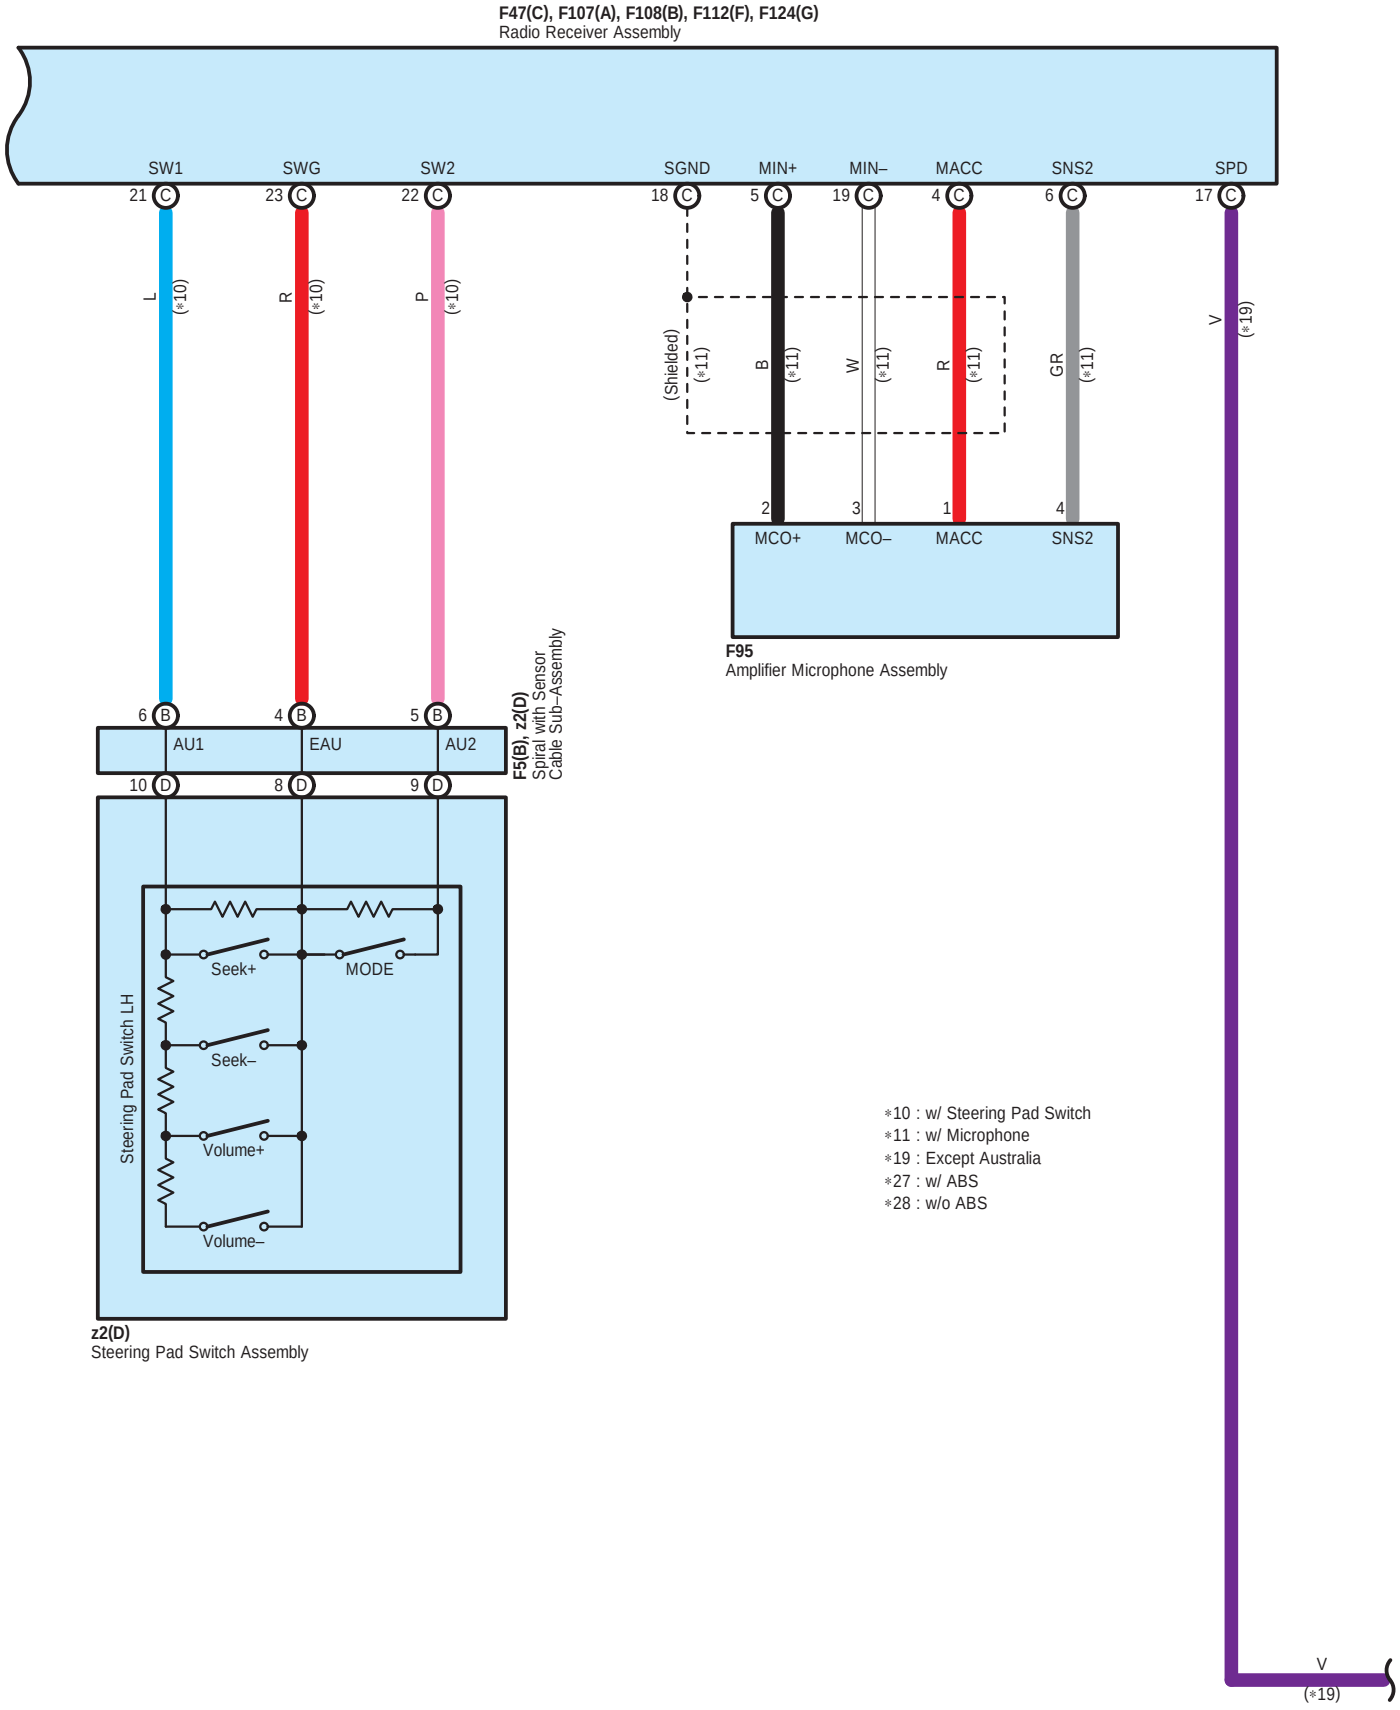
F47(C), F107(A), F108(B), F112(F), F124(G)
Radio Receiver Assembly
SW1
SWG
SW2
SGND
MIN+
MIN–
MACC
SNS2
SPD
21 C
23 C
22 C
18 C
5 C
19 C
4 C
6 C
17 C
L (*10)
R (*10)
P (*10)
(Shielded) (*11)
B (*11)
W (*11)
R (*11)
GR (*11)
V (*19)
2
3
1
4
MCO+
MCO–
MACC
SNS2
F95
Amplifier Microphone Assembly
6 B
4 B
5 B
AU1
EAU
AU2
F5(B), z2(D)
Spiral with Sensor
Cable Sub-Assembly
10 D
8 D
9 D
Seek+
MODE
Seek–
Volume+
Volume–
Steering Pad Switch LH
z2(D)
Steering Pad Switch Assembly
*10 : w/ Steering Pad Switch
*11 : w/ Microphone
*19 : Except Australia
*27 : w/ ABS
*28 : w/o ABS
V
(*19)

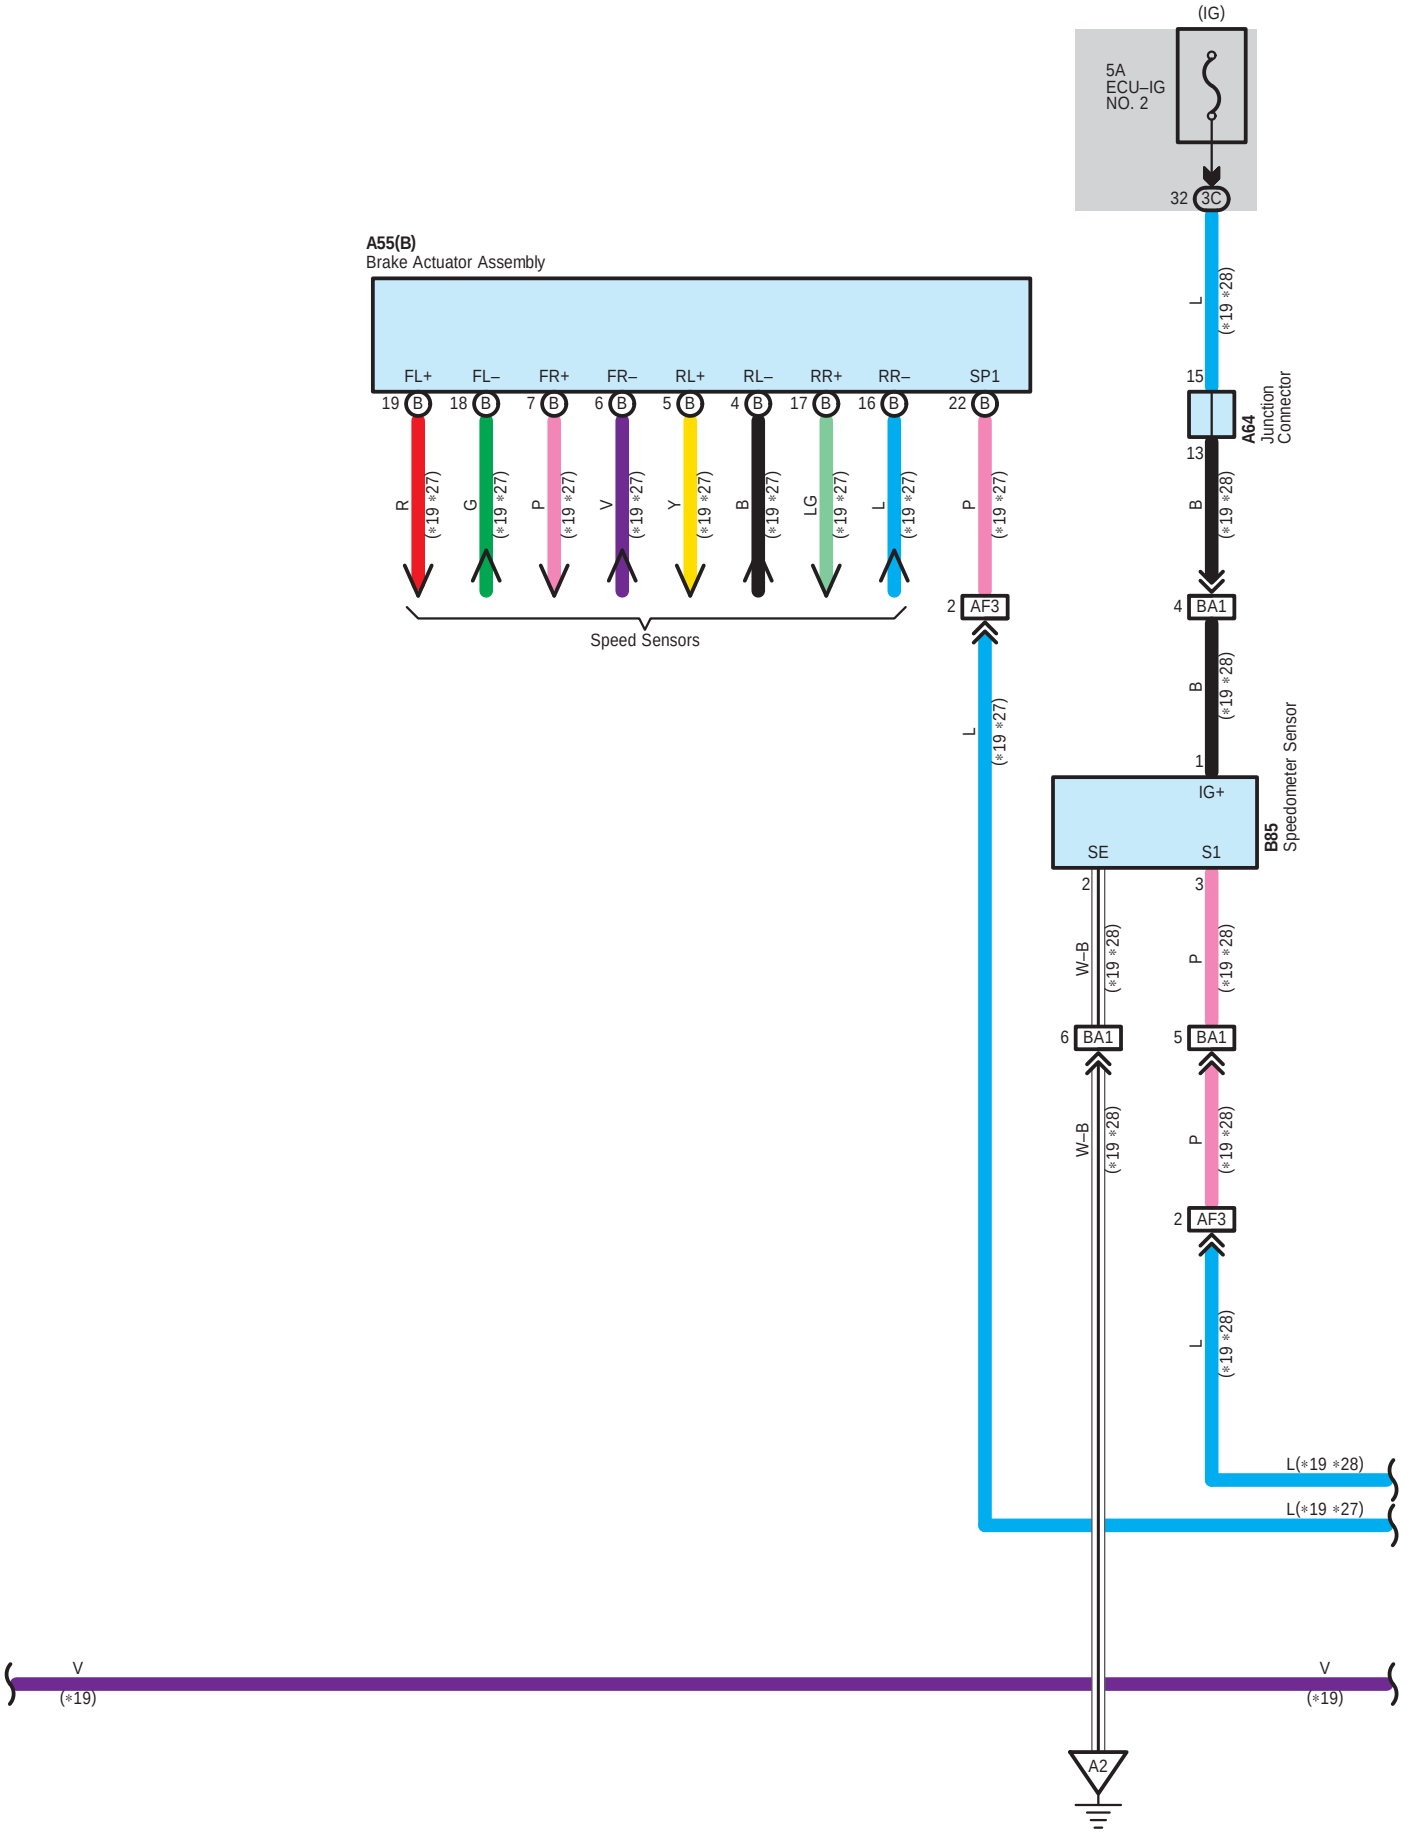

(IG)
5A
ECU–IG
NO. 2
32 3C
A55(B)
Brake Actuator Assembly
FL+ FL– FR+ FR– RL+ RL– RR+ RR– SP1
19 18 7 6 5 4 17 16 22
R G P V Y B LG L P
(∗19 ∗27)
Speed Sensors
2 AF3
L (∗19 ∗27)
L (∗19 ∗28)
15
A64
Junction
Connector
13
B (∗19 ∗28)
4 BA1
B (∗19 ∗28)
1
IG+
SE S1
B85
Speedometer Sensor
2 3
W–B P
(∗19 ∗28)
6 BA1 5 BA1
W–B P
(∗19 ∗28)
2 AF3
L (∗19 ∗28)
L(∗19 ∗28)
L(∗19 ∗27)
V
(∗19)
V
(∗19)
A2

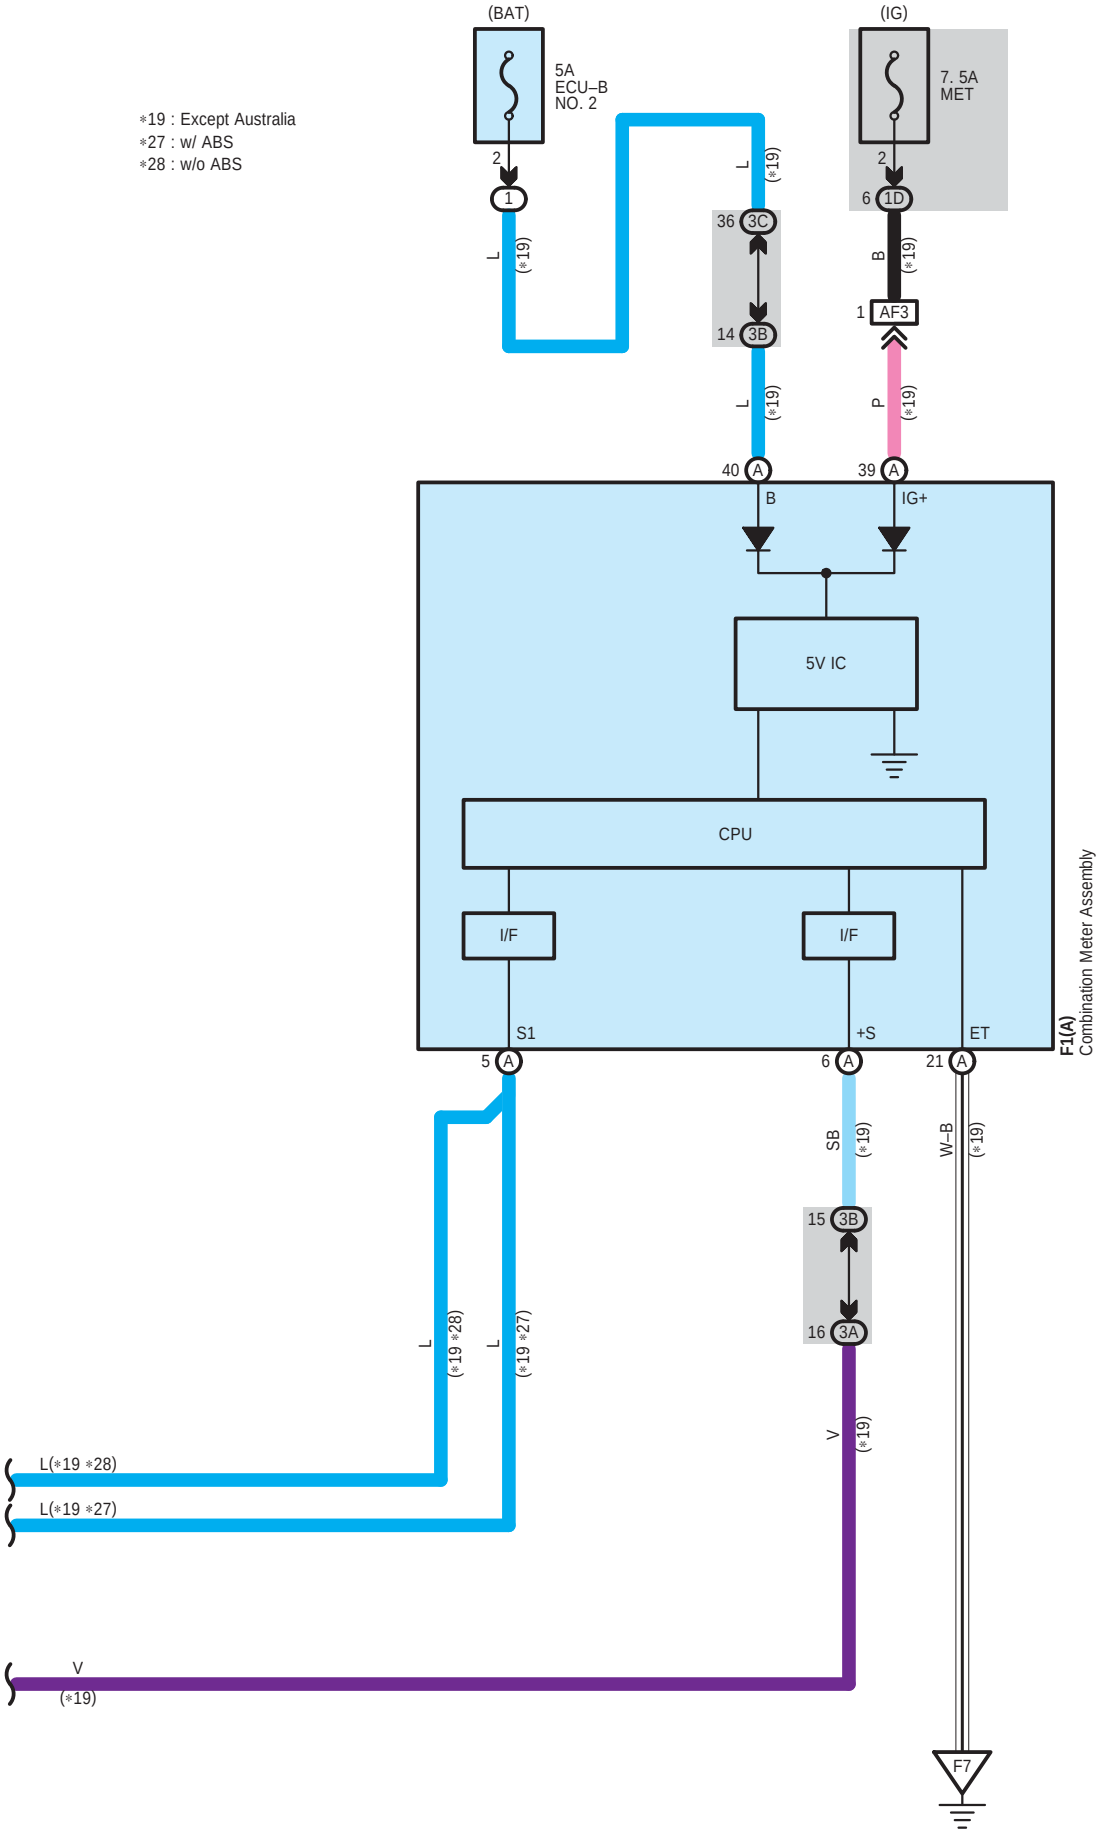
∗19 : Except Australia
∗27 : w/ ABS
∗28 : w/o ABS
(BAT)
5A
ECU–B
NO. 2
(IG)
7. 5A
MET
2
1
6
1D
36
3C
14
3B
1
AF3
L
(∗19)
B
P
40
A
39
A
B
IG+
5V IC
CPU
I/F
I/F
S1
+S
ET
5
A
6
A
21
A
F1(A)
Combination Meter Assembly
SB
W–B
15
3B
16
3A
V
L(∗19 ∗28)
L(∗19 ∗27)
V
(∗19)
F7


A 55
Black

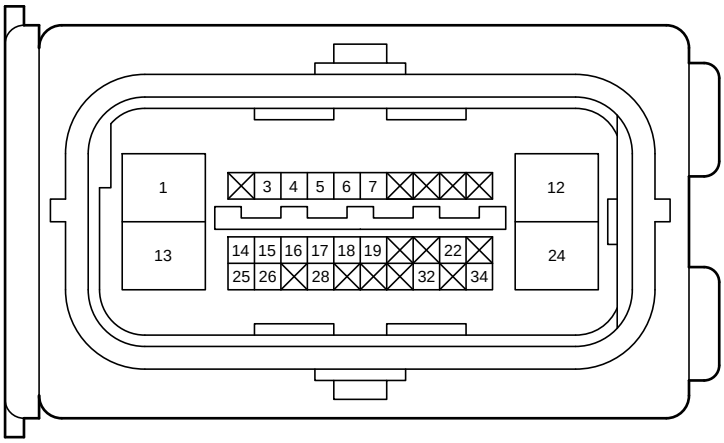


A 64
White

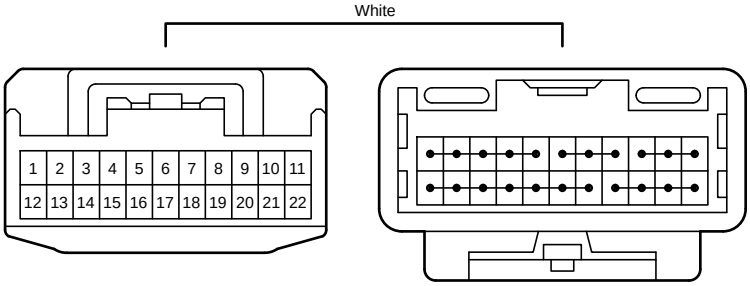


B 85
Black

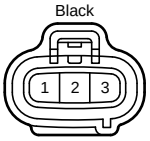


F 1
Black

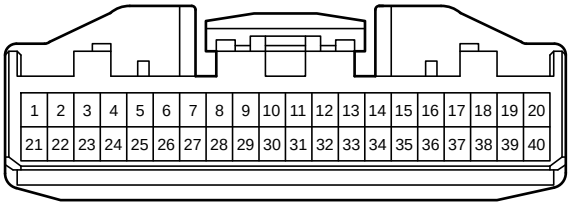


F 5
Black

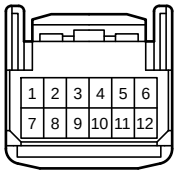


F 47
White

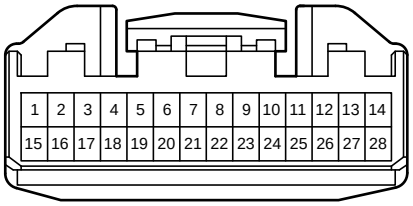


F 53
Black

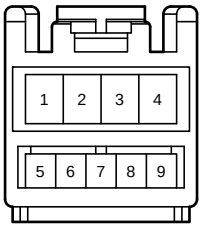


F 95
White

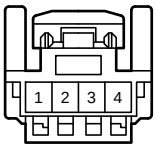


F107
Green

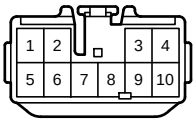


F108
Green

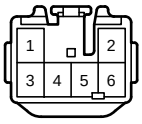


F112
Gray

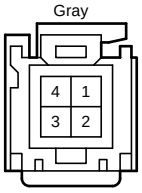


F120
White




F121
White




F124
Gray

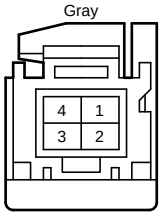


G 8
White




H 8
White



I 4
White



J 4
White




K 43
White




K 44
White




z 2
White

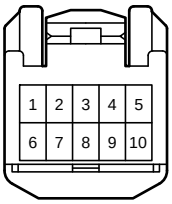


1D
White

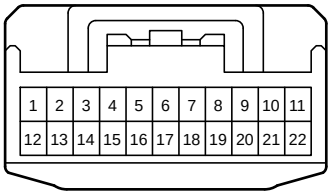


3A
White

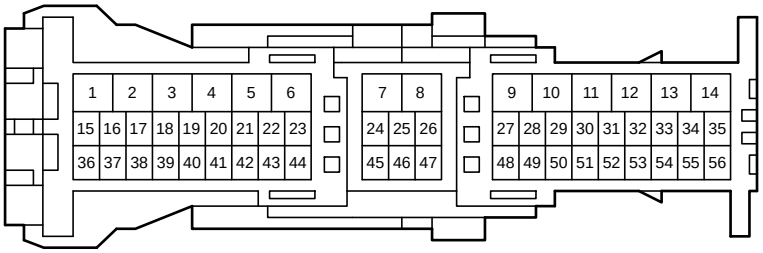


3B
White

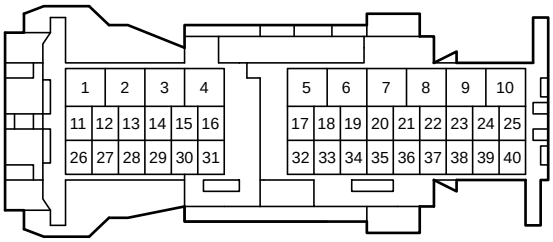


3C
White

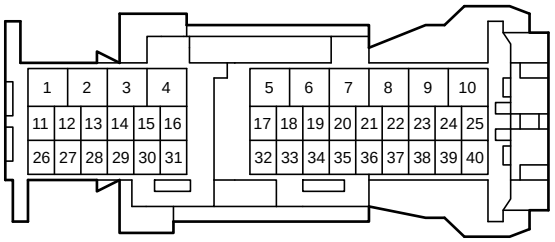


AF3
Black

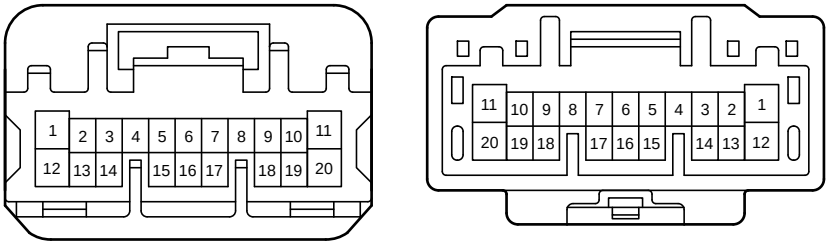


BA1
White

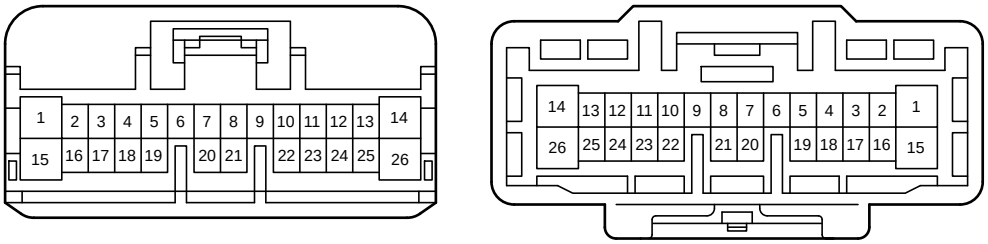


GF1
White

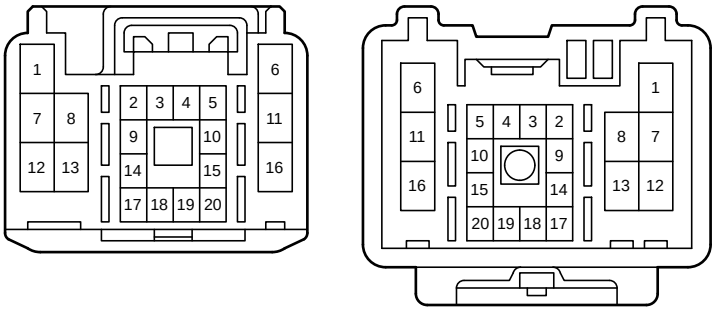


HF1
White

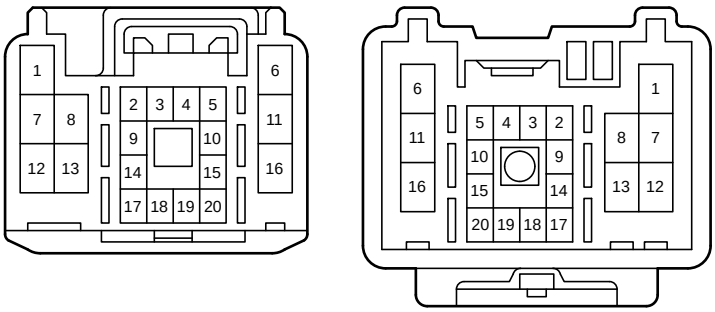


IK1
White

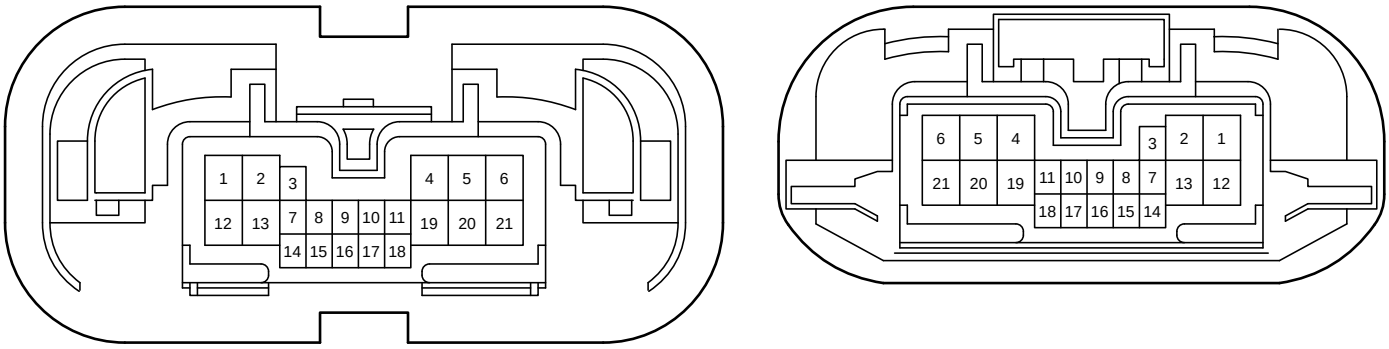

JK1
White

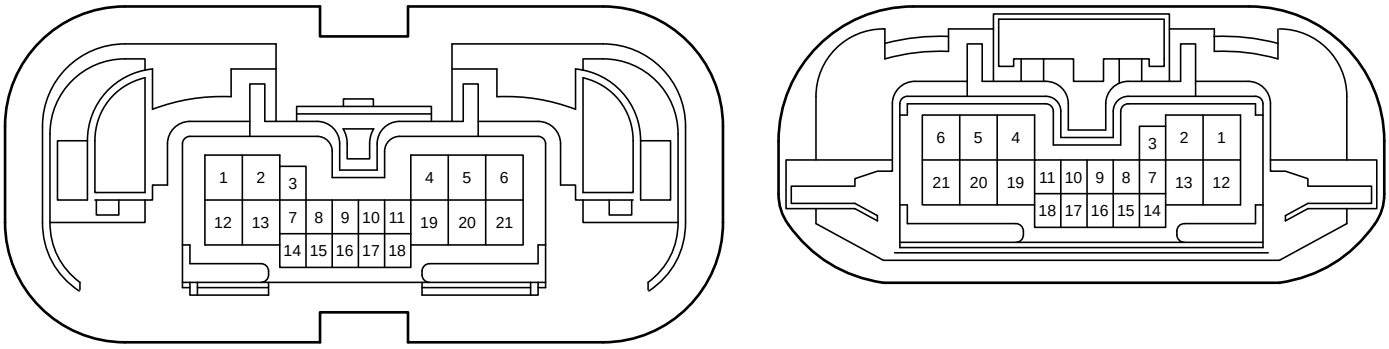

KF1
White

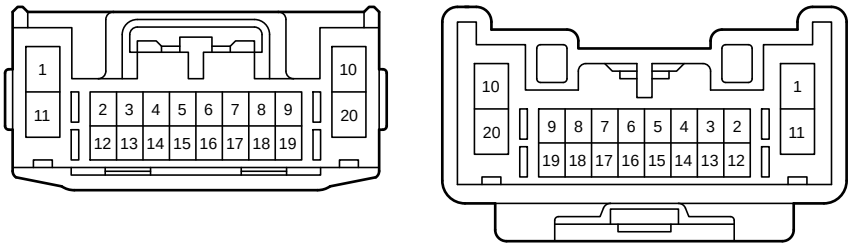

KF2
White

