





(IG)
5A
ECU–IG
NO. 2
32 3C
(BAT)
5A
ECU–B
NO. 2
2
1
(IG)
7. 5A
MET
2
6 1D
36 3C
14 3B
1 AF3
PANEL Fuse
Headlight Dimmer
Switch Assembly
Hazard Warning
Signal Switch Assembly
L
(*4)
15
A64
Junction
Connector
13
B
4 BA1
1
IG+
SE
SI
B85
Speedometer Sensor
2
3
W–B
P
6 BA1
5 BA1
2 AF3
40 A
39 A
20 A
10 B
9 B
3 B
B
IG+
ILL+
EL
ER
HAZ
R
Y
5V IC
Illumination
I/F
Display Driver
CPU
Buzzer
16 A
21 A
F1(A), F3(B)
Combination Meter Assembly
G
13 KF2
2
FS
Gage
FE
3
K17
Fuel Sender Gage
Assembly
A2
K4
F7


(BAT)
10A
HAZ
2
1
R
3 AF2
R
1 B
B
Side Turn Signal Light Assembly LH
Side Turn Signal Light Assembly RH
Headlight Unit LH
Headlight Unit RH
Rear Combination Light Assembly LH
Rear Combination Light Assembly RH
V
LG
7 B
LR
13 B
LL
∗1 : RHD
∗2 : LHD
∗4 : w/o ABS
∗6 : Except Australia
F1(A), F3(B)
Combination Meter Assembly
Door
Power Steering
SRS
ABS
SEAT BELT
Slip OFF
Slip
Temperature Hot
Temperature Cool
Display Driver
LED Driver
CPU
I/F
I/F
TRIP Switch
Clock Switch Drive Monitor
I/F
I/F
P/SB
+S
7 A
6 A
P
SB
Front Seat Inner Belt Assembly LH (∗1)
Front Seat Inner Belt Assembly RH (∗2)
15 3B
16 3A
37 3A
39 3C
V (∗6)
V (∗4)
V
Radio Receiver Assembly
Power Steering ECU Assembly
ECM
L (∗4)
L (∗4)



F1(A), F3(B)
Combination Meter Assembly
Turn RH
Turn LH
120km/h
Fuel
TRC OFF
CRUISE
SET
LED Driver
CPU
CAN Controller
5V+B
I/F
CAN I/F
SI
CANH
CANL
5
A
32
A
31
A
L
(*4)
L
(*3)
G
W
W
G
L
(*3)
L
(*4)


∗ 3 : w/ ABS
∗ 4 : w/o ABS

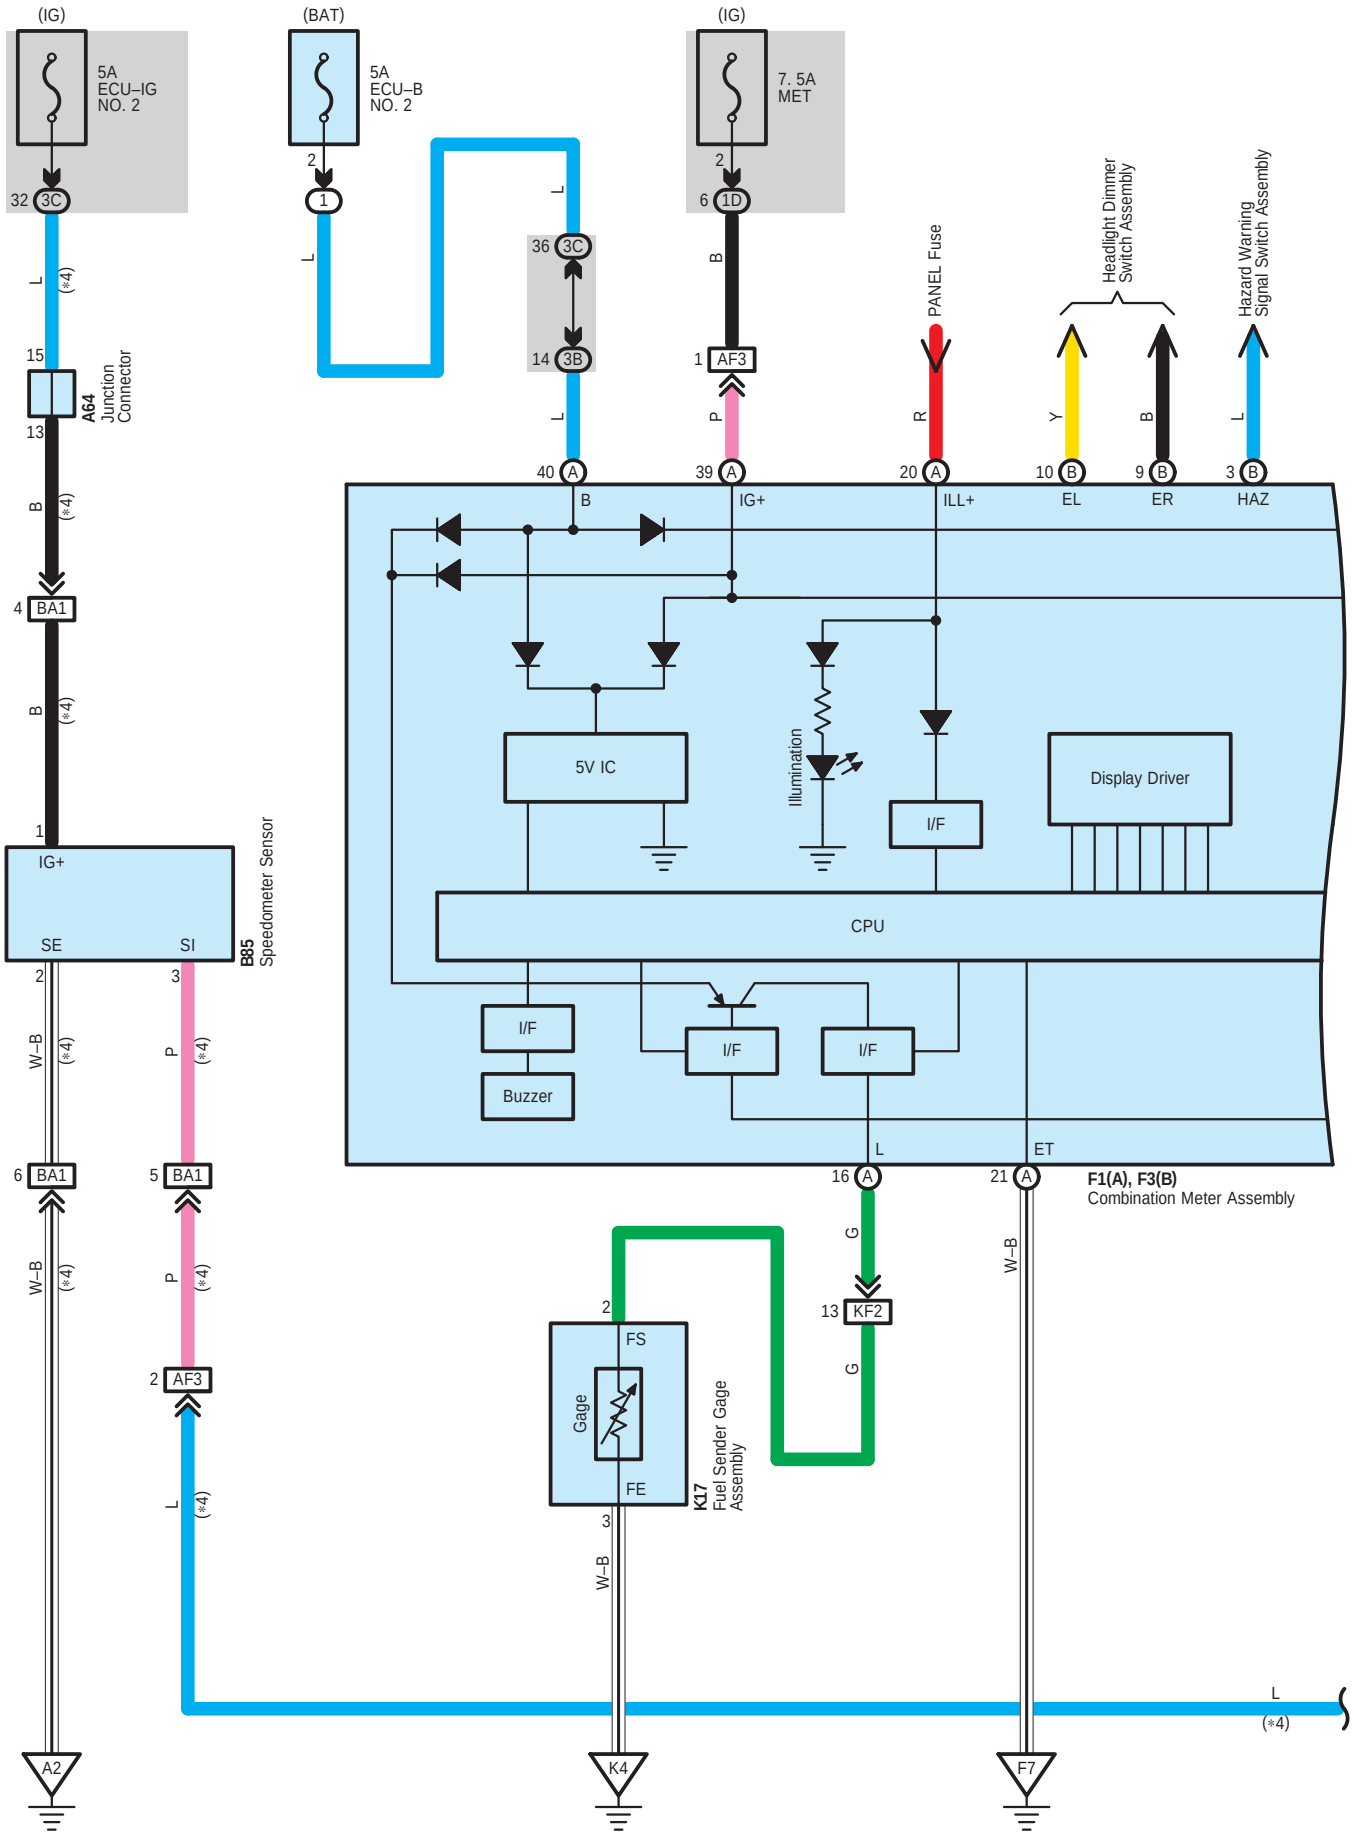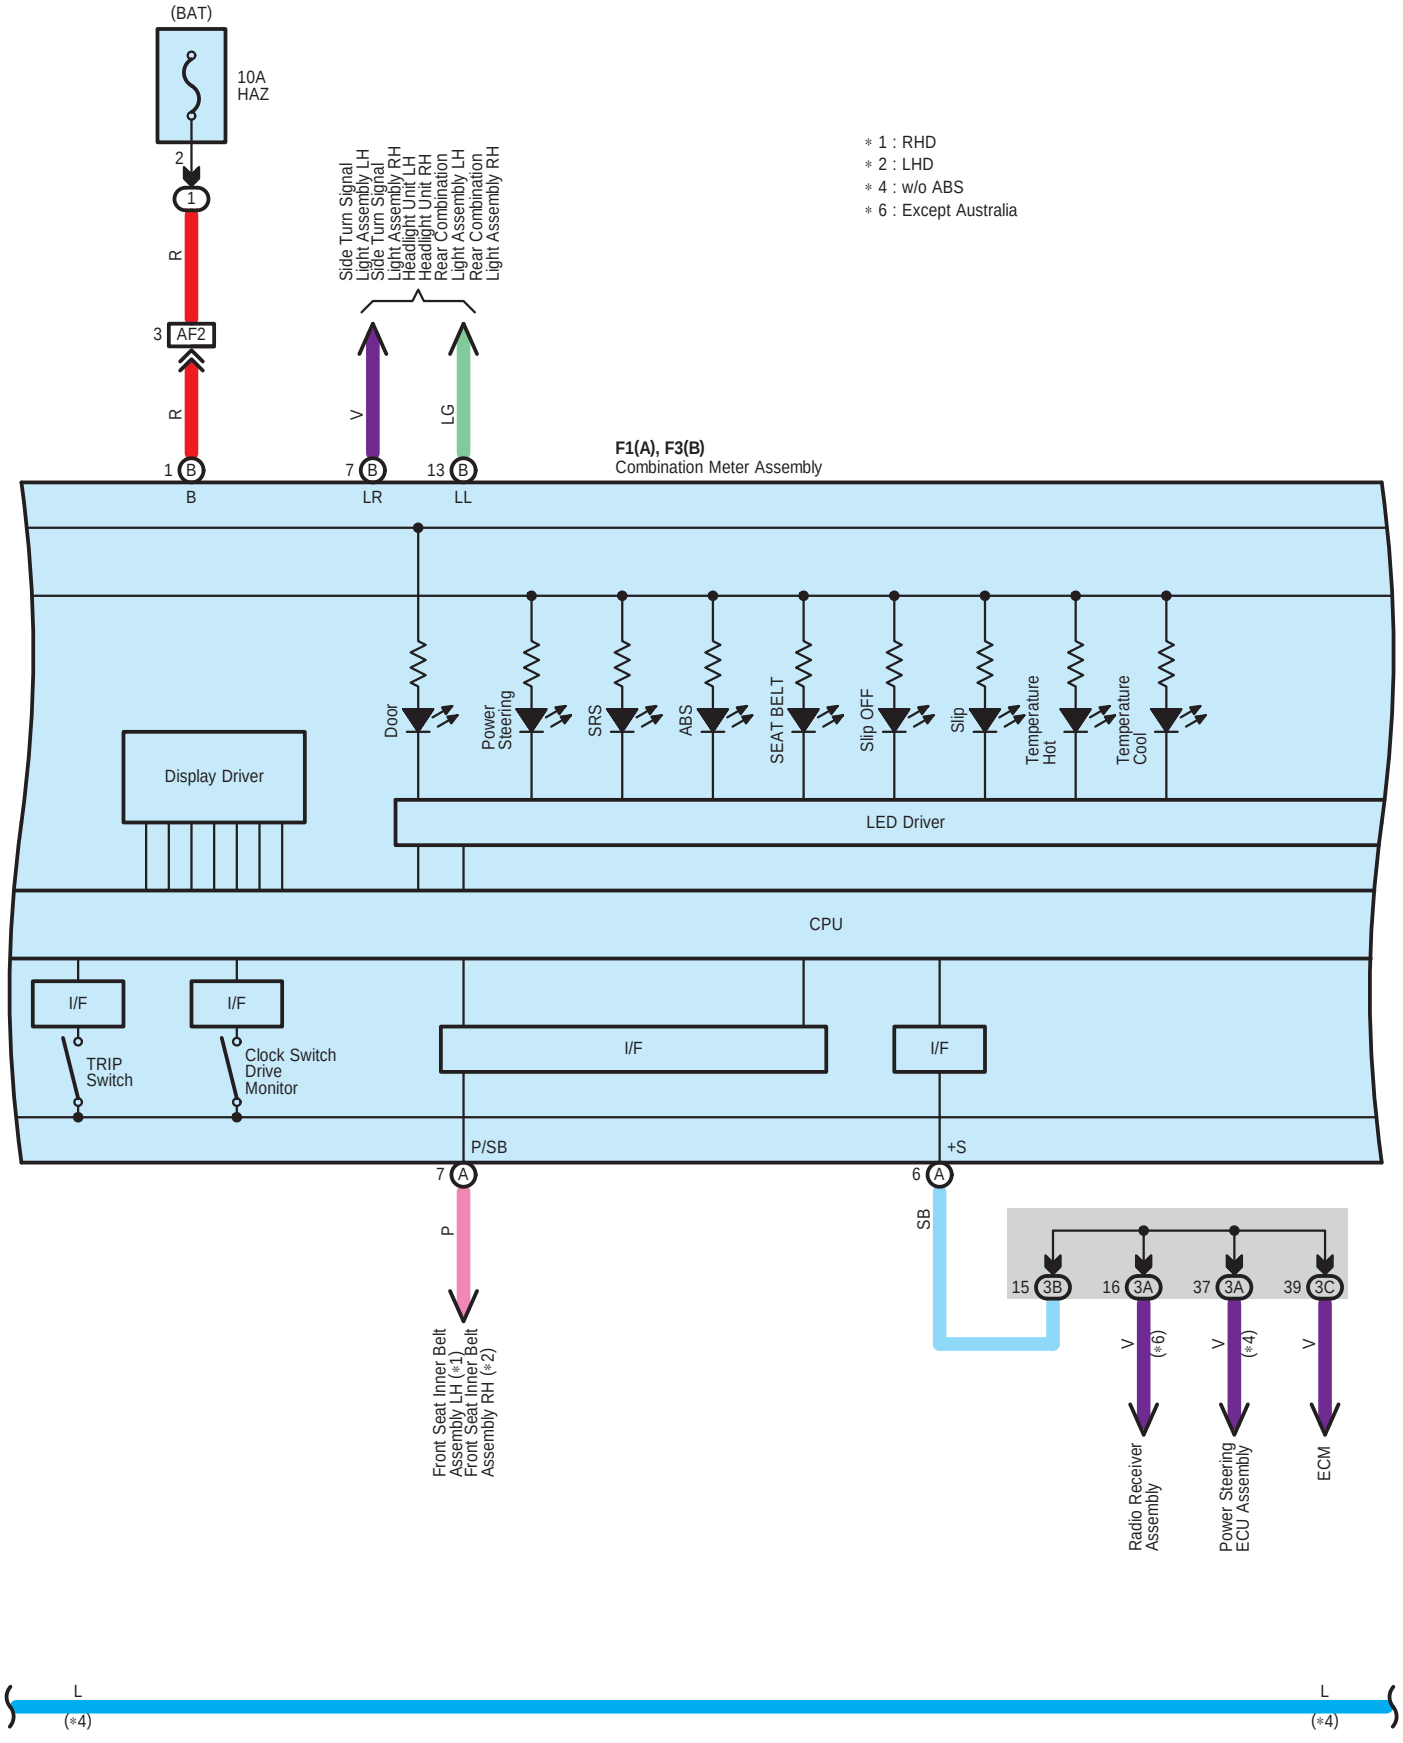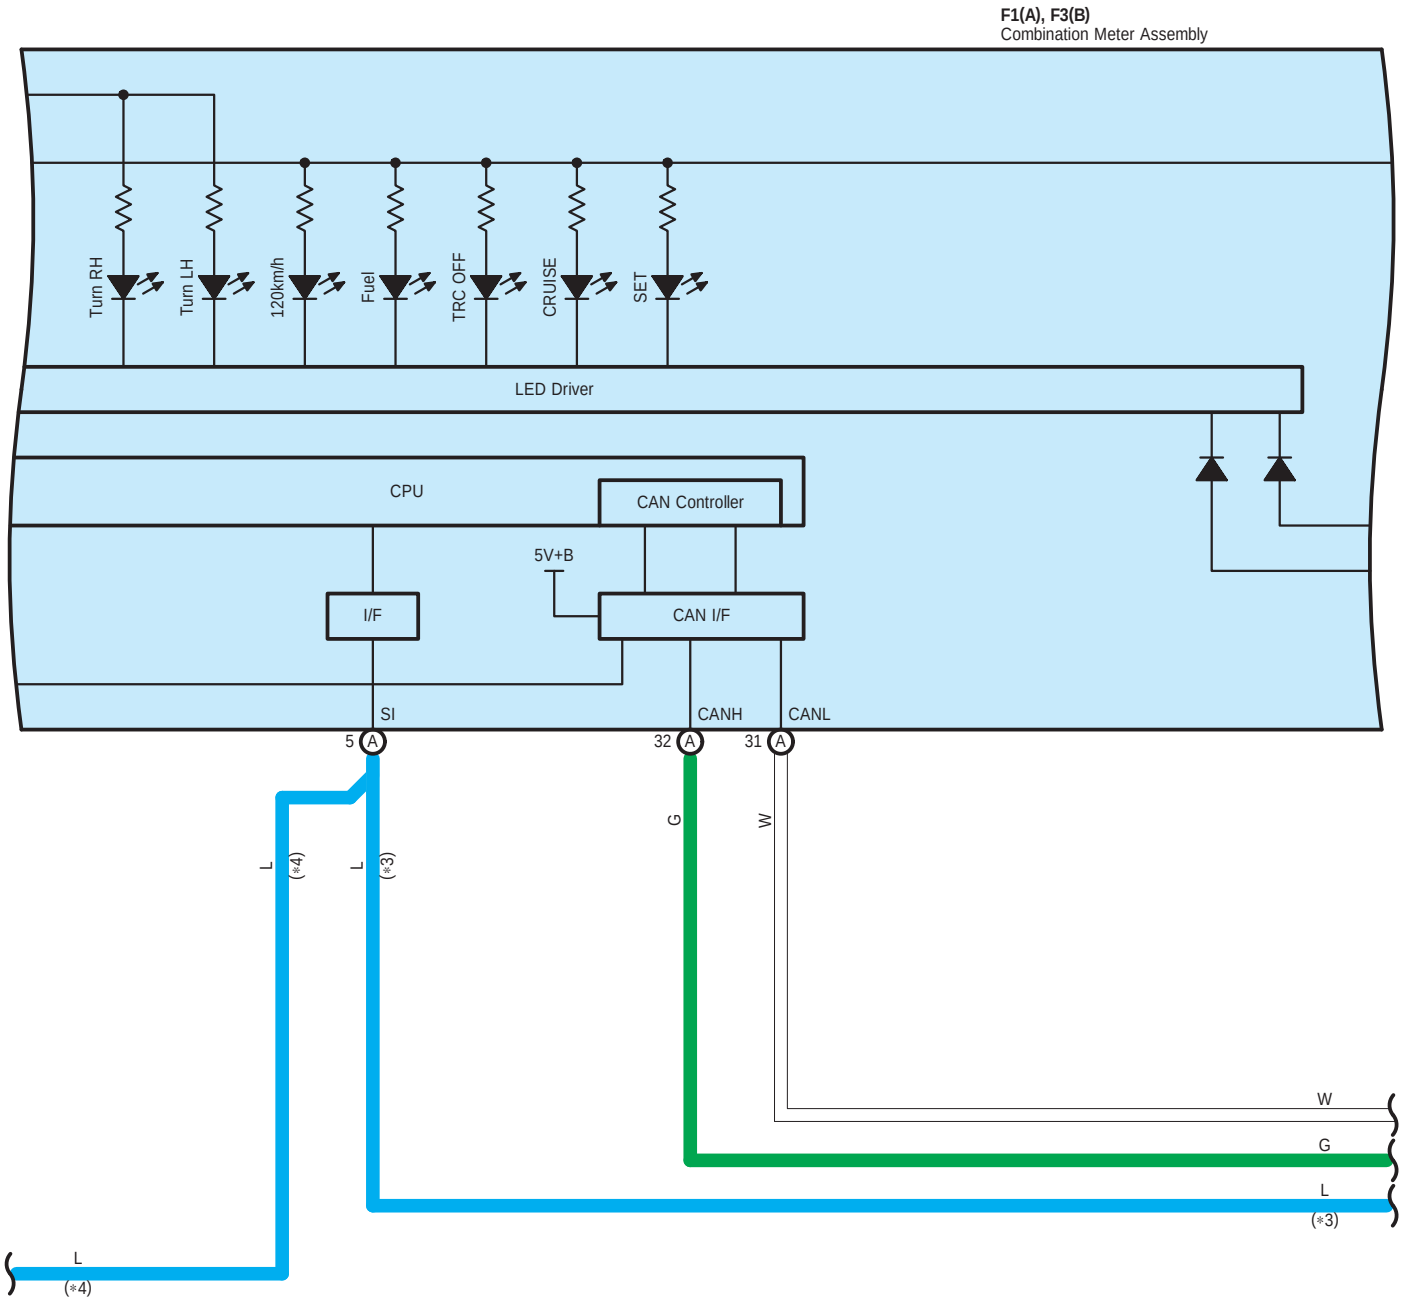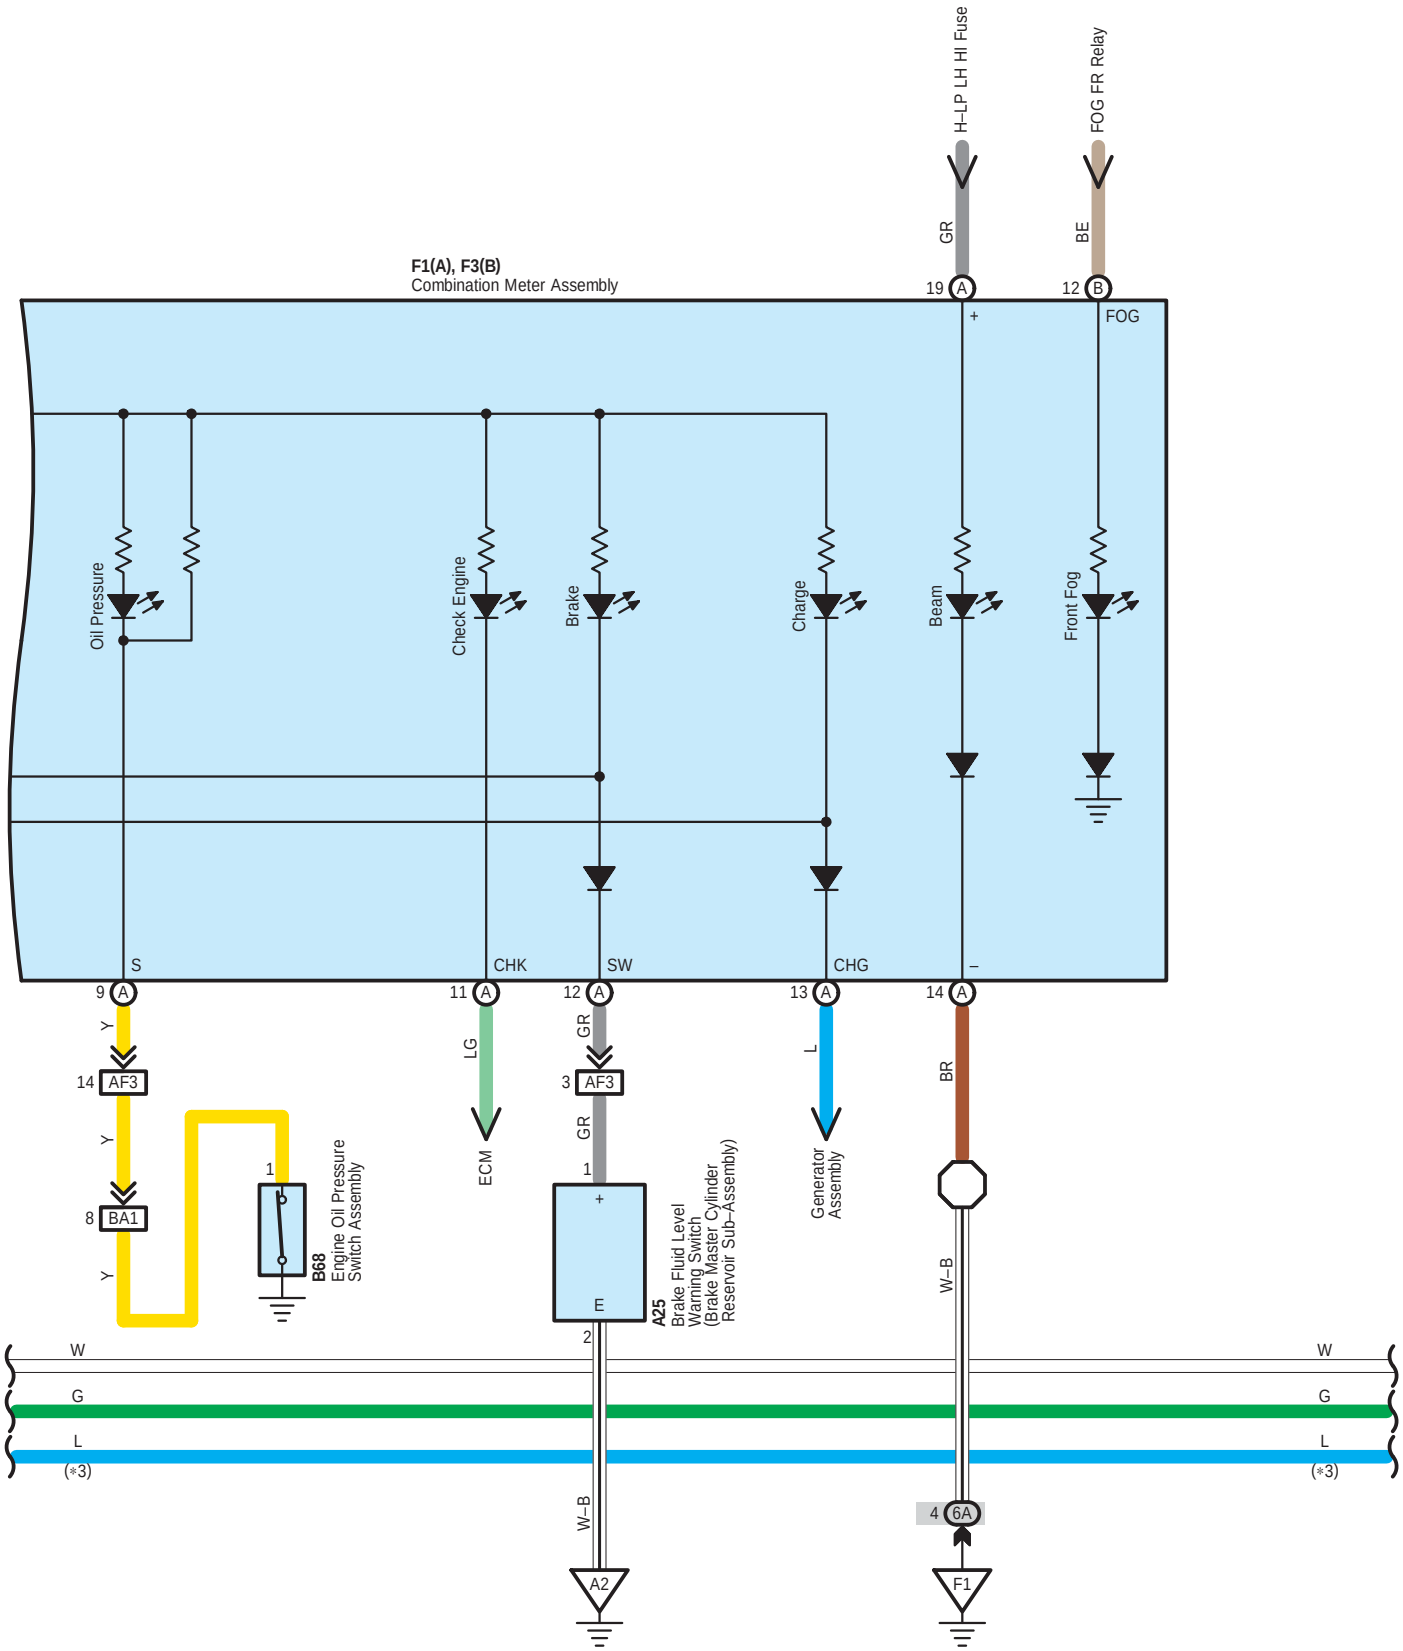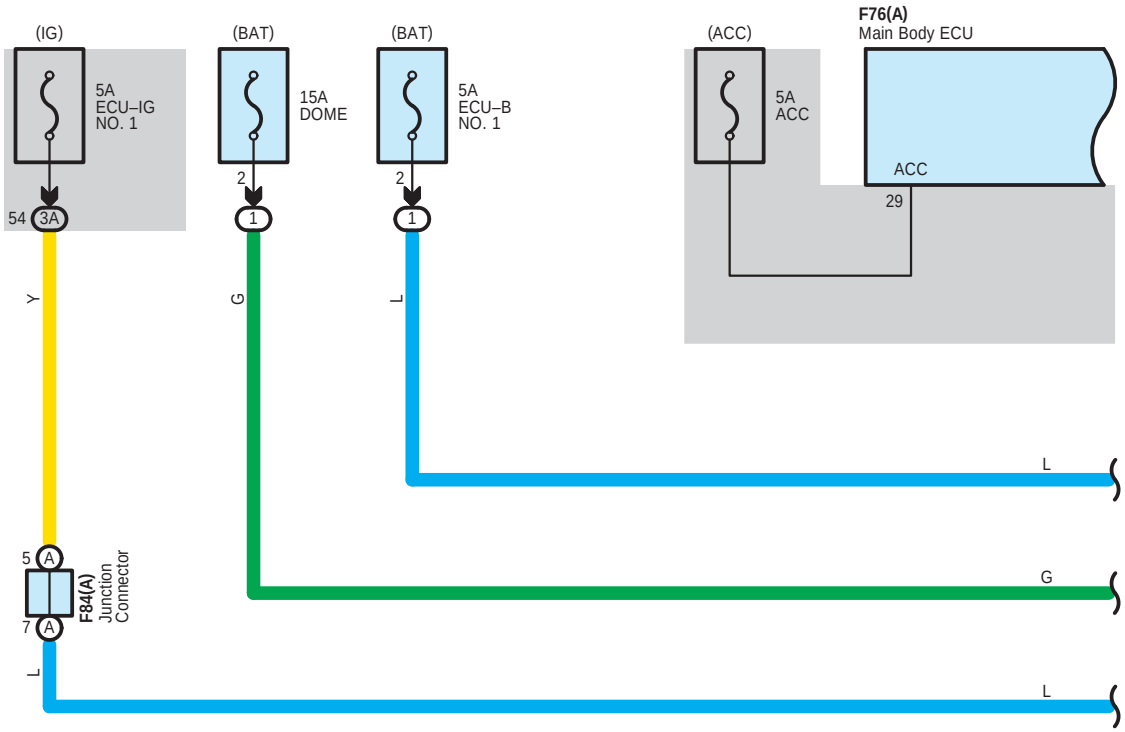




(IG)
5A
ECU–IG
NO. 1
54
3A
Y
(BAT)
15A
DOME
2
1
G
(BAT)
5A
ECU–B
NO. 1
2
1
L
(ACC)
5A
ACC
F76(A)
Main Body ECU
ACC
29
L
G
L
5
A
7
A
F84(A)
Junction
Connector
L


∗ 3 : w/ ABS

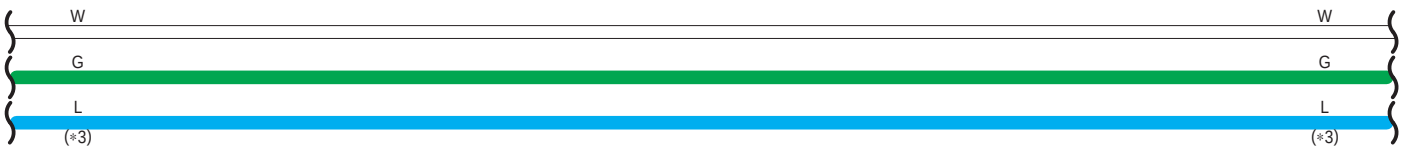

W
G
L
(∗3)
W
G
L
(∗3)

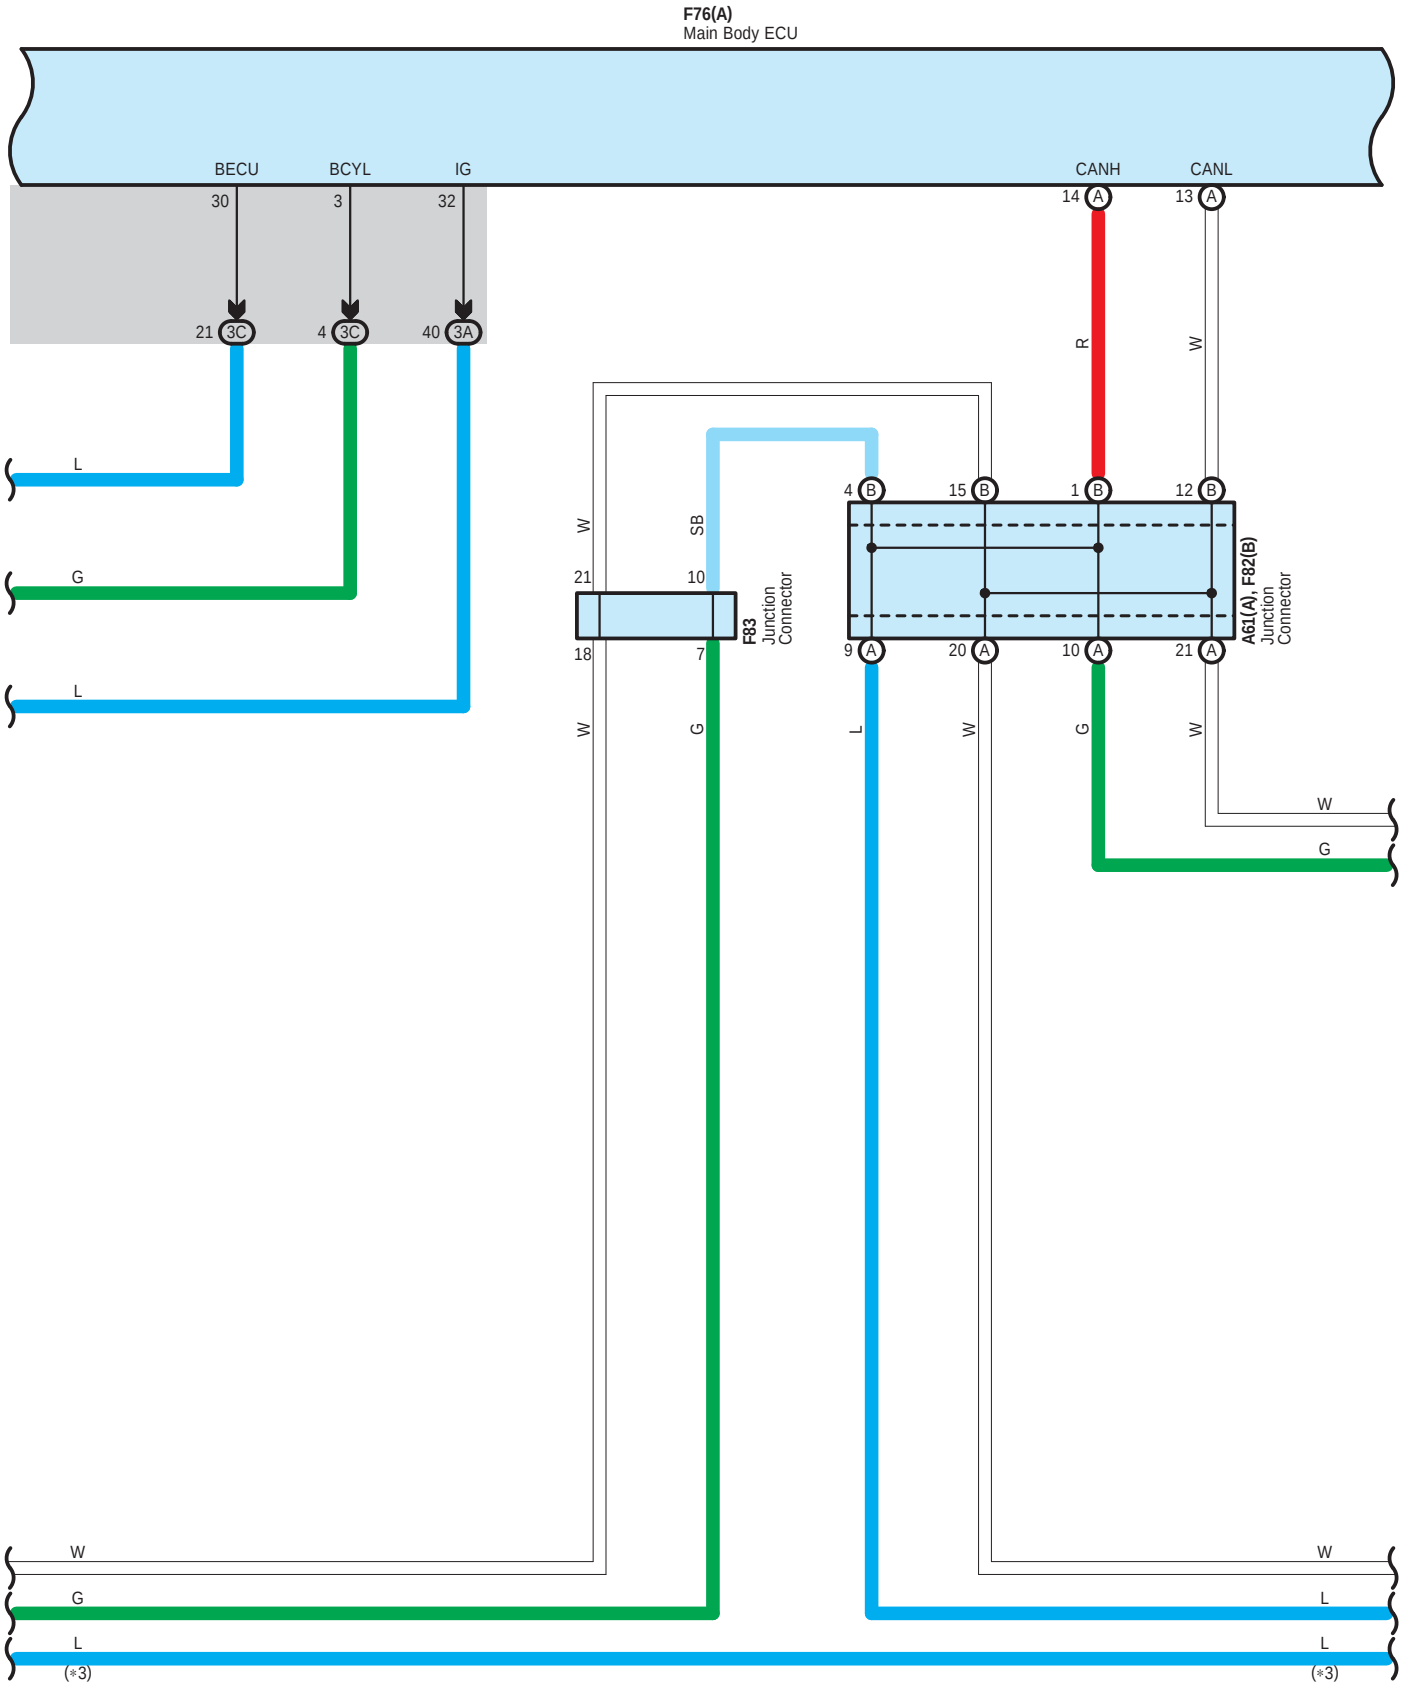
F76(A)
Main Body ECU
BECU
BCYL
IG
CANH
CANL
30
3
32
14 A
13 A
21 3C
4 3C
40 3A
R
W
L
G
L
4 B
15 B
1 B
12 B
W
SB
21
10
F83
Junction
Connector
A61(A), F82(B)
Junction
Connector
18
7
9 A
20 A
10 A
21 A
W
G
L
W
G
W
G
W
G
L
L
(*3)
L
(*3)

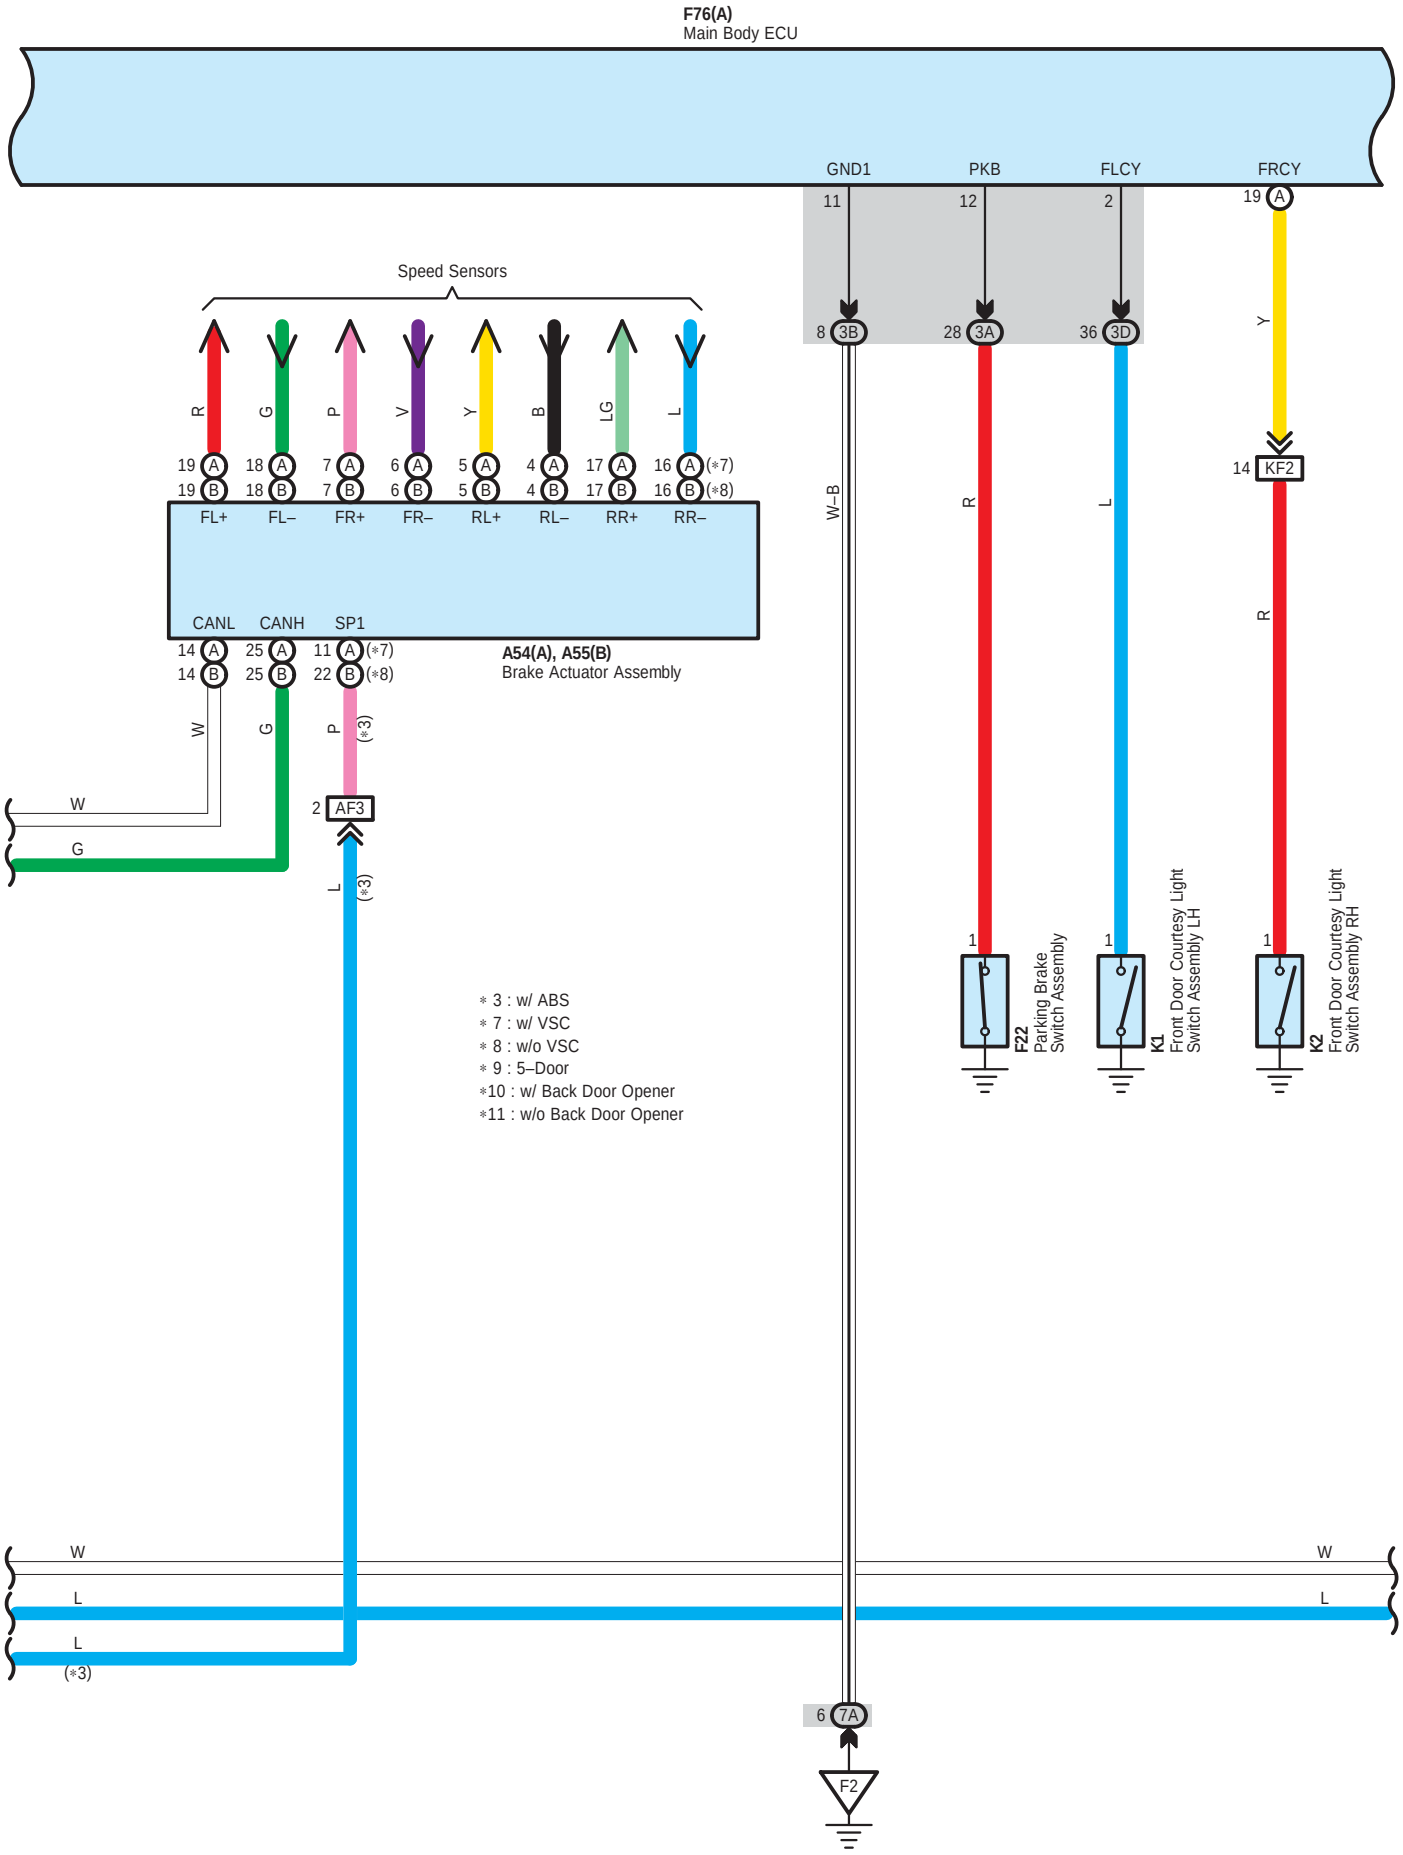
F76(A)
Main Body ECU
GND1
PKB
FLCY
FRCY
11
12
2
19 A
8 3B
28 3A
36 3D
Y
W–B
R
L
R
Speed Sensors
R
G
P
V
Y
B
LG
L
19 A
19 B
18 A
18 B
7 A
7 B
6 A
6 B
5 A
5 B
4 A
4 B
17 A
17 B
16 A (*7)
16 B (*8)
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
CANL
CANH
SP1
14 A
14 B
25 A
25 B
11 A (*7)
22 B (*8)
A54(A), A55(B)
Brake Actuator Assembly
W
G
P (*3)
2 AF3
L (*3)
14 KF2
R
1
F22
Parking Brake
Switch Assembly
1
K1
Front Door Courtesy Light
Switch Assembly LH
1
K2
Front Door Courtesy Light
Switch Assembly RH
* 3 : w/ ABS
* 7 : w/ VSC
* 8 : w/o VSC
* 9 : 5–Door
*10 : w/ Back Door Opener
*11 : w/o Back Door Opener
W
L
L
(*3)
W
L
6 7A
F2

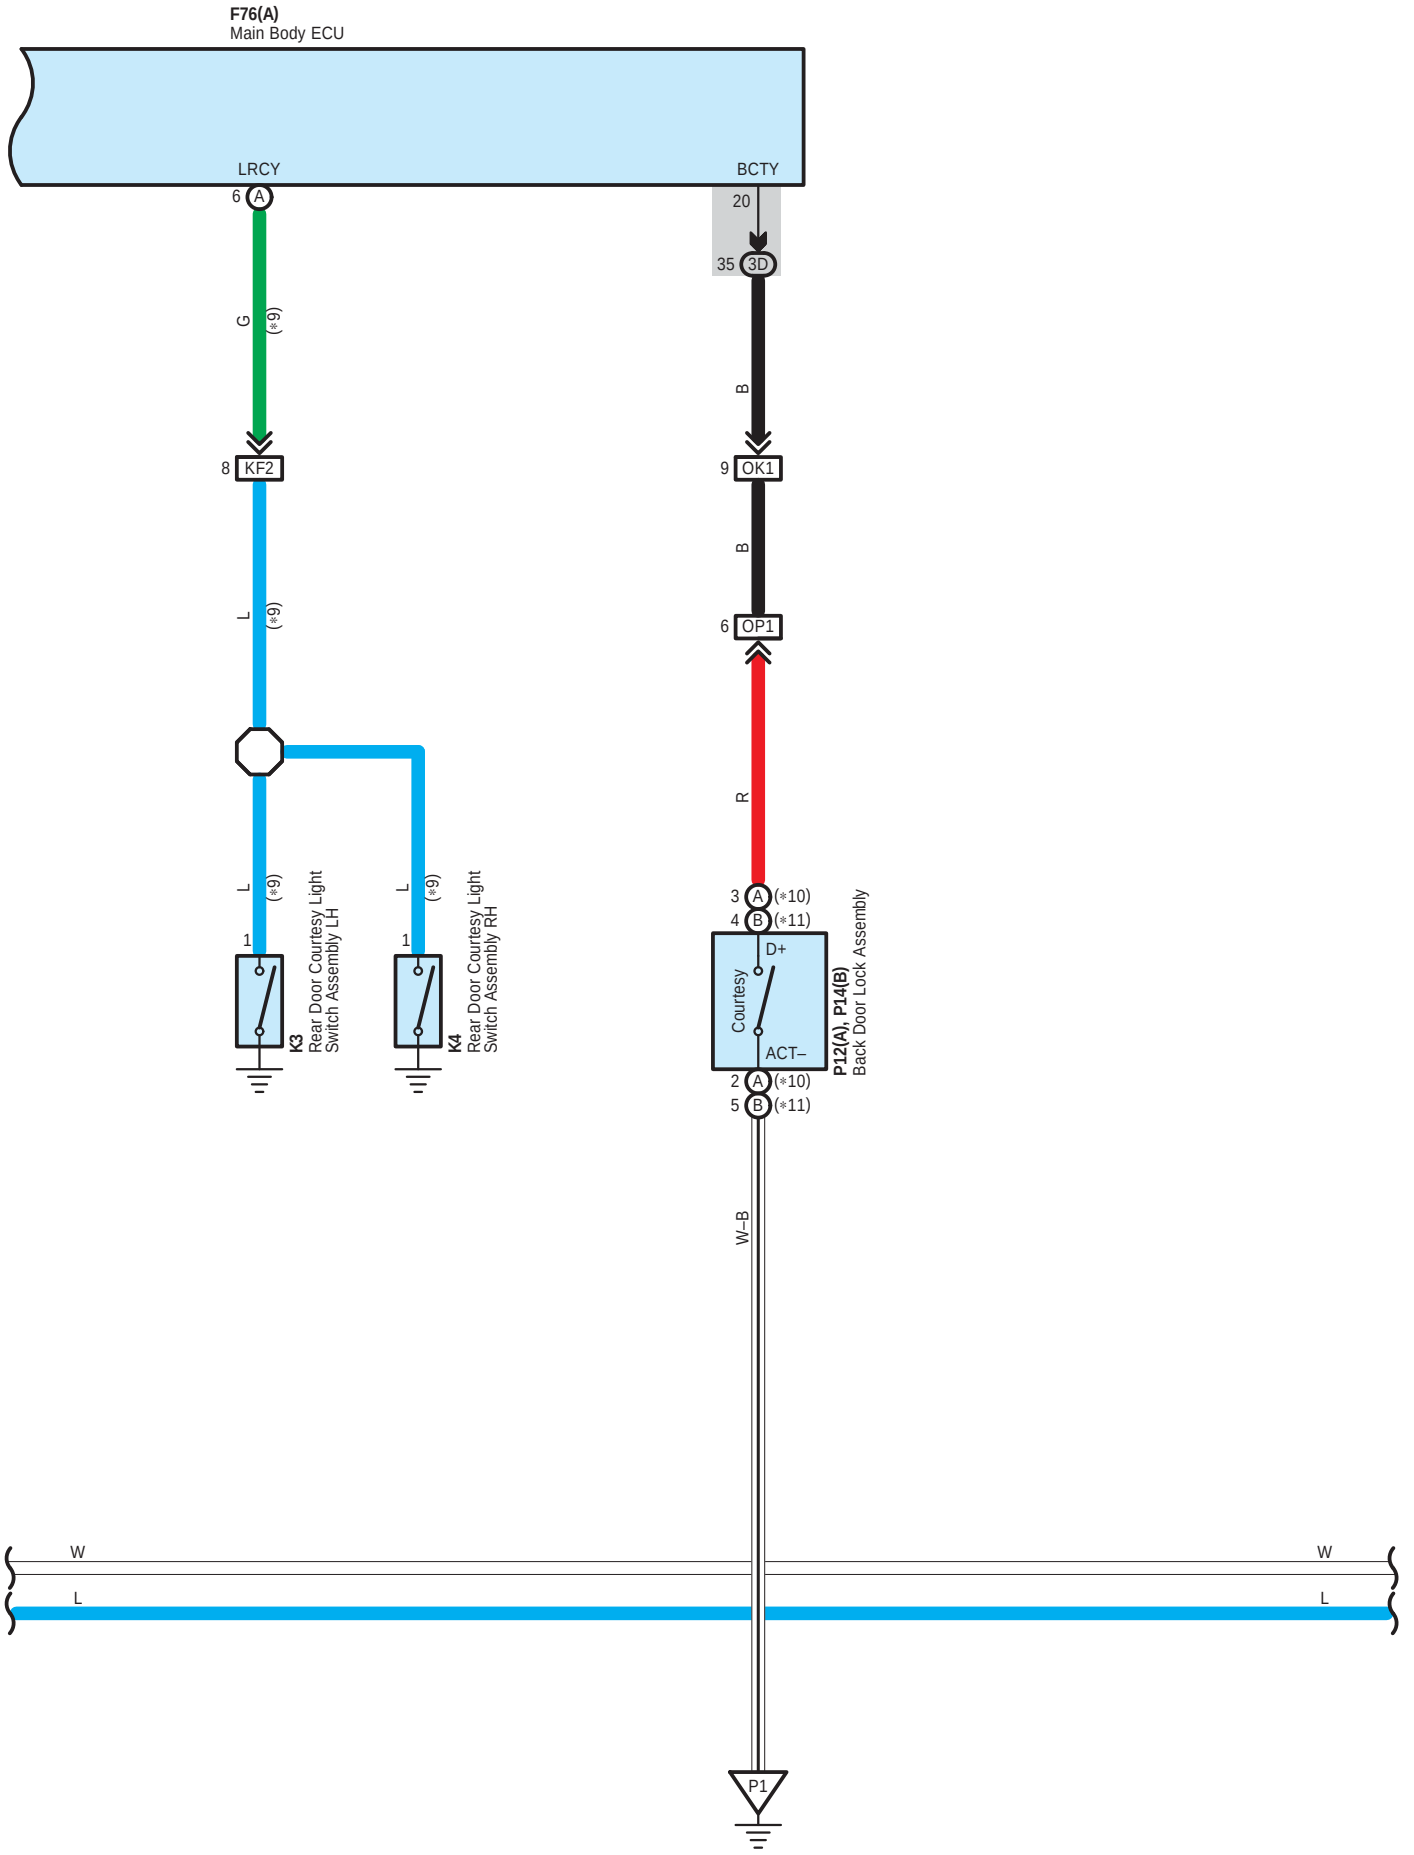
F76(A)
Main Body ECU
LRCY
6 A
G
(*9)
8 KF2
L
(*9)
L
(*9)
1
K3
Rear Door Courtesy Light Switch Assembly LH
L
(*9)
1
K4
Rear Door Courtesy Light Switch Assembly RH
BCTY
20
35 3D
B
9 OK1
B
6 OP1
R
3 A (*10)
4 B (*11)
D+
Courtesy
ACT–
P12(A), P14(B)
Back Door Lock Assembly
2 A (*10)
5 B (*11)
W–B
W
L
W
L
P1

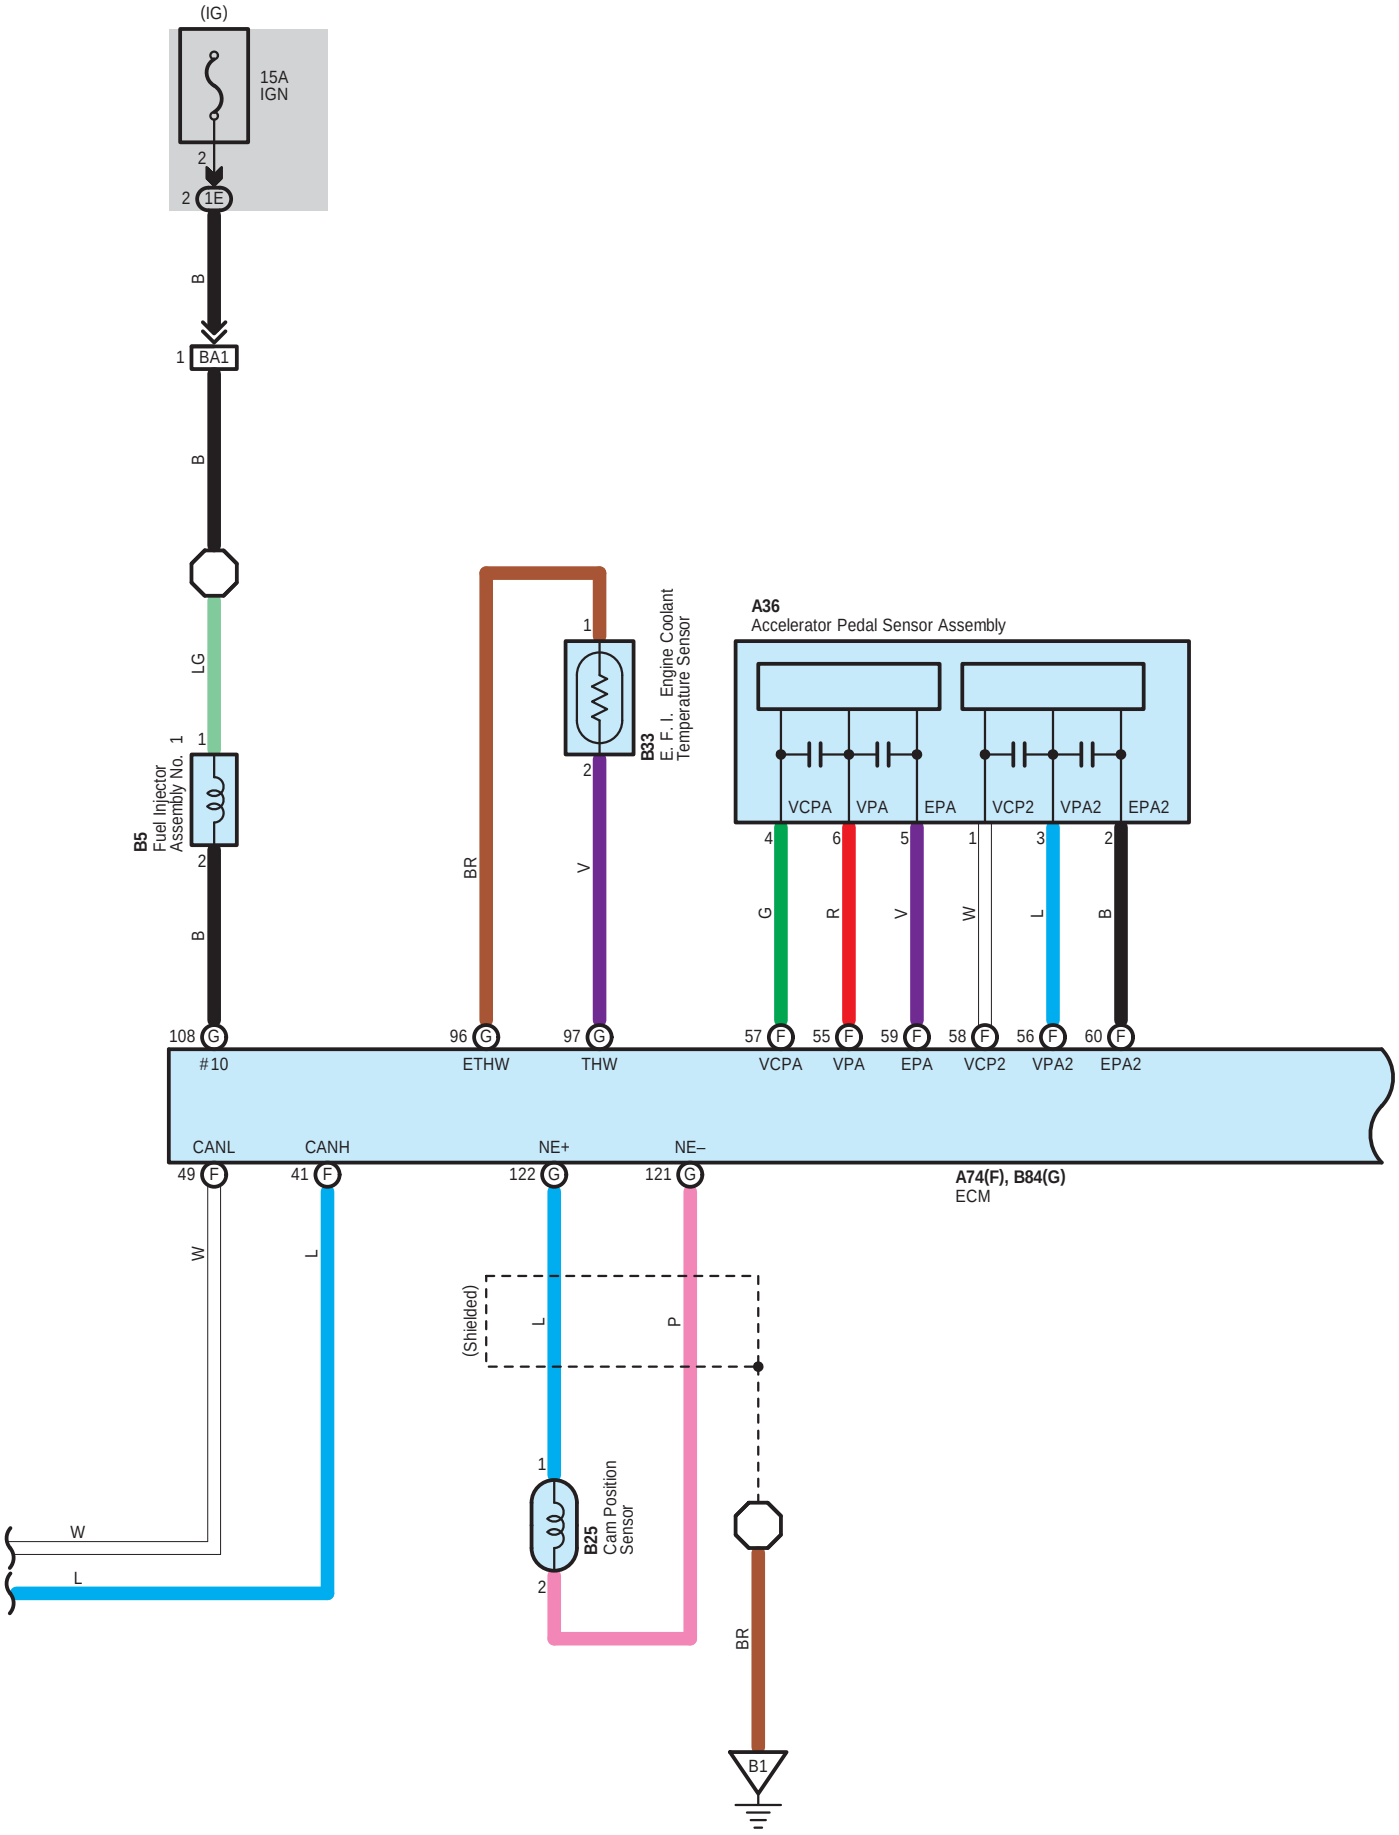

(IG)
15A
IGN
2
2 1E
B
1 BA1
B
LG
1
1
B5
Fuel Injector
Assembly No. 1
2
B
108 G
#10
BR
V
1
2
B33
E.F.I.
Engine Coolant
Temperature Sensor
96 G
ETHW
97 G
THW
A36
Accelerator Pedal Sensor Assembly
VCPA
VPA
EPA
VCP2
VPA2
EPA2
4
6
5
1
3
2
G
R
V
W
L
B
57 F
55 F
59 F
58 F
56 F
60 F
VCPA
VPA
EPA
VCP2
VPA2
EPA2
CANL
CANH
NE+
NE–
49 F
41 F
122 G
121 G
A74(F), B84(G)
ECM
W
L
(Shielded)
L
P
1
2
B25
Cam Position
Sensor
BR
B1
W
L

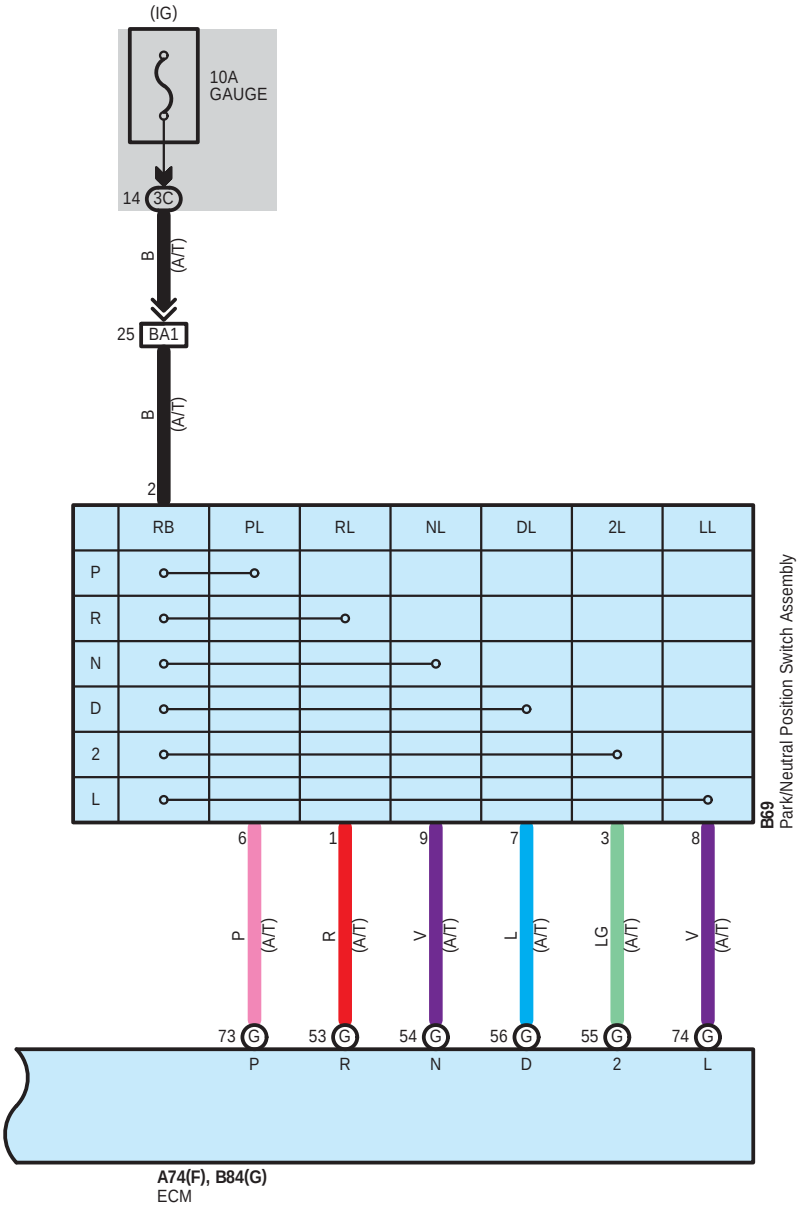
(IG)
10A
GAUGE
14 3C
B (A/T)
25 BA1
B (A/T)
2
RB
PL
RL
NL
DL
2L
LL
P
R
N
D
2
L
B69
Park/Neutral Position Switch Assembly
6
1
9
7
3
8
P (A/T)
R (A/T)
V (A/T)
L (A/T)
LG (A/T)
V (A/T)
73 G
53 G
54 G
56 G
55 G
74 G
P
R
N
D
2
L
A74(F), B84(G)
ECM


A 25
Gray




A 36
Black

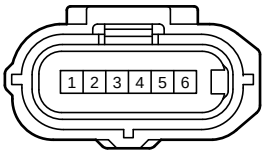


A 54
Black

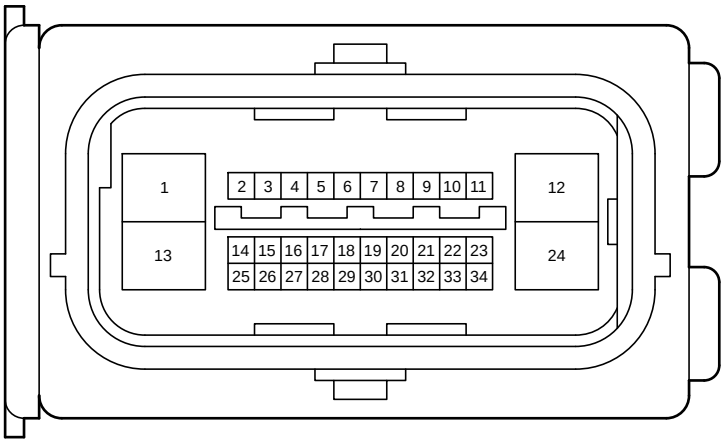


A 55
Black

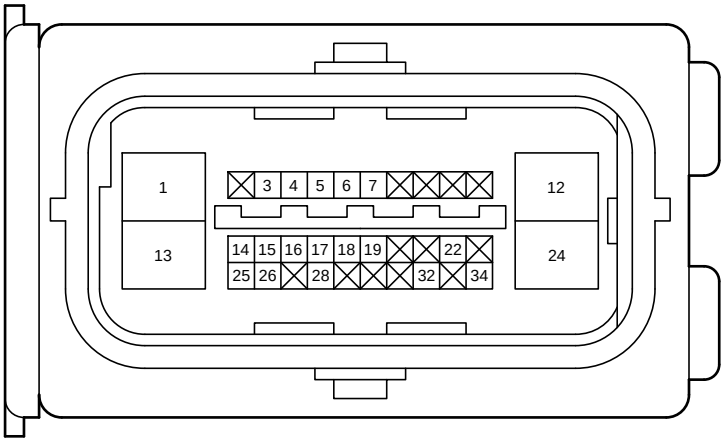


A 61
Blue

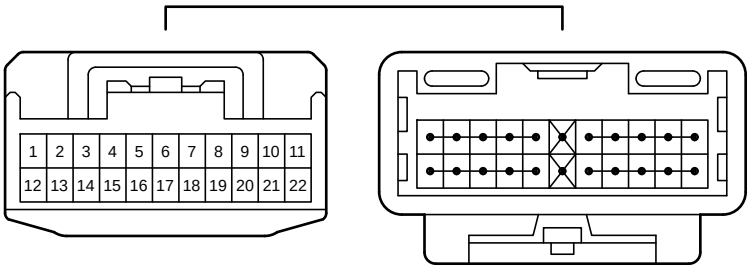


A 64
White

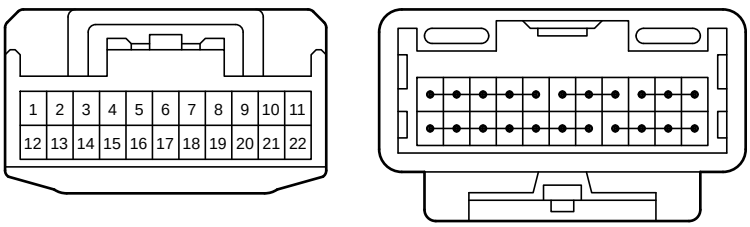


A 74
Black

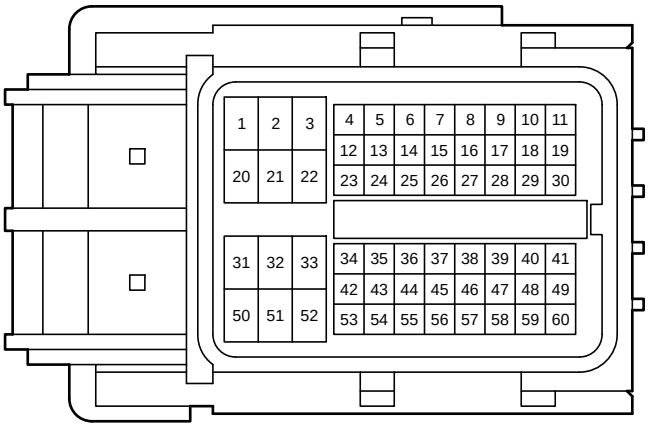

B 5
Black



B 25
Black

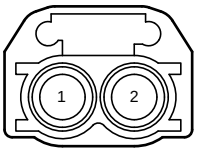


B 33
Black




B 68
Gray



B 69
Gray

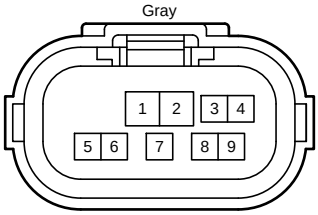


B 84
Black

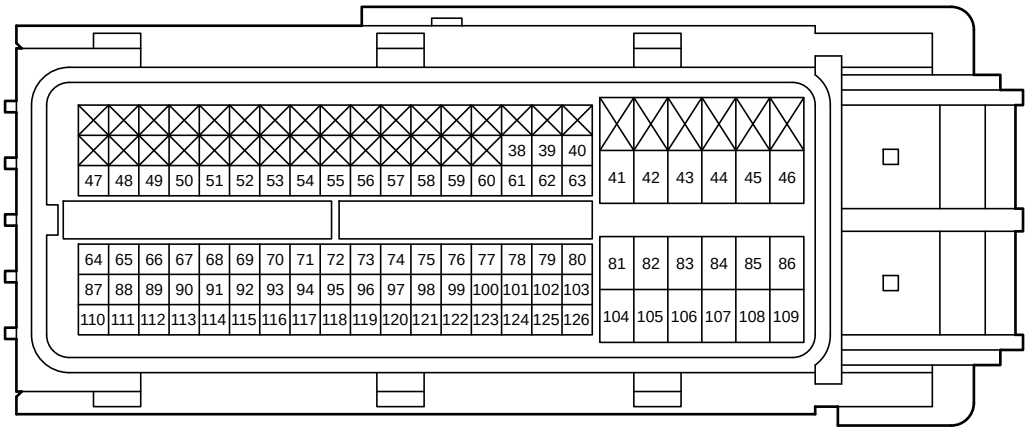


B 85
Black



F 1
Black

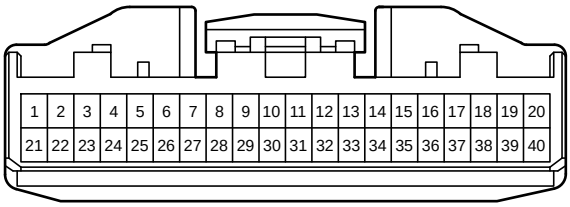


F 3
White

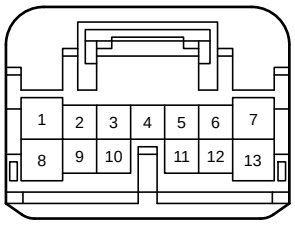


F 22
White




F 76
White

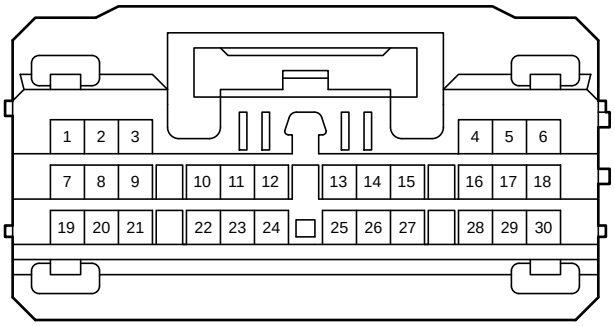


F 82
Blue

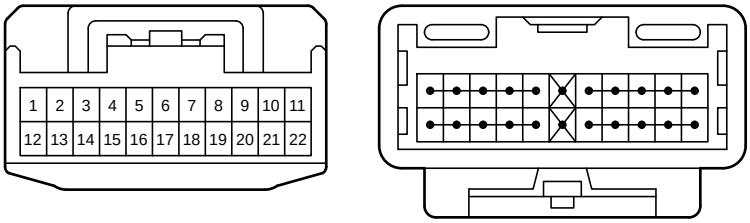

F 83
Gray

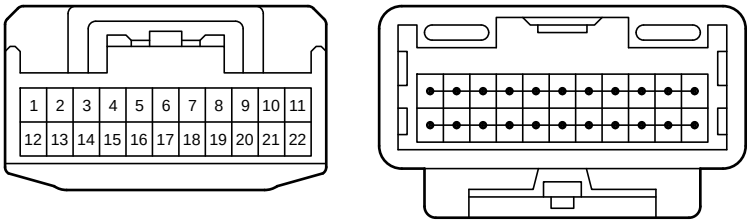

F 84
Black

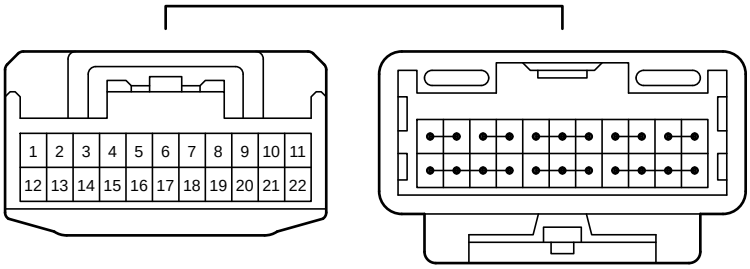

K 1
White



K 2
White



K 3
White




K 4
White




K 17
White




P 12
Black

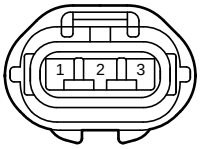


P 14
White

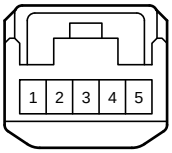


1D
White

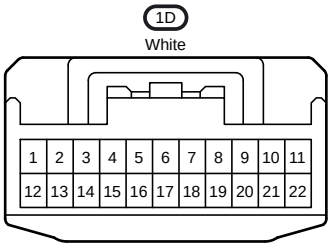


1E
White




3A
White

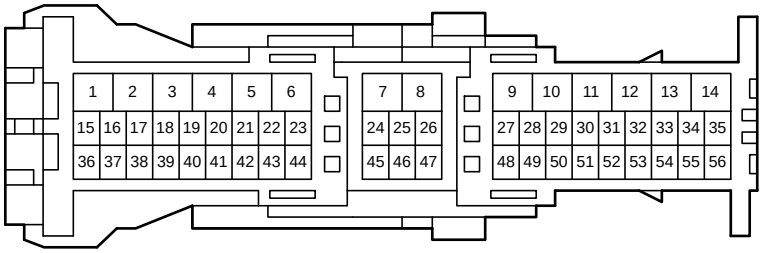


3B
White

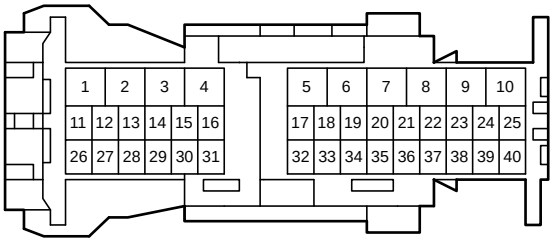


3C
White

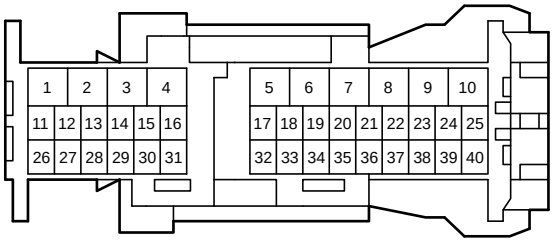


3D
White

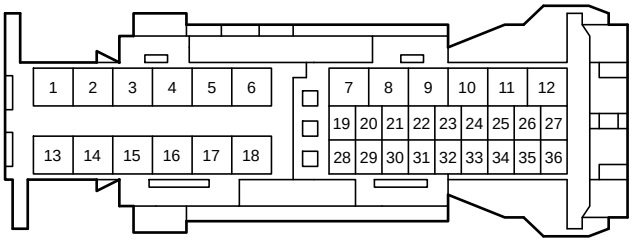


6A
White

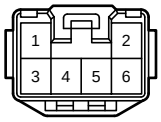


7A
White

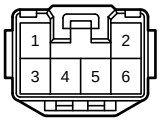


AF2
White

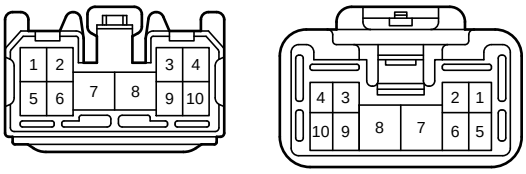


AF3
Black

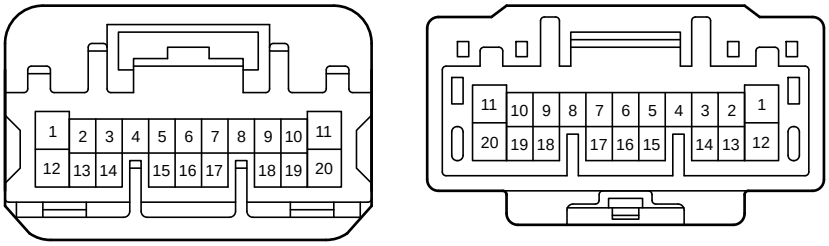


BA1
White

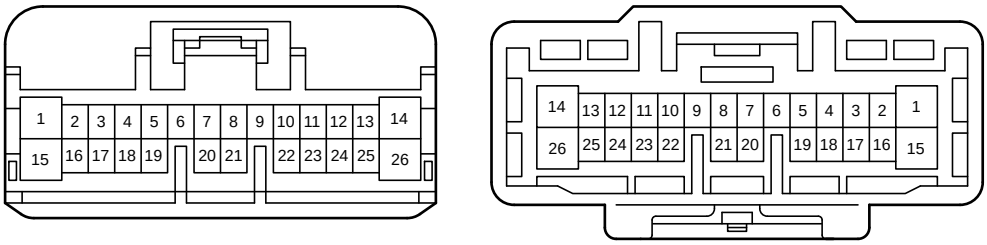

KF2
White

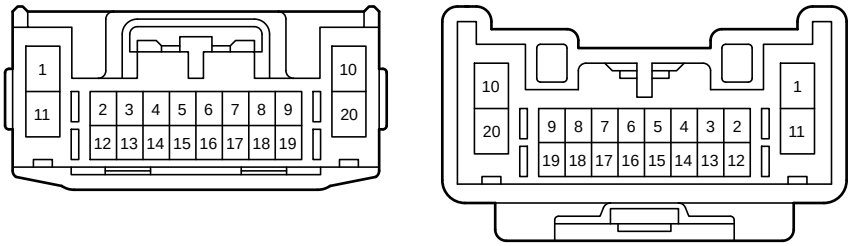

OK1
White

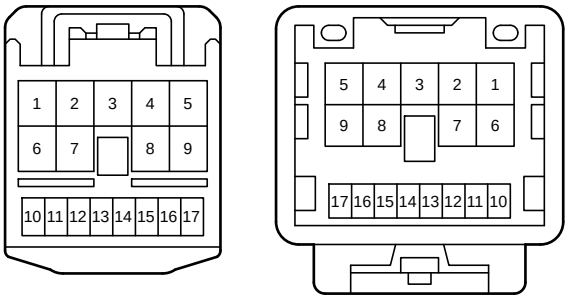

OP1
White

