




(BAT)
(IG)
5A
ECU–B
NO. 2
7. 5A
MET
2
1
2
6 1D
V
R
BE
LG
LG
36 3C
14 3B
1 AF3
6 KF2
5 KF2
4 KF2
V
R
BE
L
P
2
4
1
26 A
25 A
24 A
40 A
39 A
LBR+
CBR+
LBR–
CBR–
RBR+
RBR–
RRSB
RCSB
RLSB
B
IG+
3
5
2
K51
Rear Seat 3 Point Type
Outer Belt Assembly LH
K52
Rear Seat 3 Point Type
Outer Belt Assembly RH
5V IC
CPU
ET
21 A
F1(A)
Combination Meter Assembly
BR
BR
BR
BR
K4
F7


(IG)
10A
GAUGE
49
3A
LG
LG
4
LAPB
Rear Seat Belt Warning Light
RLID
RCID
RRID
E
F141
Hazard Warning
Signal Switch Assembly
5
6
7
8
GR
G
B
BR
1
A
2
A
3
A
RLMT
RCMT
RRMT
F1(A)
Combination Meter Assembly
W–B
4
6A
F1


F 1
Black

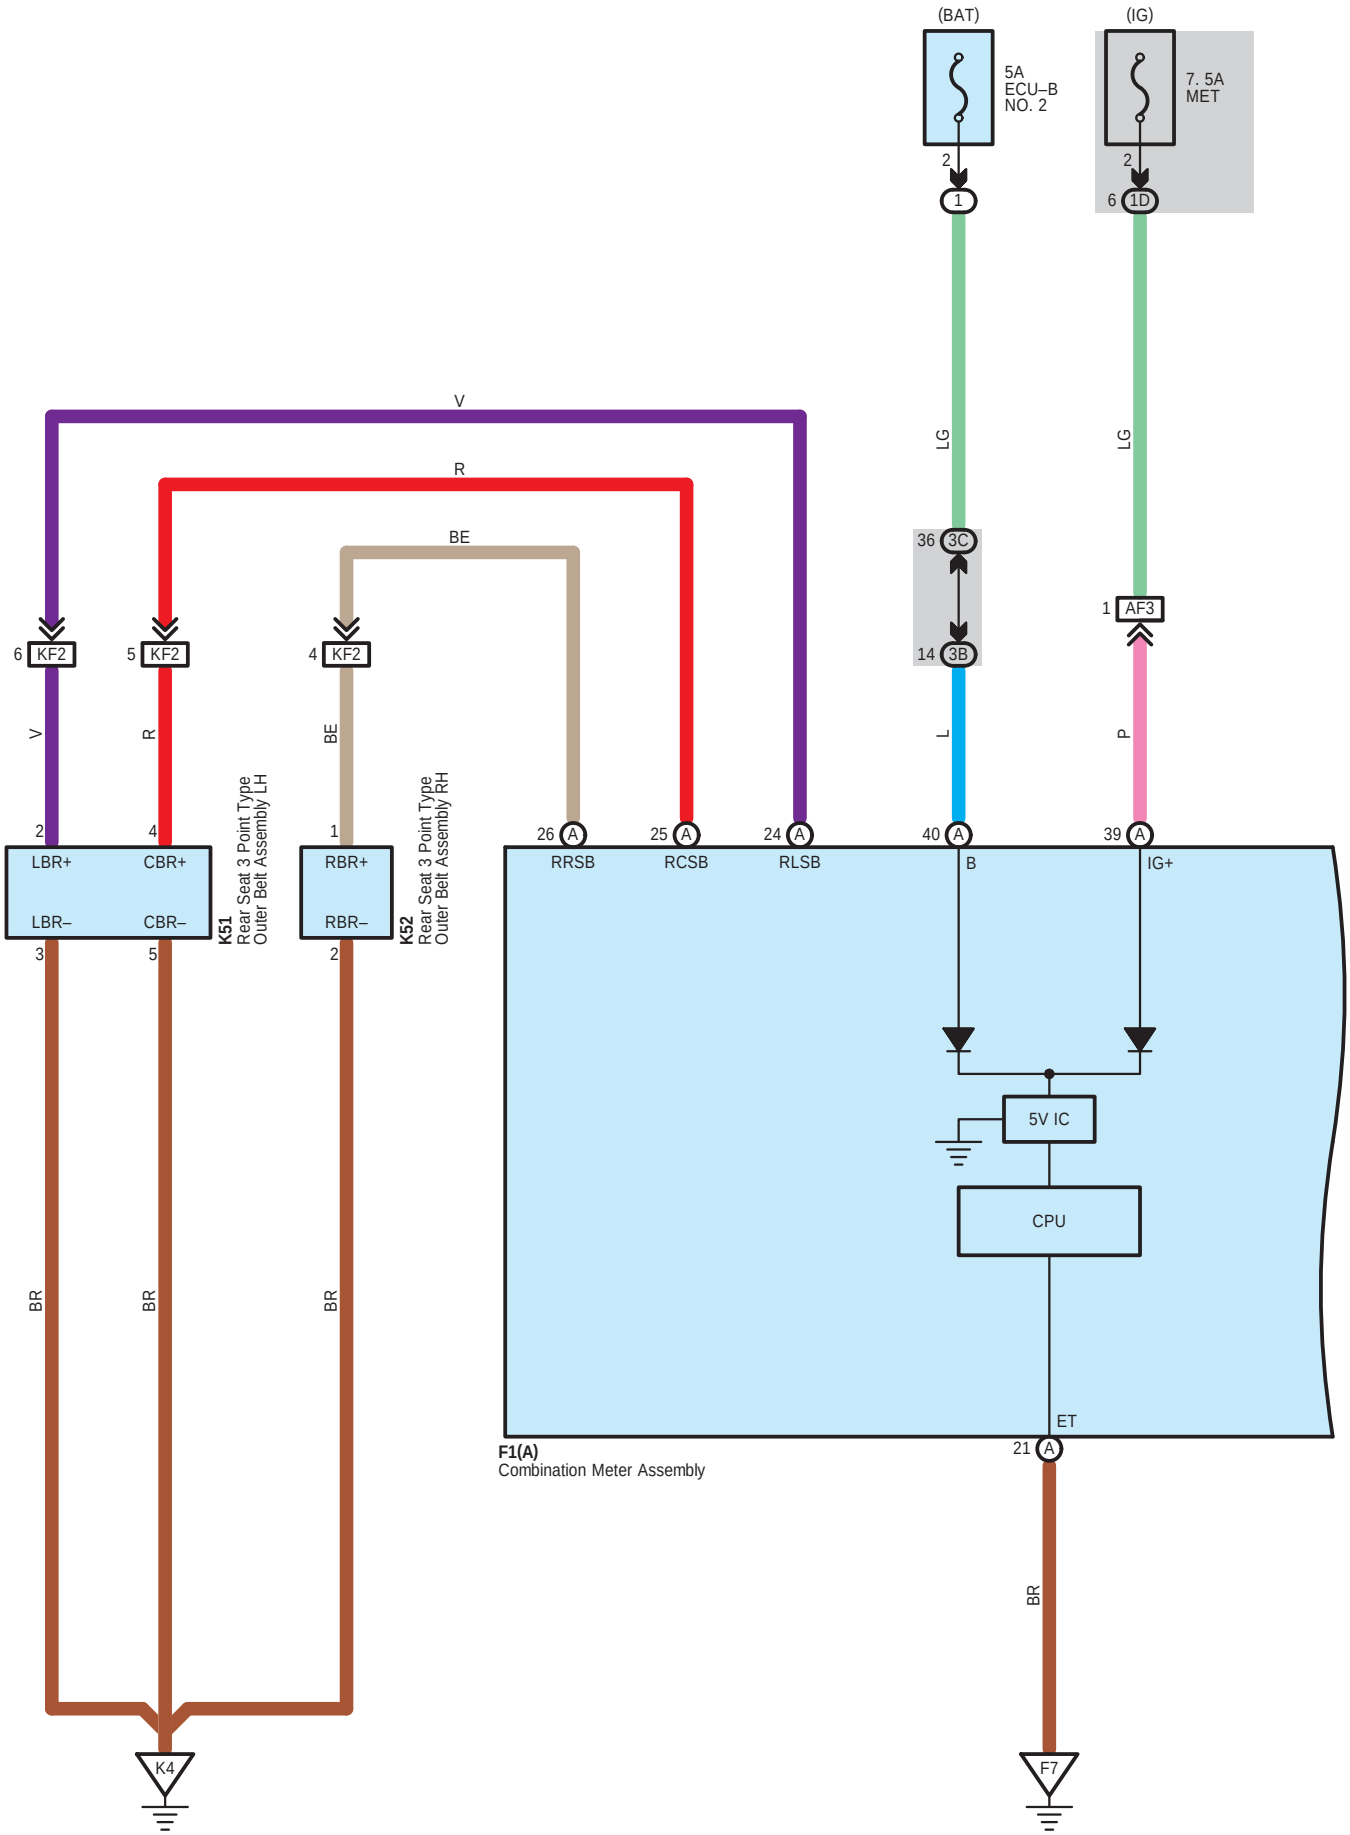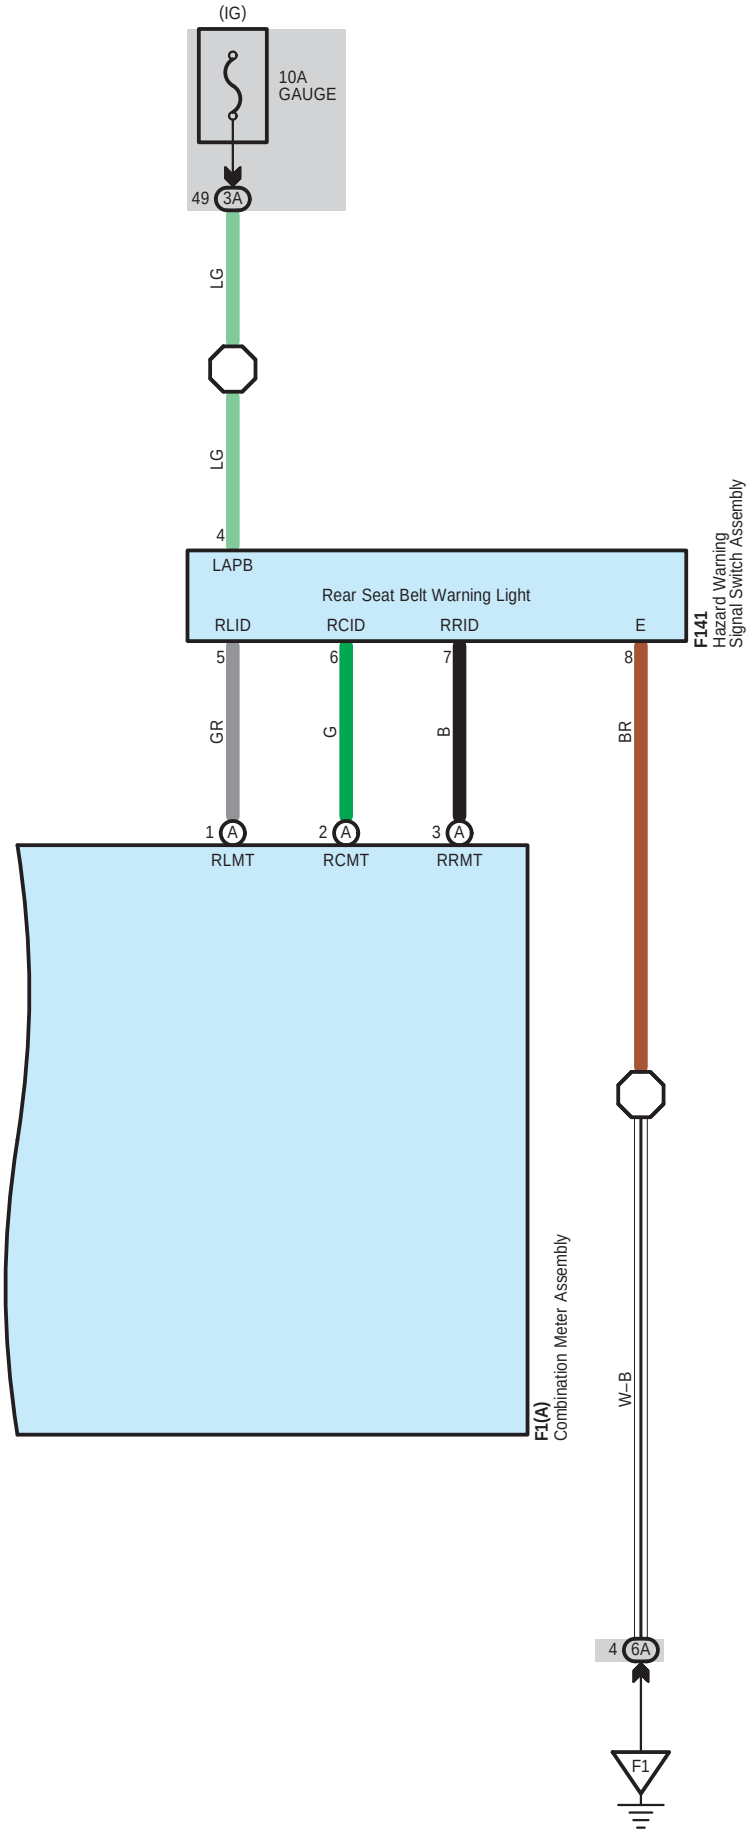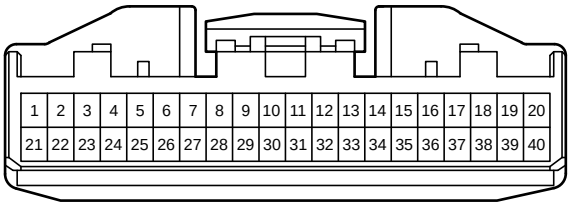


F141
Black

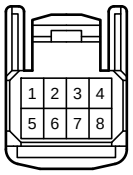


K 51
White

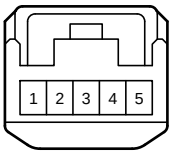


K 52
Black




1D
White

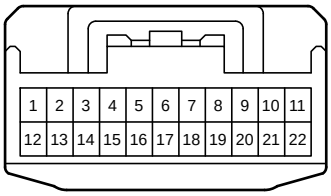


3A
White

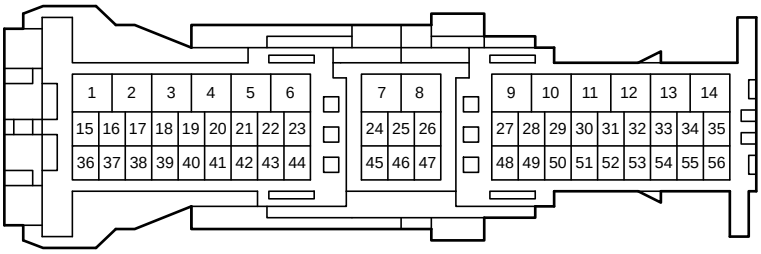


3B
White

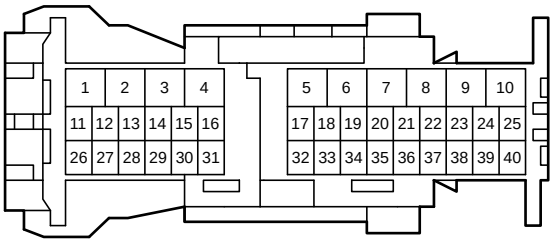


3C
White

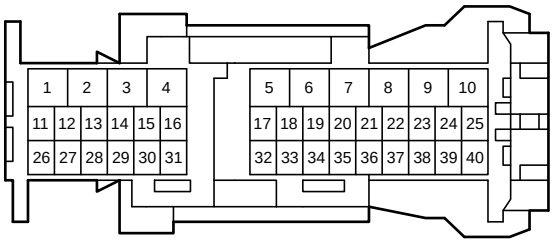

6A
White

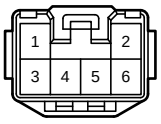

AF3
Black

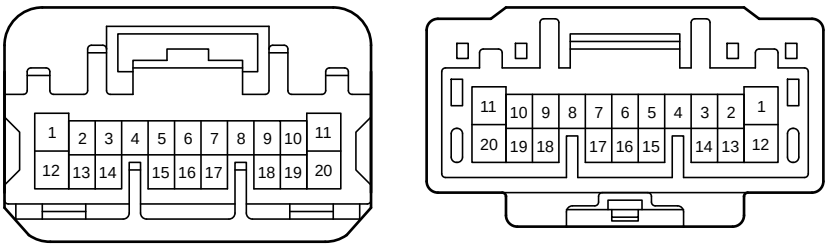

KF2
White

