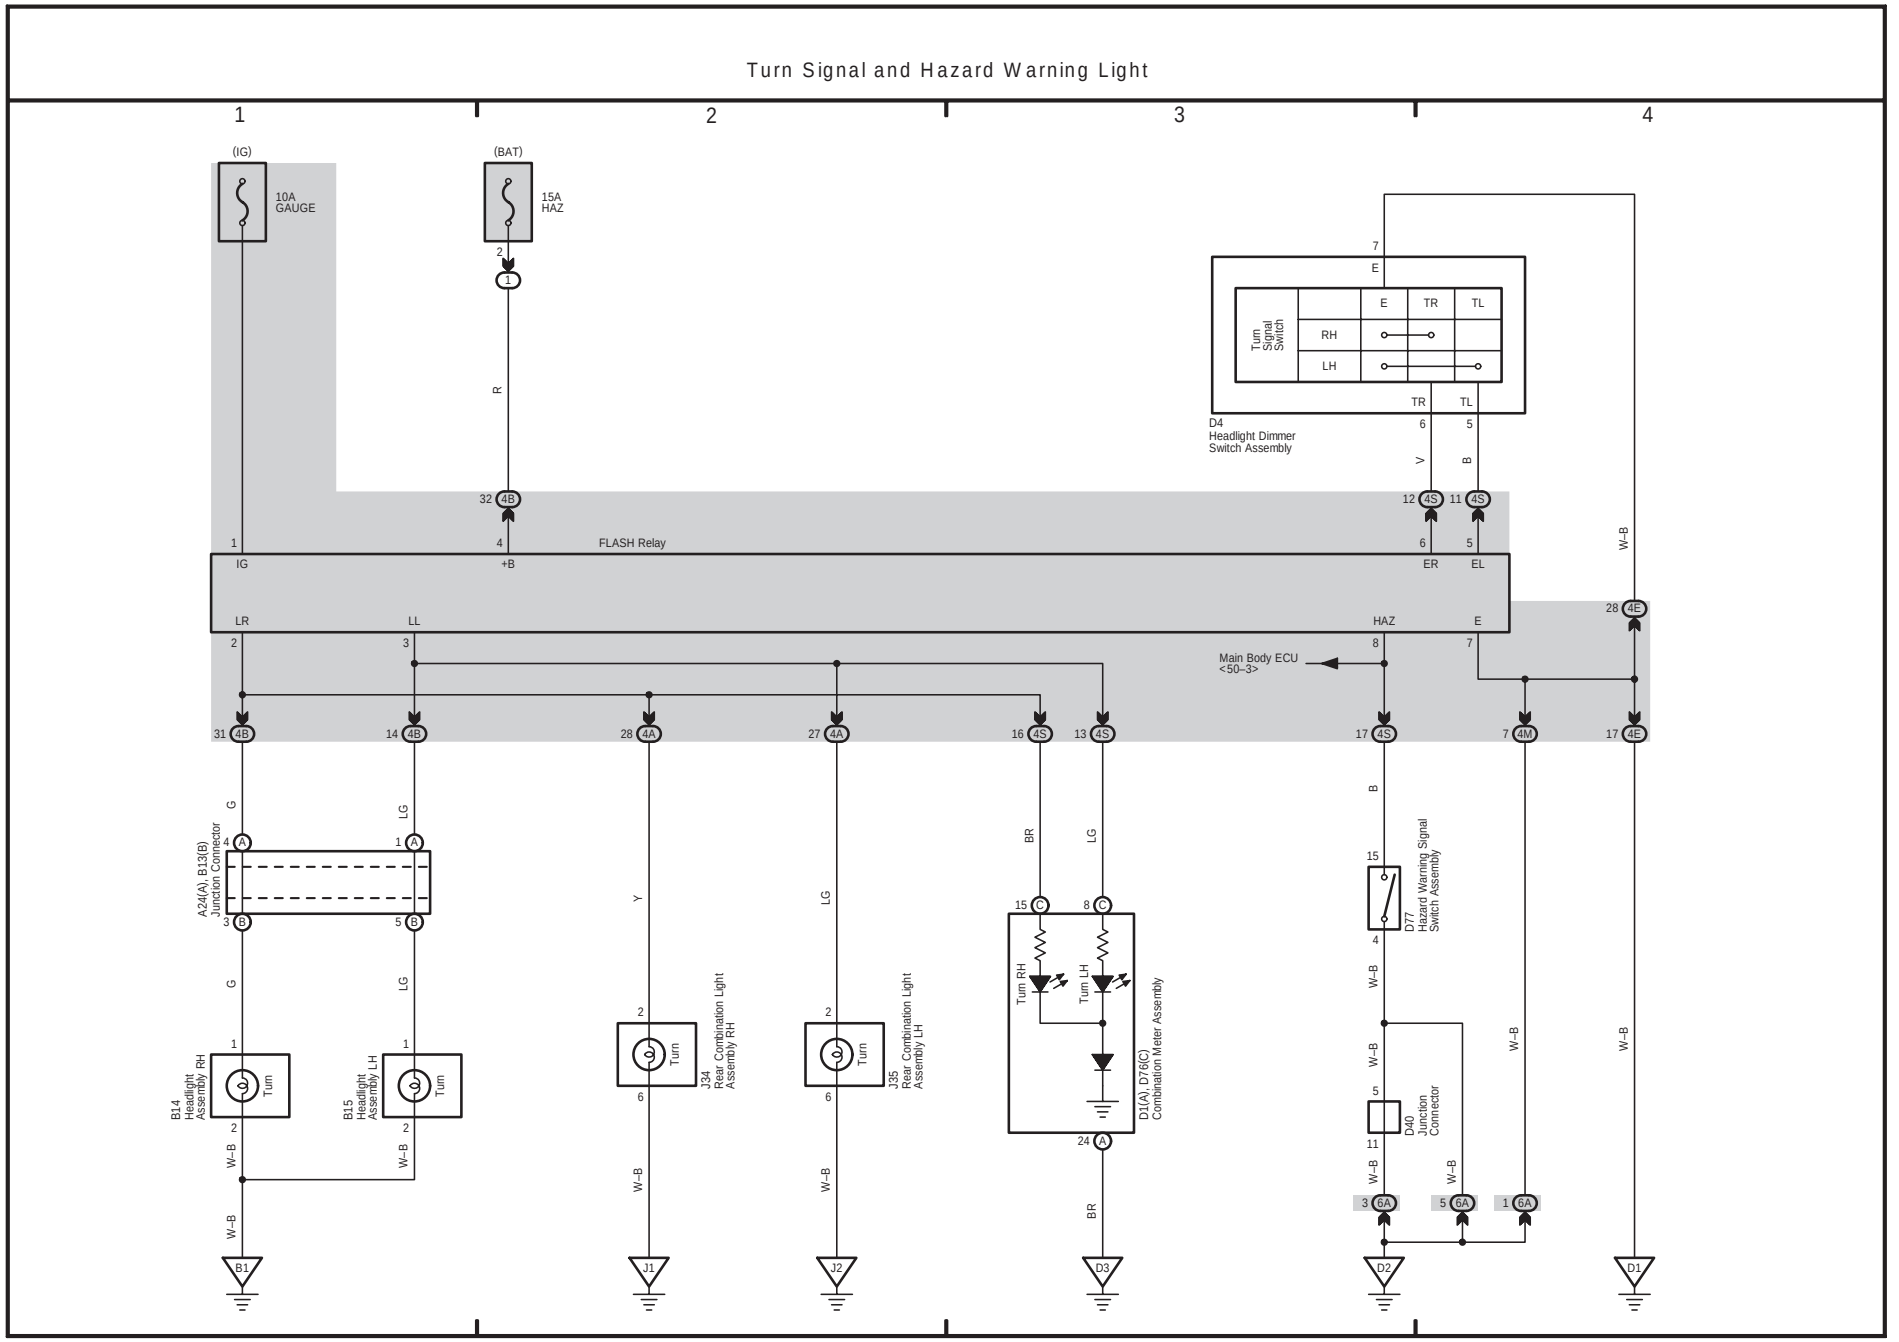

Turn Signal and Hazard Warning Light
1
2
3
4
(IG)
10A
GAUGE
(BAT)
15A
HAZ
D4
Headlight Dimmer
Switch Assembly
Turn
Signal
Switch
E
TR
TL
RH
LH
FLASH Relay
IG
+B
ER
EL
LR
LL
HAZ
Main Body ECU
<50~3>
A24(A), B13(B)
Junction Connector
B14
Headlight
Assembly RH
B15
Headlight
Assembly LH
Turn
J34
Rear Combination Light
Assembly RH
J35
Rear Combination Light
Assembly LH
Turn RH
Turn LH
D1(A), D76(C)
Combination Meter Assembly
D77
Hazard Warning Signal
Switch Assembly
D40
Junction
Connector
B1
J1
J2
D3
D2
D1