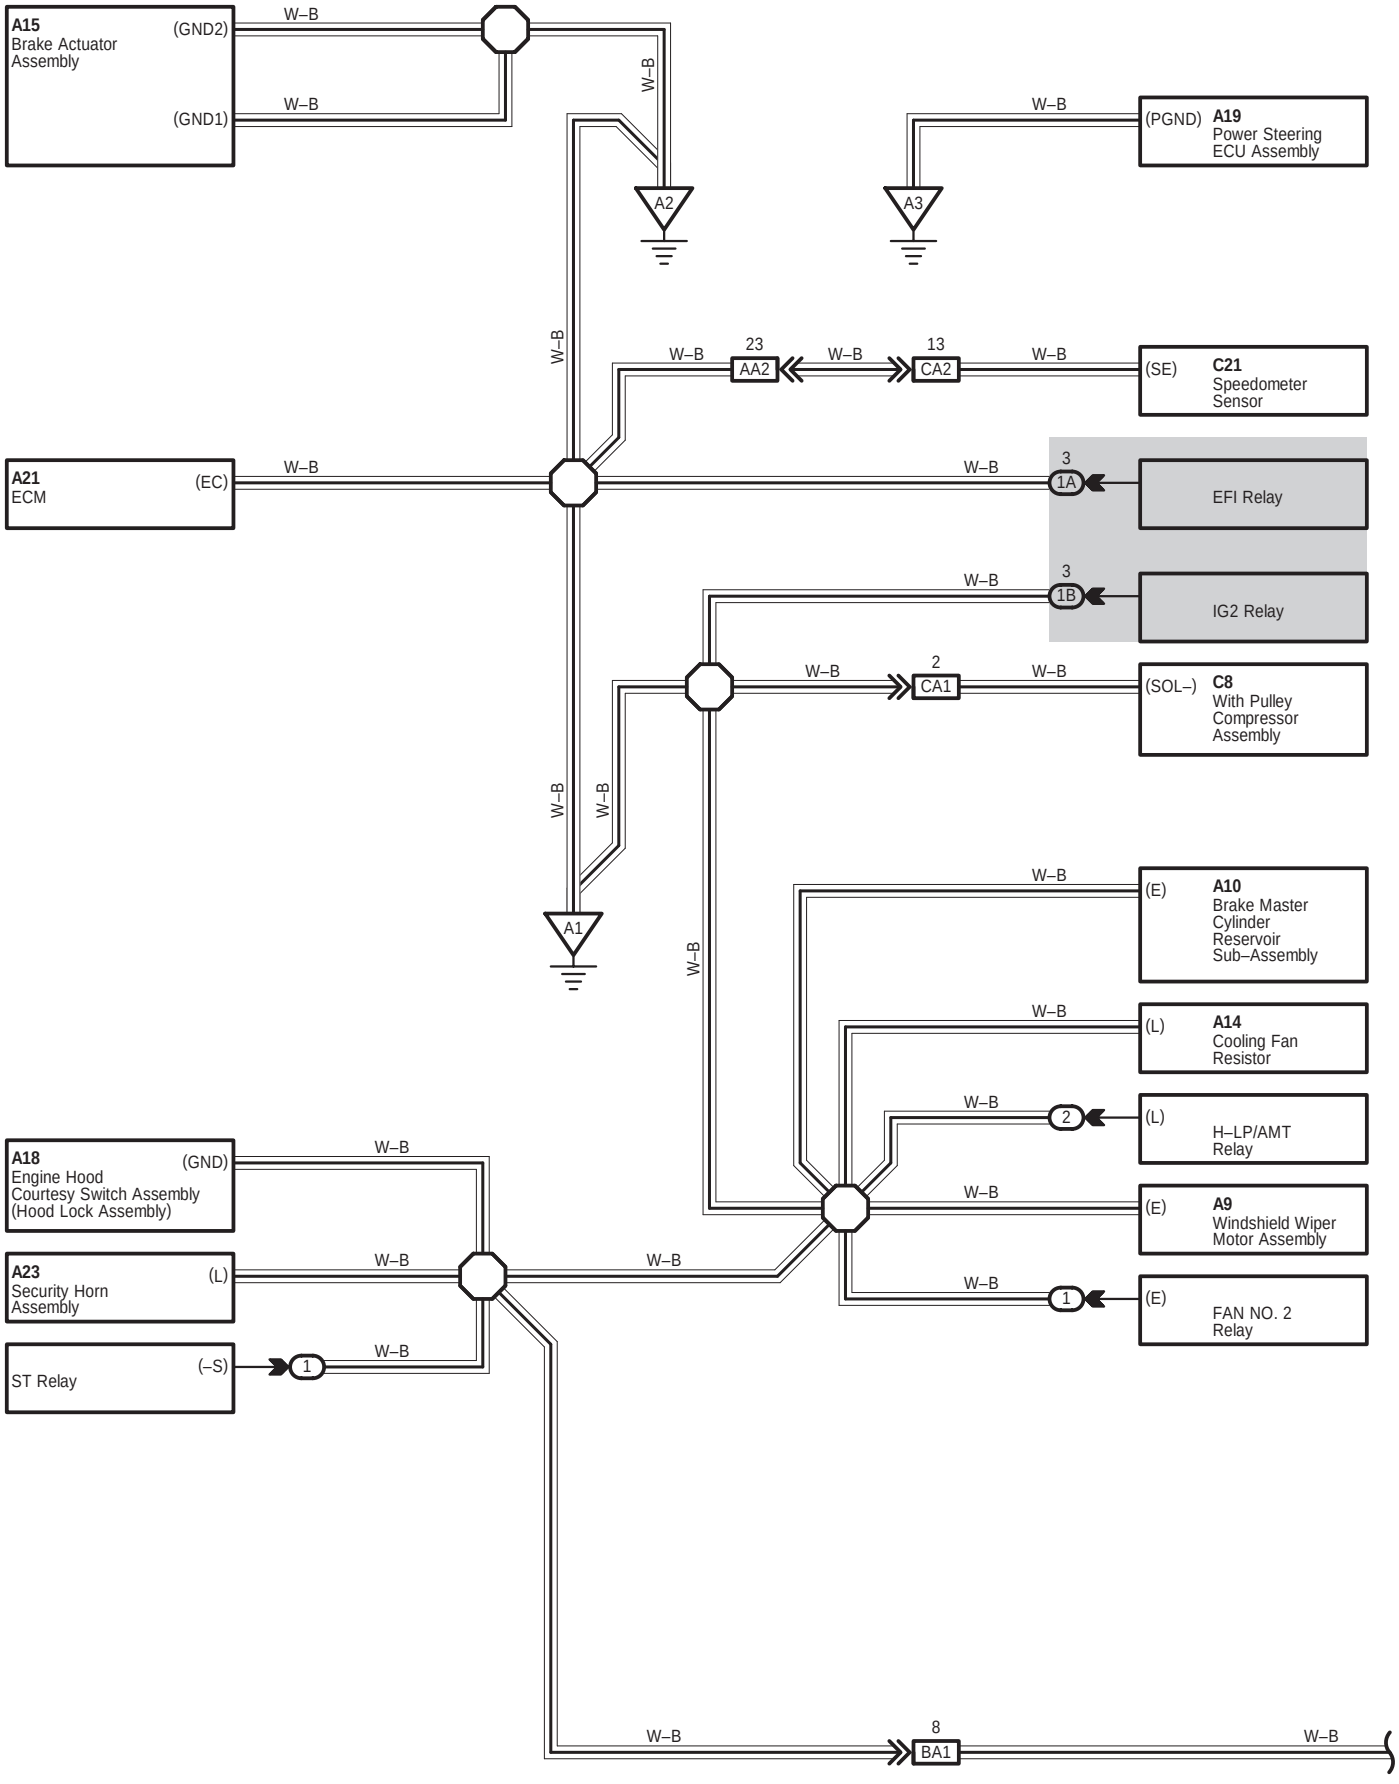
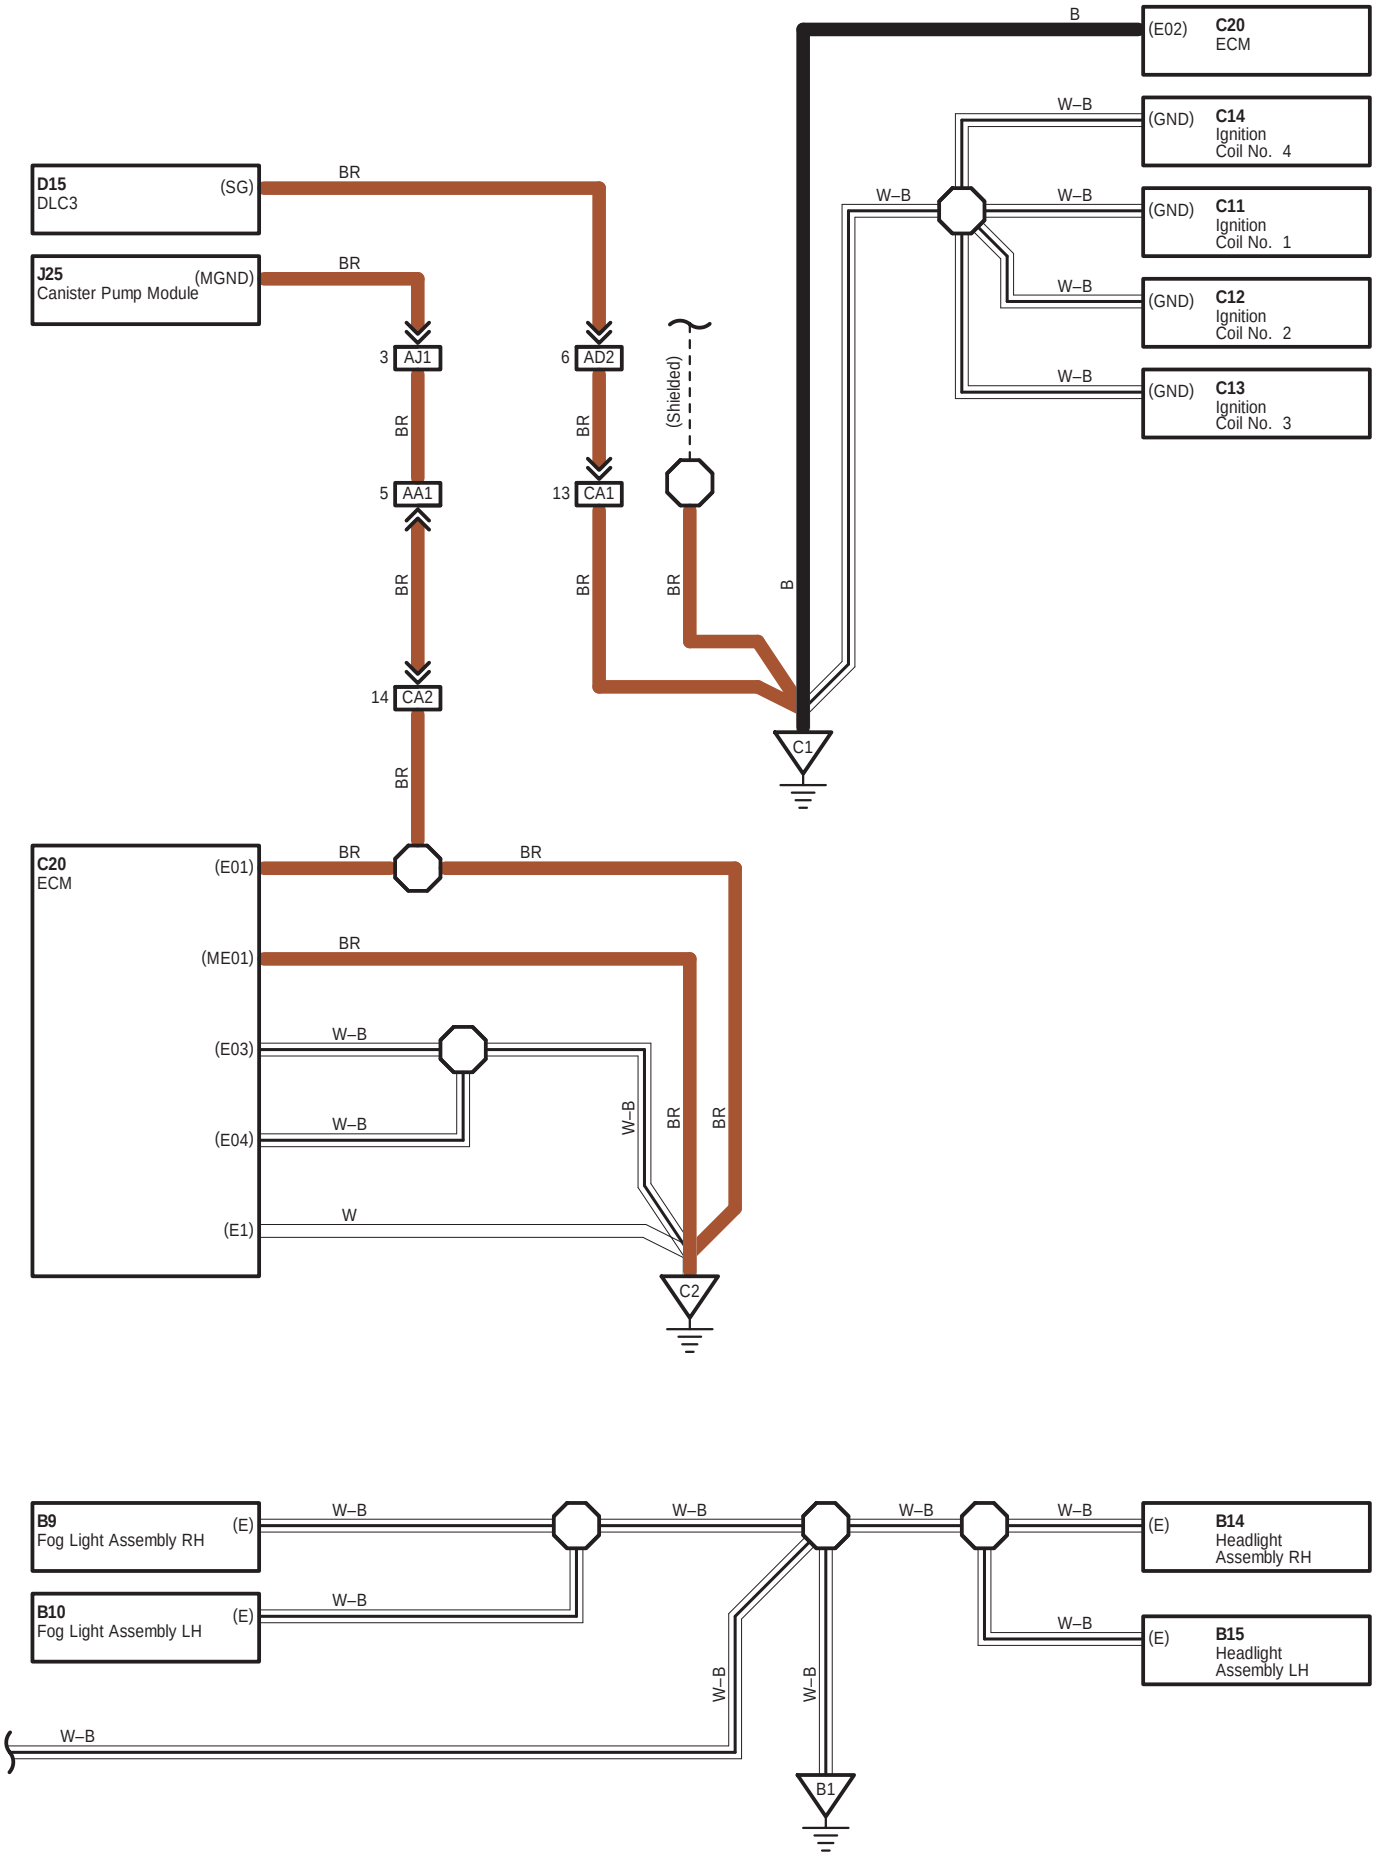
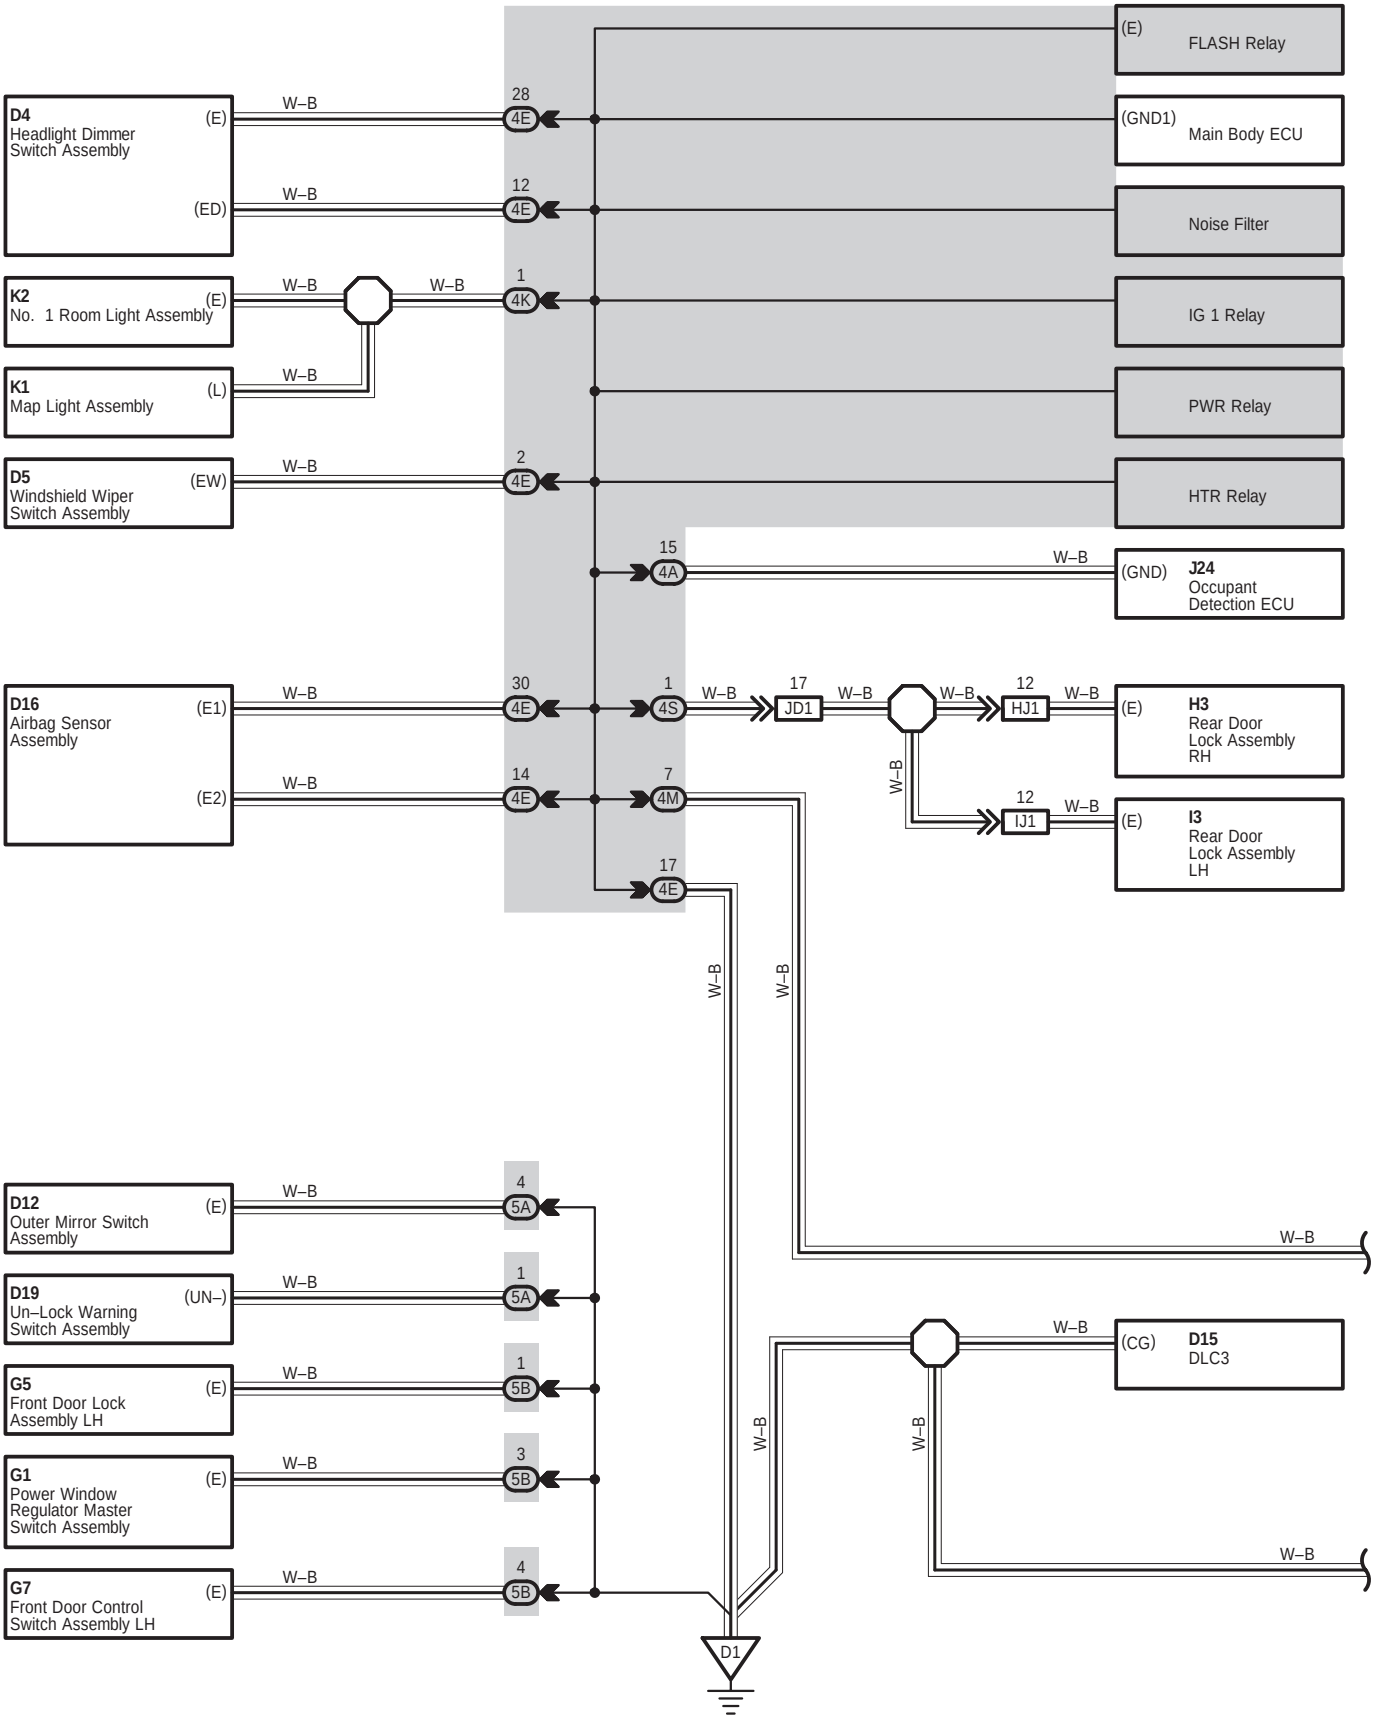
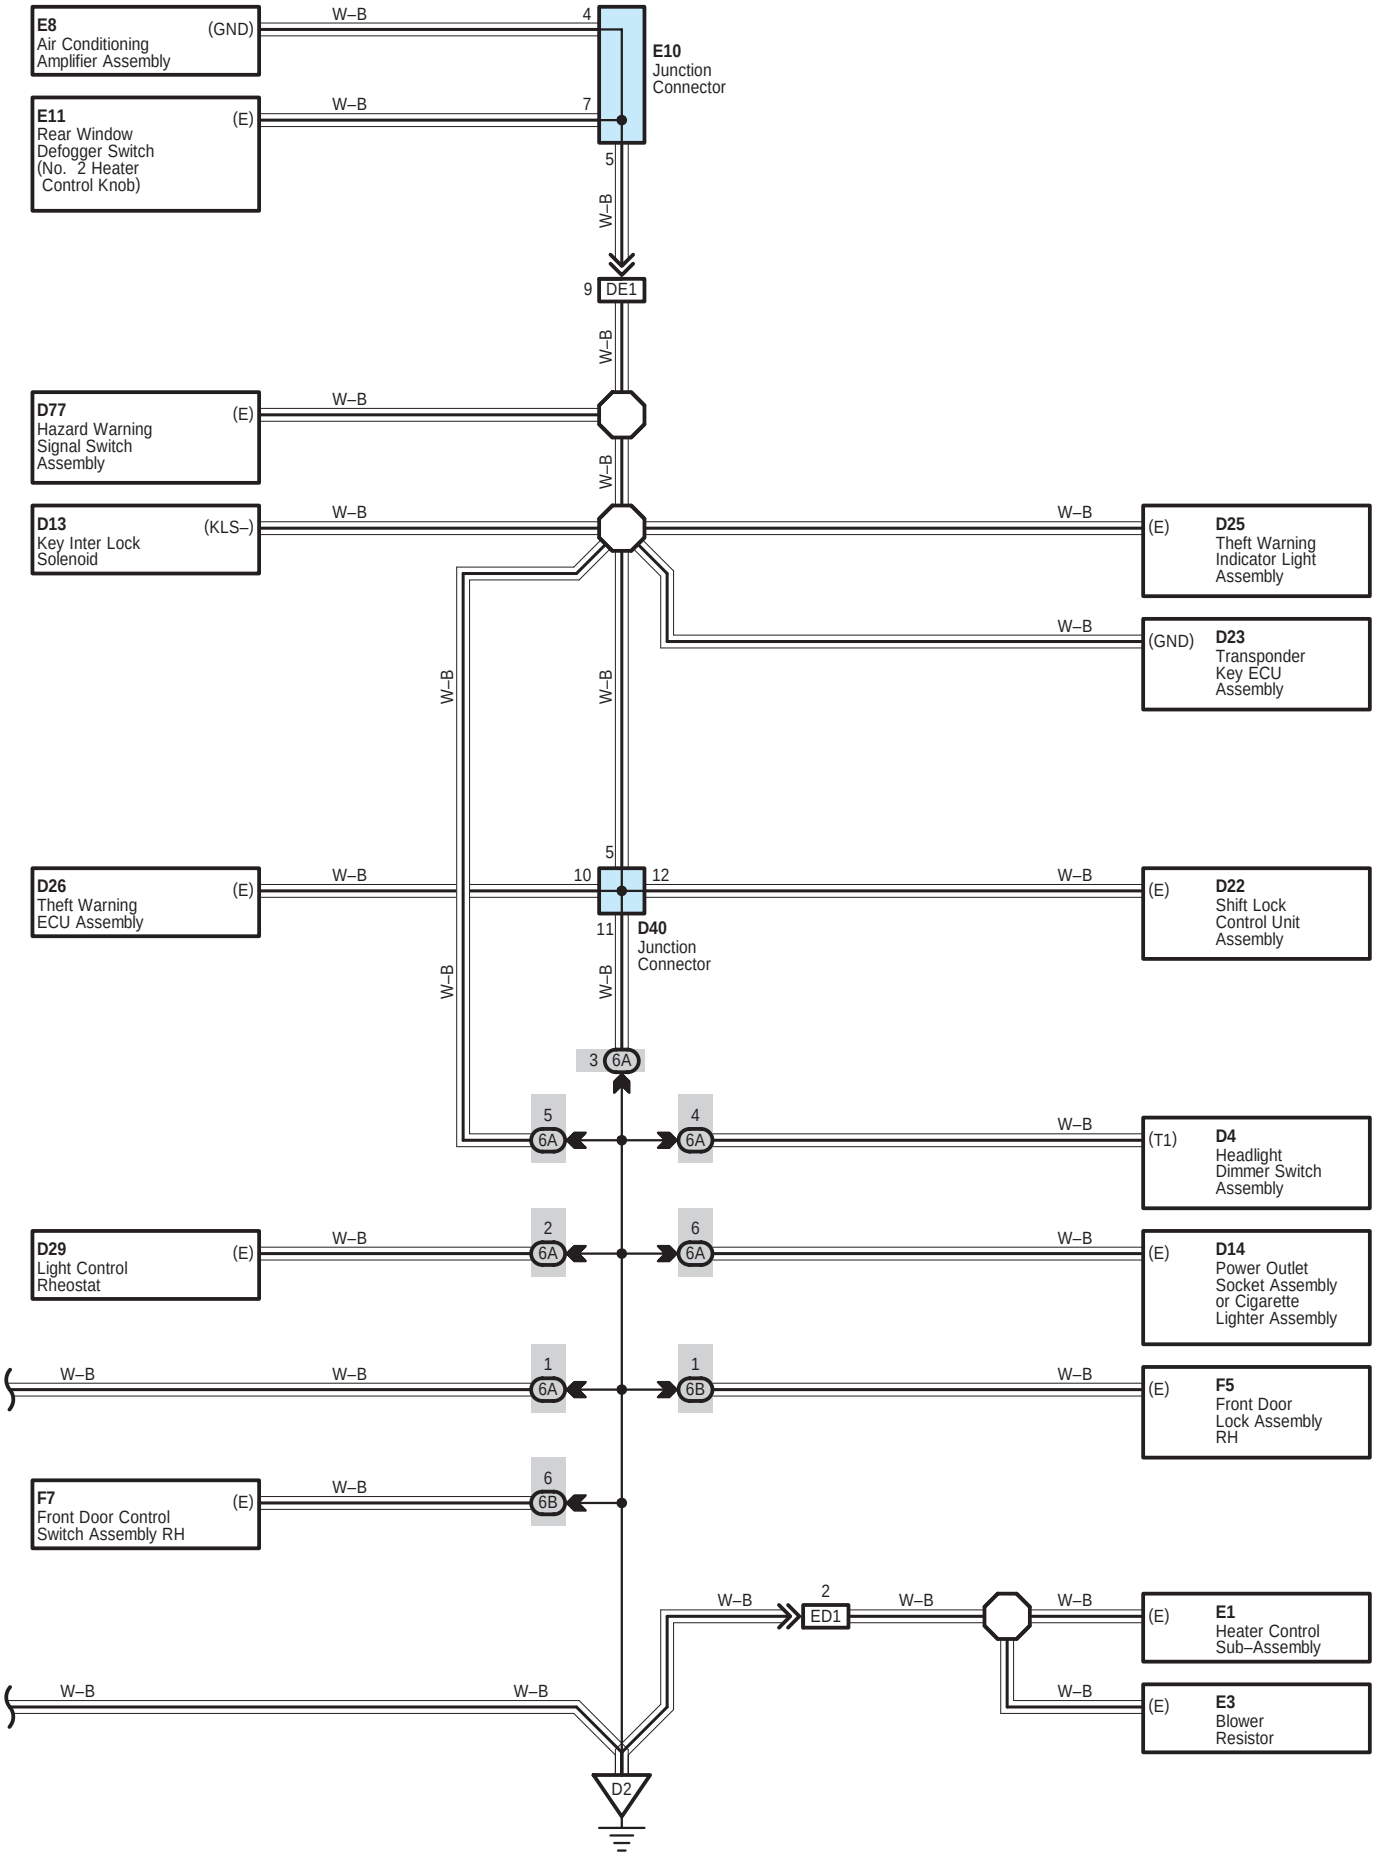
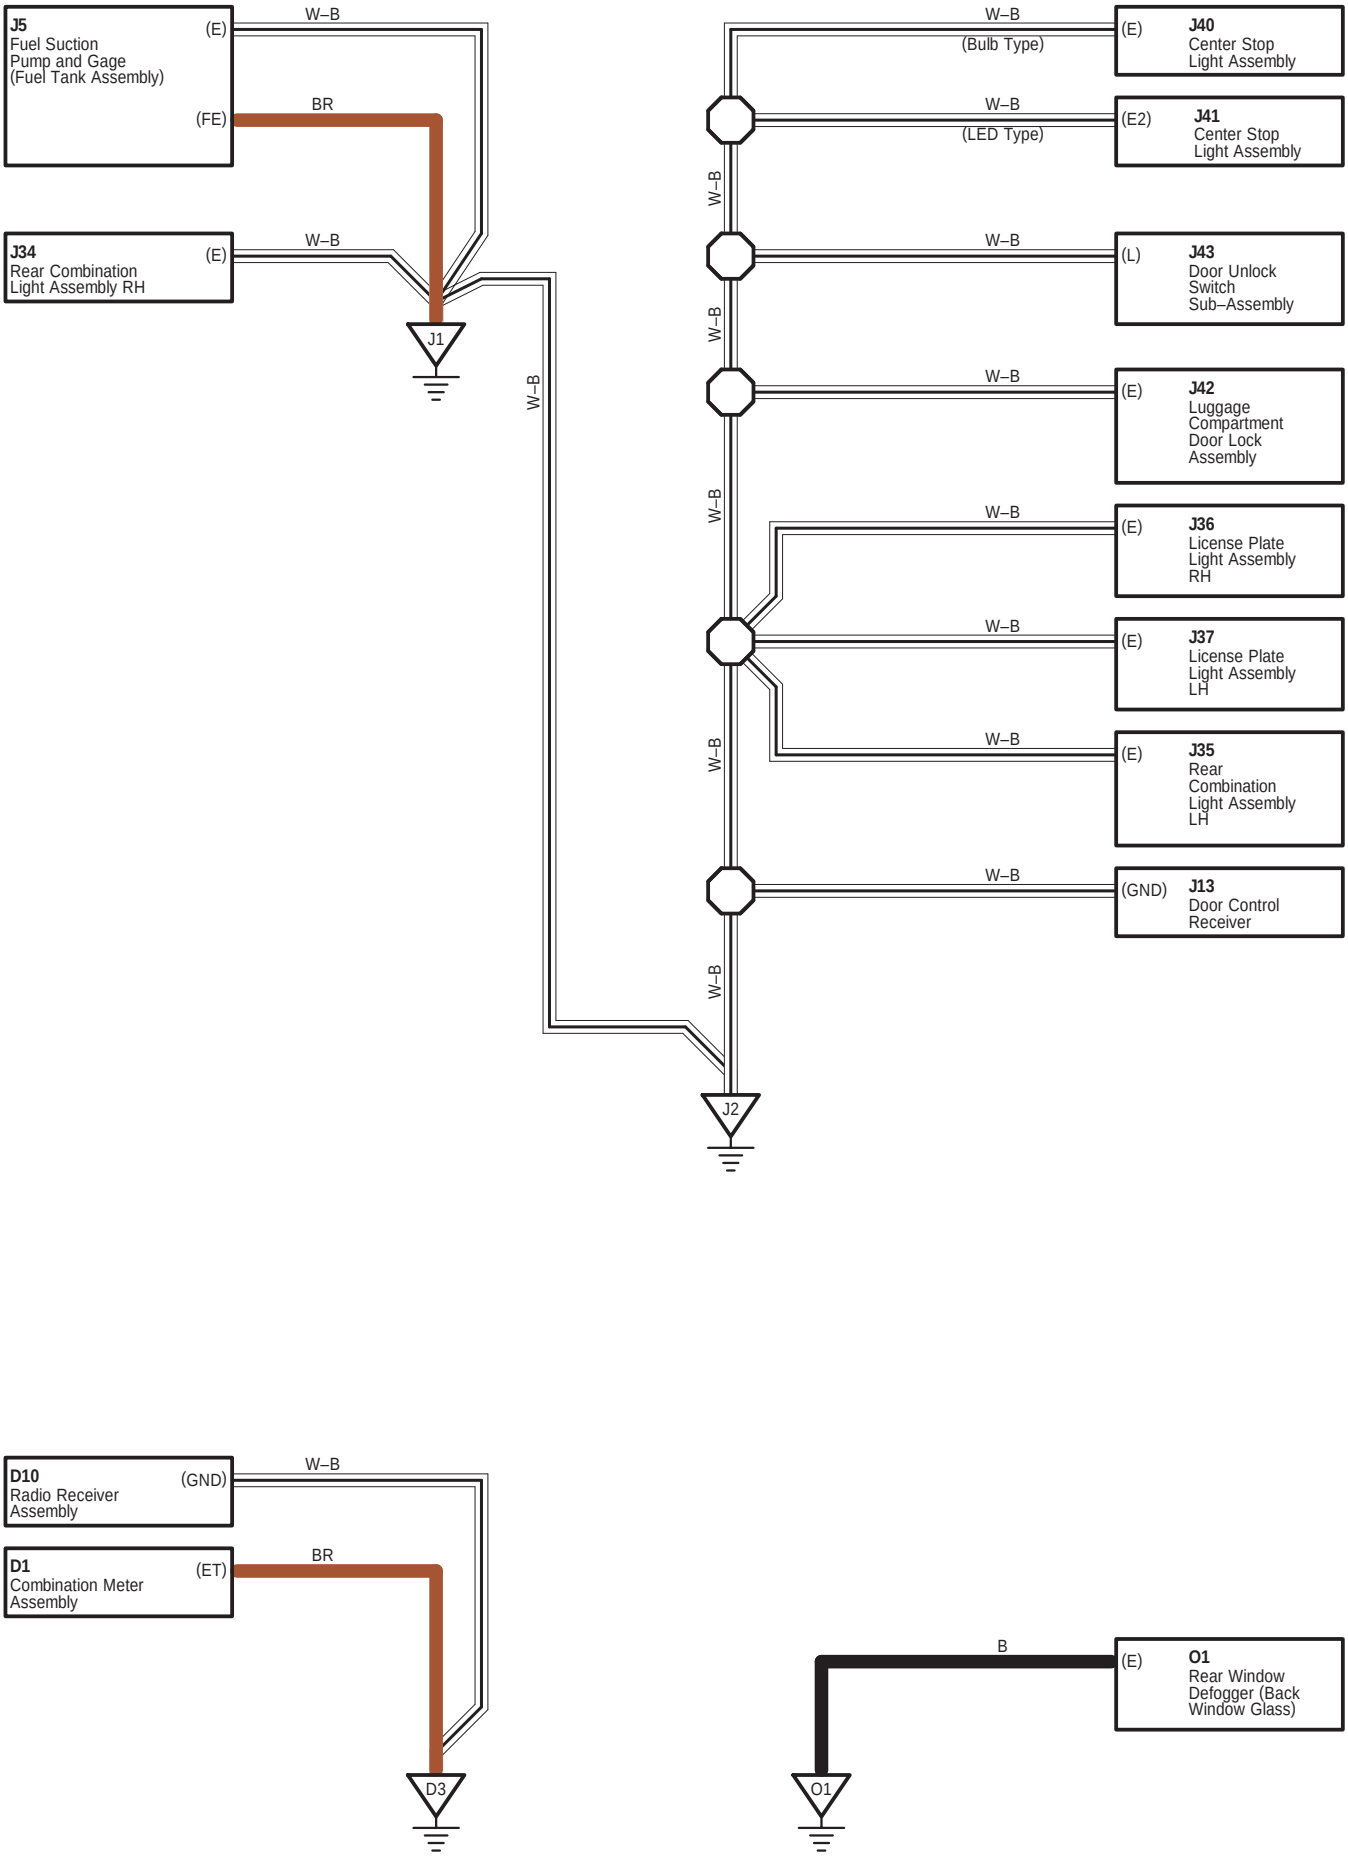

A15
Brake Actuator Assembly
(GND2)
(GND1)
W–B
A2
A3
(PGND)
A19
Power Steering ECU Assembly
23
AA2
13
CA2
(SE)
C21
Speedometer Sensor
A21
ECM
(EC)
3
1A
EFI Relay
1B
IG2 Relay
2
CA1
(SOL–)
C8
With Pulley Compressor Assembly
A1
(E)
A10
Brake Master Cylinder Reservoir Sub–Assembly
(L)
A14
Cooling Fan Resistor
H–LP/AMT Relay
A9
Windshield Wiper Motor Assembly
FAN NO. 2 Relay
A18
Engine Hood Courtesy Switch Assembly (Hood Lock Assembly)
(GND)
A23
Security Horn Assembly
ST Relay
(–S)
8
BA1

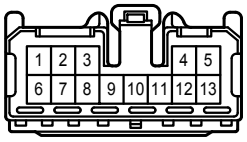

B
(E02) C20 ECM
W–B
(GND) C14 Ignition Coil No. 4
W–B
(GND) C11 Ignition Coil No. 1
W–B
(GND) C12 Ignition Coil No. 2
W–B
(GND) C13 Ignition Coil No. 3
D15 (SG) DLC3
BR
J25 (MGND) Canister Pump Module
BR
3 AJ1
6 AD2
(Shielded)
BR
5 AA1
13 CA1
BR
BR
B
14 CA2
BR
C1
C20 ECM
(E01)
BR
BR
(ME01)
BR
(E03)
W–B
(E04)
W–B
W–B
BR
BR
(E1)
W
C2
B9 Fog Light Assembly RH
(E)
W–B
W–B
W–B
W–B
(E) B14 Headlight Assembly RH
B10 Fog Light Assembly LH
(E)
W–B
W–B
(E) B15 Headlight Assembly LH
W–B
W–B
W–B
B1


D4
Headlight Dimmer Switch Assembly
(E)
(ED)
W–B
28
4E
12
4E
(E)
FLASH Relay
(GND1)
Main Body ECU
Noise Filter
K2
No. 1 Room Light Assembly
(E)
K1
Map Light Assembly
(L)
W–B
1
4K
IG 1 Relay
PWR Relay
D5
Windshield Wiper Switch Assembly
(EW)
2
4E
HTR Relay
15
4A
(GND)
J24
Occupant Detection ECU
D16
Airbag Sensor Assembly
(E1)
(E2)
30
4E
14
4E
1
4S
7
4M
17
4E
17
JD1
12
HJ1
12
IJ1
H3
Rear Door Lock Assembly RH
I3
Rear Door Lock Assembly LH
D12
Outer Mirror Switch Assembly
D19
Un–Lock Warning Switch Assembly
(UN–)
G5
Front Door Lock Assembly LH
G1
Power Window Regulator Master Switch Assembly
G7
Front Door Control Switch Assembly LH
4
5A
1
5A
1
5B
3
5B
4
5B
D15
DLC3
(CG)
D1

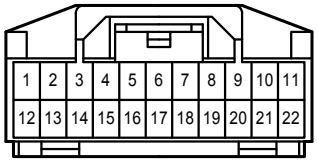

E8
Air Conditioning Amplifier Assembly
(GND)
W–B
4
E10
Junction Connector
E11
Rear Window Defogger Switch (No. 2 Heater Control Knob)
(E)
W–B
7
5
W–B
9
DE1
W–B
D77
Hazard Warning Signal Switch Assembly
(E)
W–B
W–B
D13
Key Inter Lock Solenoid
(KLS–)
W–B
W–B
(E)
D25
Theft Warning Indicator Light Assembly
W–B
(GND)
D23
Transponder Key ECU Assembly
W–B
W–B
5
D26
Theft Warning ECU Assembly
(E)
W–B
10
12
W–B
(E)
D22
Shift Lock Control Unit Assembly
11
D40
Junction Connector
W–B
W–B
3
6A
5
6A
4
6A
W–B
(T1)
D4
Headlight Dimmer Switch Assembly
D29
Light Control Rheostat
(E)
W–B
2
6A
6
6A
W–B
(E)
D14
Power Outlet Socket Assembly or Cigarette Lighter Assembly
W–B
W–B
1
6A
1
6B
W–B
(E)
F5
Front Door Lock Assembly RH
F7
Front Door Control Switch Assembly RH
(E)
W–B
6
6B
W–B
2
ED1
W–B
W–B
(E)
E1
Heater Control Sub–Assembly
W–B
W–B
W–B
(E)
E3
Blower Resistor
D2


J5
Fuel Suction
Pump and Gage
(Fuel Tank Assembly)
(E)
(FE)
W–B
BR
J34
Rear Combination
Light Assembly RH
(E)
W–B
J1
W–B
W–B
(Bulb Type)
(E)
J40
Center Stop
Light Assembly
W–B
(LED Type)
(E2)
J41
Center Stop
Light Assembly
W–B
(L)
J43
Door Unlock
Switch
Sub–Assembly
W–B
(E)
J42
Luggage
Compartment
Door Lock
Assembly
W–B
(E)
J36
License Plate
Light Assembly
RH
W–B
(E)
J37
License Plate
Light Assembly
LH
W–B
(E)
J35
Rear
Combination
Light Assembly
LH
W–B
(GND)
J13
Door Control
Receiver
W–B
J2
D10
Radio Receiver
Assembly
(GND)
W–B
D1
Combination Meter
Assembly
(ET)
BR
D3
B
(E)
O1
Rear Window
Defogger (Back
Window Glass)
O1


D 40
White



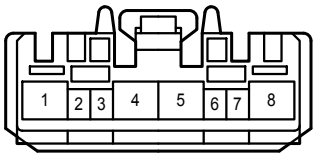

E 10
White





1A



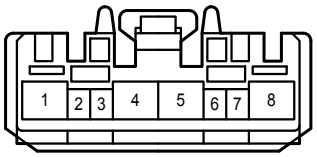

1A
White



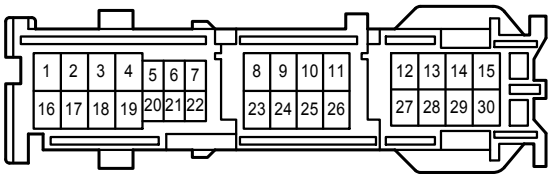

1B



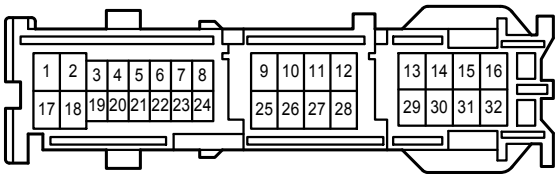

1B
White




4A
White



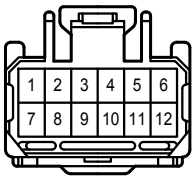

4E
White



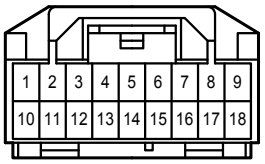

4K
White



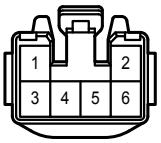

4M
White




4S
White




5A
White




5B
White



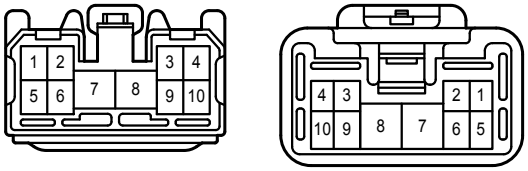

6A
White



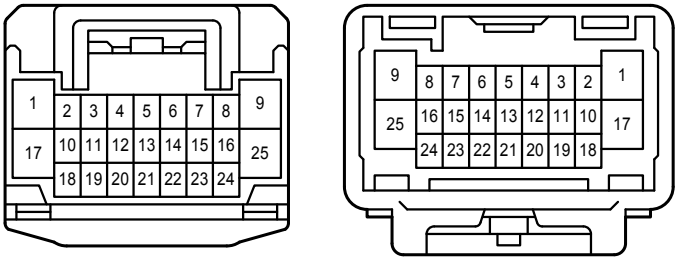

6B
White



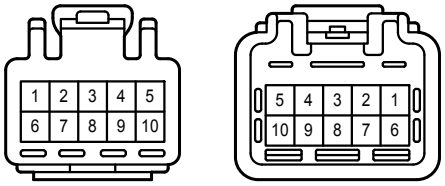

AA1
White



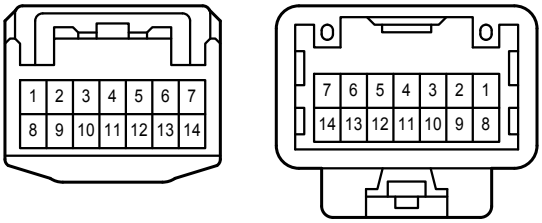

AA2
White



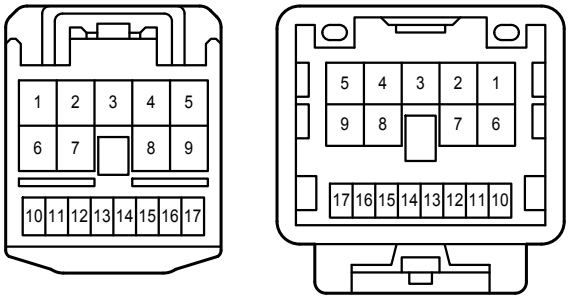
AD2
White



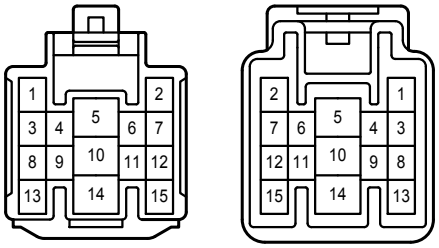

AJ1
White



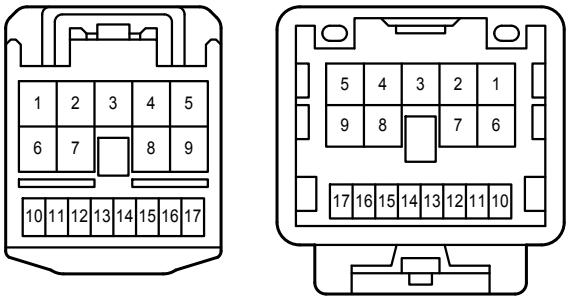

BA1
White



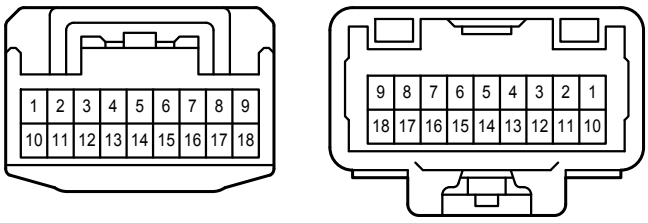

CA1
White



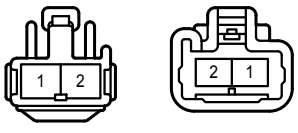

CA2
White

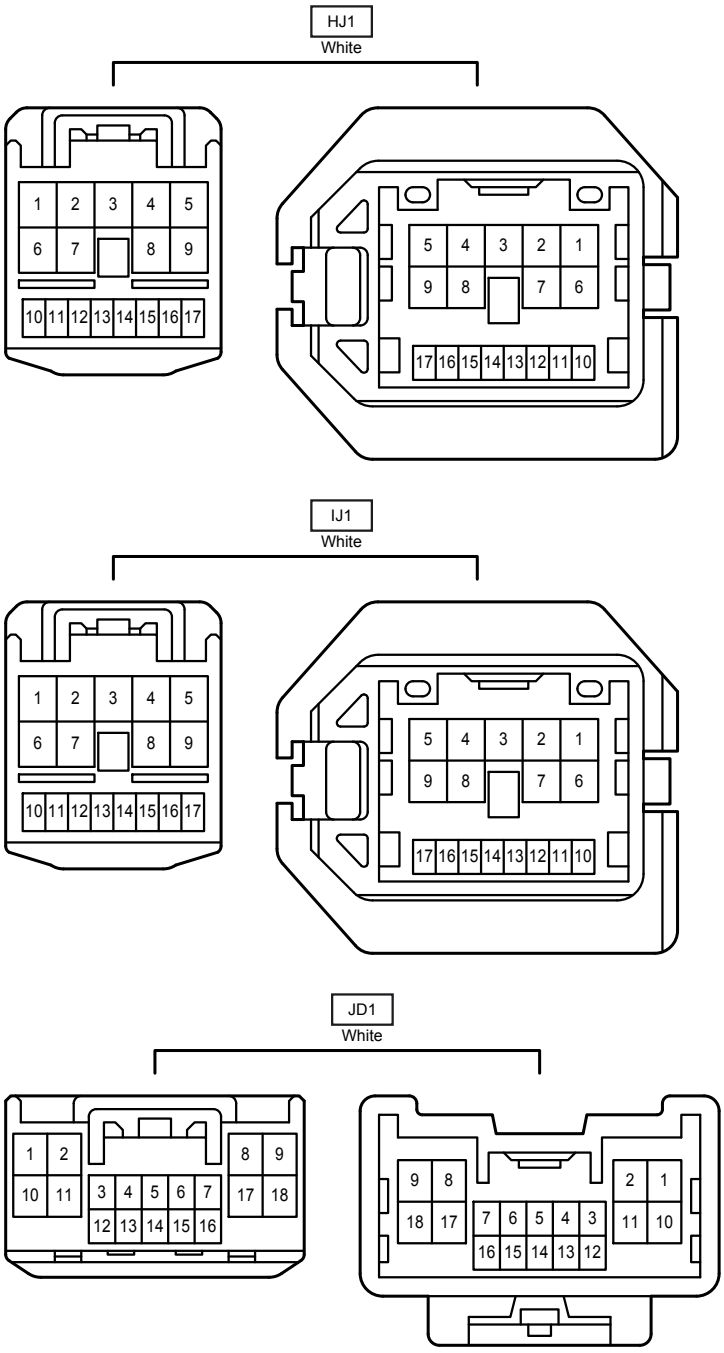



DE1
White




ED1
White




HJ1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
IJ1
White
1 2 3 4 5
6 7 8 9
10 11 12 13 14 15 16 17
5 4 3 2 1
9 8 7 6
17 16 15 14 13 12 11 10
JD1
White
1 2
10 11
3 4 5 6 7
12 13 14 15 16
8 9
17 18
9 8
18 17
7 6 5 4 3
16 15 14 13 12
2 1
11 10