





(IG)
10A
IG2
2
8 1D
B
31 3C
45 3A
B
21 A
IG2
D114
Lower No. 1 Instrument
Panel Airbag Assembly
DK+
DK–
1
2
Y–B
(*2)
B
(*2)
9 A
DK+
10 A
DK–
J80
Curtain Shield Airbag
Assembly RH
ICR+
ICR–
1
2
Y
(*2)
Y–B
(*2)
5 C
ICR+
6 C
ICR–
J79
Curtain Shield Airbag
Assembly LH
ICL+
ICL–
1
2
Y
(*2)
Y–B
(*2)
4 B
ICL+
3 B
ICL–
J82
Side Airbag Squib
(Front Seat Airbag
Assembly RH)
SFR+
SFR–
1
2
Y–B
(*2)
Y
(*2)
8 C
SFR+
7 C
SFR–
D112(A), J83(B), J84(C), J85(D), J86(E)
Airbag Sensor Assembly
E1
E2
D+
D–
D2+
D2–
P+
P–
P2+
P2–
25 A
26 A
5 A
6 A
8 A
7 A
4 A
3 A
1 A
2 A
W–B
W–B
Y–B
Y
Y–R
Y–G
Y–B
Y
Y–R
Y–G
8 3A
7 3A
1 DQ3
2 DQ3
3 DQ3
4 DQ3
8 3B
6 3A
1 B
2 B
4 B
3 B
D+
D–
D2+
D2–
2 F
1 F
2 G
1 G
D113(B), W10(F), W11(G)
Spiral with Sensor
Cable Sub–Assembly
2 A
1 A
2 B
1 B
P+
P–
P2+
P2–
6 7A
2 8A
D2
D1
W10(F)
Driver Side
Squib Circuit
(Horn Button Assembly)
W11(G)
Driver Side Squib
2nd Step Circuit
(Horn Button Assembly)
Q10(A), Q11(B), Q12(C)
Instrument Panel
Passenger without
Door Airbag Assembly


∗ 2 : Except Mexico
∗ 3 : Mexico

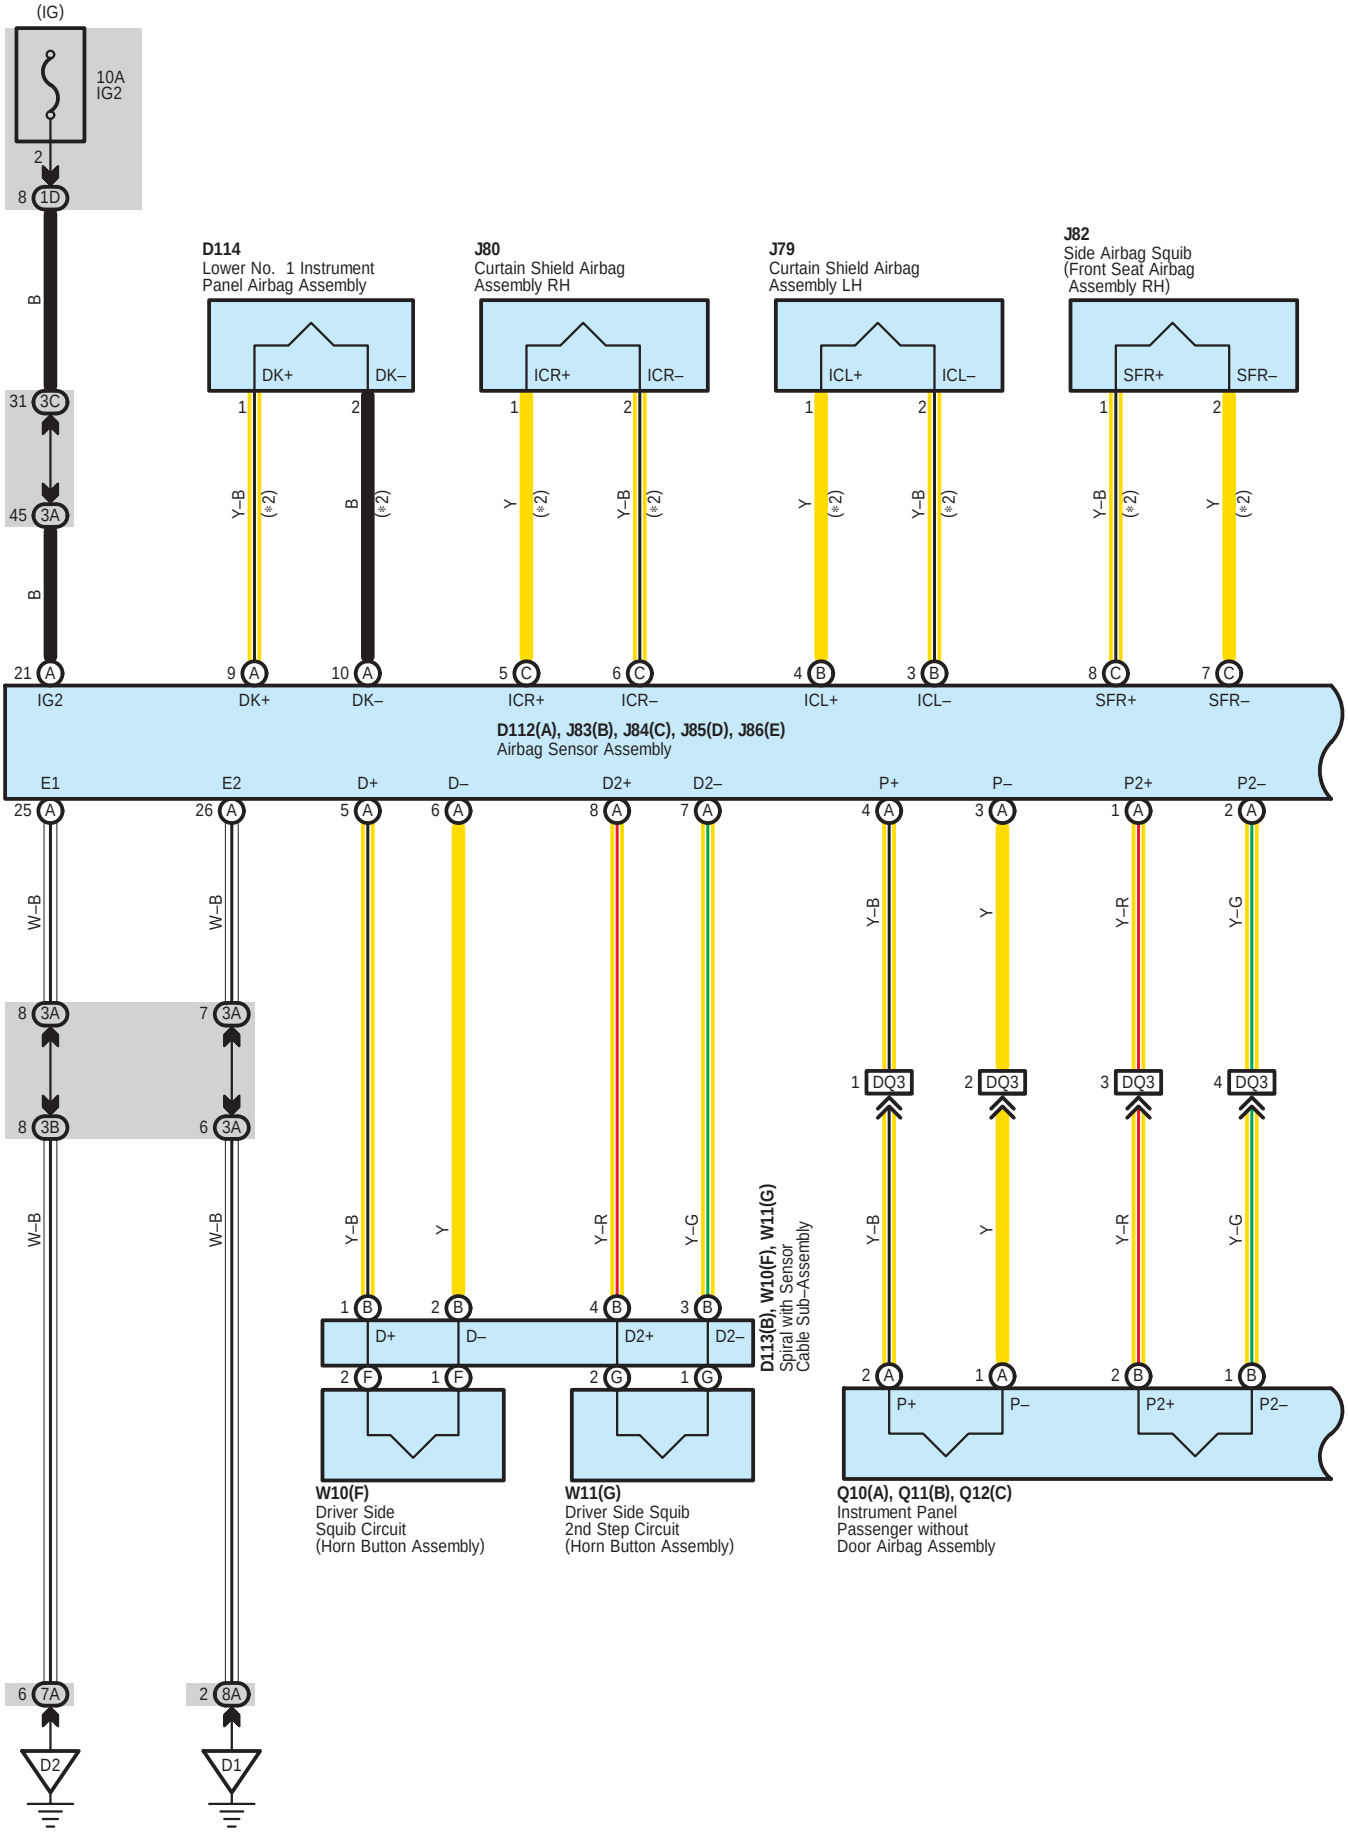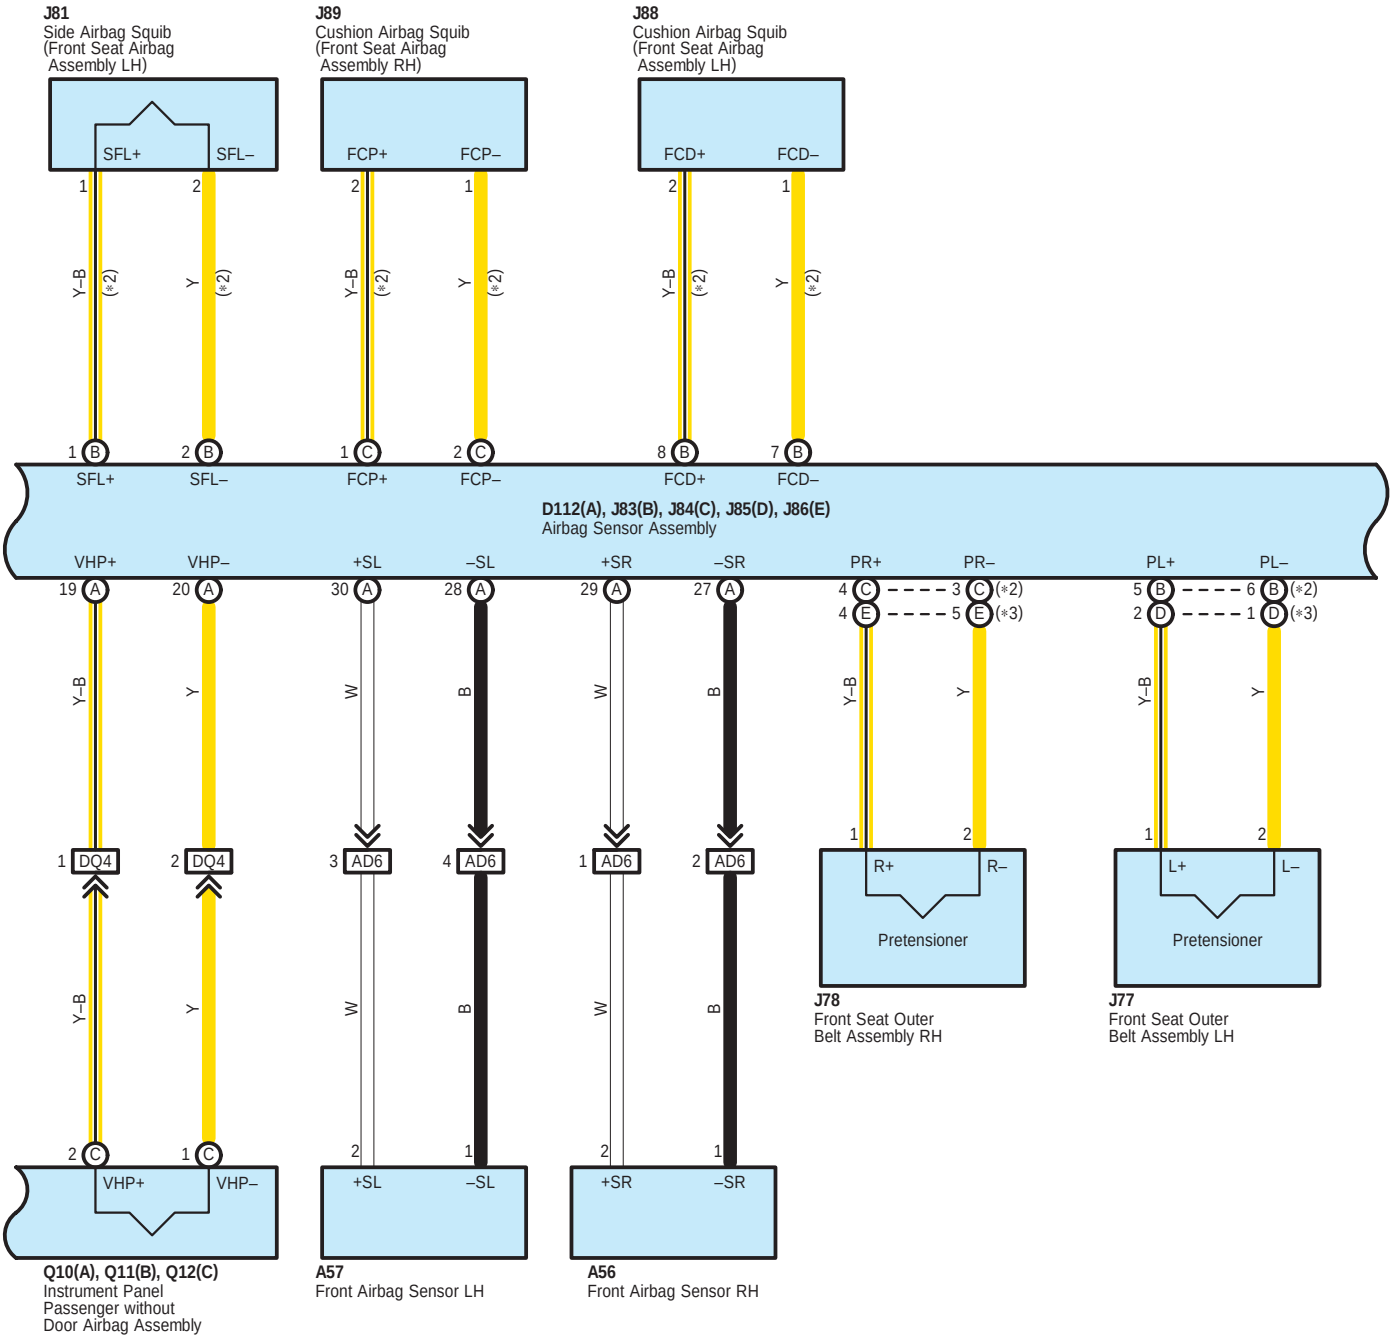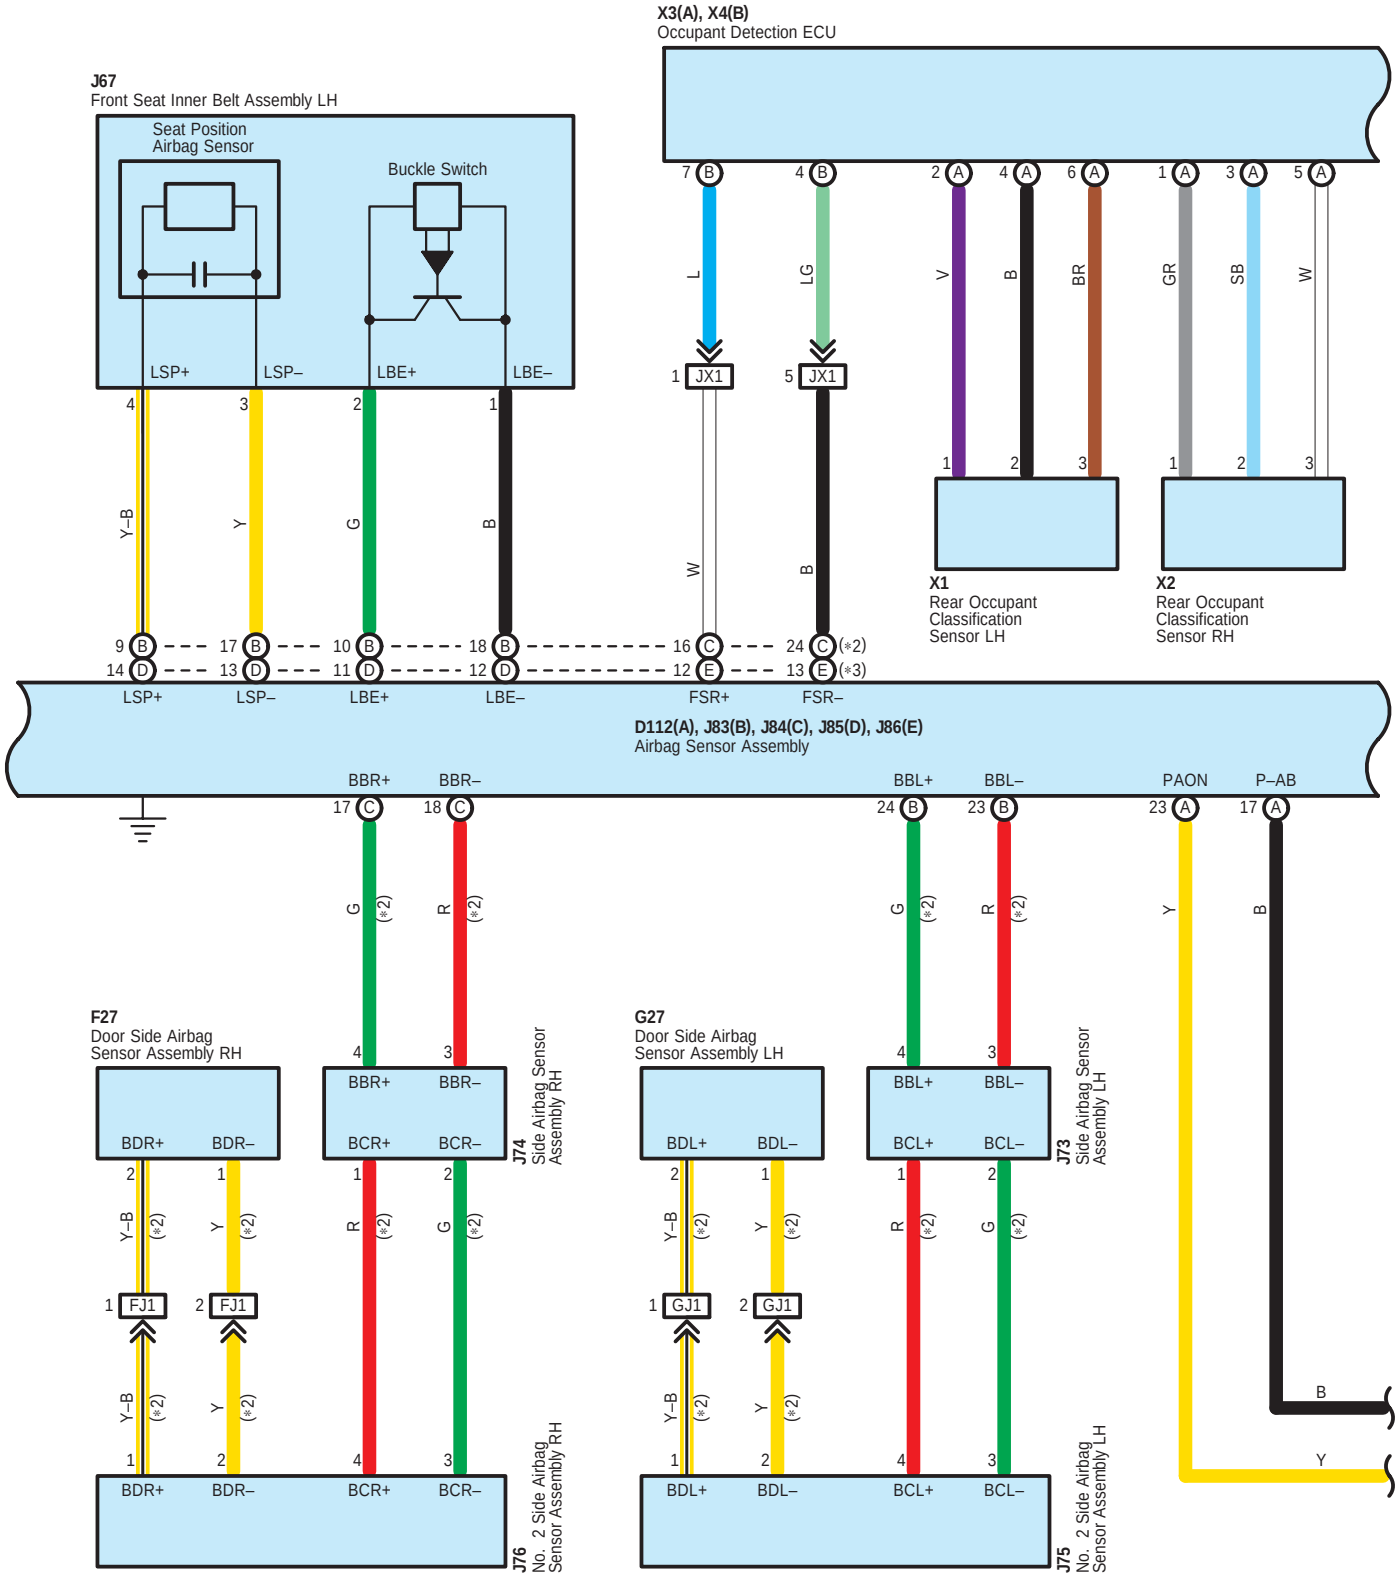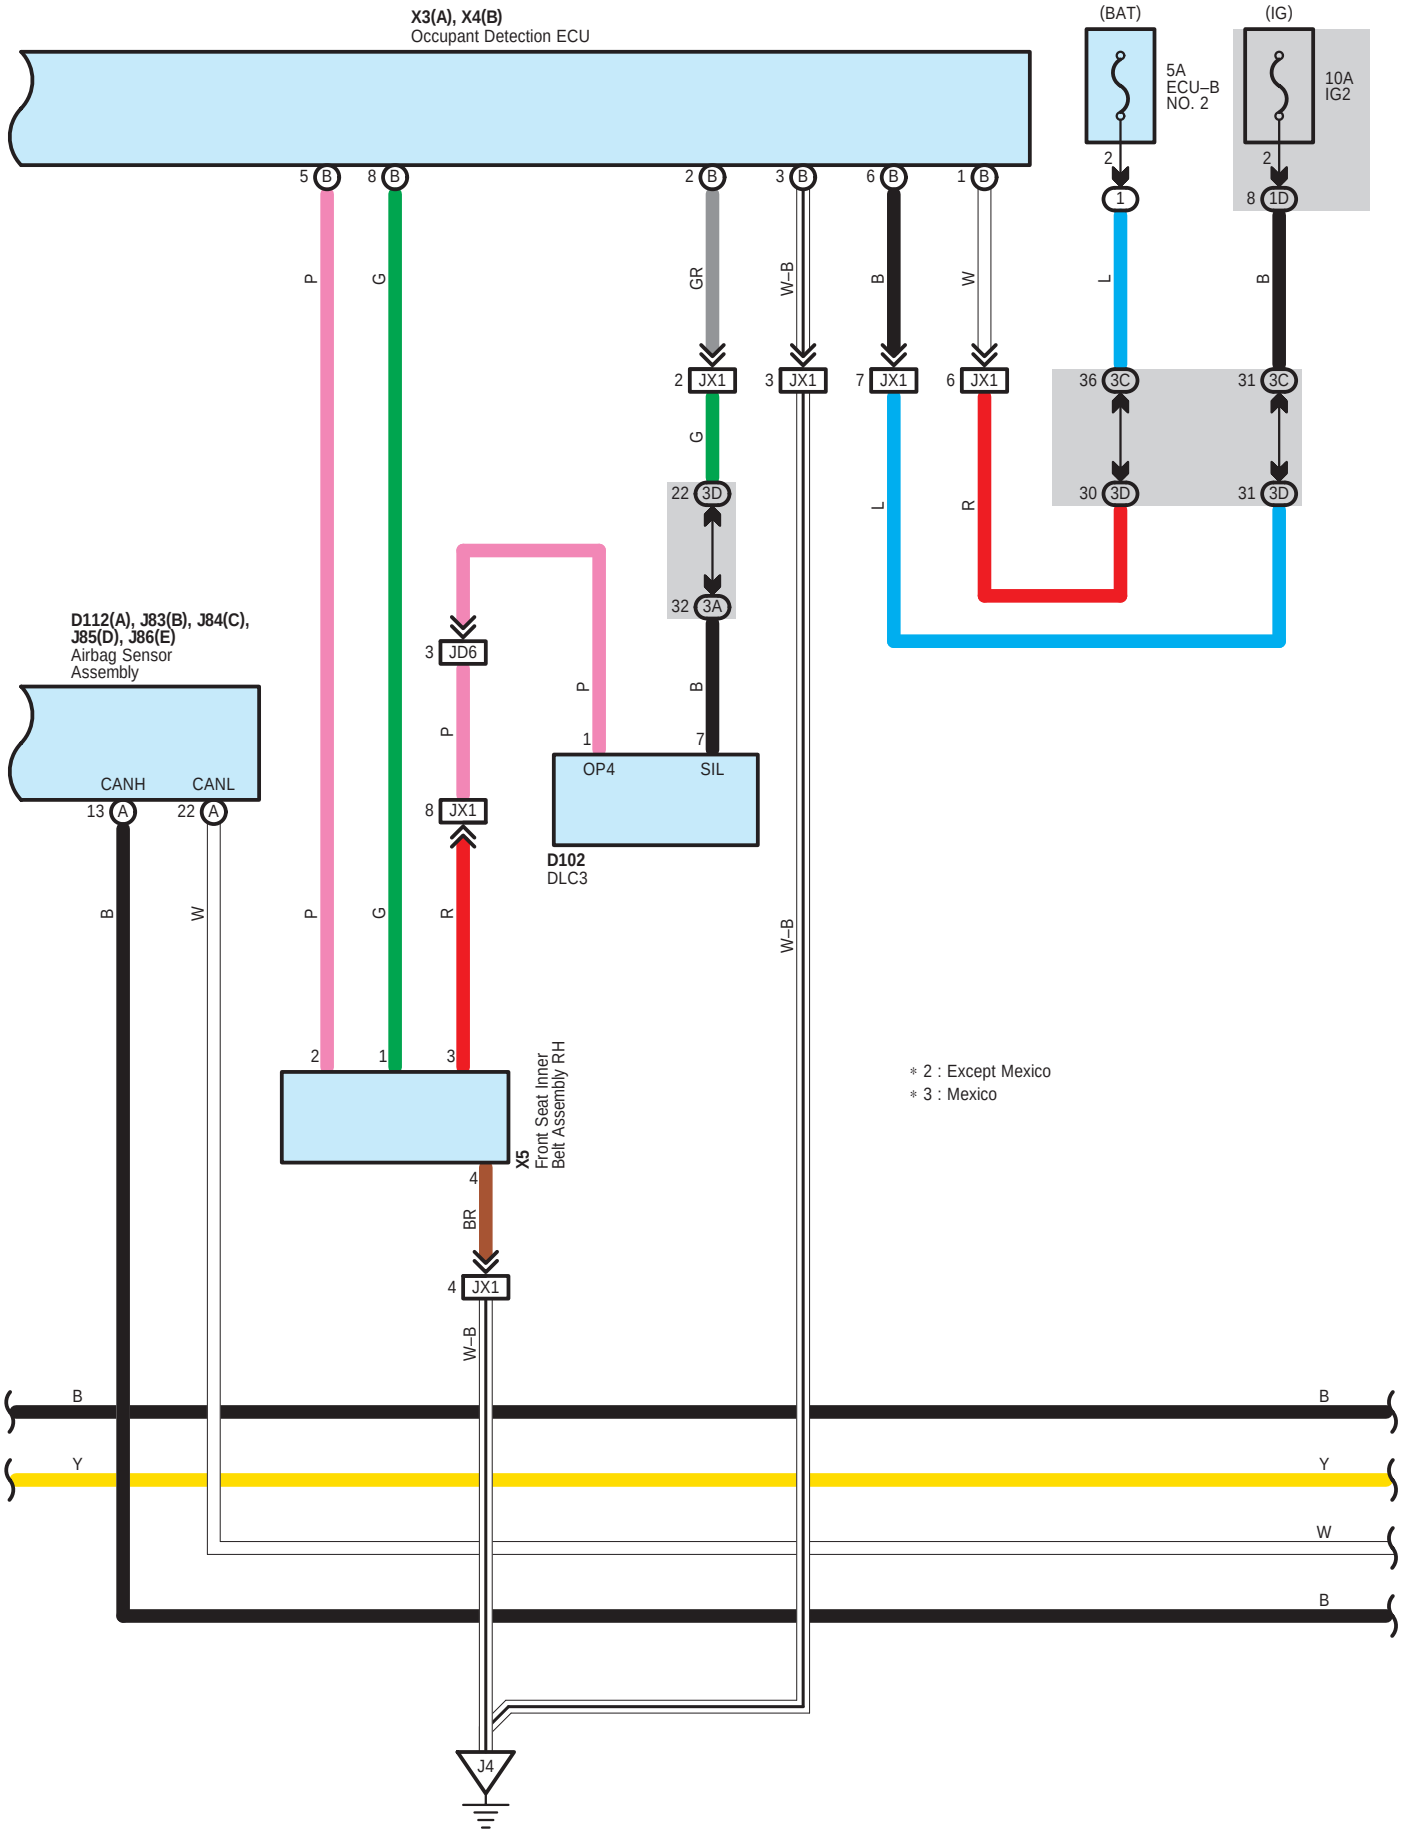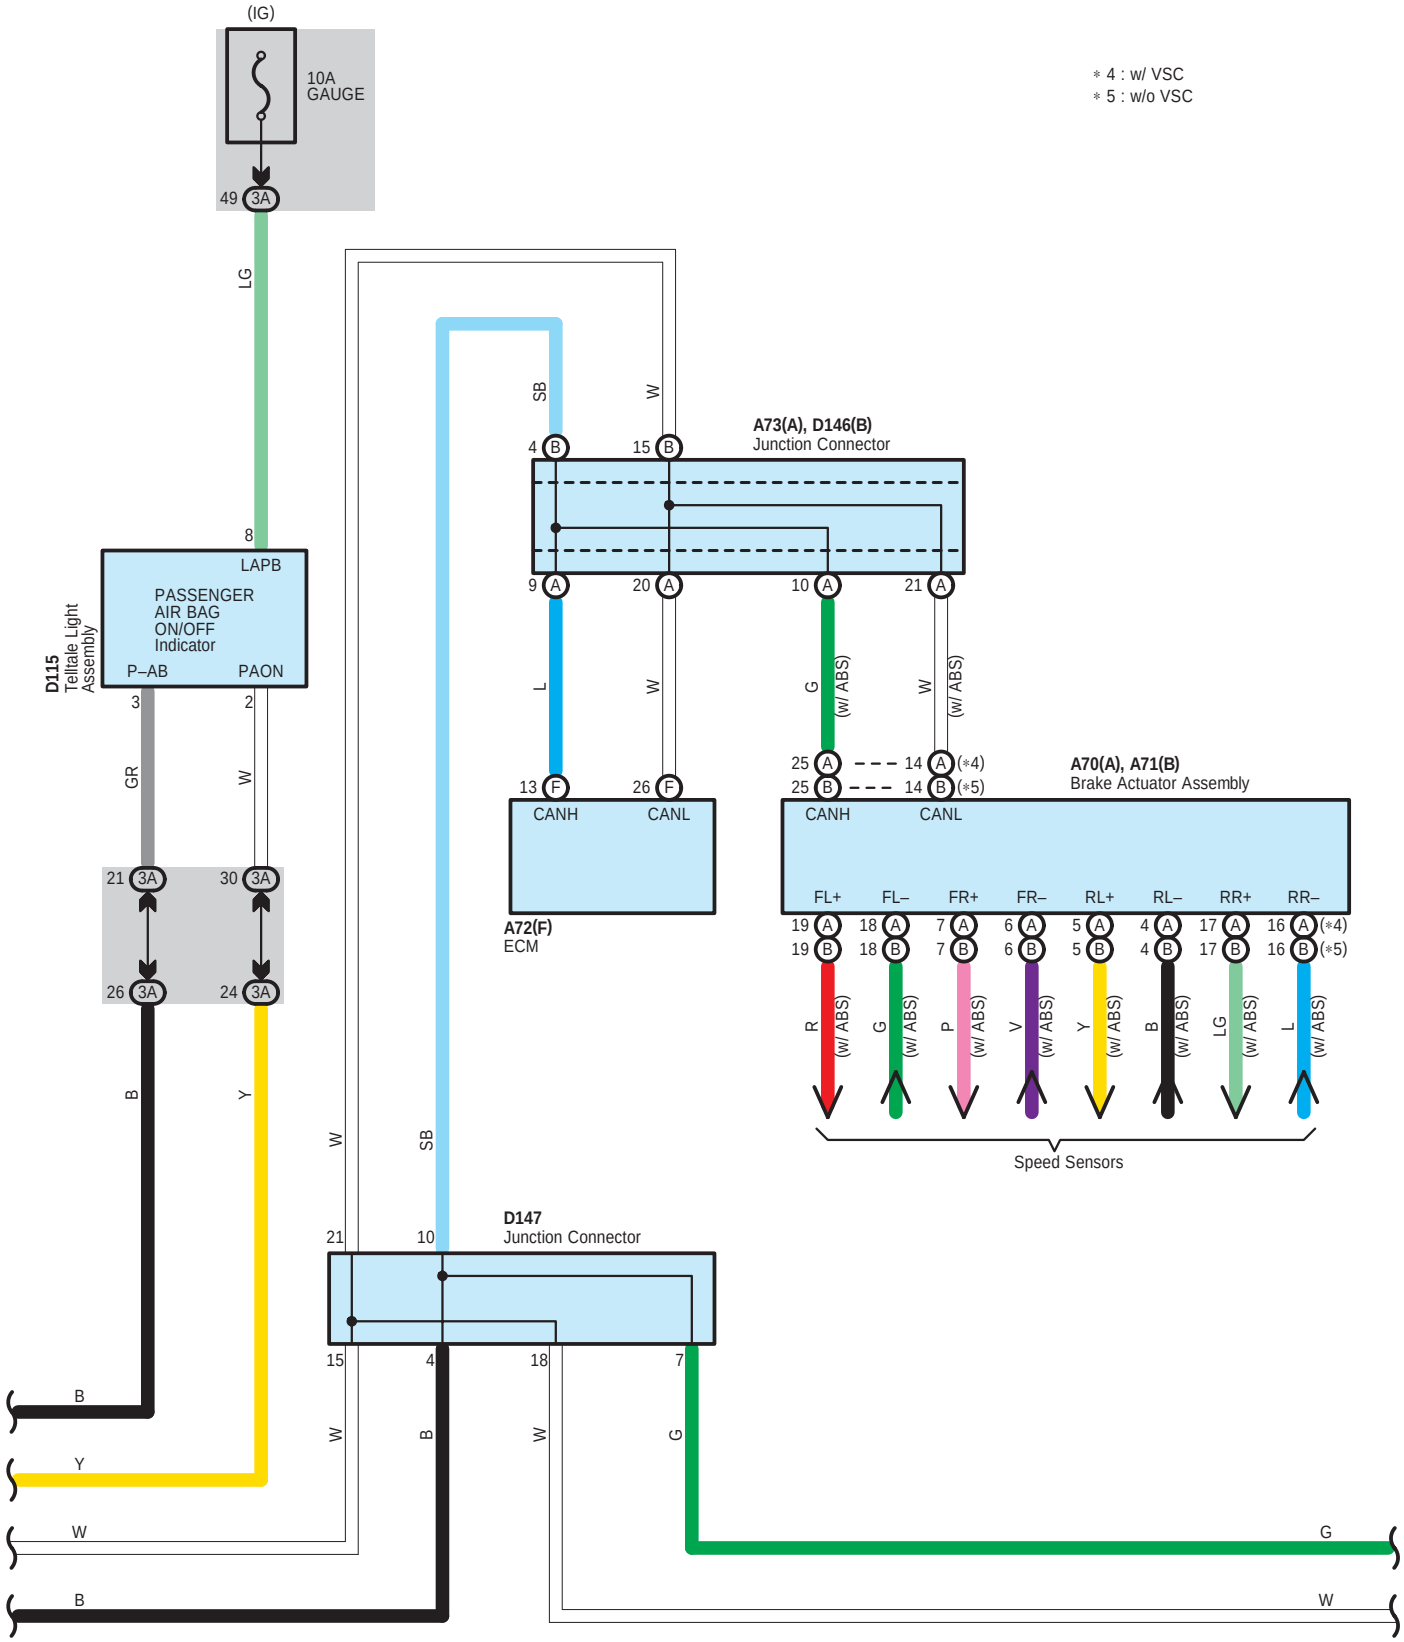



X3(A), X4(B)
Occupant Detection ECU
J67
Front Seat Inner Belt Assembly LH
Seat Position Airbag Sensor
Buckle Switch
LSP+
LSP–
LBE+
LBE–
JX1
X1
Rear Occupant Classification Sensor LH
X2
Rear Occupant Classification Sensor RH
D112(A), J83(B), J84(C), J85(D), J86(E)
Airbag Sensor Assembly
FSR+
FSR–
PAON
P–AB
F27
Door Side Airbag Sensor Assembly RH
G27
Door Side Airbag Sensor Assembly LH
FJ1
GJ1
J74
Side Airbag Sensor Assembly RH
J73
Side Airbag Sensor Assembly LH
J76
No. 2 Side Airbag Sensor Assembly RH
J75
No. 2 Side Airbag Sensor Assembly LH


X3(A), X4(B)
Occupant Detection ECU
(BAT)
(IG)
5A
ECU–B
NO. 2
10A
IG2
D112(A), J83(B), J84(C),
J85(D), J86(E)
Airbag Sensor
Assembly
CANH
CANL
D102
DLC3
OP4
SIL
X5
Front Seat Inner
Belt Assembly RH
J4
∗ 2 : Except Mexico
∗ 3 : Mexico


(IG)
10A
GAUGE
49 3A
LG
8
LAPB
PASSENGER
AIR BAG
ON/OFF
Indicator
P–AB
PAON
D115
Telltale Light
Assembly
3
2
GR
W
21 3A
30 3A
26 3A
24 3A
B
Y
SB
W
4 B
15 B
A73(A), D146(B)
Junction Connector
9 A
20 A
10 A
21 A
L
W
G
(w/ ABS)
W
(w/ ABS)
13 F
26 F
CANH
CANL
A72(F)
ECM
25 A
25 B
14 A (*4)
14 B (*5)
A70(A), A71(B)
Brake Actuator Assembly
CANH
CANL
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
19 A
19 B
18 A
18 B
7 A
7 B
6 A
6 B
5 A
5 B
4 A
4 B
17 A
17 B
16 A (*4)
16 B (*5)
R
G
P
V
Y
B
LG
L
(w/ ABS)
Speed Sensors
W
SB
21
10
D147
Junction Connector
15
4
18
7
W
B
W
G
B
Y
W
B
G
W
* 4 : w/ VSC
* 5 : w/o VSC

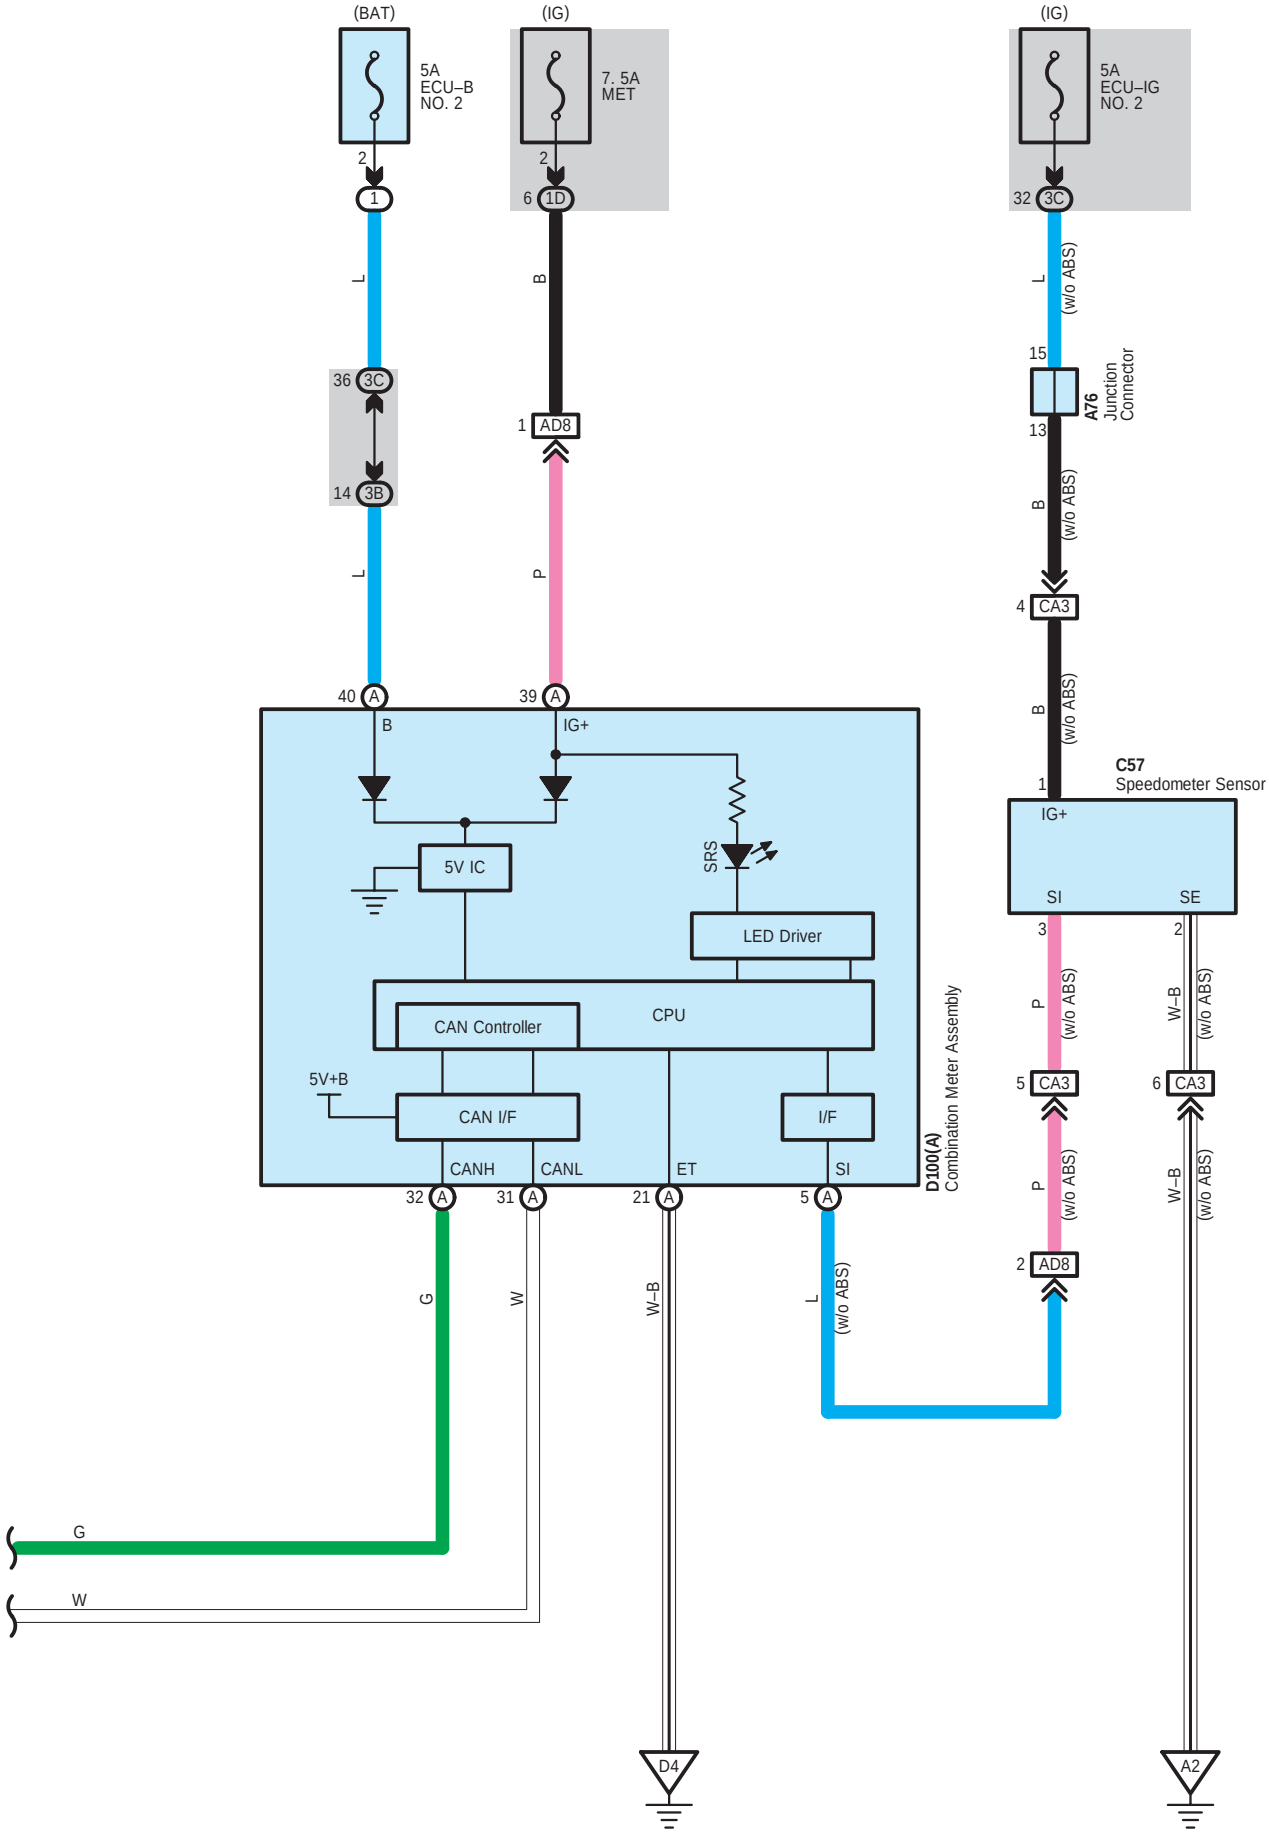
(BAT)
5A
ECU–B
NO. 2
2
1
L
36 3C
14 3B
L
40 A
B
(IG)
7. 5A
MET
2
6 1D
B
1 AD8
P
39 A
IG+
5V IC
SRS
LED Driver
CAN Controller
CPU
5V+B
CAN I/F
I/F
CANH
CANL
ET
SI
32 A
31 A
21 A
5 A
G
W
W–B
L
(w/o ABS)
D100(A)
Combination Meter Assembly
(IG)
5A
ECU–IG
NO. 2
32 3C
L
(w/o ABS)
15
A76
Junction
Connector
13
B
(w/o ABS)
4 CA3
B
(w/o ABS)
1
C57
Speedometer Sensor
IG+
SI
SE
3
P
(w/o ABS)
5 CA3
P
(w/o ABS)
2 AD8
2
W–B
(w/o ABS)
6 CA3
W–B
(w/o ABS)
G
W
D4
A2


A 56
Yellow

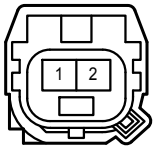


A 57
Yellow




A 70
Black

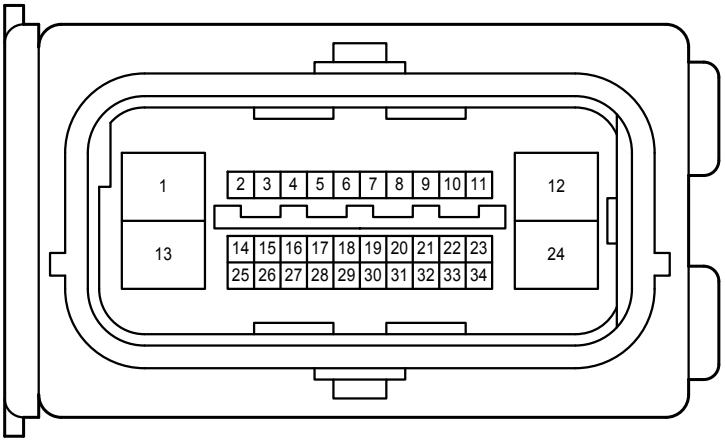


A 71
Black

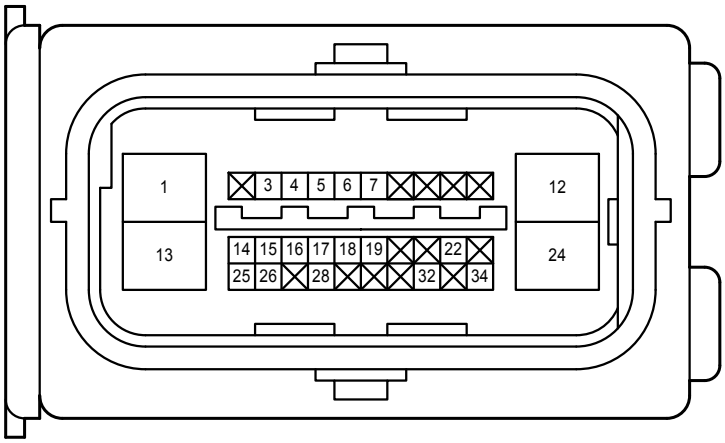


A 72
Black

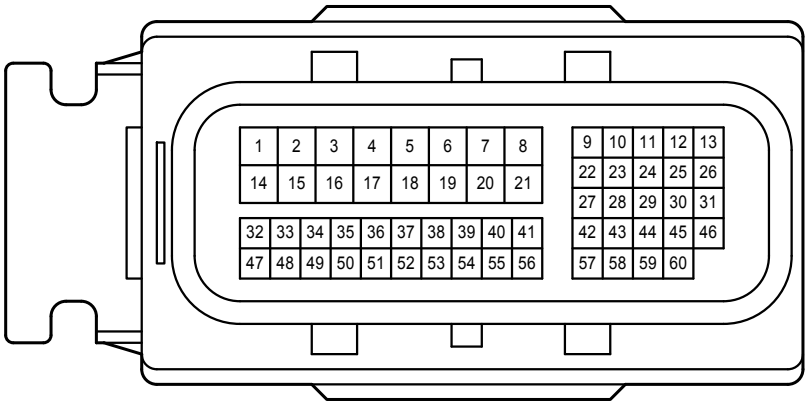

A 73
Blue

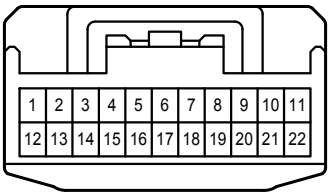


A 76
White

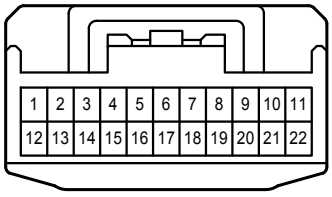


C 57
Black




D100
Black

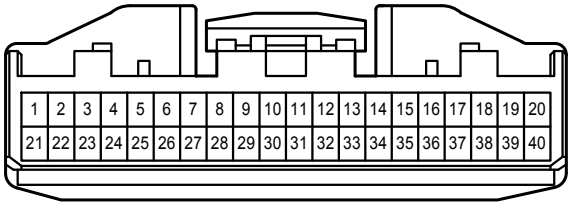


D102
White

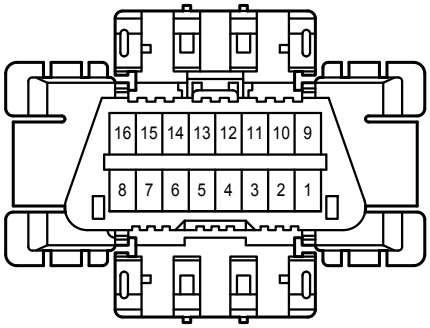


D112
Yellow

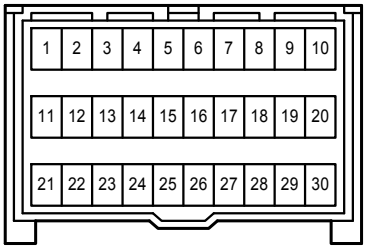

D113
Yellow

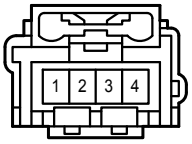


D114
Black




D115
Black



D146
Blue

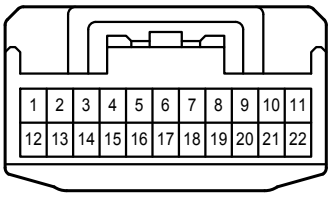


D147
Gray

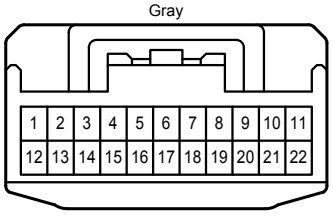

F 27
Yellow




G 27
Yellow

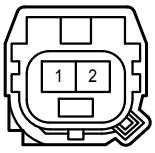


J 67
White




J 73
Yellow

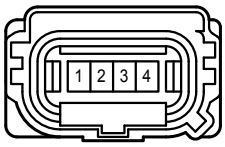


J 74
Yellow

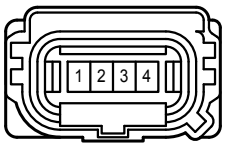


J 75
Yellow

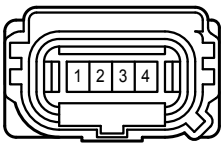


J 76
Yellow

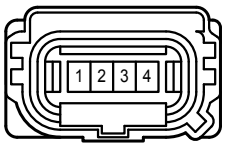


J 77
Black




J 78
Black




J 79
Black

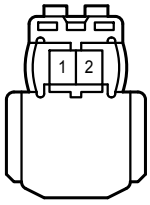

J 80
Black

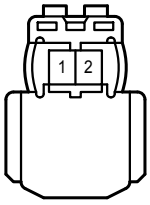


J 81
Yellow

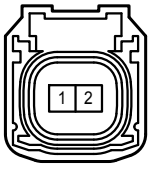


J 82
Yellow




J 83
Yellow

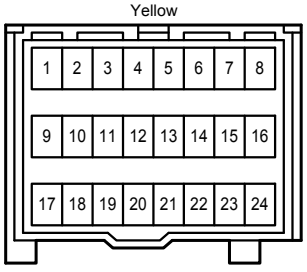


J 84
Yellow

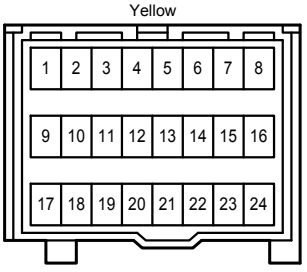

J 85
Yellow

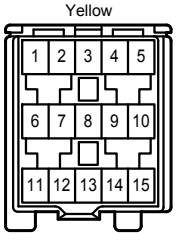

J 86
Yellow

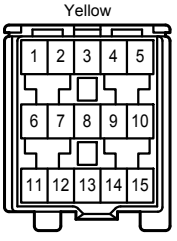


J 88
Yellow




J 89
Yellow




Q 10
Orange




Q 11
Black




Q 12
Green

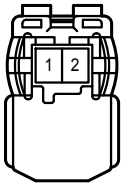


W 10
Orange




W 11
Black




X 1
Black

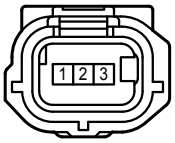


X 2
Gray

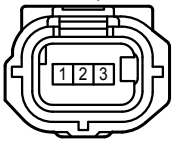

X 3
Gray

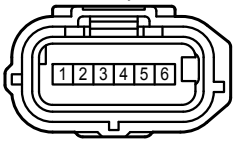


X 4
Black

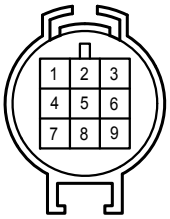


X 5
Gray




1D
White

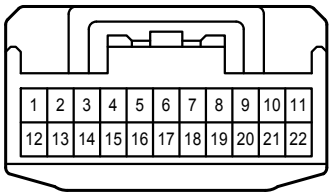


1D




3A
White

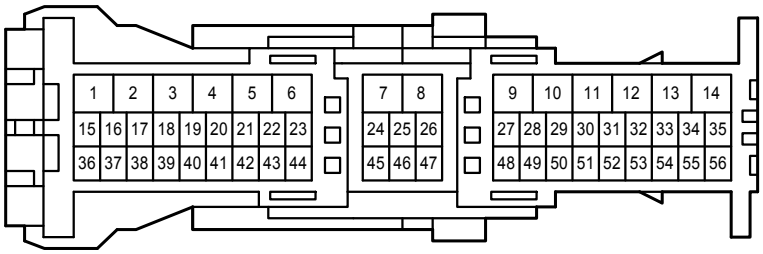


3B
White

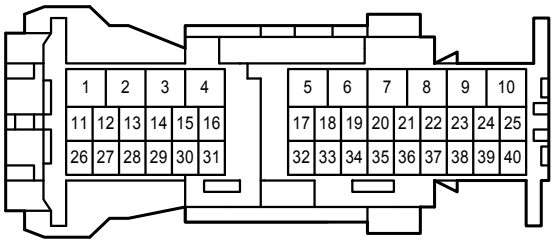


3C
White

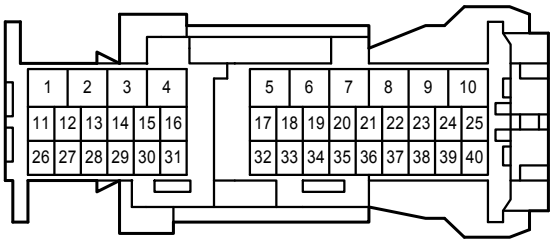


3D
White

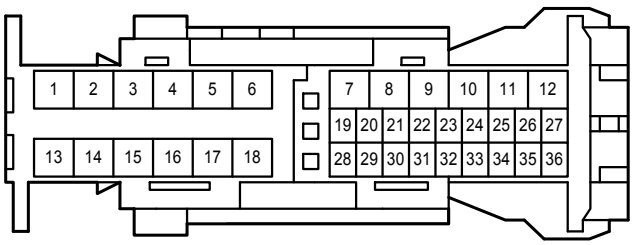


7A
White

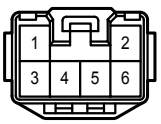


8A
White

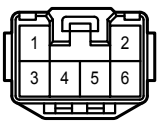


AD6
Yellow

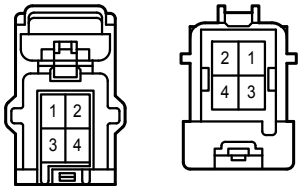


AD8
Black

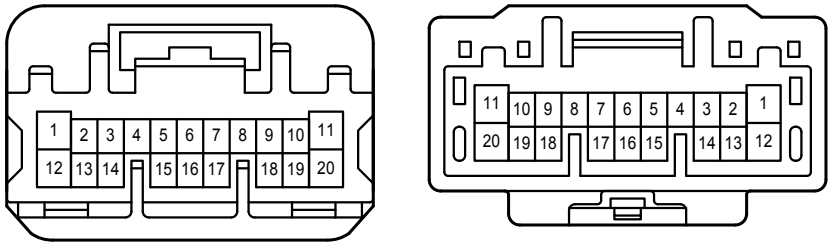


CA3
White

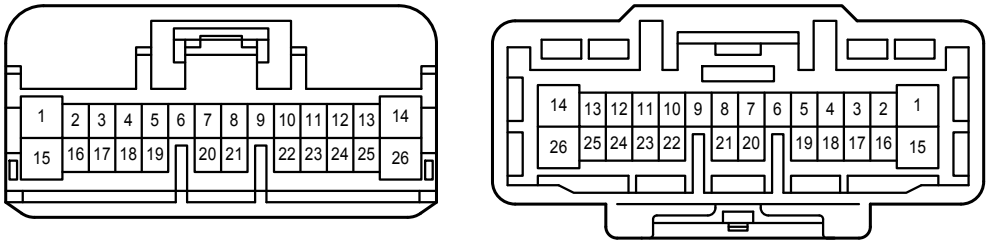


DQ3
Yellow

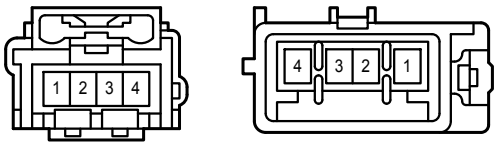


DQ4
Yellow

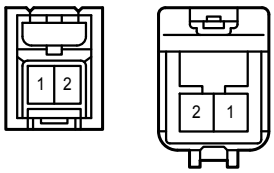


FJ1
Yellow

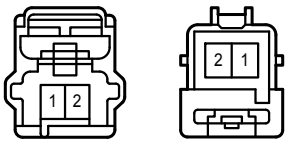

GJ1
Yellow

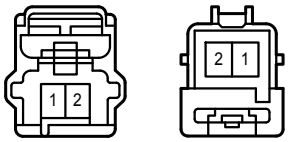

JD6
White

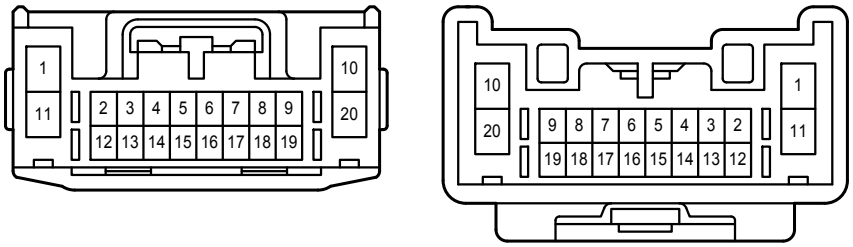

JX1
Gray

