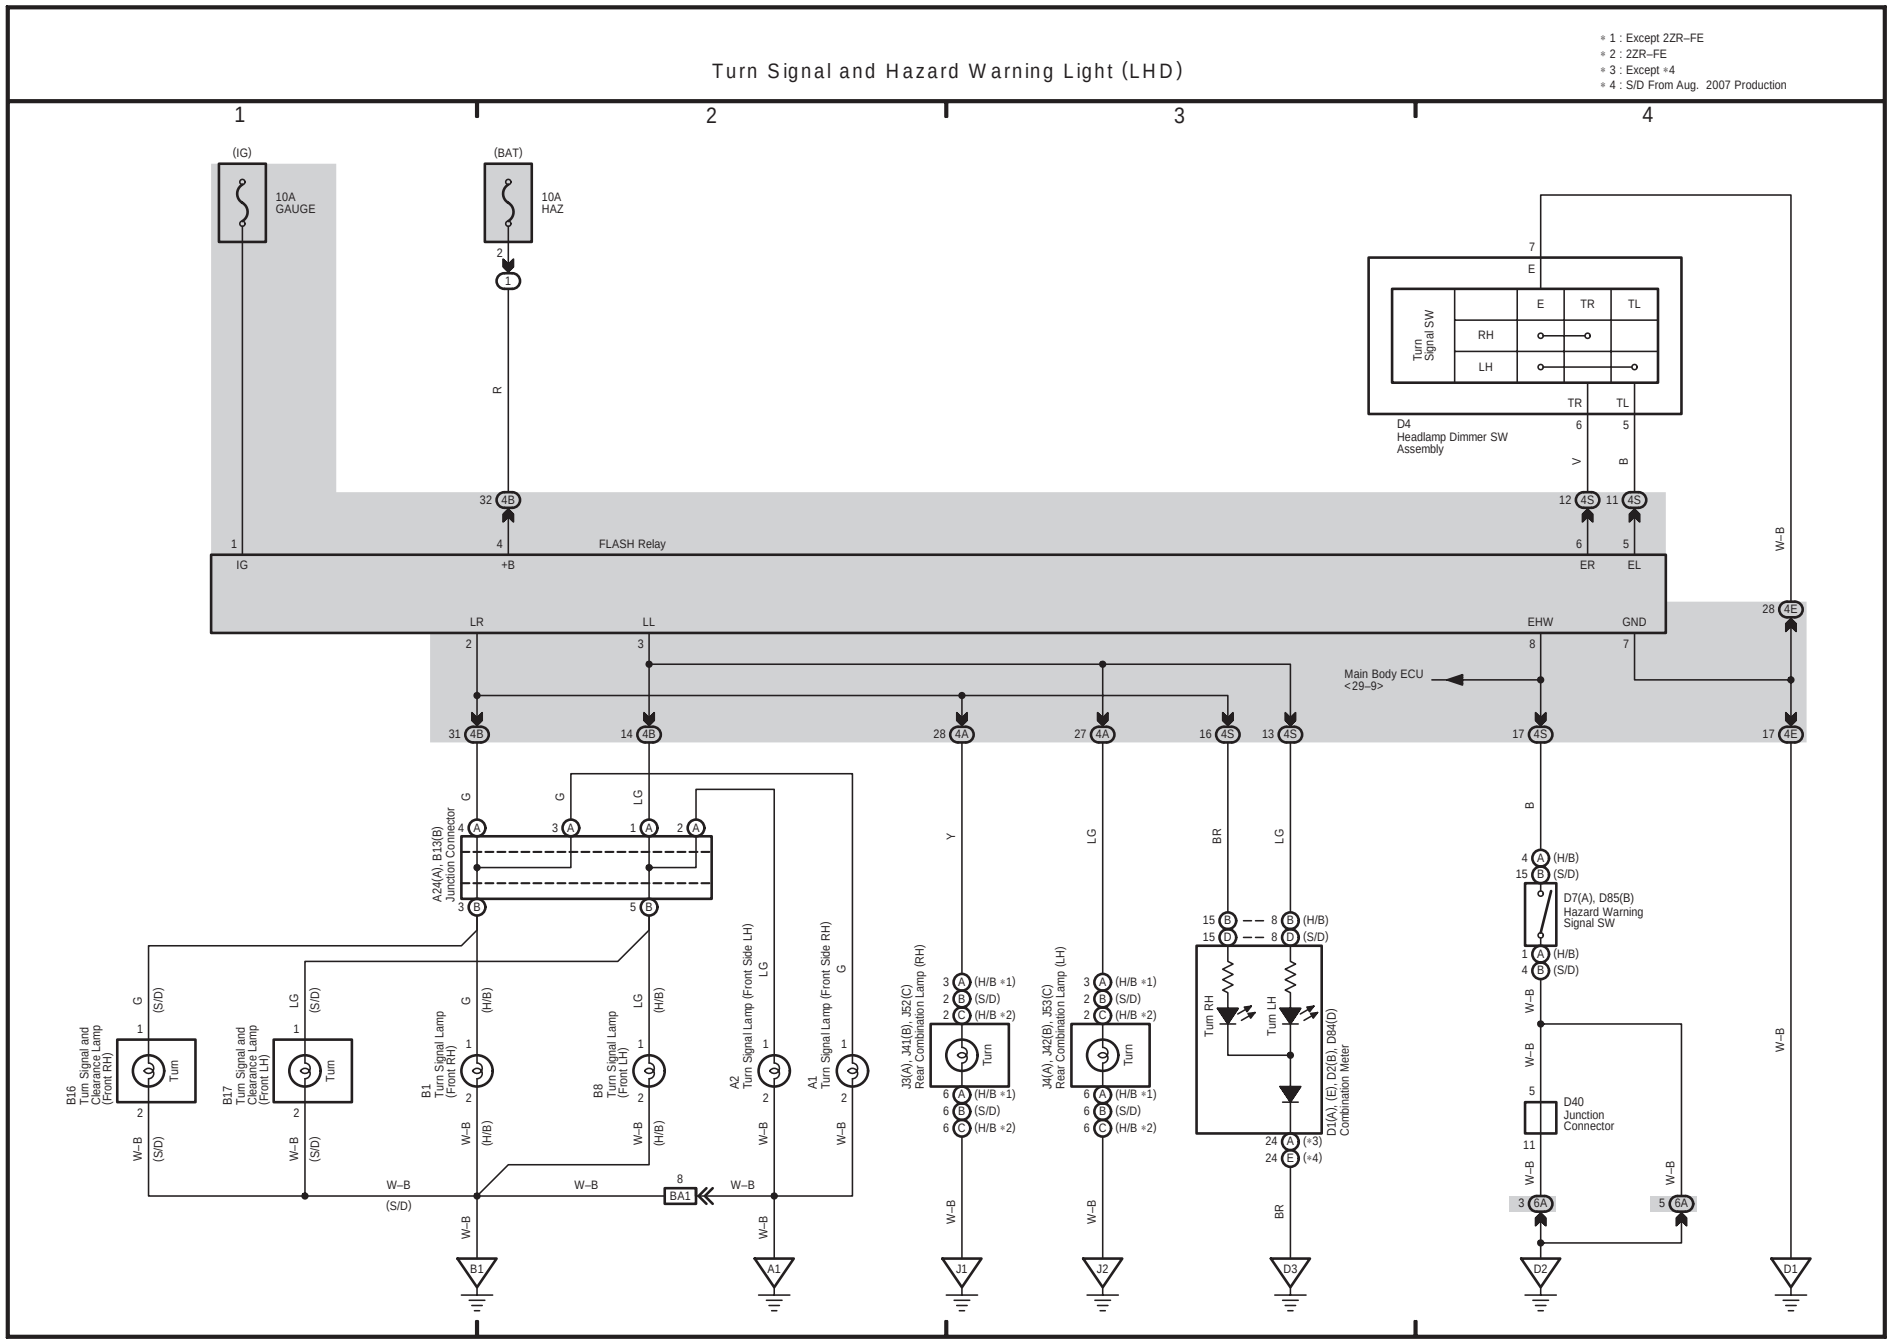

Turn Signal and Hazard Warning Light (LHD)
* 1 : Except 2ZR–FE
* 2 : 2ZR–FE
* 3 : Except *4
* 4 : S/D From Aug. 2007 Production
1
2
3
4
(IG)
10A GAUGE
(BAT)
10A HAZ
FLASH Relay
IG
+B
ER
EL
LR
LL
EHW
GND
Main Body ECU <29–9>
Turn Signal SW
E
TR
TL
RH
LH
D4 Headlamp Dimmer SW Assembly
A24(A), B13(B) Junction Connector
B16 Turn Signal and Clearance Lamp (Front RH)
B17 Turn Signal and Clearance Lamp (Front LH)
B1 Turn Signal Lamp (Front RH)
B8 Turn Signal Lamp (Front LH)
A2 Turn Signal Lamp (Front Side LH)
A1 Turn Signal Lamp (Front Side RH)
J3(A), J41(B), J52(C) Rear Combination Lamp (RH)
J4(A), J42(B), J53(C) Rear Combination Lamp (LH)
Turn RH
Turn LH
D1(A), (E), D2(B), D84(D) Combination Meter
D7(A), D85(B) Hazard Warning Signal SW
D40 Junction Connector
BA1
B1
A1
J1
J2
D3
D2
D1