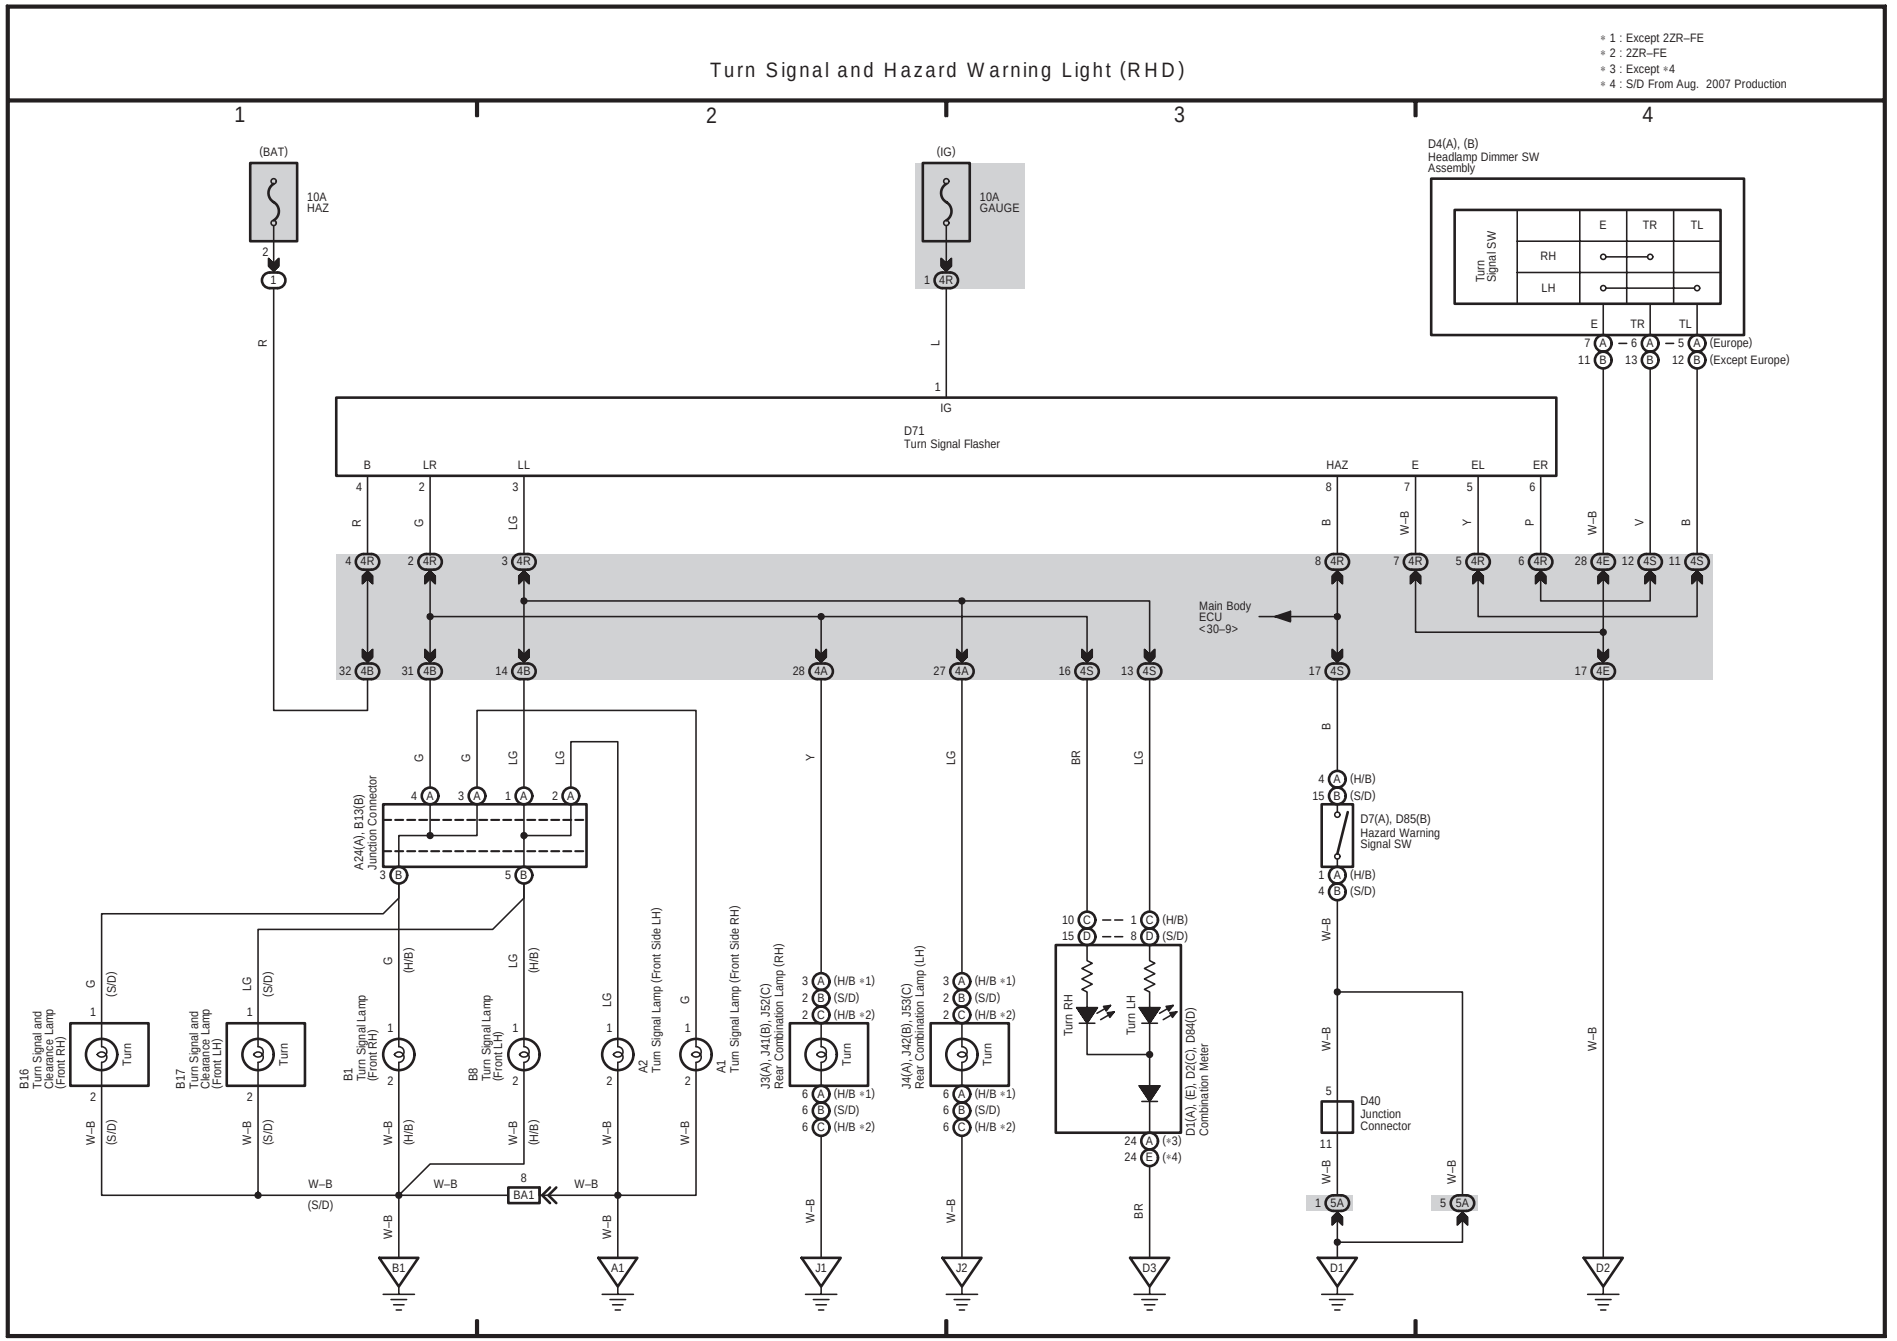

Turn Signal and Hazard Warning Light (RHD)
* 1 : Except 2ZR–FE
* 2 : 2ZR–FE
* 3 : Except *4
* 4 : S/D From Aug. 2007 Production
1
2
3
4
(BAT)
10A HAZ
(IG)
10A GAUGE
D4(A), (B) Headlamp Dimmer SW Assembly
Turn Signal SW
E
TR
TL
RH
LH
(Europe)
(Except Europe)
D71 Turn Signal Flasher
B
LR
LL
HAZ
E
EL
ER
IG
Main Body ECU <30–9>
A24(A), B13(B) Junction Connector
B16 Turn Signal and Clearance Lamp (Front RH)
B17 Turn Signal and Clearance Lamp (Front LH)
B1 Turn Signal Lamp (Front RH)
B8 Turn Signal Lamp (Front LH)
A2 Turn Signal Lamp (Front Side LH)
A1 Turn Signal Lamp (Front Side RH)
J3(A), J41(B), J52(C) Rear Combination Lamp (RH)
J4(A), J42(B), J53(C) Rear Combination Lamp (LH)
D7(A), D85(B) Hazard Warning Signal SW
D40 Junction Connector
D1(A), (E), D2(C), D84(D) Combination Meter
Turn RH
Turn LH
BA1
B1
A1
J1
J2
D3
D1
D2