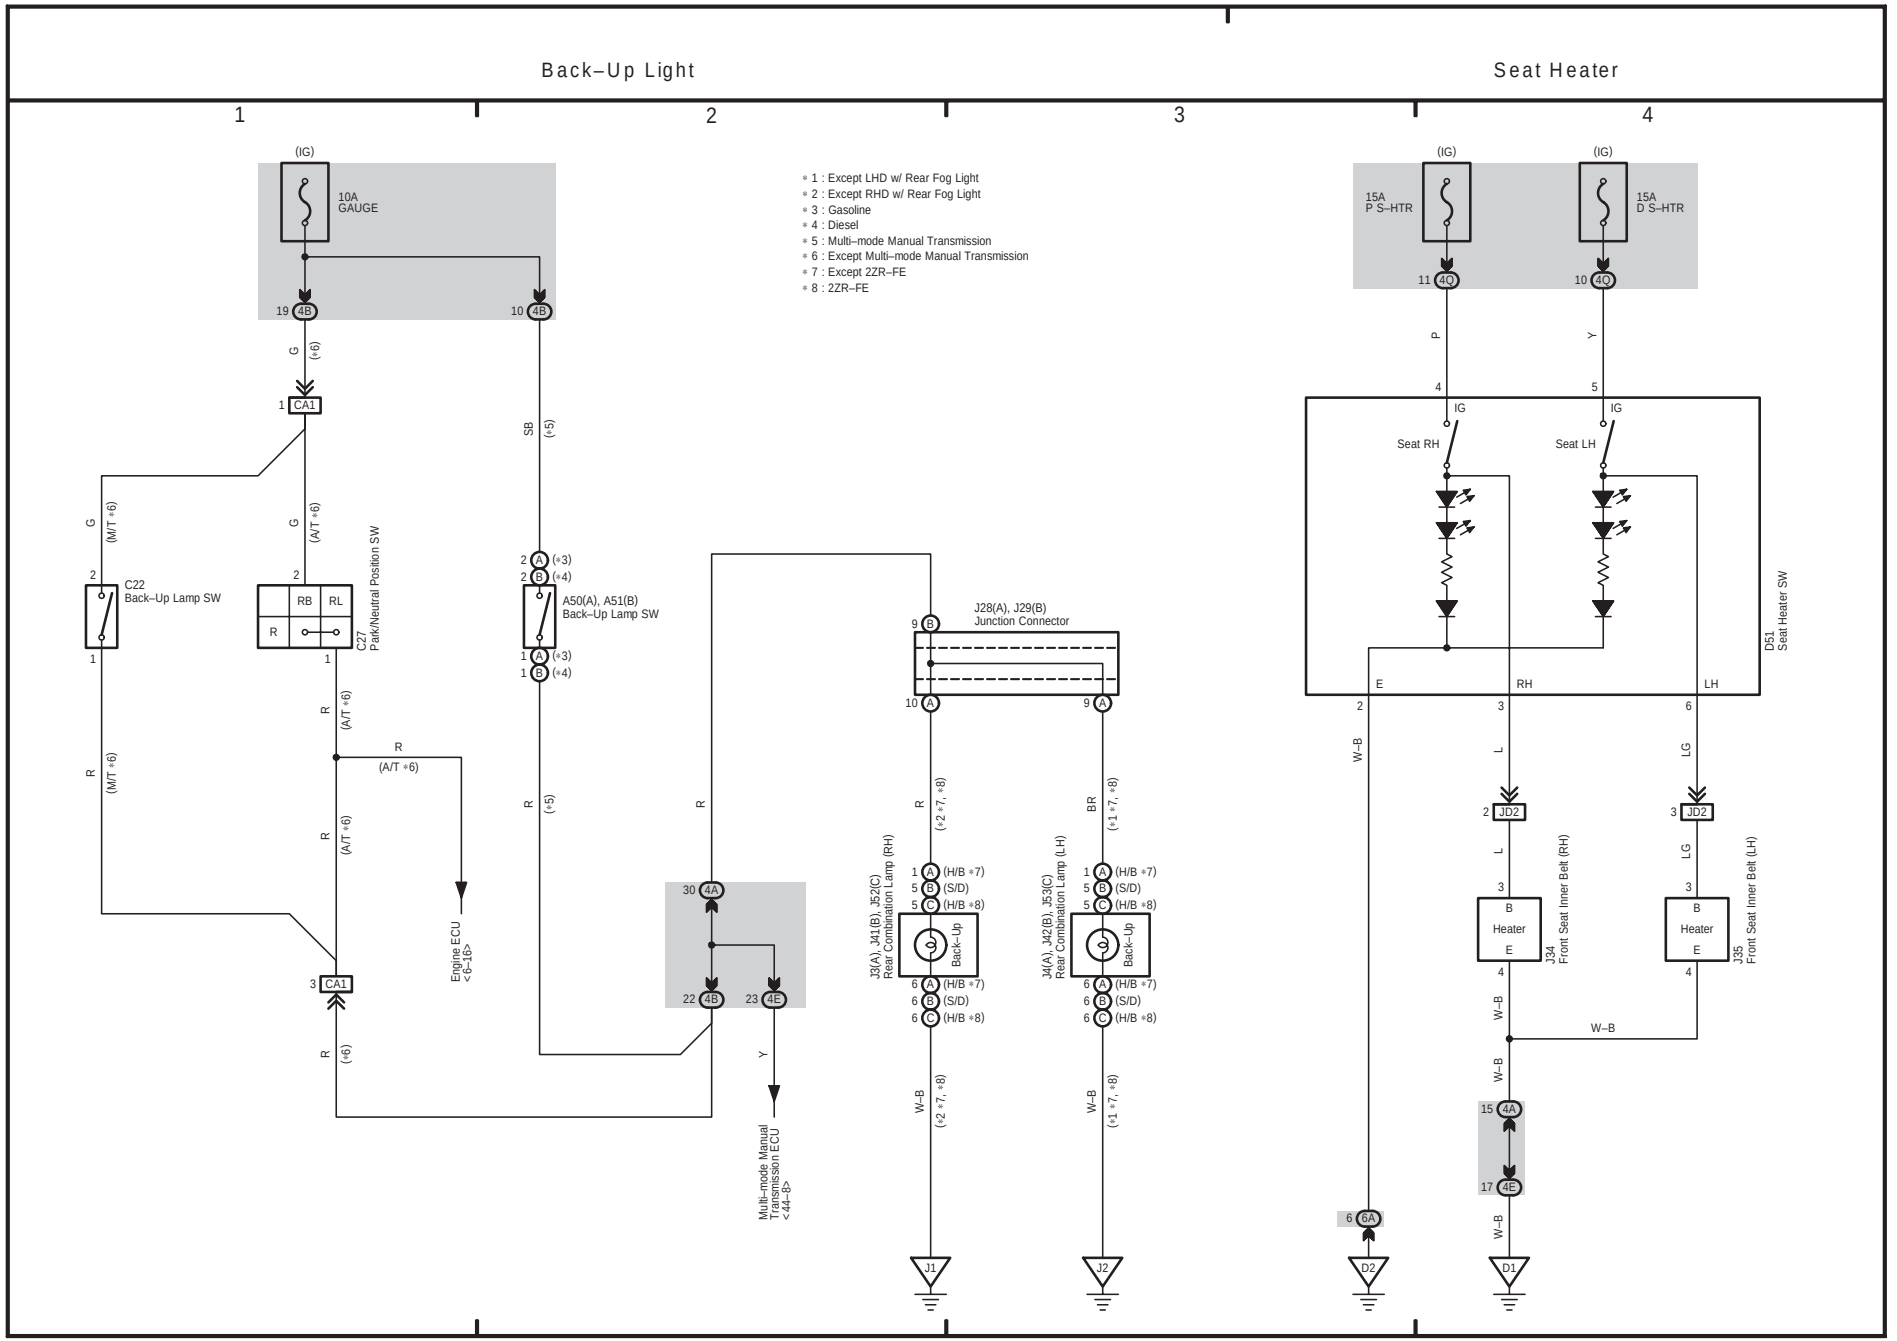

Back–Up Light
Seat Heater
1
2
3
4
* 1 : Except LHD w/ Rear Fog Light
* 2 : Except RHD w/ Rear Fog Light
* 3 : Gasoline
* 4 : Diesel
* 5 : Multi–mode Manual Transmission
* 6 : Except Multi–mode Manual Transmission
* 7 : Except 2ZR–FE
* 8 : 2ZR–FE
(IG)
10A GAUGE
19 4B
10 4B
G (*6)
1 CA1
G (M/T *6)
G (A/T *6)
SB (*5)
2 C22 Back–Up Lamp SW 1
2 RB RL R C27 Park/Neutral Position SW 1
2 A (*3) 2 B (*4) A50(A), A51(B) Back–Up Lamp SW 1 A (*3) 1 B (*4)
R (M/T *6)
R (A/T *6)
R (A/T *6)
R (A/T *6)
R (*5)
R
3 CA1
R (*6)
Engine ECU <6–16>
30 4A
22 4B
23 4E
Y
Multi–mode Manual Transmission ECU <44–B>
9 B J28(A), J29(B) Junction Connector
10 A
9 A
R (*2 *7, *8)
BR (*1 *7, *8)
J3(A), J41(B), J52(C) Rear Combination Lamp (RH)
J4(A), J42(B), J53(C) Rear Combination Lamp (LH)
1 A (H/B *7) 5 B (S/D) 5 C (H/B *8)
Back–Up
6 A (H/B *7) 6 B (S/D) 6 C (H/B *8)
W–B (*2 *7, *8)
W–B (*1 *7, *8)
J1
J2
15A P S–HTR
15A D S–HTR
11 4Q
10 4Q
P
Y
4
5
IG
Seat RH
Seat LH
D51 Seat Heater SW
E
RH
LH
2
3
6
W–B
L
LG
2 JD2
3 JD2
3 B Heater E 4
J34 Front Seat Inner Belt (RH)
J35 Front Seat Inner Belt (LH)
W–B
15 4A
17 4E
6 6A
D2
D1