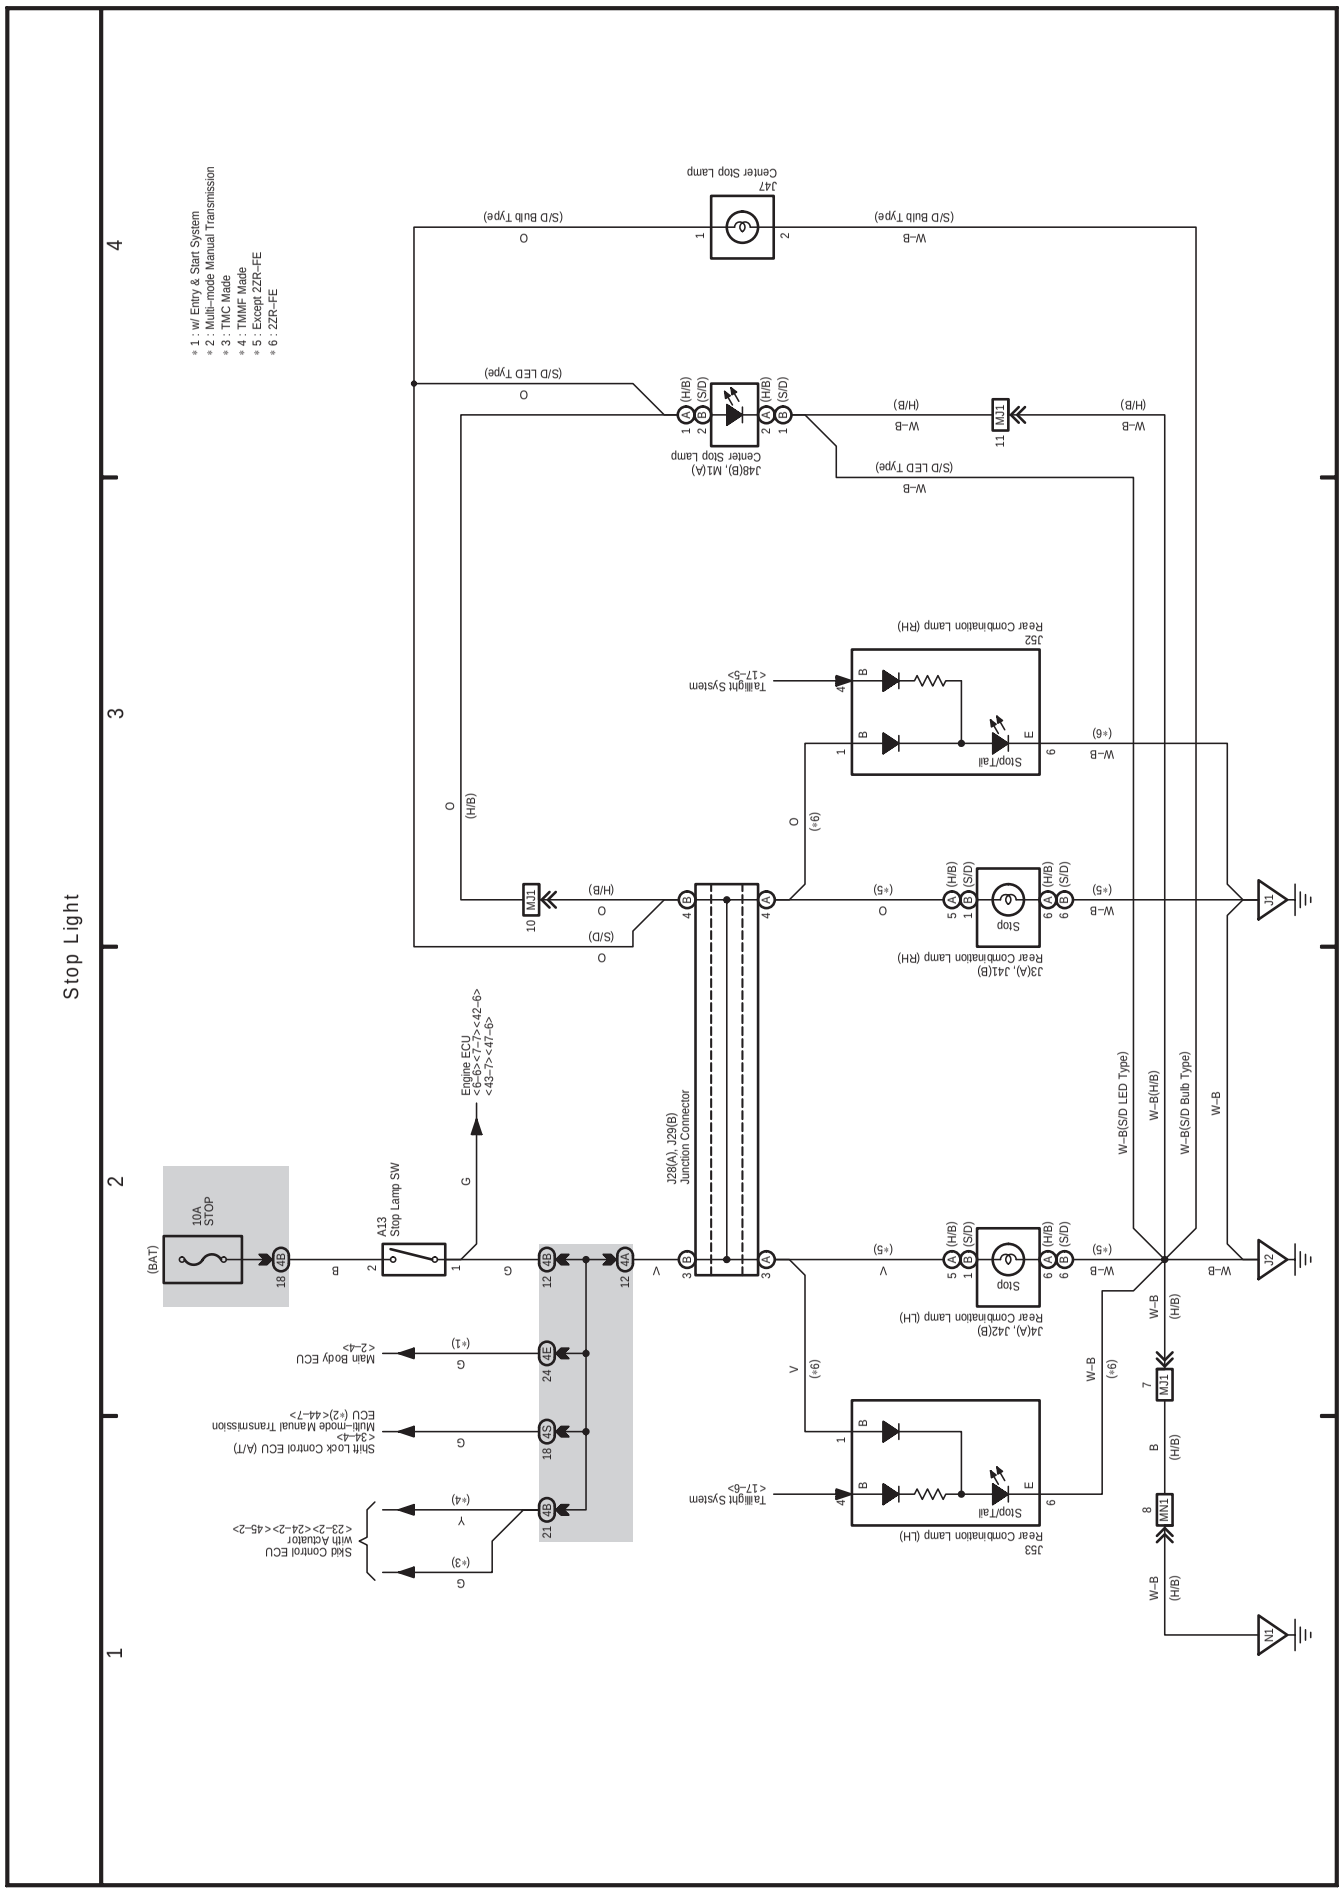

Stop Light
1
2
3
4
* 1 : w/ Entry & Start System
* 2 : Multi-mode Manual Transmission
* 3 : TMC Made
* 4 : TMMF Made
* 5 : Except 2ZR-FE
* 6 : 2ZR-FE
(BAT)
10A STOP
A13 Stop Lamp SW
Engine ECU <6-6><7-7><42-6> <43-7><47-6>
J28(A), J29(B) Junction Connector
Center Stop Lamp J47
Center Stop Lamp J48(B), M1(A)
Rear Combination Lamp (RH) J52
Rear Combination Lamp (RH) J3(A), J41(B)
Rear Combination Lamp (LH) J4(A), J42(B)
Rear Combination Lamp (LH) J53
Tail Light System <17-5>
Tail Light System <17-6>
Stop/Tail
Stop
Main Body ECU <2-4>
Shift Lock Control ECU (A/T) Multi-mode Manual Transmission ECU (*2)<44-7> <34-4>
SRS Control ECU with Actuator <23-2><24-2><45-2>
W-B(S/D LED Type)
W-B(H/B)
W-B(S/D Bulb Type)
W-B
(S/D Bulb Type)
(S/D LED Type)
(H/B)
(S/D)
(*1)
(*2)
(*3)
(*4)
(*5)
(*6)
(+)
J1
J2
M1
MJ1
MN1