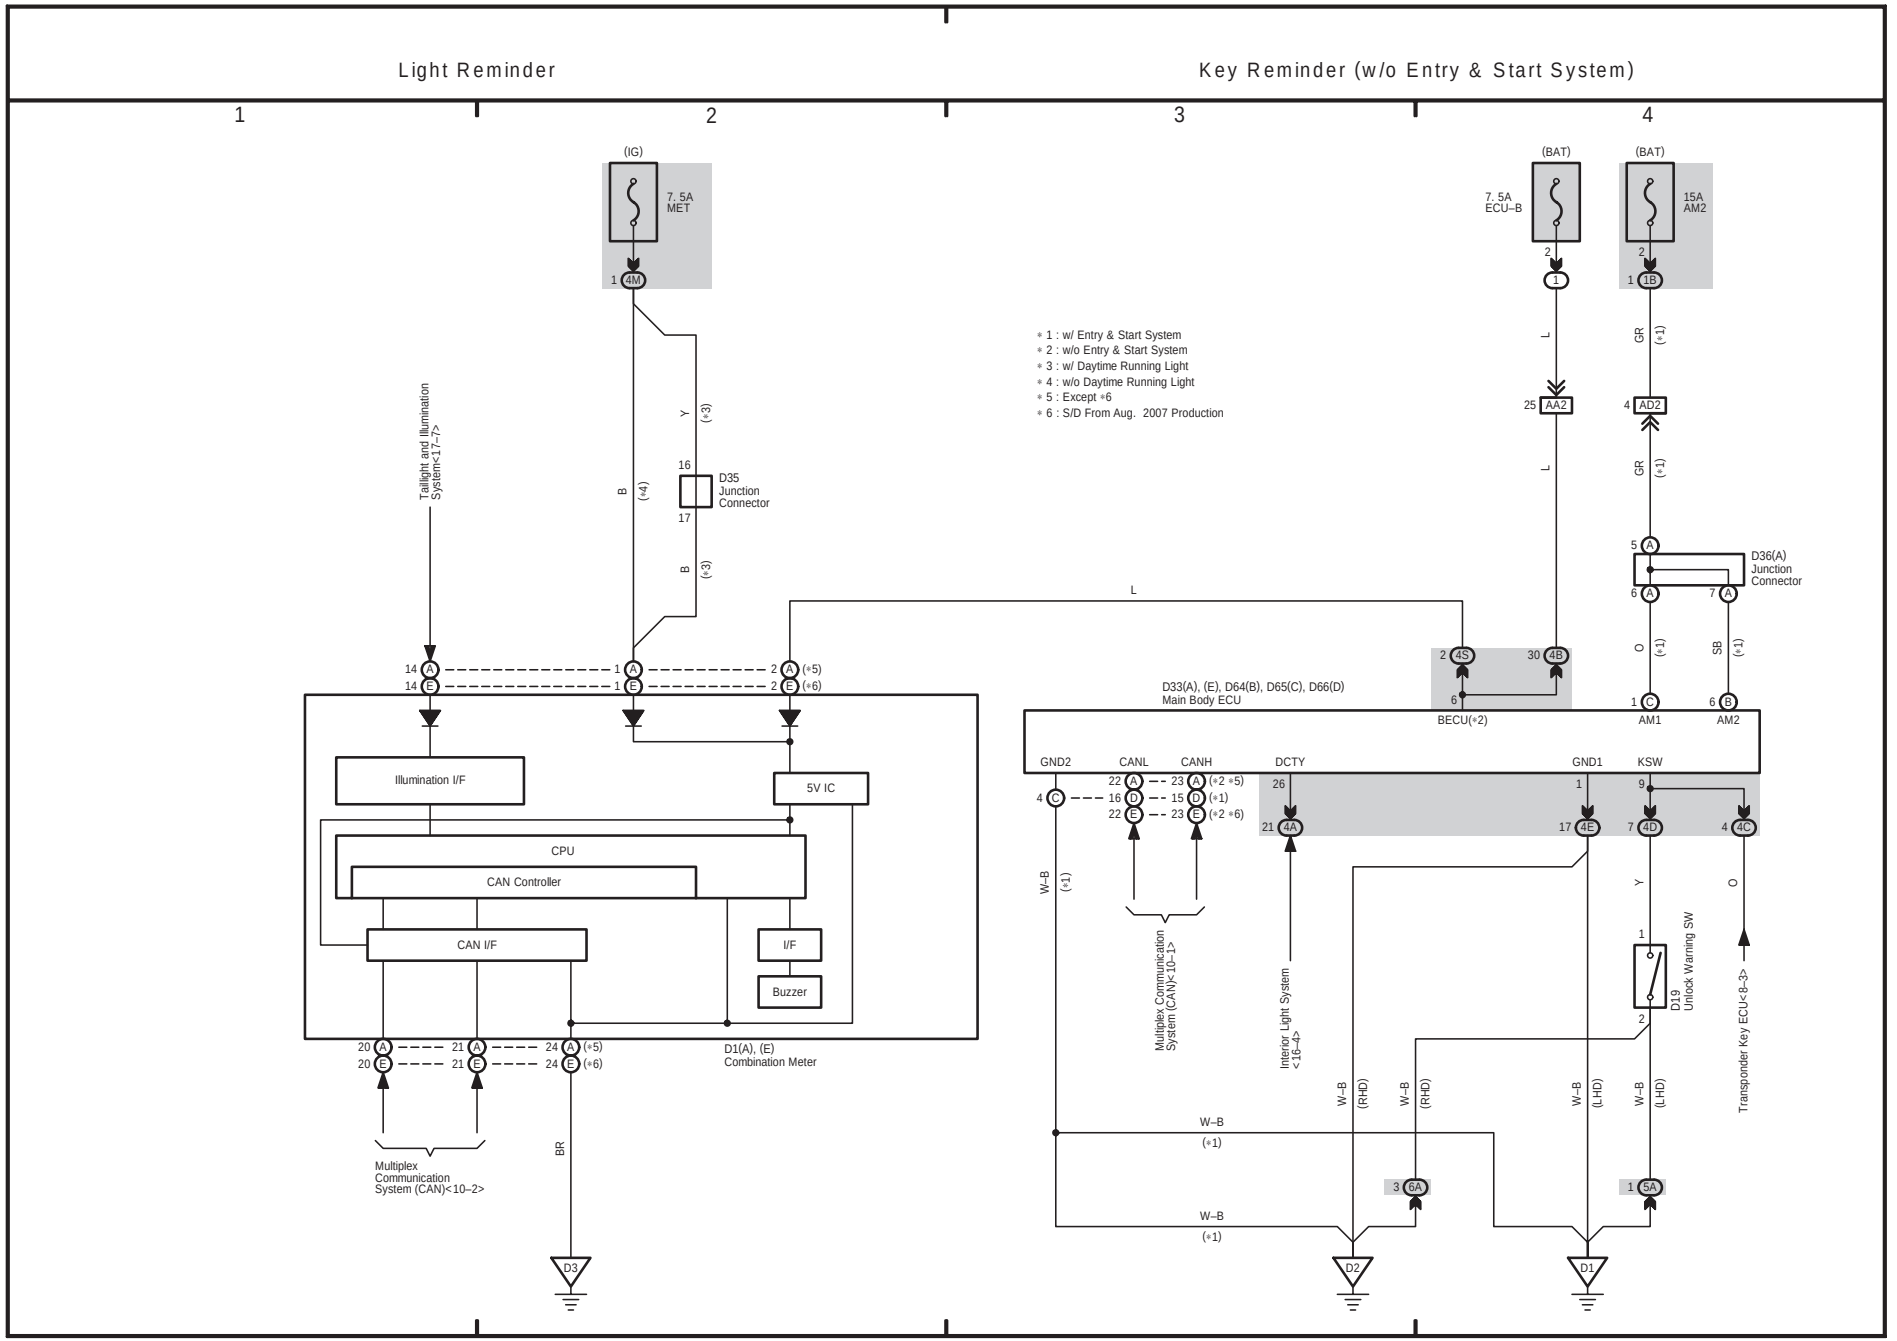

Light Reminder
Key Reminder (w/o Entry & Start System)
1
2
3
4
(IG)
7. 5A
MET
1 4M
(BAT)
7. 5A
ECU–B
2
1
(BAT)
15A
AM2
2
1 1B
∗ 1 : w/ Entry & Start System
∗ 2 : w/o Entry & Start System
∗ 3 : w/ Daytime Running Light
∗ 4 : w/o Daytime Running Light
∗ 5 : Except ∗6
∗ 6 : S/D From Aug. 2007 Production
Taillight and Illumination System<17–7>
Y (∗3)
B (∗4)
B (∗3)
16
17
D35
Junction
Connector
L
25 AA2
GR (∗1)
4 AD2
GR (∗1)
5 A
6 A
7 A
D36(A)
Junction
Connector
O (∗1)
SB (∗1)
1 C
6 B
AM1
AM2
2 4S
6
BECU(∗2)
30 4B
D33(A), (E), D64(B), D65(C), D66(D)
Main Body ECU
14 A
14 E
1 A
1 E
2 A (∗5)
2 E (∗6)
Illumination I/F
5V IC
CPU
CAN Controller
CAN I/F
I/F
Buzzer
20 A
20 E
21 A
21 E
24 A (∗5)
24 E (∗6)
D1(A), (E)
Combination Meter
Multiplex
Communication
System (CAN)<10–2>
BR
D3
GND2
CANL
CANH
DCTY
GND1
KSW
4 C
22 A
22 E
23 A (∗2 ∗5)
16 D
15 D (∗1)
22 E
23 E (∗2 ∗6)
26
21 4A
1
17 4E
9
7 4D
4 4C
W–B (∗1)
Multiplex Communication System (CAN)<10–12>
Interior Light System <16–4>
Y
O
1
2
D19
Unlock Warning SW
Transponder Key ECU<8–3>
W–B (RHD)
W–B (RHD)
W–B (LHD)
W–B (LHD)
W–B (∗1)
W–B (∗1)
3 6A
1 5A
D2
D1