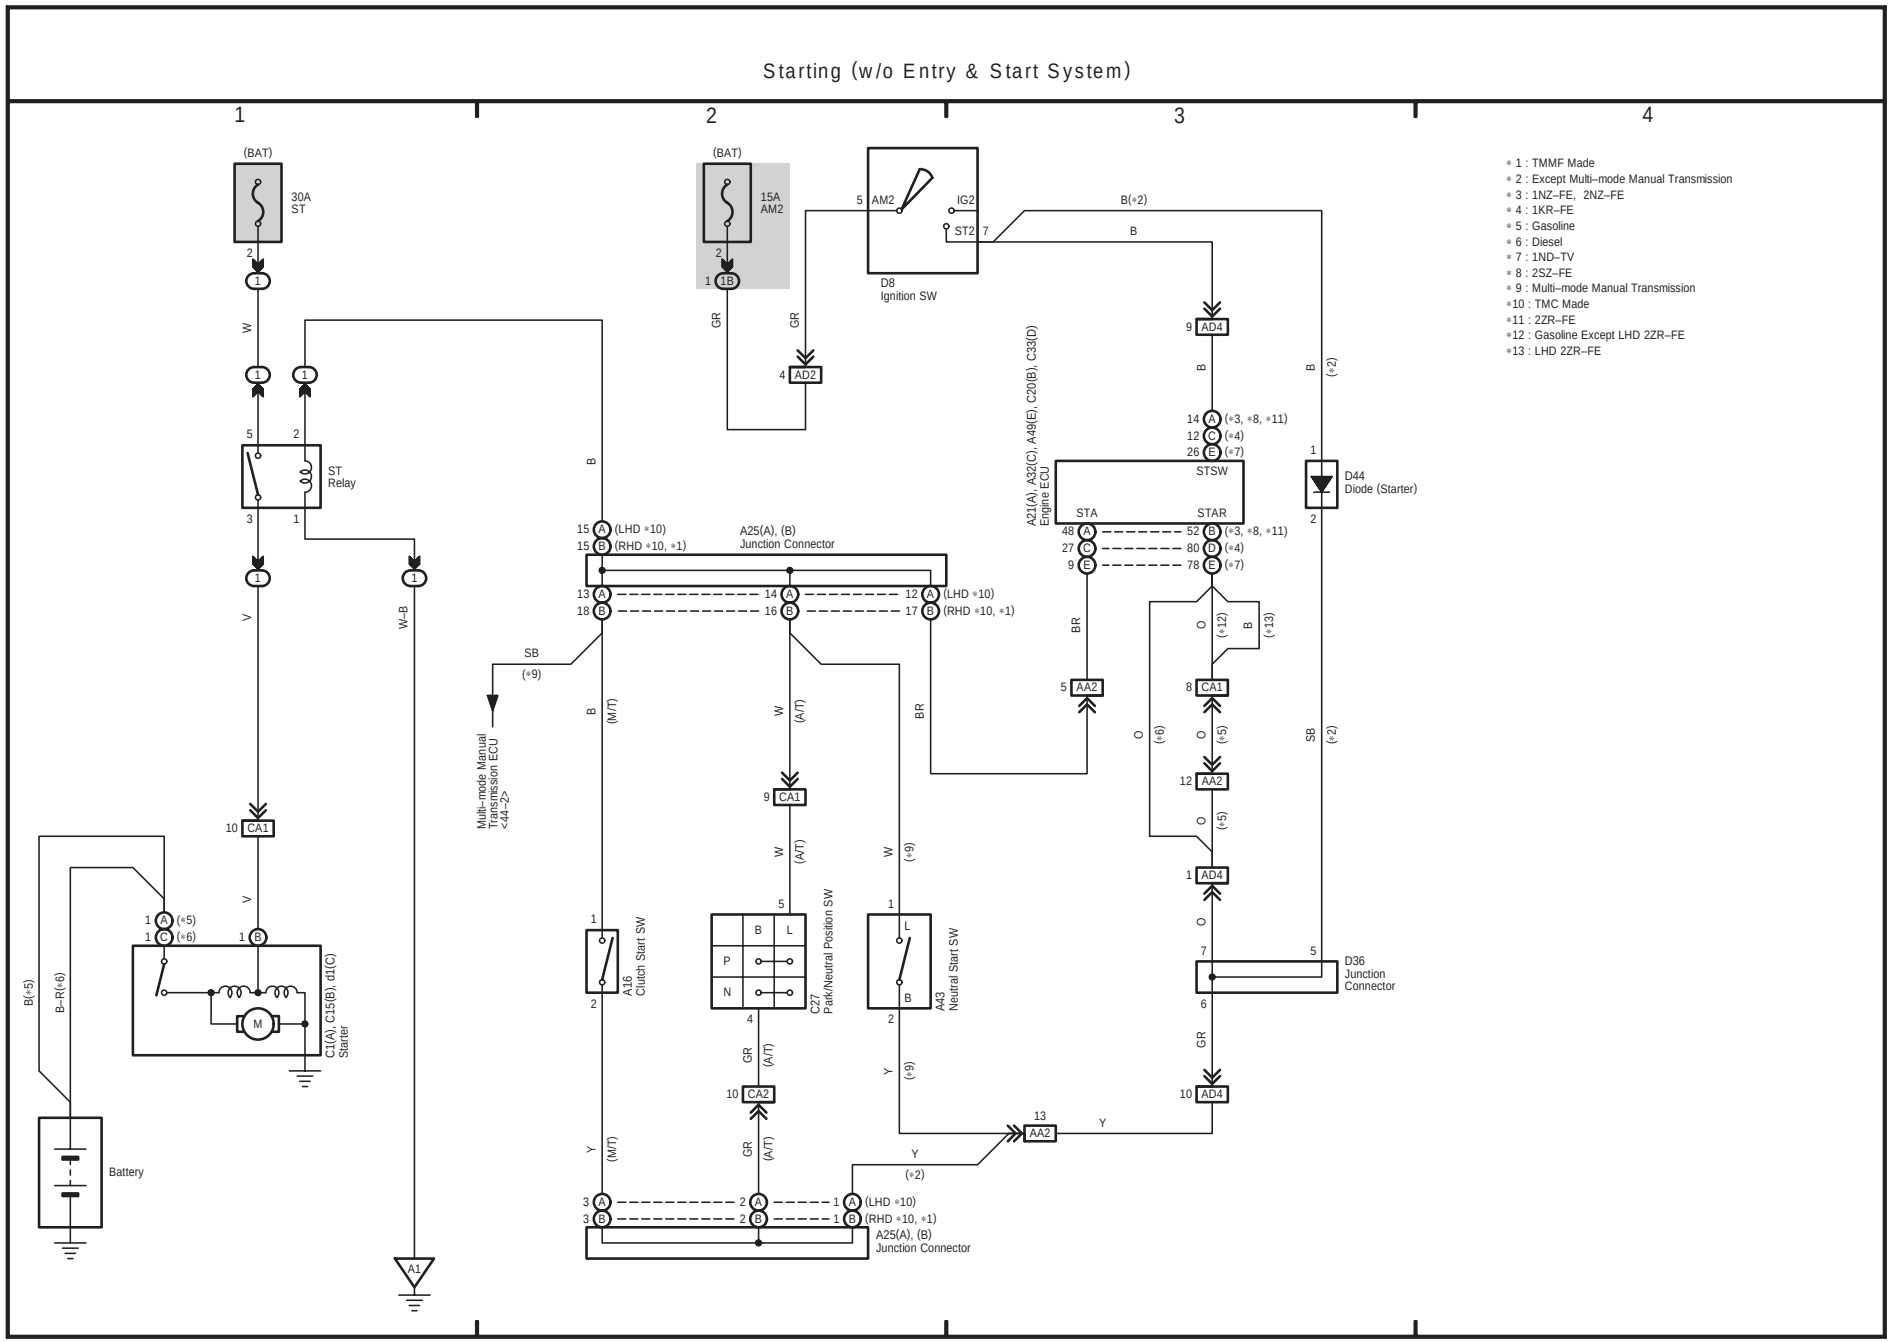

Starting (w/o Entry & Start System)
1
2
3
4
(BAT)
30A ST
15A AM2
ST Relay
D8 Ignition SW
AM2
IG2
ST2
B(*2)
B
AD4
AD2
1B
A21(A), A32(C), A49(E), C20(B), C33(D) Engine ECU
STSW
STA
STAR
D44 Diode (Starter)
A25(A), (B) Junction Connector
(LHD *10)
(RHD *10, *1)
(*3, *8, *11)
(*4)
(*7)
Multi–mode Manual Transmission ECU <44–2>
SB (*9)
(M/T)
(A/T)
BR
O
(*12)
B
(*13)
CA1
AA2
(*5)
(*6)
(*2)
A16 Clutch Start SW
C27 Park/Neutral Position SW
A43 Neutral Start SW
D36 Junction Connector
CA2
C1(A), C15(B), d1(C) Starter
Battery
B(*5)
B–R(*6)
W–B
A1
* 1 : TMMF Made
* 2 : Except Multi–mode Manual Transmission
* 3 : 1NZ–FE, 2NZ–FE
* 4 : 1KR–FE
* 5 : Gasoline
* 6 : Diesel
* 7 : 1ND–TV
* 8 : 2SZ–FE
* 9 : Multi–mode Manual Transmission
*10 : TMC Made
*11 : 2ZR–FE
*12 : Gasoline Except LHD 2ZR–FE
*13 : LHD 2ZR–FE