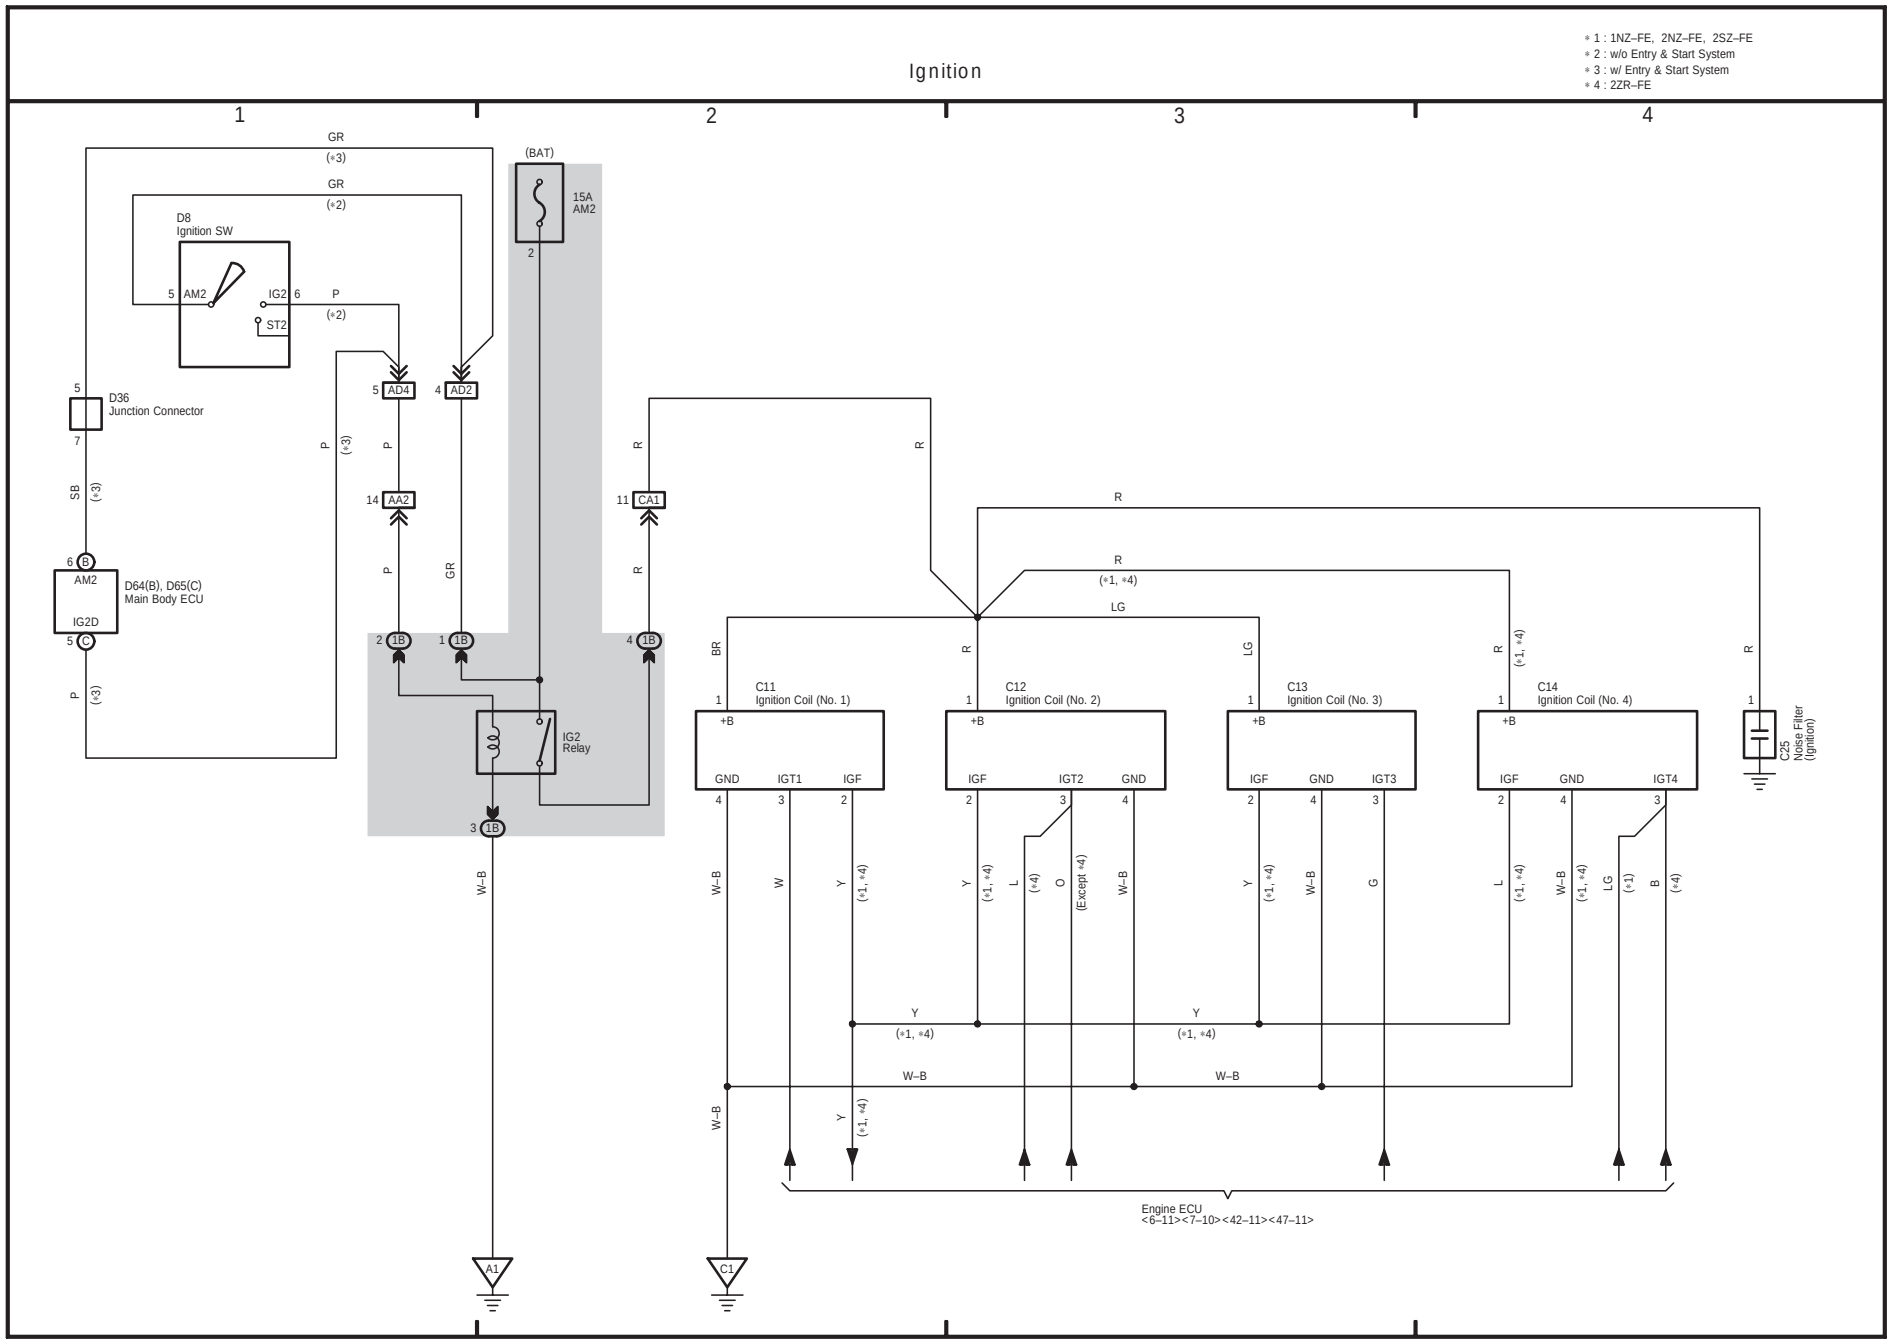

Ignition
1
2
3
4
* 1 : 1NZ–FE, 2NZ–FE, 2SZ–FE
* 2 : w/o Entry & Start System
* 3 : w/ Entry & Start System
* 4 : 2ZR–FE
(BAT)
15A
AM2
D8
Ignition SW
AM2
IG2
ST2
P
(*2)
GR
(*3)
GR
(*2)
D36
Junction Connector
SB
(*3)
D64(B), D65(C)
Main Body ECU
AM2
IG2D
AD4
AD2
AA2
CA1
IG2
Relay
1B
W–B
A1
C1
R
(*1, *4)
LG
BR
C11
Ignition Coil (No. 1)
C12
Ignition Coil (No. 2)
C13
Ignition Coil (No. 3)
C14
Ignition Coil (No. 4)
+B
GND
IGT1
IGT2
IGT3
IGT4
IGF
C25
Noise Filter
(Ignition)
W
Y
L
O
G
LG
B
(*1)
(*4)
(Except *4)
Engine ECU
<6–11><7–10><42–11><47–11>