


(Cont. next page)
Engine Control (1KR–FE)
7 YARIS
1
2
3
4
A
B
C
D
E
F
G
H
I
J
P
R
V
P
GR
SB
GR
B
V
B
C6
Fuel Injector
(No. 3)
C5
Fuel Injector
(No. 2)
C4
Fuel Injector
(No. 1)
BR
P
V
GR
V
SB
B
J5
Fuel Suction Pump and
Gage Assembly
Pump
M
W-B
J11
7.5A
IGN
(IG)
C/OPN
Relay
9 4B
8 4A
11 4B
5 4E
R
B
B
V
20A
EFI
(BAT)
2
EFI
Relay
7 1A
8 1A
5 1A
GR
B
V
P
B

(Cont. next page)

Engine Control (1KR–FE)

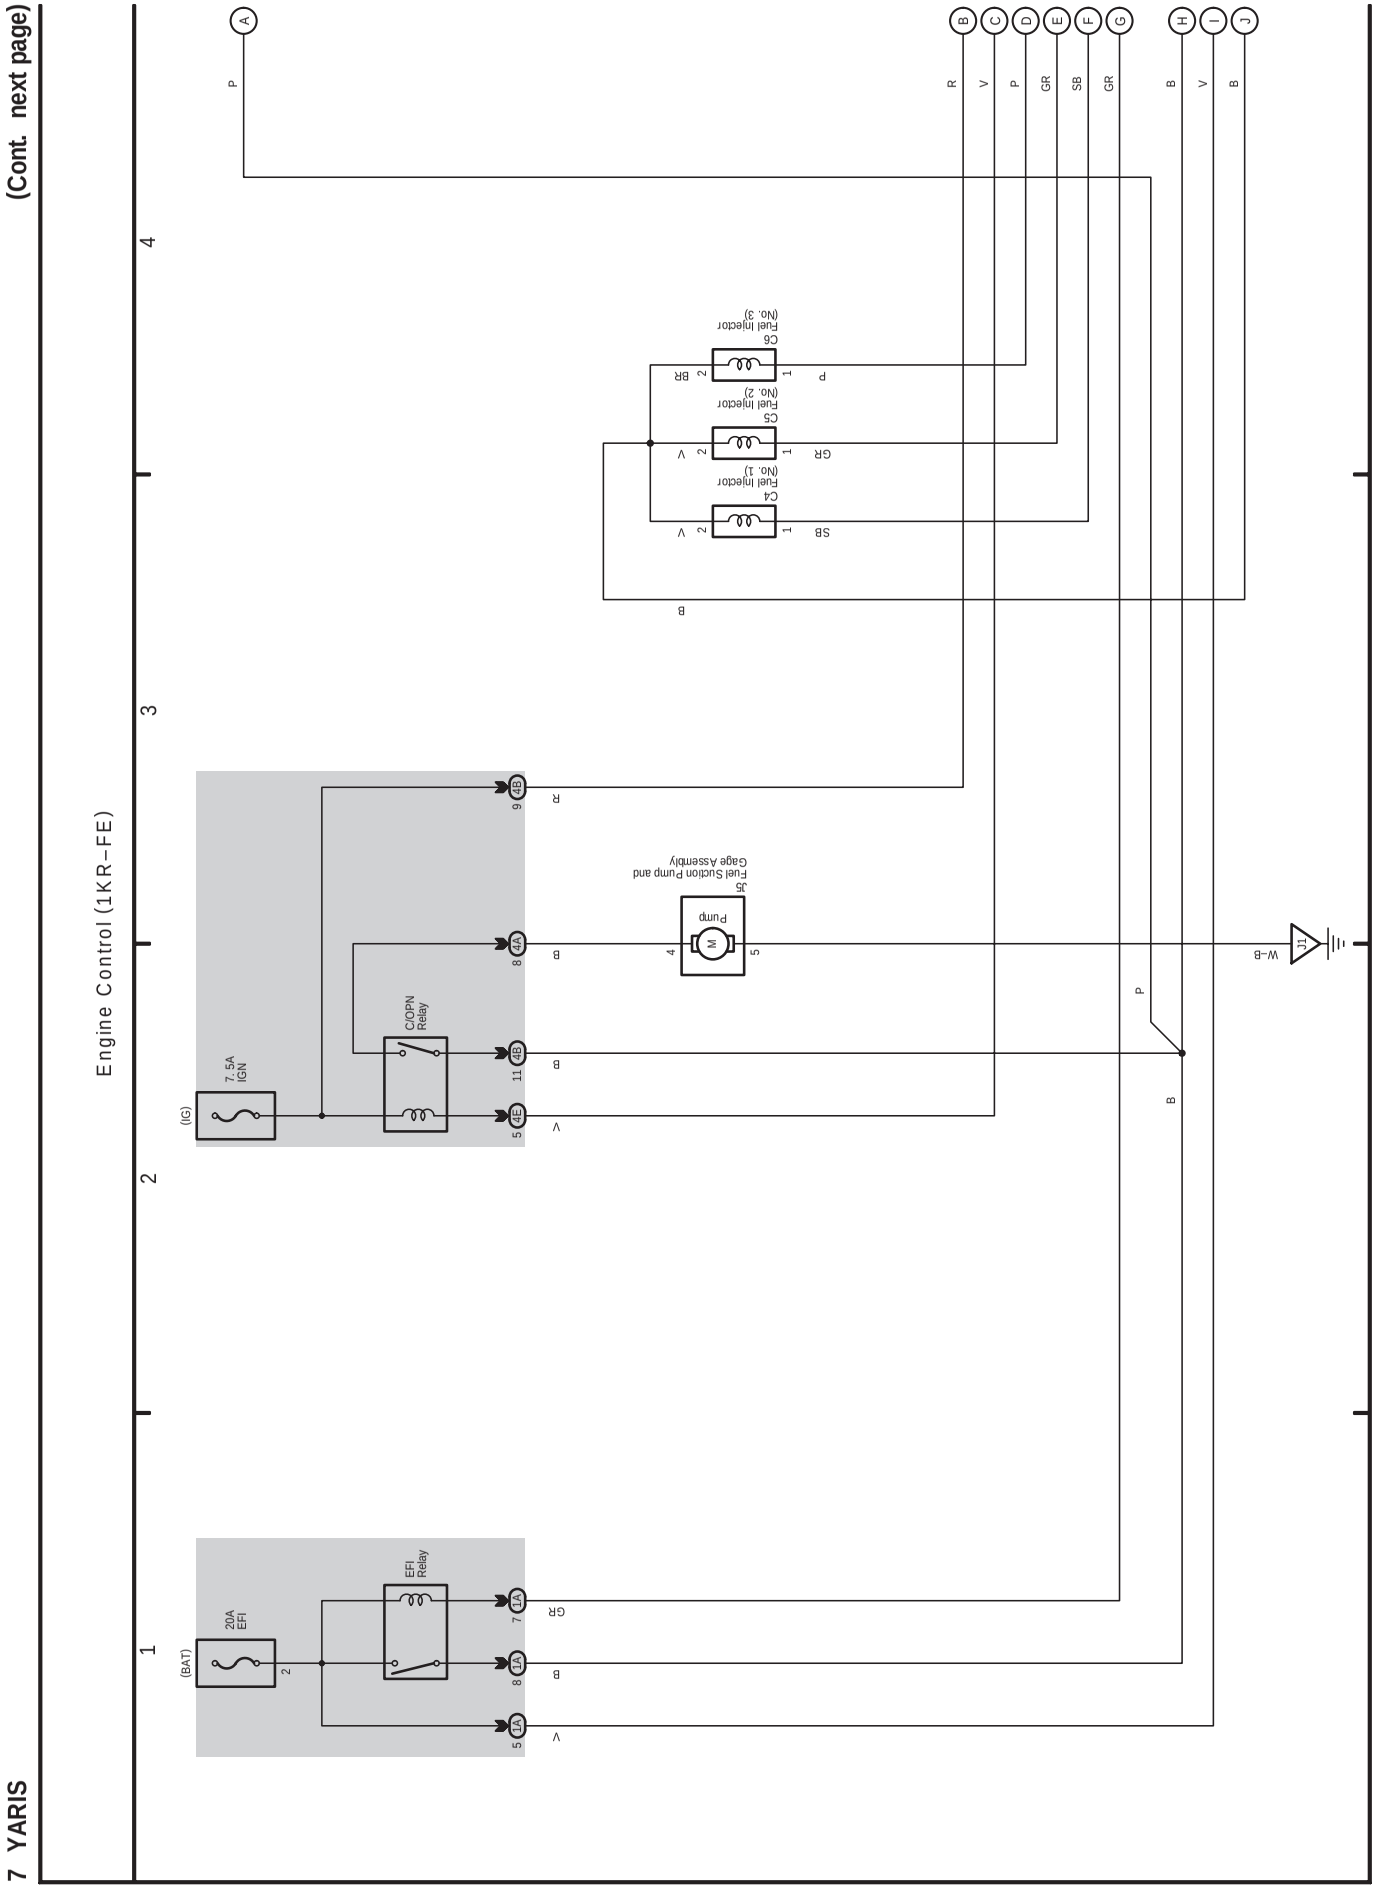



(Cont. next page)

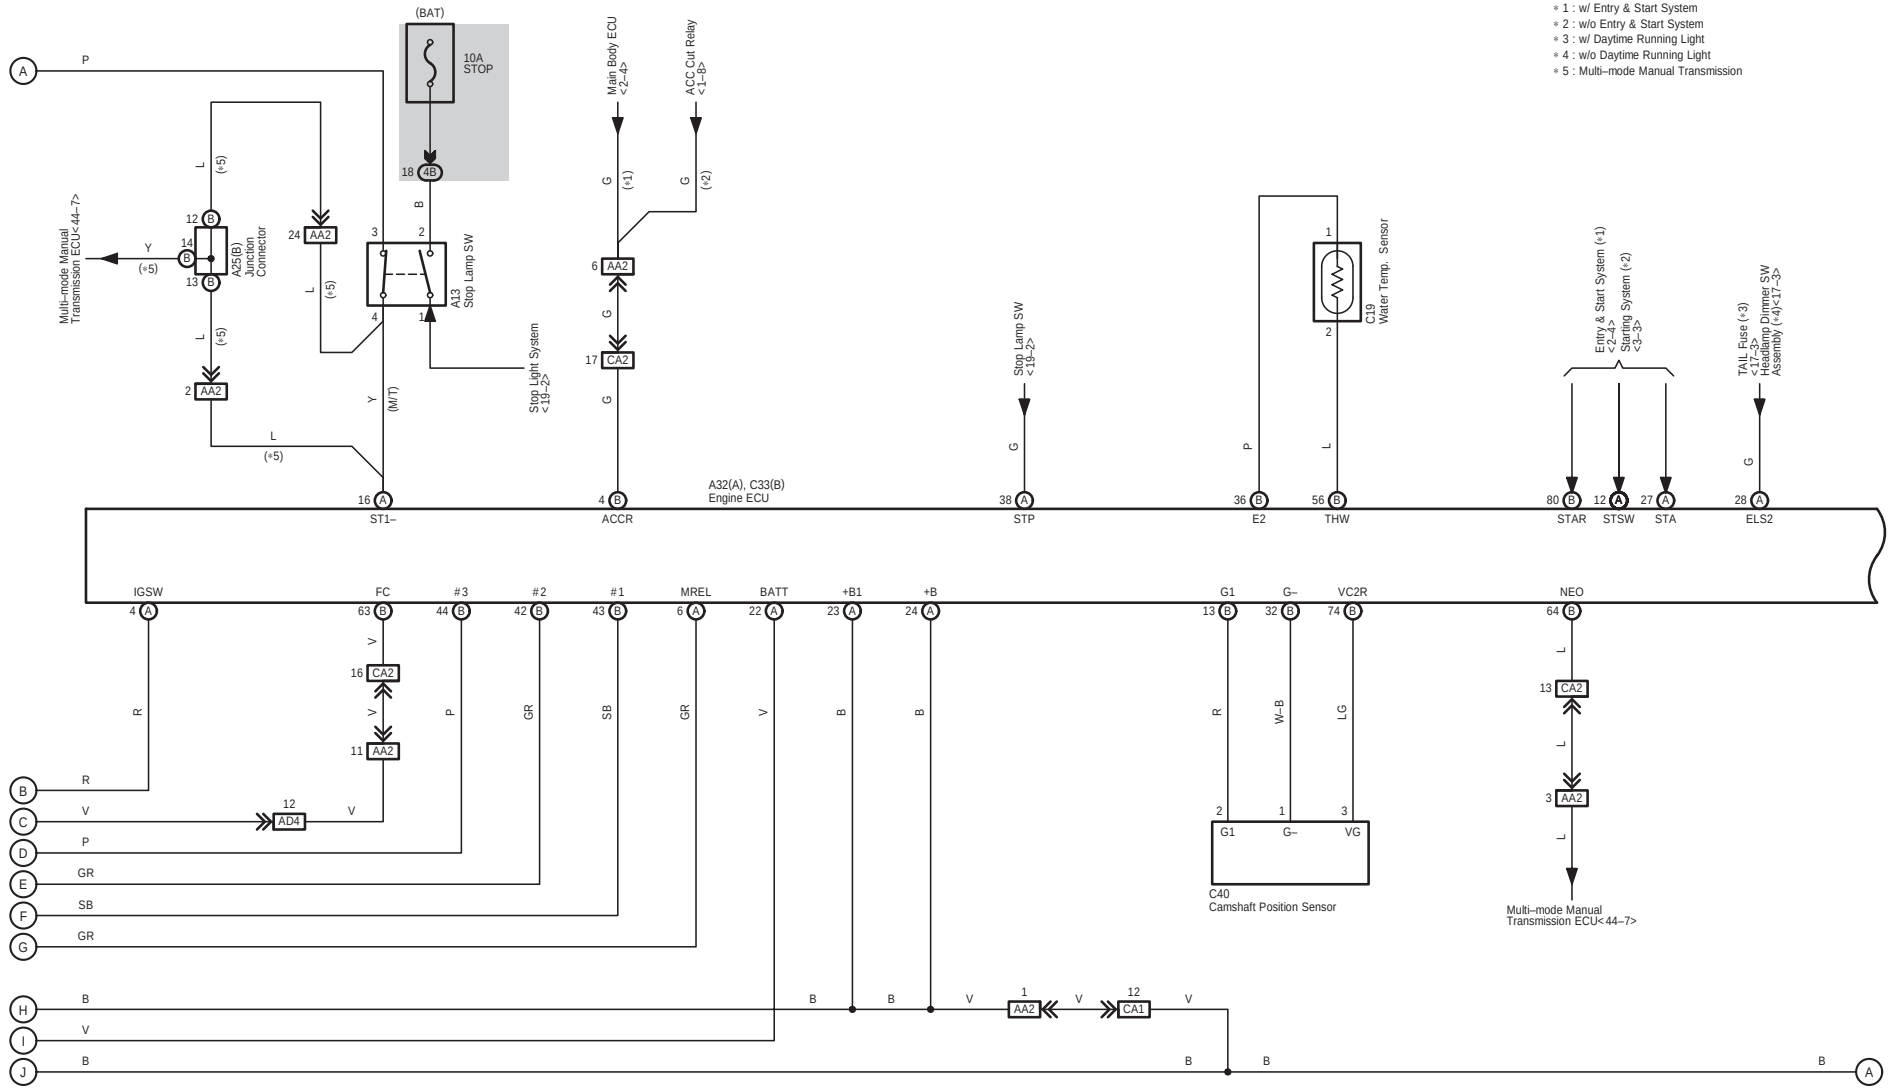



Engine Control (1KR–FE)

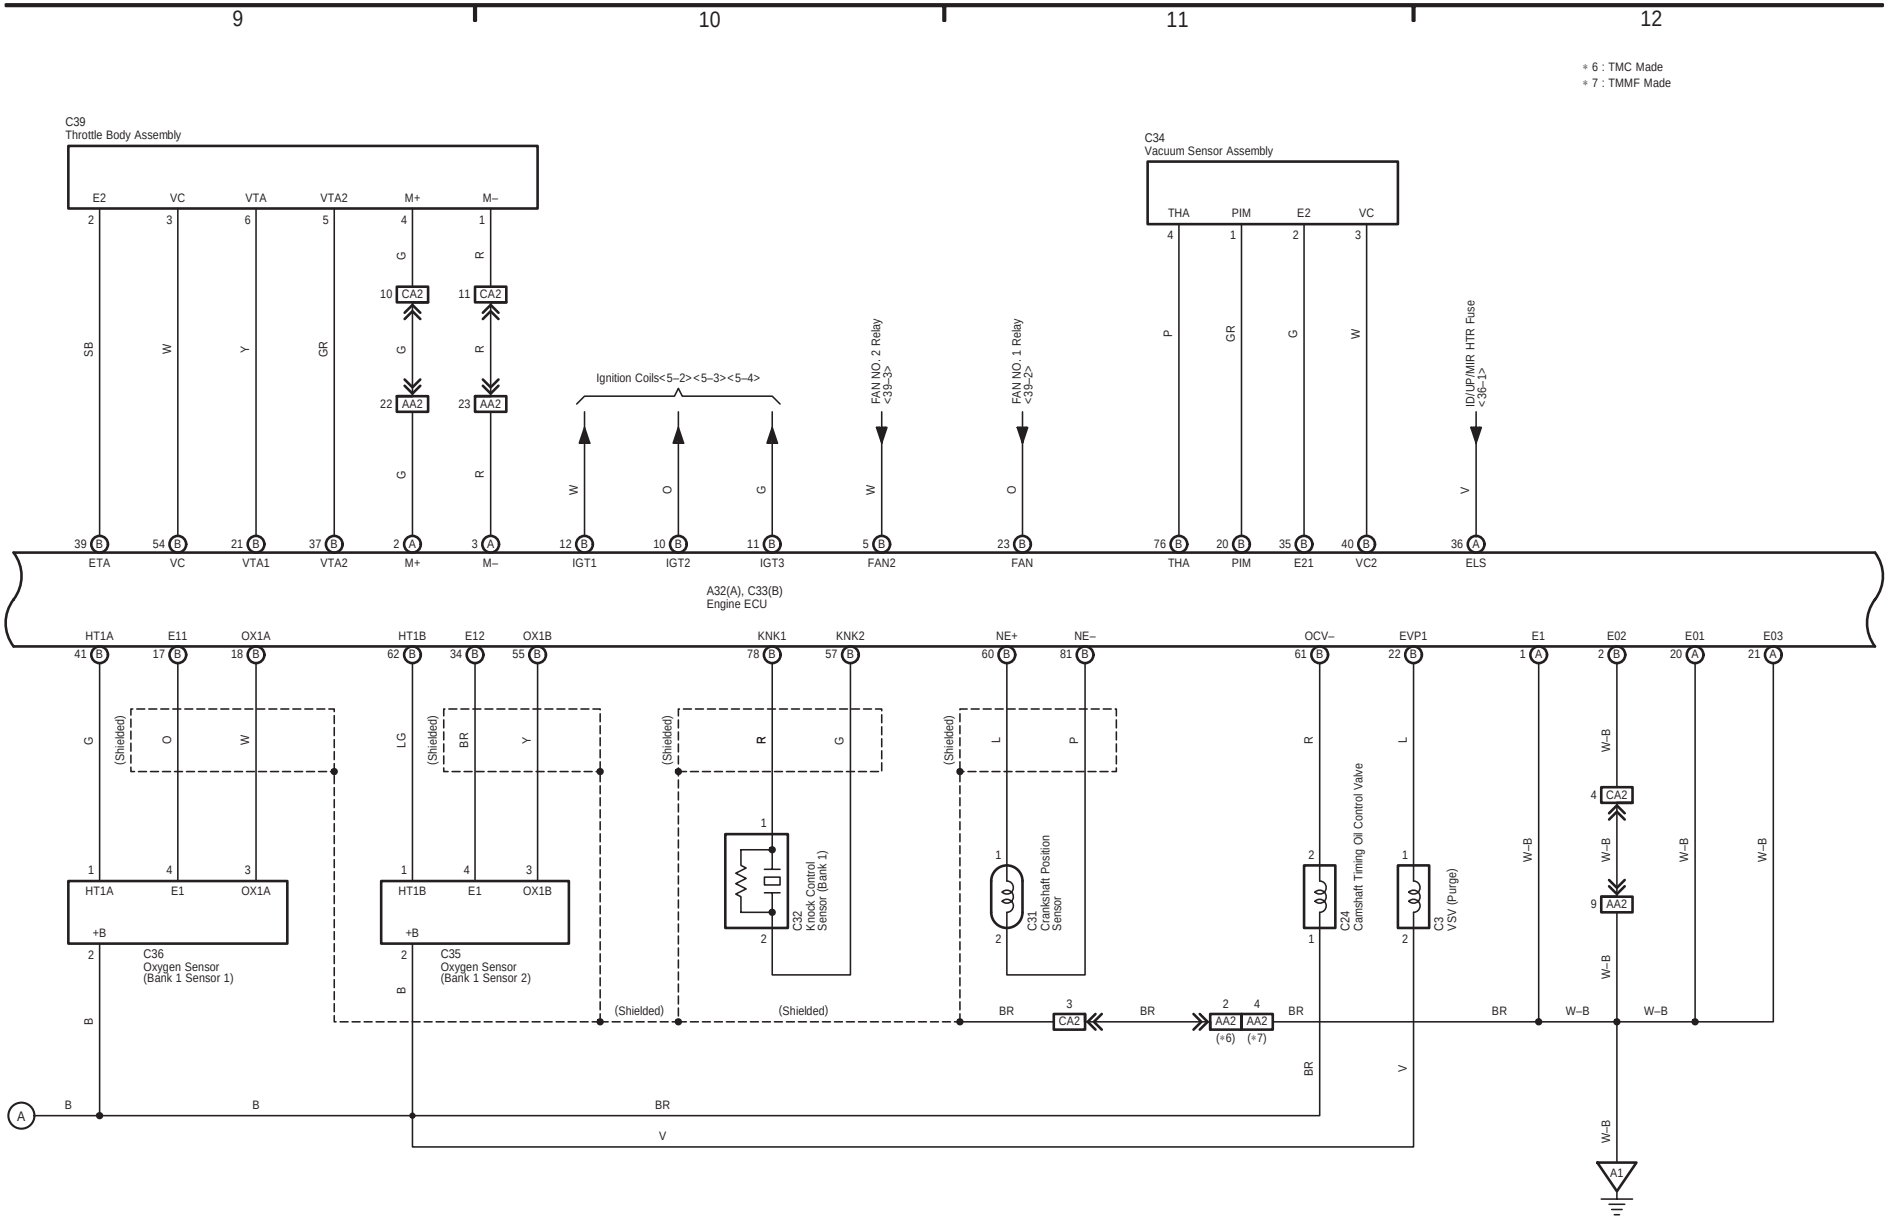

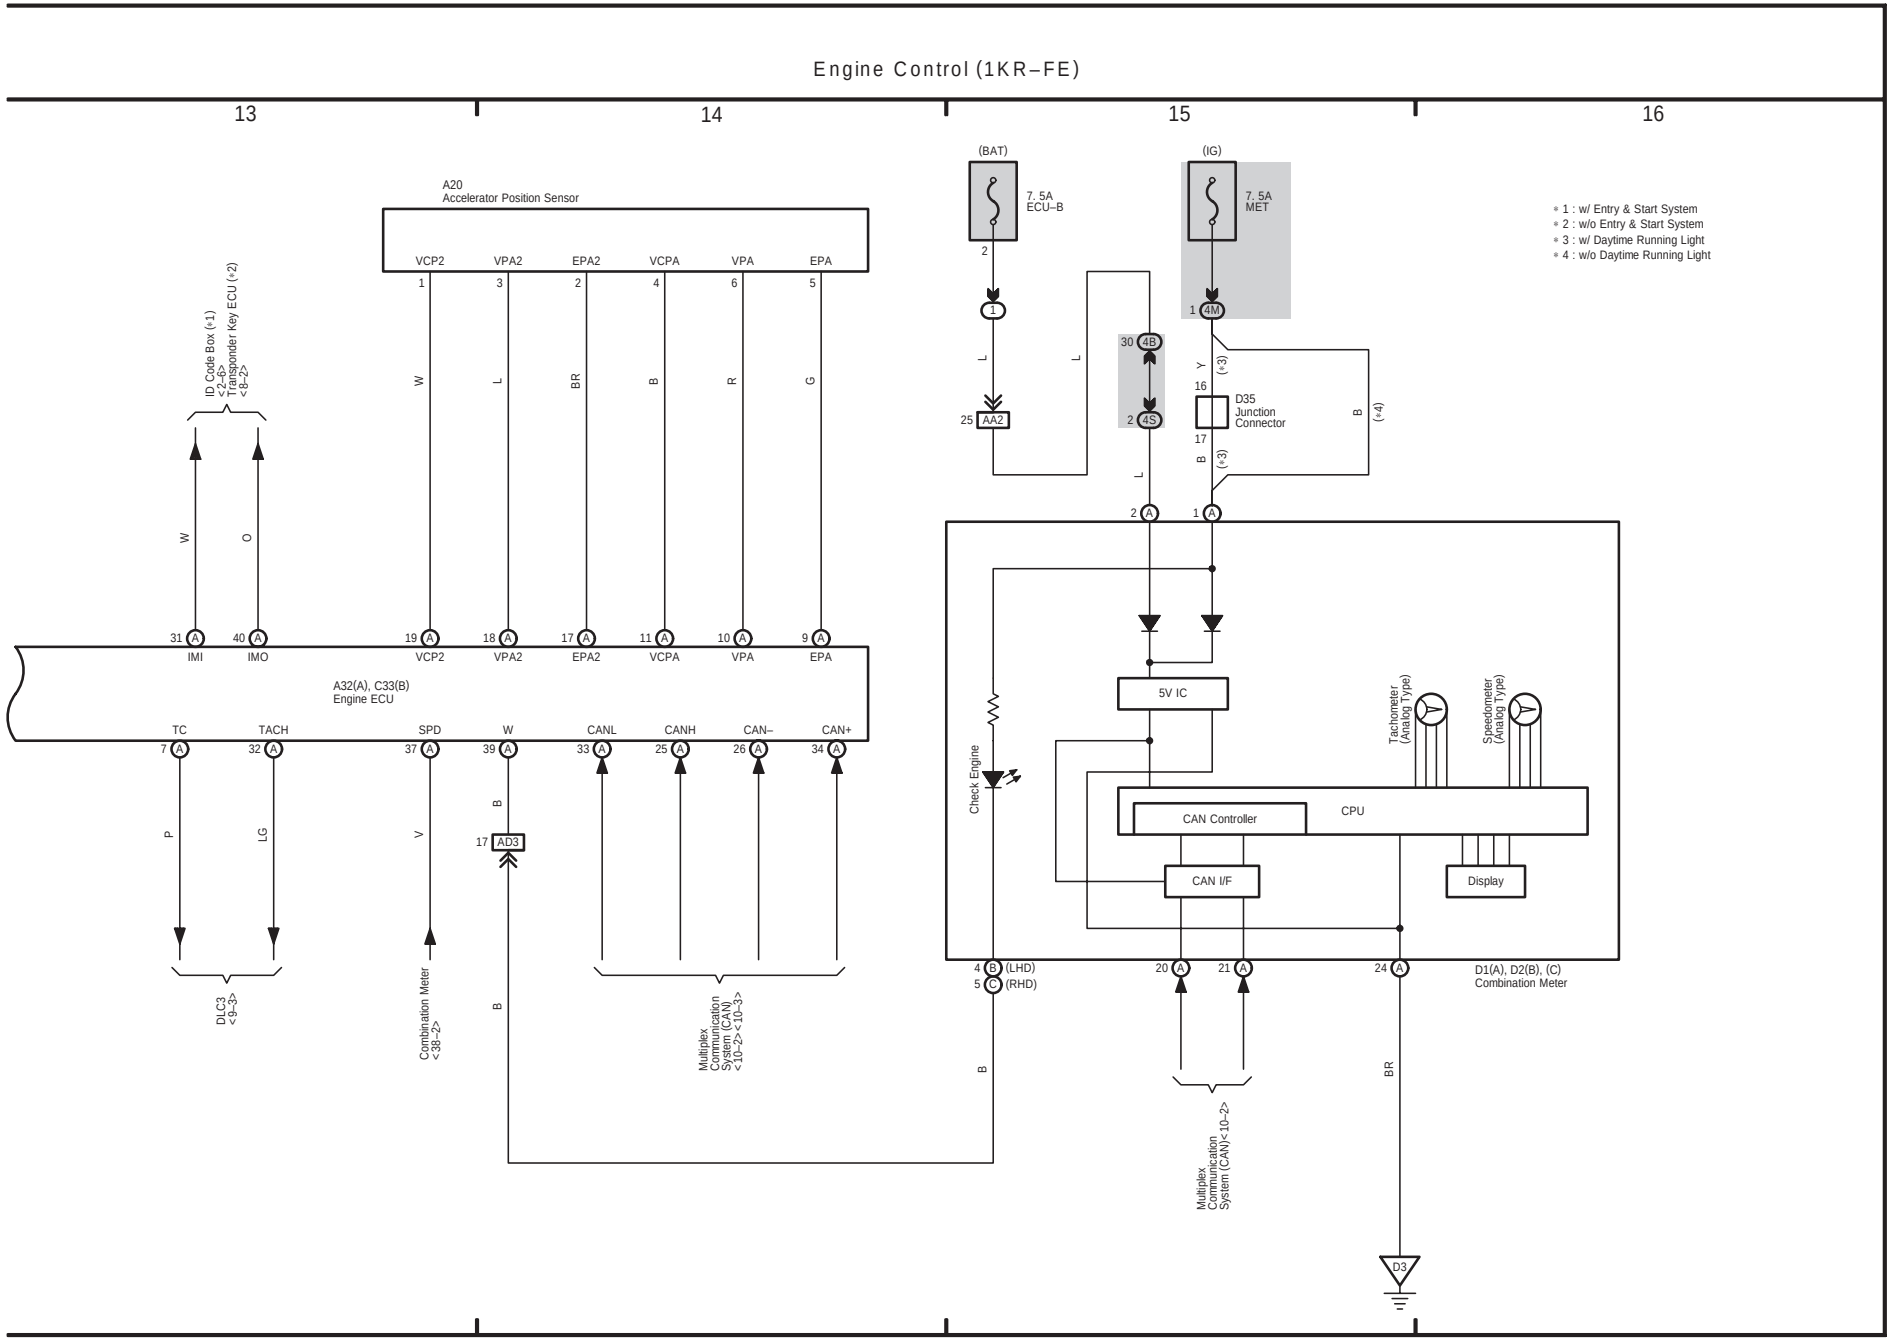
Engine Control (1KR–FE)
13
14
15
16
A20
Accelerator Position Sensor
VCP2
VPA2
EPA2
VCPA
VPA
EPA
ID Code Box (*1)
Key Reminder Transponder Key ECU (*2)
<8–2>
A32(A), C33(B)
Engine ECU
IMI
IMO
TC
TACH
SPD
W
CANL
CANH
CAN–
CAN+
DLC3
<9–3>
Combination Meter
<38–2>
Multiplex Communication System (CAN)
<10–2> <10–3>
(BAT)
(IG)
7. 5A
ECU–B
7. 5A
MET
D35
Junction
Connector
AA2
AD3
4B
4S
4M
5V IC
Check Engine
CPU
CAN Controller
CAN I/F
Display
Tachometer
(Analog Type)
Speedometer
(Analog Type)
(LHD)
(RHD)
D1(A), D2(B), (C)
Combination Meter
Multiplex
Communication
System (CAN)<10–2>
D3
*1 : w/ Entry & Start System
*2 : w/o Entry & Start System
*3 : w/ Daytime Running Light
*4 : w/o Daytime Running Light