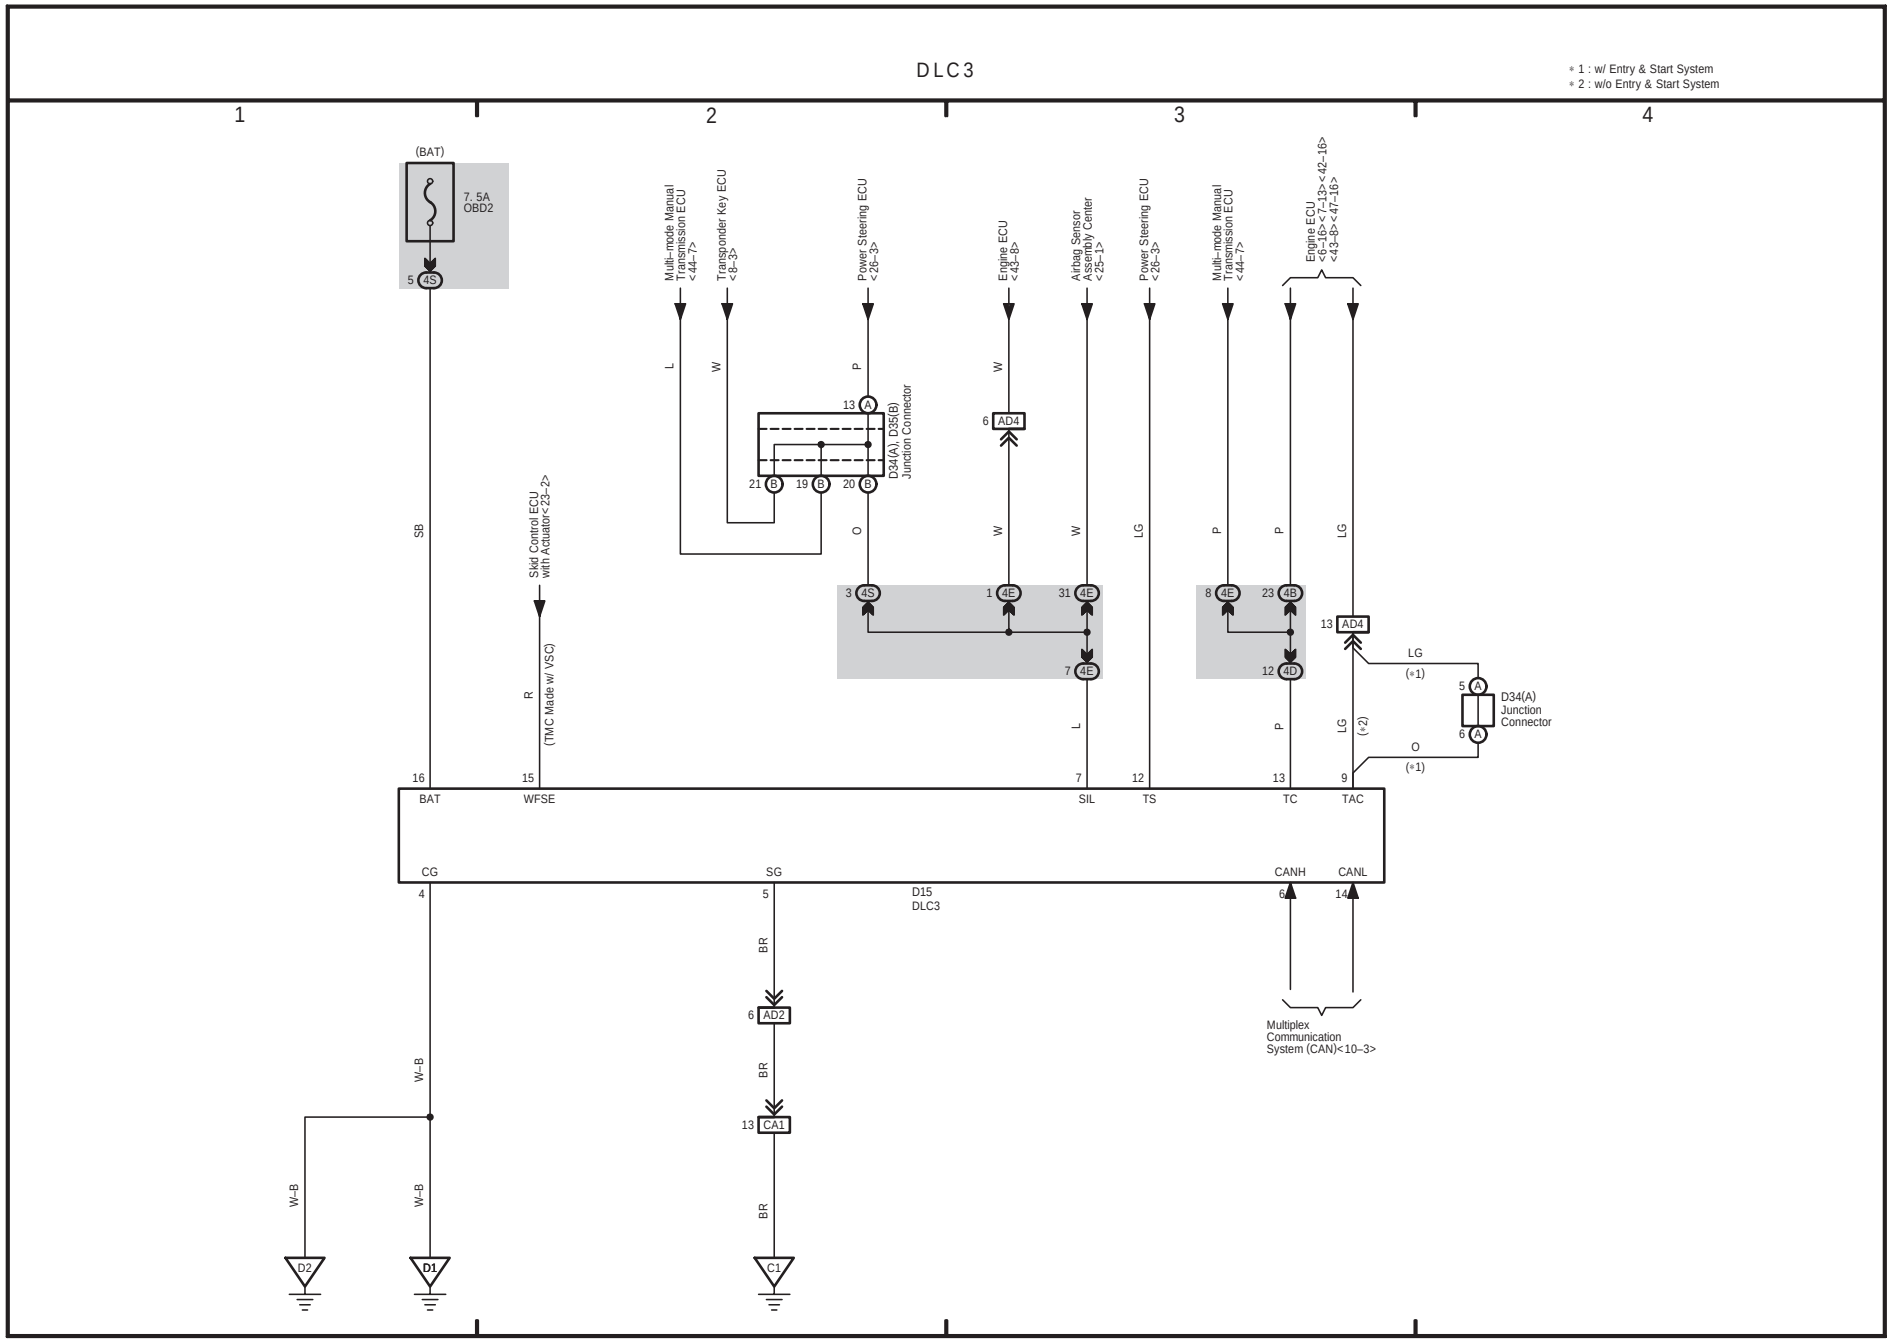

DLC3
* 1 : w/ Entry & Start System
* 2 : w/o Entry & Start System
1
2
3
4
(BAT)
7. 5A
OBD2
5 4S
Multi-mode Manual Transmission ECU <44–7>
Transponder Key ECU <8–3>
Power Steering ECU <26–3>
Engine ECU <43–8>
Airbag Sensor Assembly Center <25–1>
Power Steering ECU <26–3>
Multi-mode Manual Transmission ECU <44–7>
Engine ECU <6–16><7–13><42–16> <43–8><47–16>
L
W
P
W
13 A
6 AD4
D34(A), D35(B) Junction Connector
21 B
19 B
20 B
SB
O
W
W
LG
P
P
LG
Skid Control ECU with Actuator<23–2>
R
(TMC Made w/ VSC)
3 4S
1 4E
31 4E
7 4E
8 4E
23 4B
12 4D
13 AD4
LG
(*1)
5 A
D34(A) Junction Connector
6 A
O
(*1)
L
P
LG
(*2)
16 BAT
15 WFSE
7 SIL
12 TS
13 TC
9 TAC
CG
SG
CANH
CANL
4
5
D15
DLC3
6
14
BR
6 AD2
BR
13 CA1
BR
Multiplex Communication System (CAN)<10–3>
W–B
W–B
W–B
D2
D1
C1