

F RELAY LOCATIONS

① : Engine Room R/B ⬭ : Engine Room J/B	Engine Compartment Left (See Page 20, 21)

* 1:H-LP LH/H-LP LO LH
* 2:H-LP RH/H-LP LO RH
* 3:30A HTR SUB1 (for High Current)
* 4:30A RDI (for High Current)
* 5:40A HTR (for High Current)
* 6:50A ABS1/VSC1 (for High Current)
* 7:50A EPS (for High Current)
* 8:40A HTR SUB2 (for High Current)
* 9:FAN NO.2 Relay
* 10:ST Relay
* 11:1KR-FE
* 12:1NZ-FE, 2NZ-FE, 2SZ-FE, 2ZR-FE
* 14:1ND-TV
* 15:50A AMT (for High Current)
* 16:30A H-LP CLN/PWR HTR (for High Current)
* 17:10A EFI2 (Gasoline)
  10A ECD2 (Diesel)

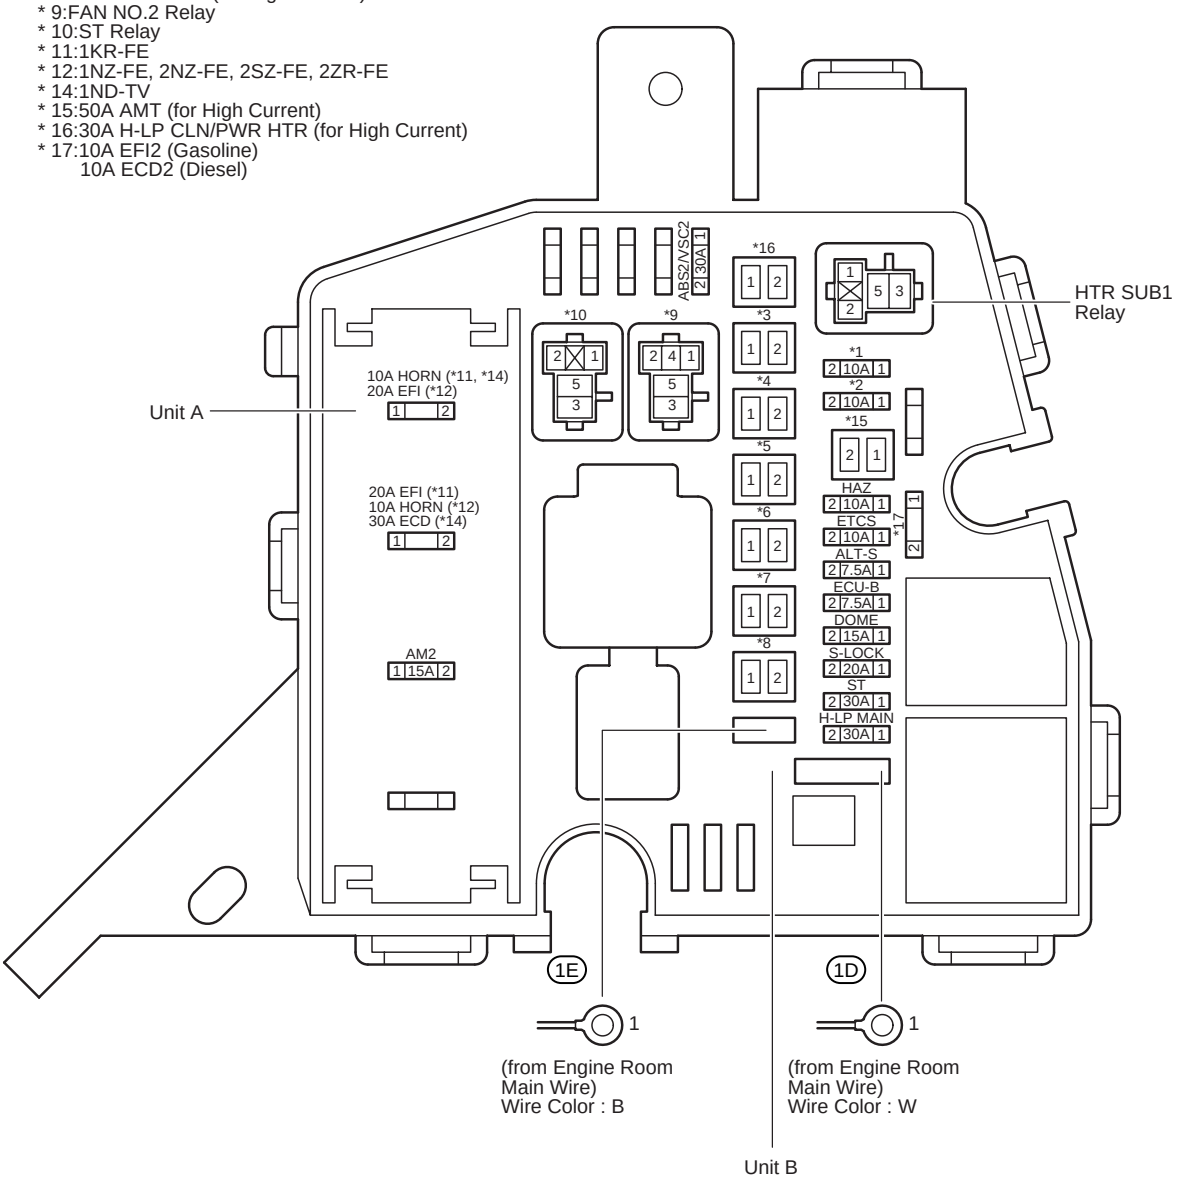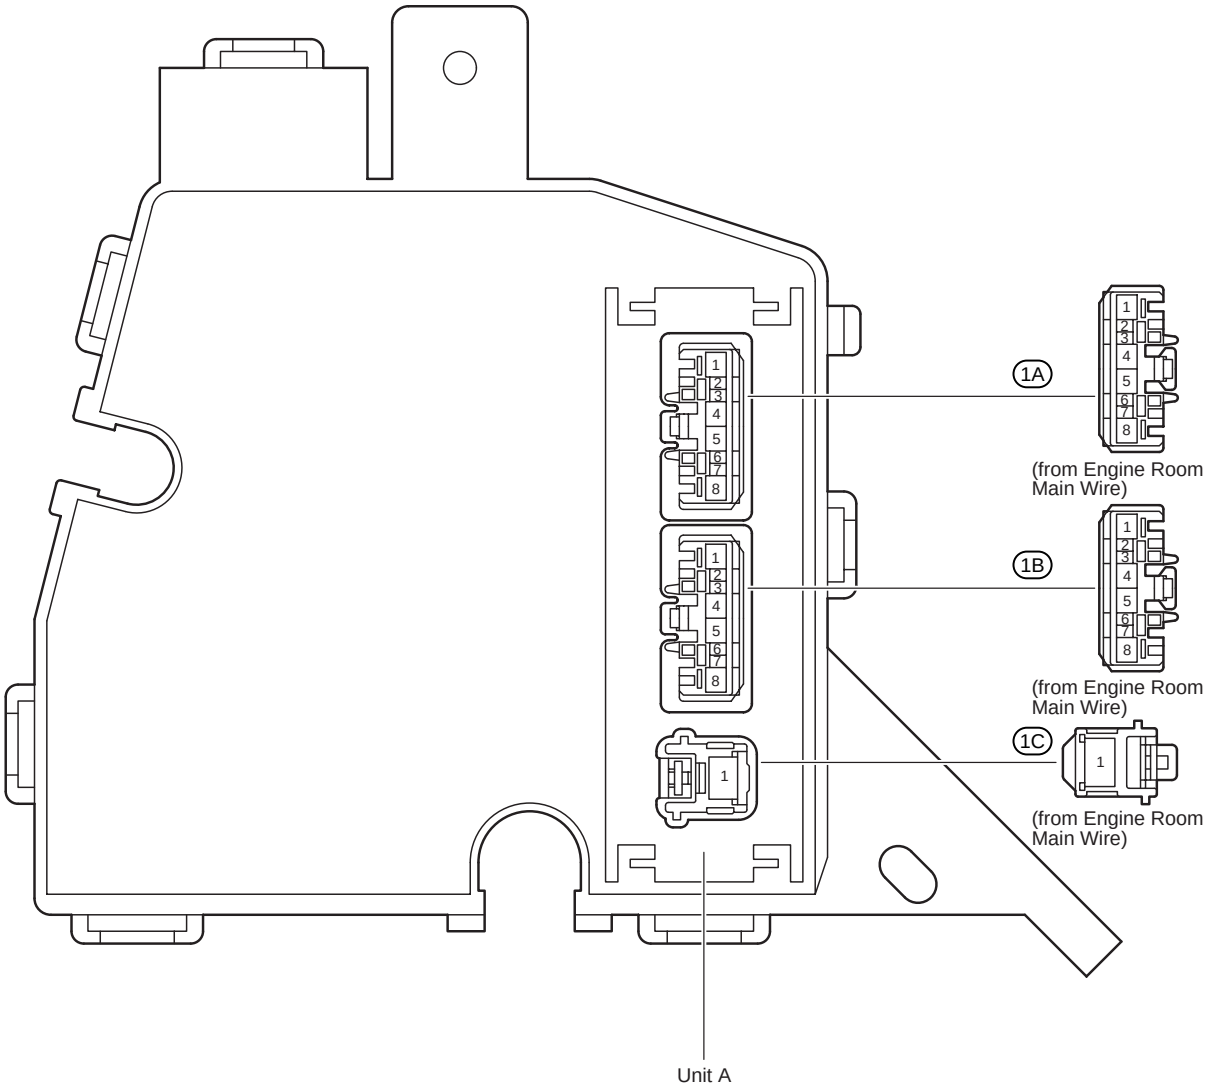


1A
(from Engine Room Main Wire)
1B
(from Engine Room Main Wire)
1C
(from Engine Room Main Wire)
Unit A