

F RELAY LOCATIONS

Fusible Link Block	Engine Compartment Left (See Page 20)

(Diesel)

* 1:Multi-mode Manual Transmission
* 2:Except Multi-mode Manual Transmission

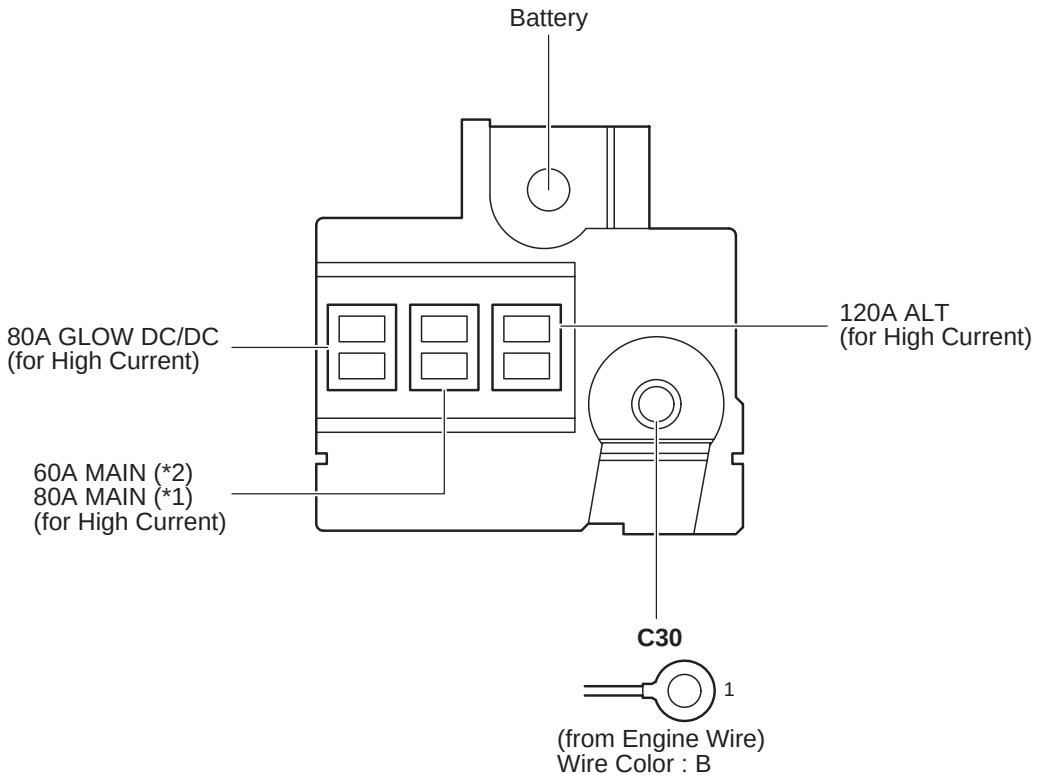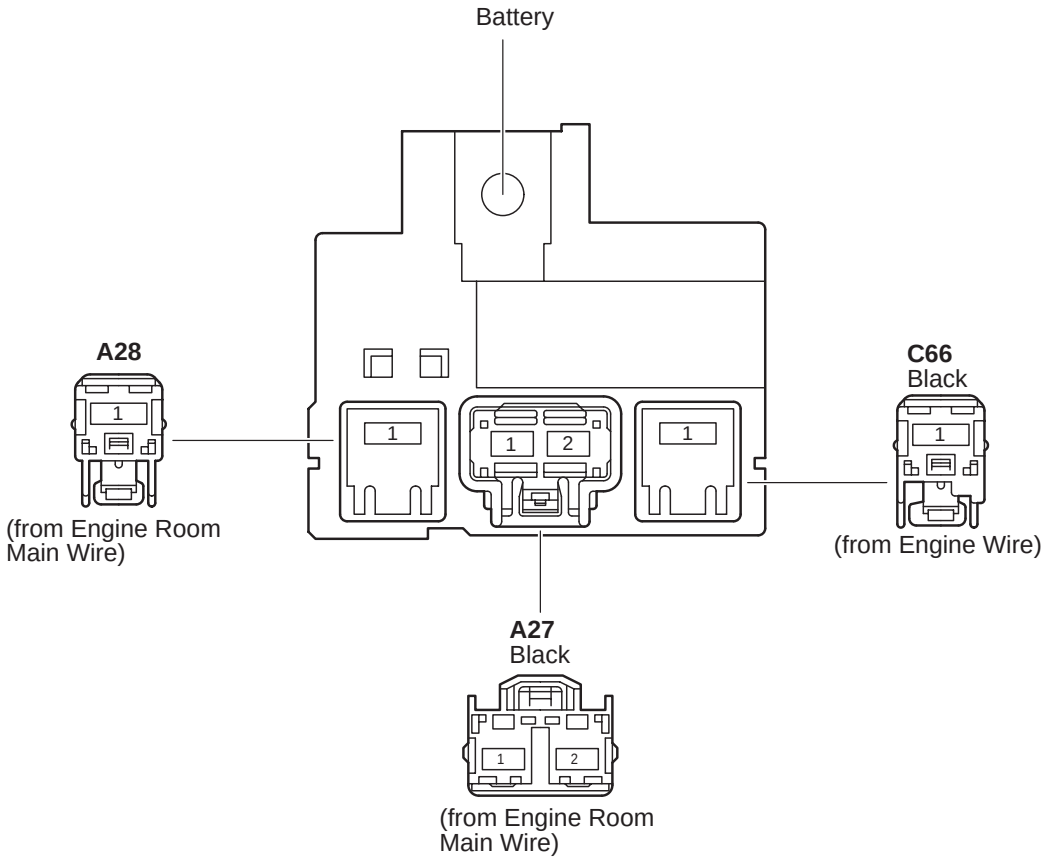


Battery
A28
1
(from Engine Room
Main Wire)
1
1
2
1
C66
Black
1
(from Engine Wire)
A27
Black
1
2
(from Engine Room
Main Wire)