


C33
C24
C4
C39
C5
C34
C3
C30
C11
C25
C36
C32
C31
C10
C9
C8
C6
e3
e2
e1
C13
C19
C22
C16
C12
C1
C15
C40
C35


C 1 Starter
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 15 Starter
C 16 Engine Oil Pressure SW
C 19 Water Temp. Sensor
C 22 Back-Up Lamp SW
C 24 Camshaft Timing Oil Control Valve
C 25 Noise Filter (Ignition)
C 30 Fusible Link Block
C 31 Crankshaft Position Sensor
C 32 Knock Control Sensor (Bank 1)
C 33 Engine ECU
C 34 Vacuum Sensor Assembly
C 35 Oxygen Sensor (Bank 1 Sensor 2)
C 36 Oxygen Sensor (Bank 1 Sensor 1)
C 39 Throttle Body Assembly
C 40 Camshaft Position Sensor

e 1 Clutch Actuator
e 2 Shift Actuator
e 3 Select Actuator


C 1

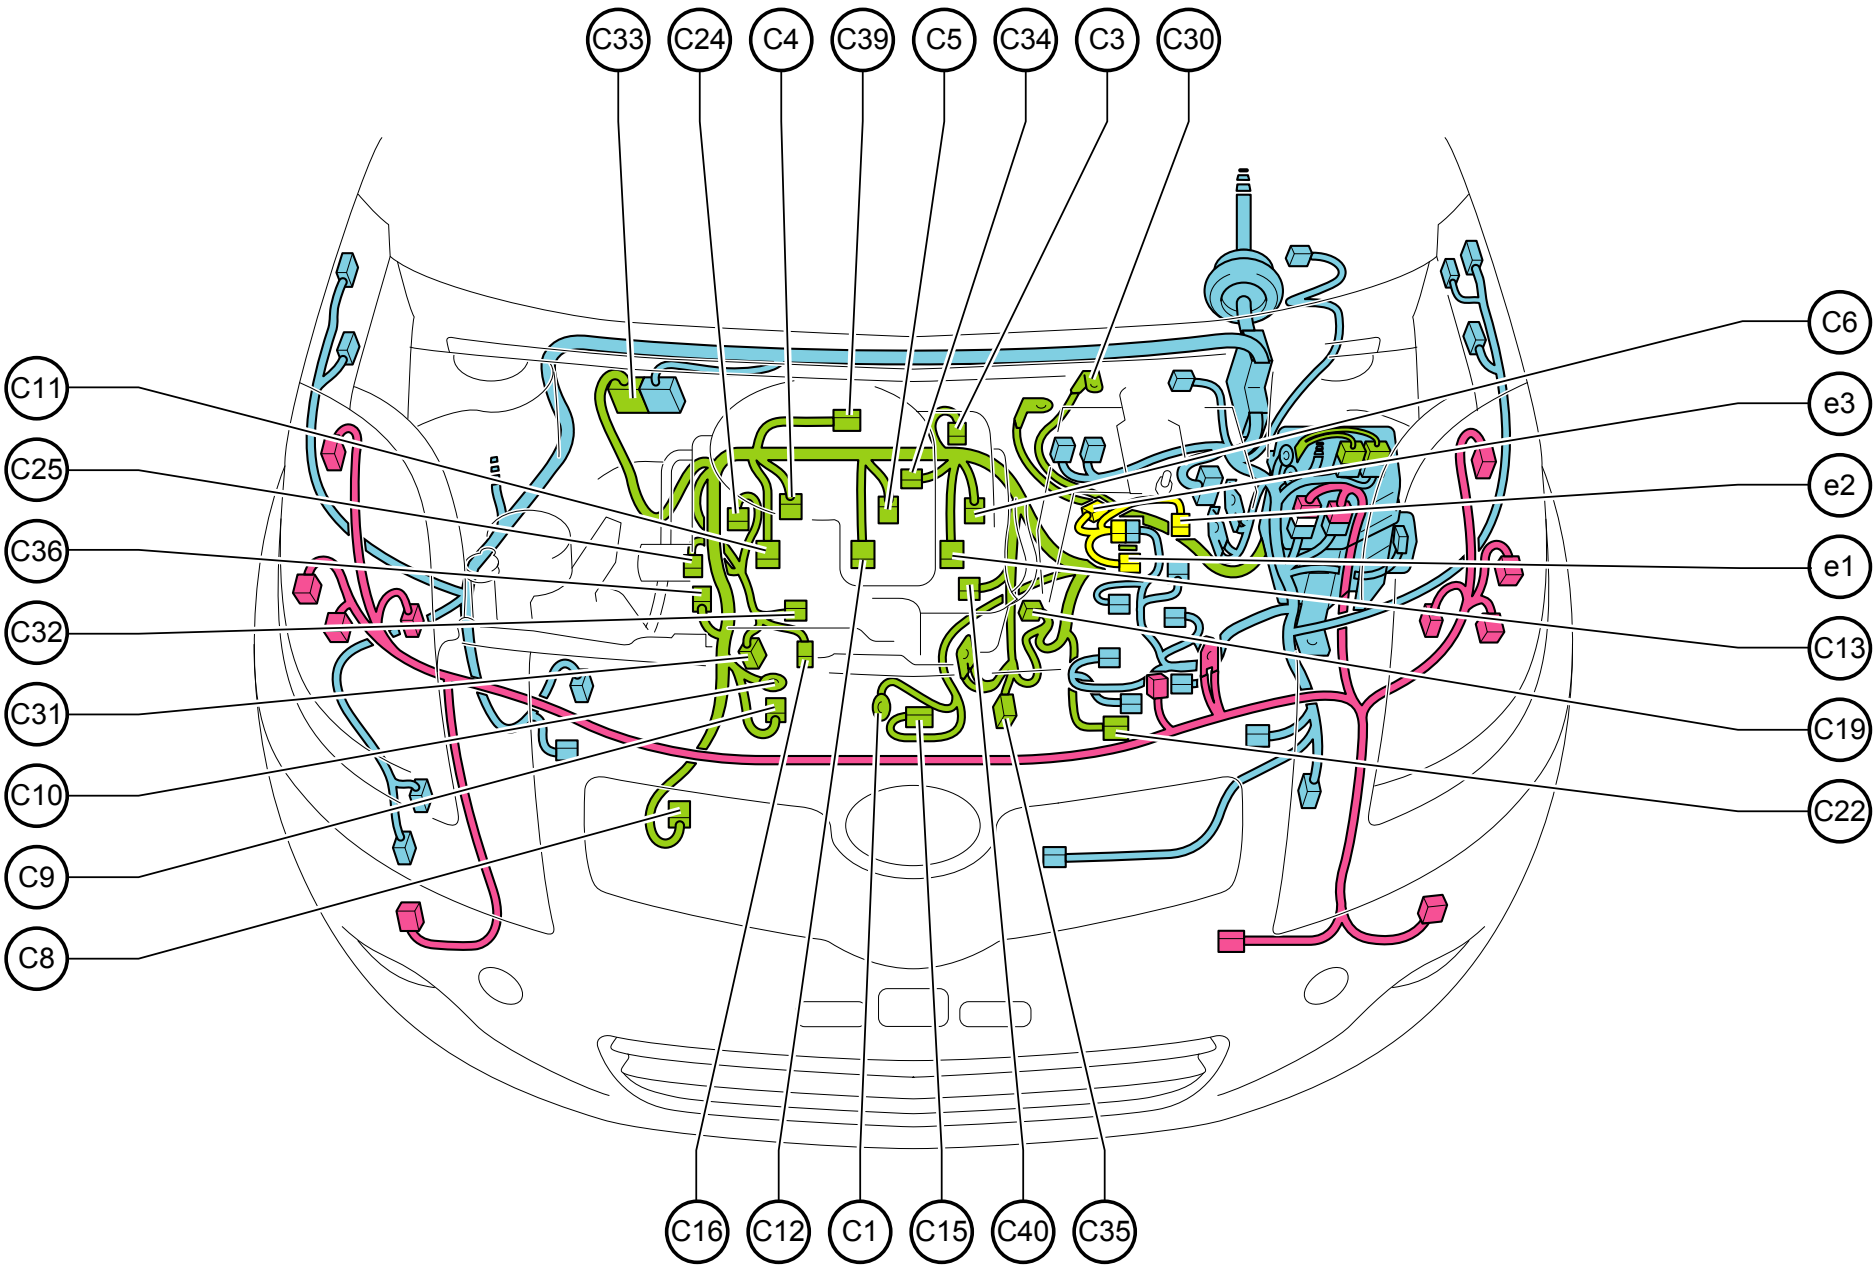


C 3
Blue

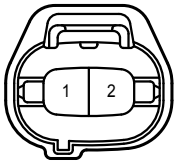


C 4
Black




C 5
Gray



C 6
Black




C 8
Gray

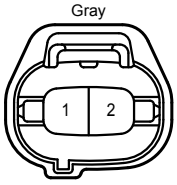

C 9
Black




C 10



(Except 2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 15
Black




C 16
Gray



C 19
Black



C 22
Gray

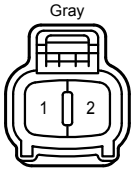


C 24
Black



C 25
Gray



C 30




C 31
Black




C 32
Black



C 33
Black

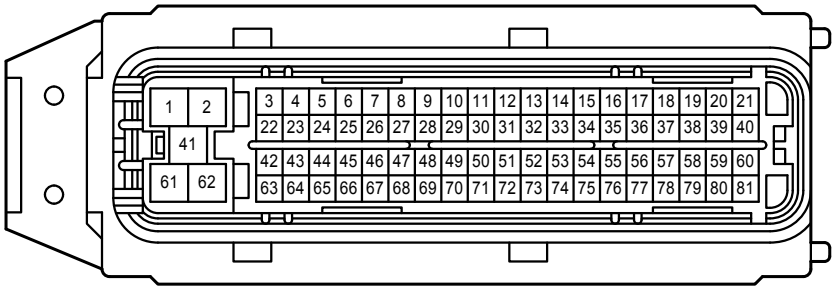

C 34
Black




C 35
Dark Gray




C 36
Dark Gray



C 39
Black

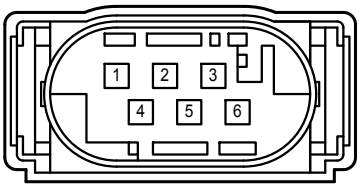

C 40
Black

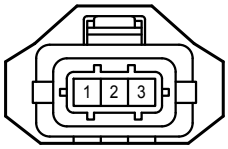

e 1
Black



e 2
Black



e 3
Black

