


C4
C11
C20
C5
C12
C13
C6
C14
C7
C30
C25
P1
C24
C9
C10
C8
C2
C37
C36
C26
C3
C18
C23
C22
C16
C1
C15
C17
C19
C29
C27
C28


C 1 Starter
C 2 Crankshaft Position Sensor
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 18 Camshaft Position Sensor
C 19 Water Temp. Sensor
C 20 Engine ECU
C 22 Back-Up Lamp SW
C 23 Speed Sensor
C 24 Camshaft Timing Oil Control Valve
C 25 Noise Filter (Ignition)
C 26 Air Flow Meter
C 27 Park/Neutral Position SW
C 28 ECT Solenoid
C 29 Speed Sensor (Turbine)
C 30 Fusible Link Block
C 36 Oxygen Sensor (Bank 1 Sensor 1)
C 37 Variable Resistor

P 1 Knock Control Sensor (Bank 1)


C 1

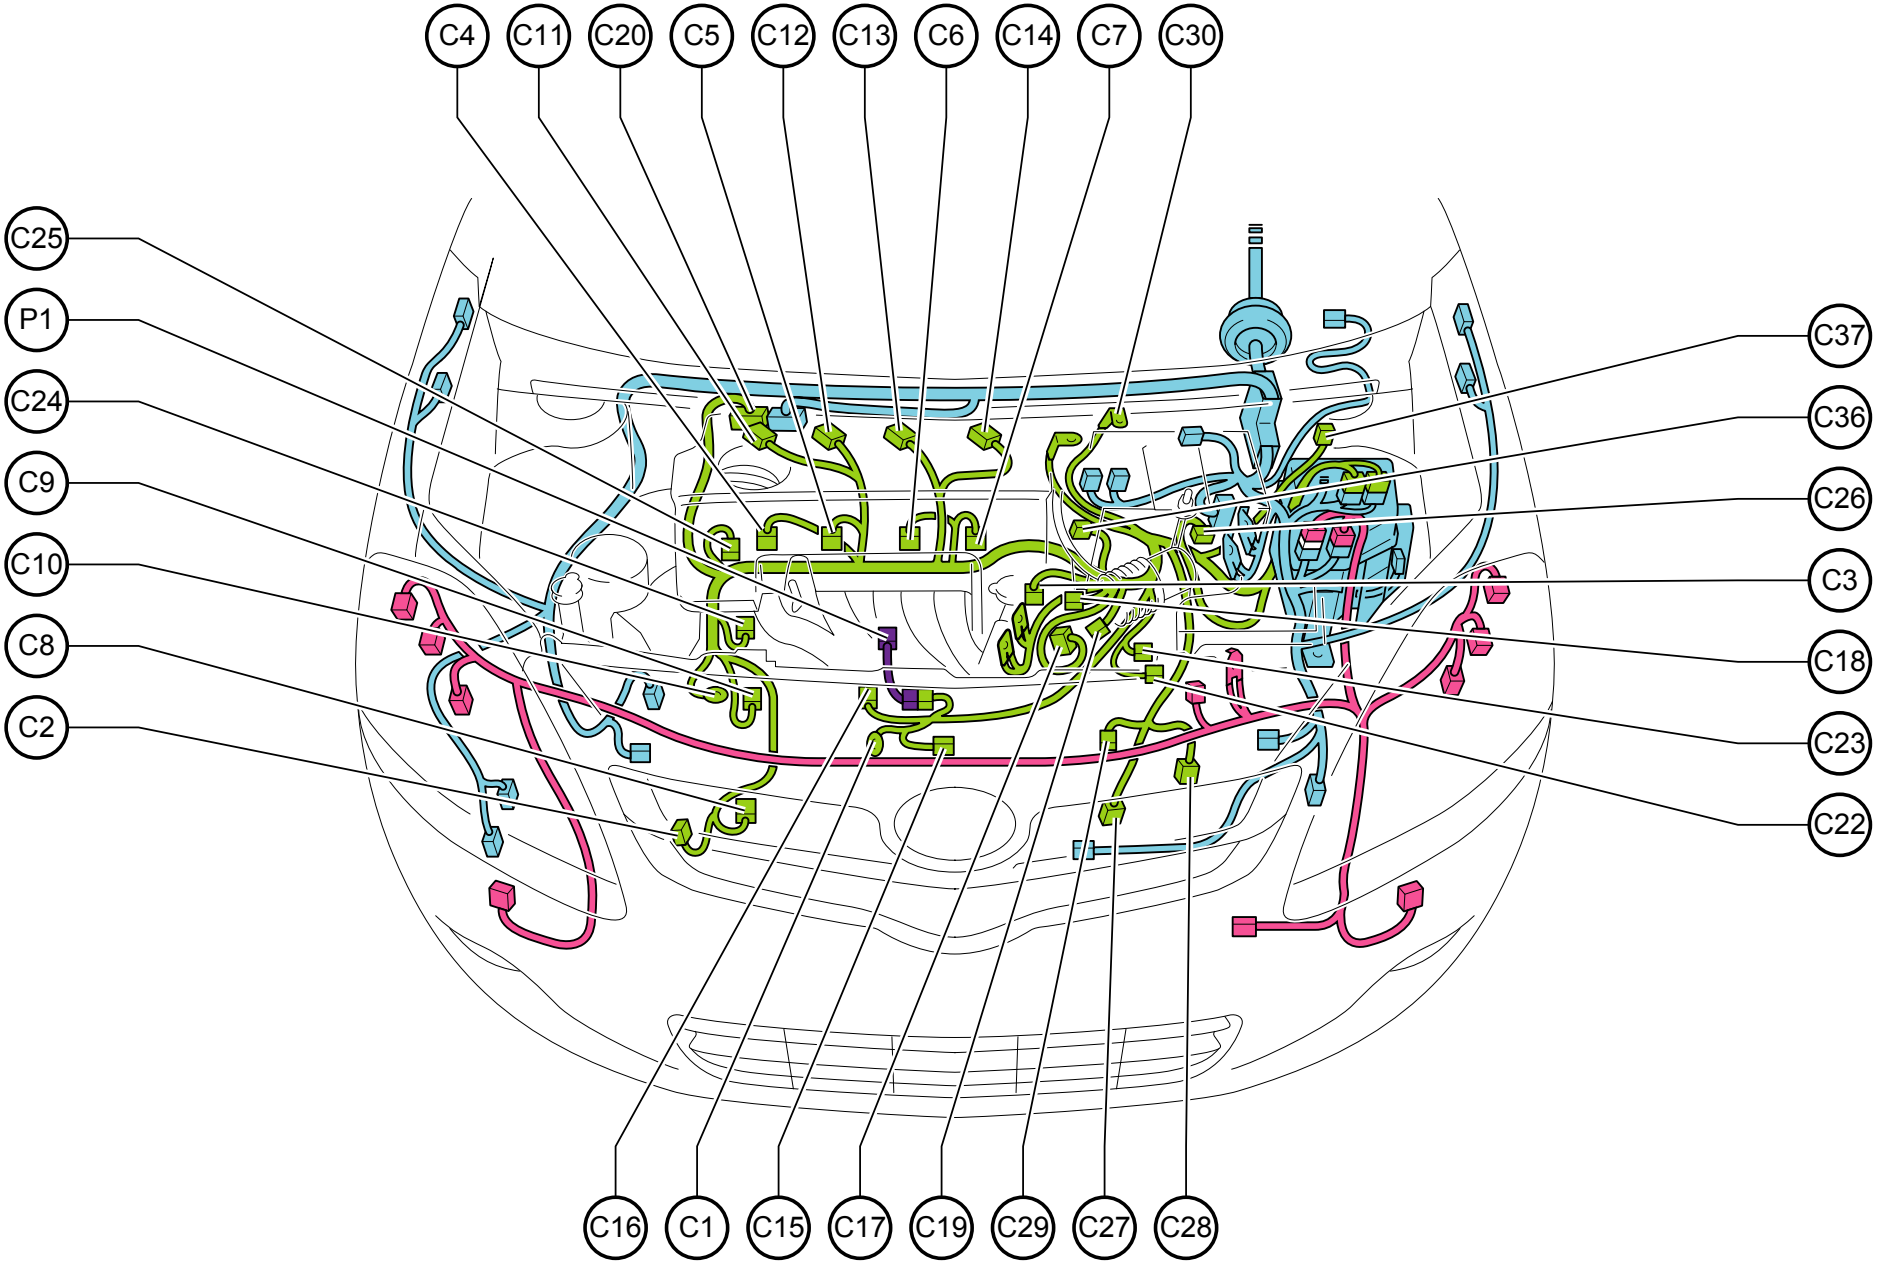


C 2
Black

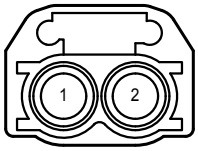


C 3
Blue

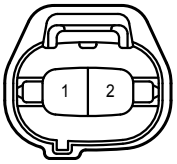


C 4
Black




C 5
Gray

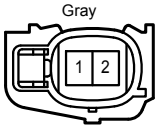


C 6
Black



C 7
Gray

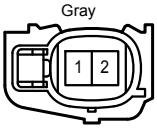


C 8
Gray

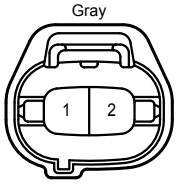

C 9
Black




C 10



(Except 2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 14
Gray




C 15
Black



C 16
Gray



C 17
Black

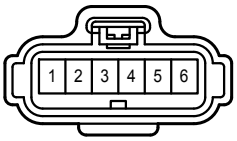


C 18
Black




C 19
Black



C 20
Black

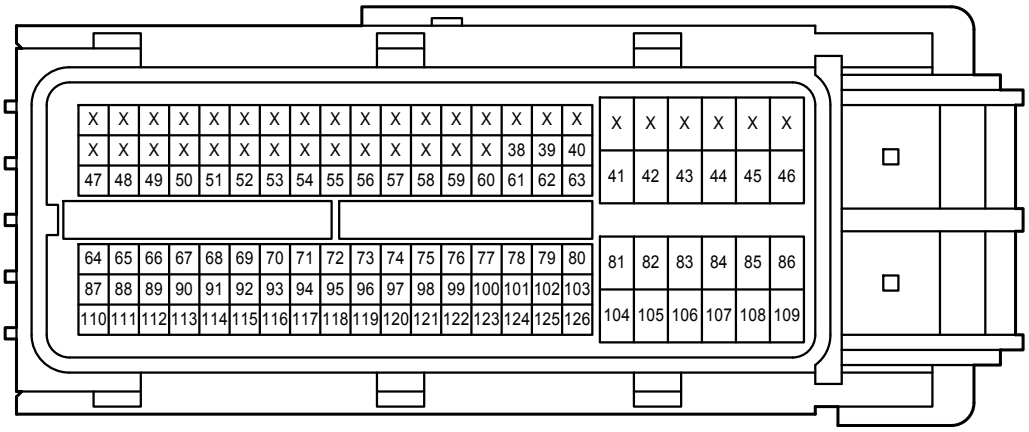

C 22
Gray

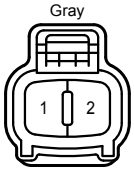

C 23
Black




C 24
Black




C 25
Gray




C 26
Black

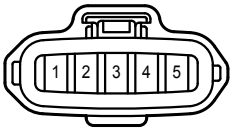


C 27
Gray

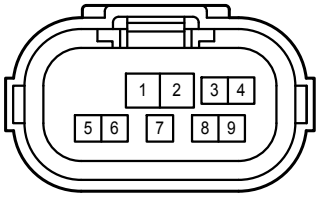


C 28
Gray

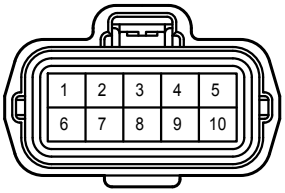

C 29
Black

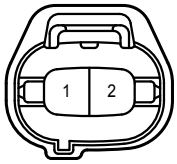

C 30



C 36
Dark Gray



C 37
Black



P 1
Black

