


C4
C11
C5
C12
C13
C6
C14
C7
C30
C20
C25
P1
C24
C9
C10
C8
C2
C37
C36
C26
C3
C18
C22
C16
C1
C15
C17
C19
C29
C27
C28


C 1 Starter
C 2 Crankshaft Position Sensor
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 18 Camshaft Position Sensor
C 19 Water Temp. Sensor
C 20 Engine ECU
C 22 Back-Up Lamp SW
C 24 Camshaft Timing Oil Control Valve
C 25 Noise Filter (Ignition)
C 26 Air Flow Meter
C 27 Park/Neutral Position SW
C 28 ECT Solenoid
C 29 Speed Sensor (Turbine)
C 30 Fusible Link Block
C 36 Oxygen Sensor (Bank 1 Sensor 1)
C 37 Variable Resistor

P 1 Knock Control Sensor (Bank 1)


C 1

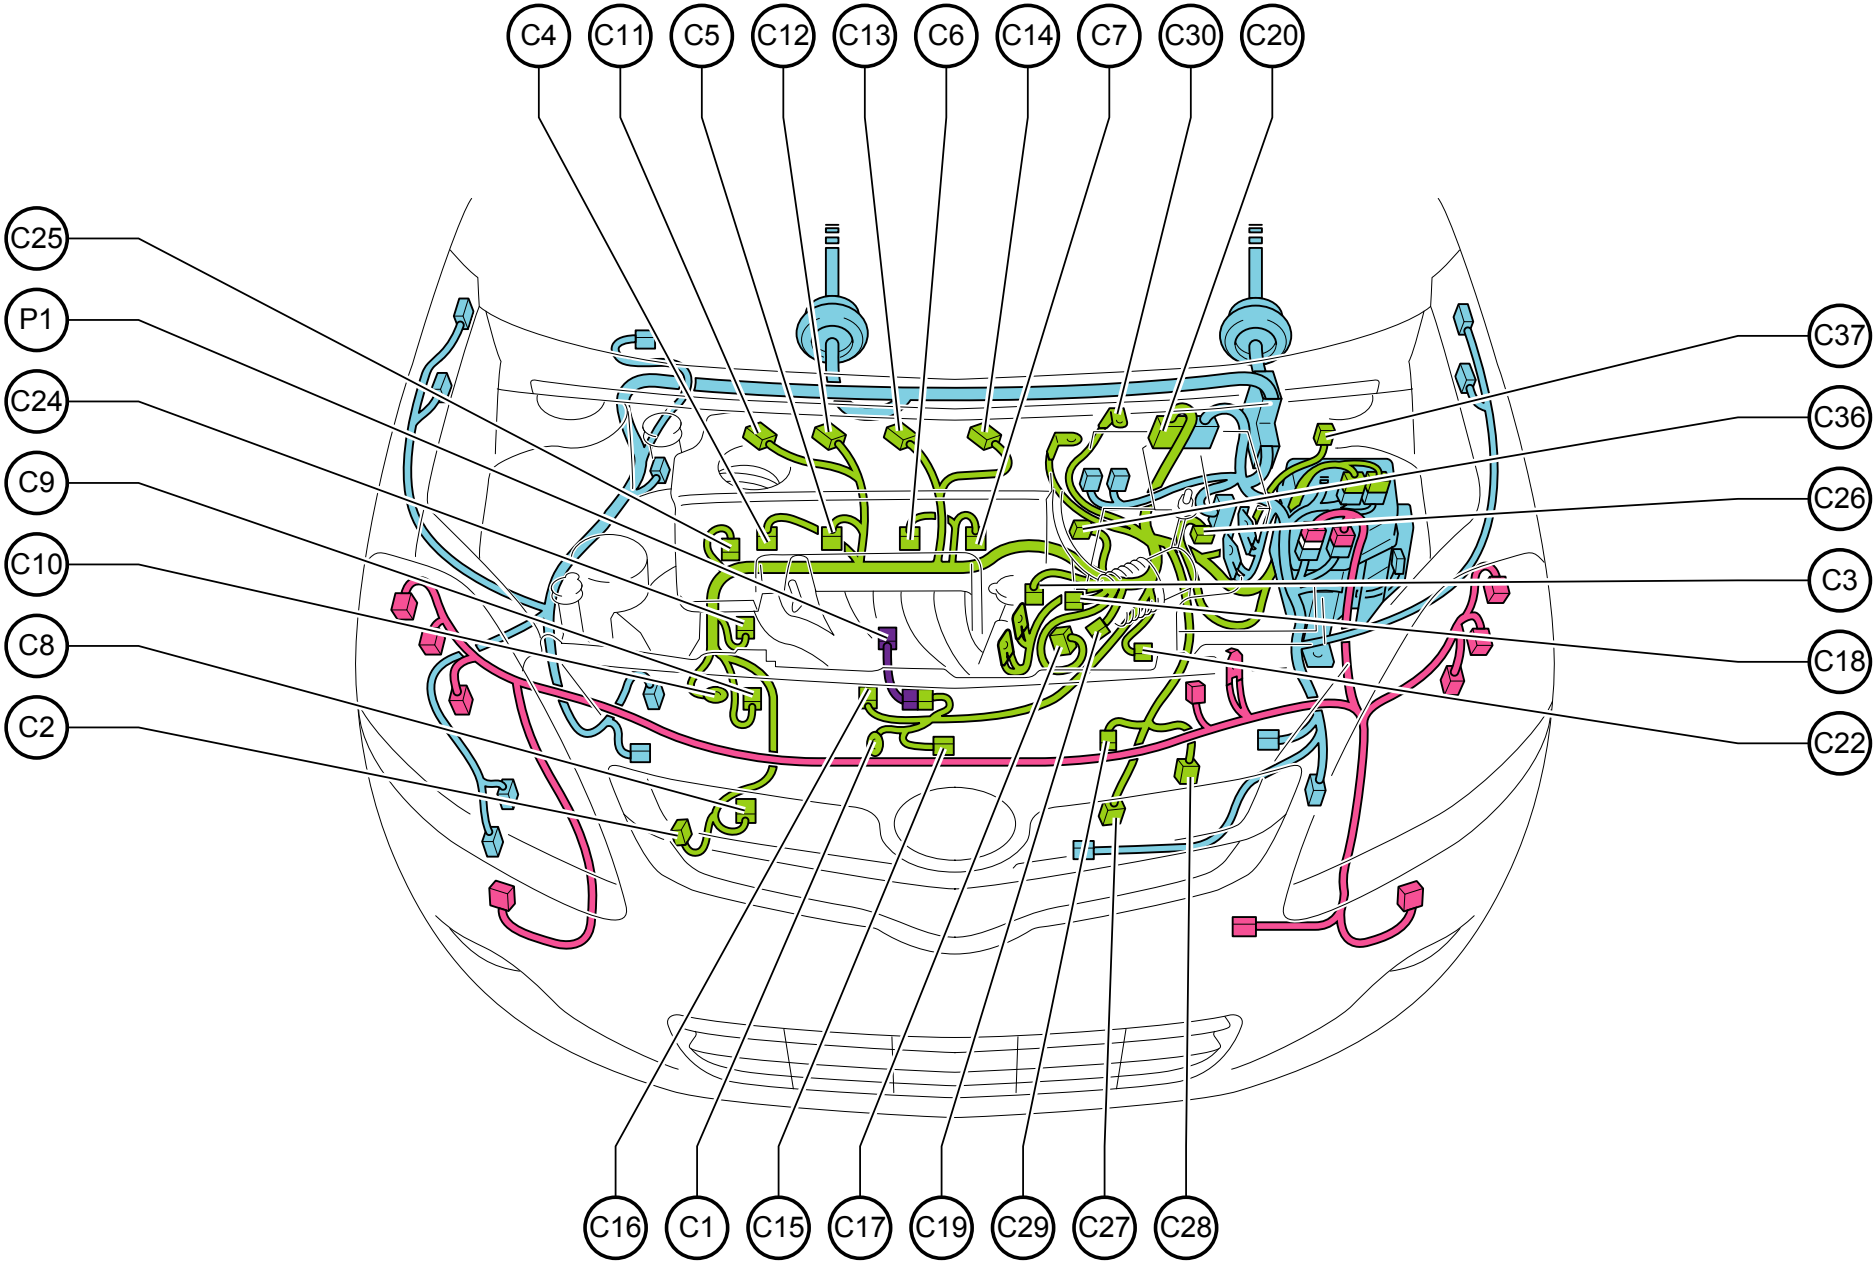


C 2
Black

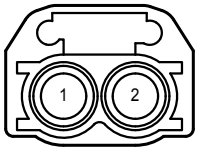


C 3
Blue

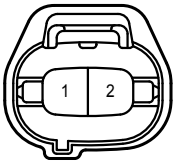


C 4
Black




C 5
Gray

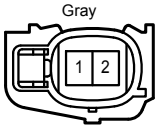


C 6
Black



C 7
Gray

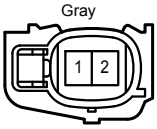


C 8
Gray

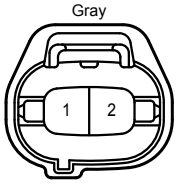

C 9
Black




C 10



(Except 2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 14
Gray




C 15
Black



C 16
Gray



C 17
Black

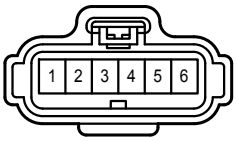


C 18
Black




C 19
Black



C 20
Black

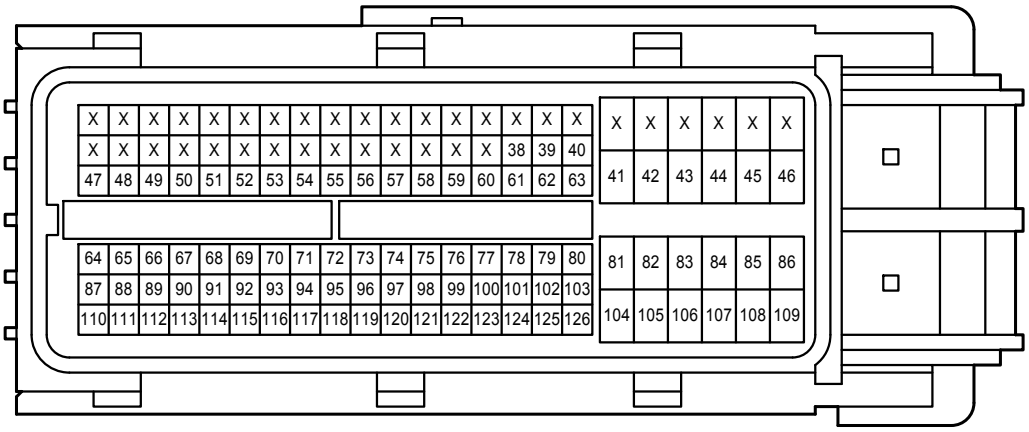

C 22
Gray

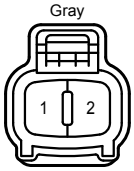


C 24
Black




C 25
Gray




C 26
Black

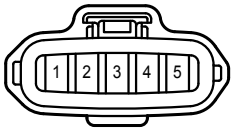


C 27
Gray

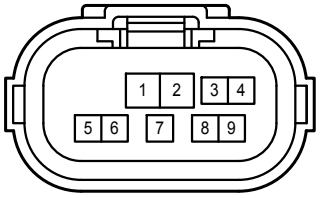


C 28
Gray

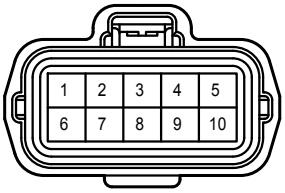

C 29
Black

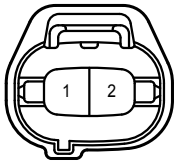

C 30



C 36
Dark Gray



C 37
Black



P 1
Black

