


C45
C46
C47
C48
C54
C66
C30
C50
C65
C55
C64
C56
C49
C52
C10
C9
C16
C51
C63
C26
C60
C61
C59
C62
C8
d1
C15
C57
C58
C53
C19
C44
C22

C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 15 Starter
C 16 Engine Oil Pressure SW
C 19 Water Temp. Sensor
C 22 Back-Up Lamp SW
C 26 Air Flow Meter
C 30 Fusible Link Block
C 44 Crankshaft Position Sensor
C 45 Injector No.1
C 46 Injector No.2
C 47 Injector No.3
C 48 Injector No.4
C 49 Camshaft Position Sensor
C 50 Engine ECU
C 51 Oil Level Sensor
C 52 EGR Valve Control Motor
C 53 VSV (Pressure Release Valve)
C 54 Magnetic Proportional Valve
C 55 VSV (EGR)
C 56 Fuel Pressure Sensor
C 57 ISC Valve
C 58 Throttle Position Sensor
C 59 Shift Stroke Sensor
C 60 Select Stroke Sensor
C 61 Shift Actuator
C 62 Select Actuator
C 63 Fuel Temp. Sensor
C 64 Glow Plug
C 65 Glow Plug Relay
C 66 Fusible Link Block

d 1 Starter


C 8
Gray

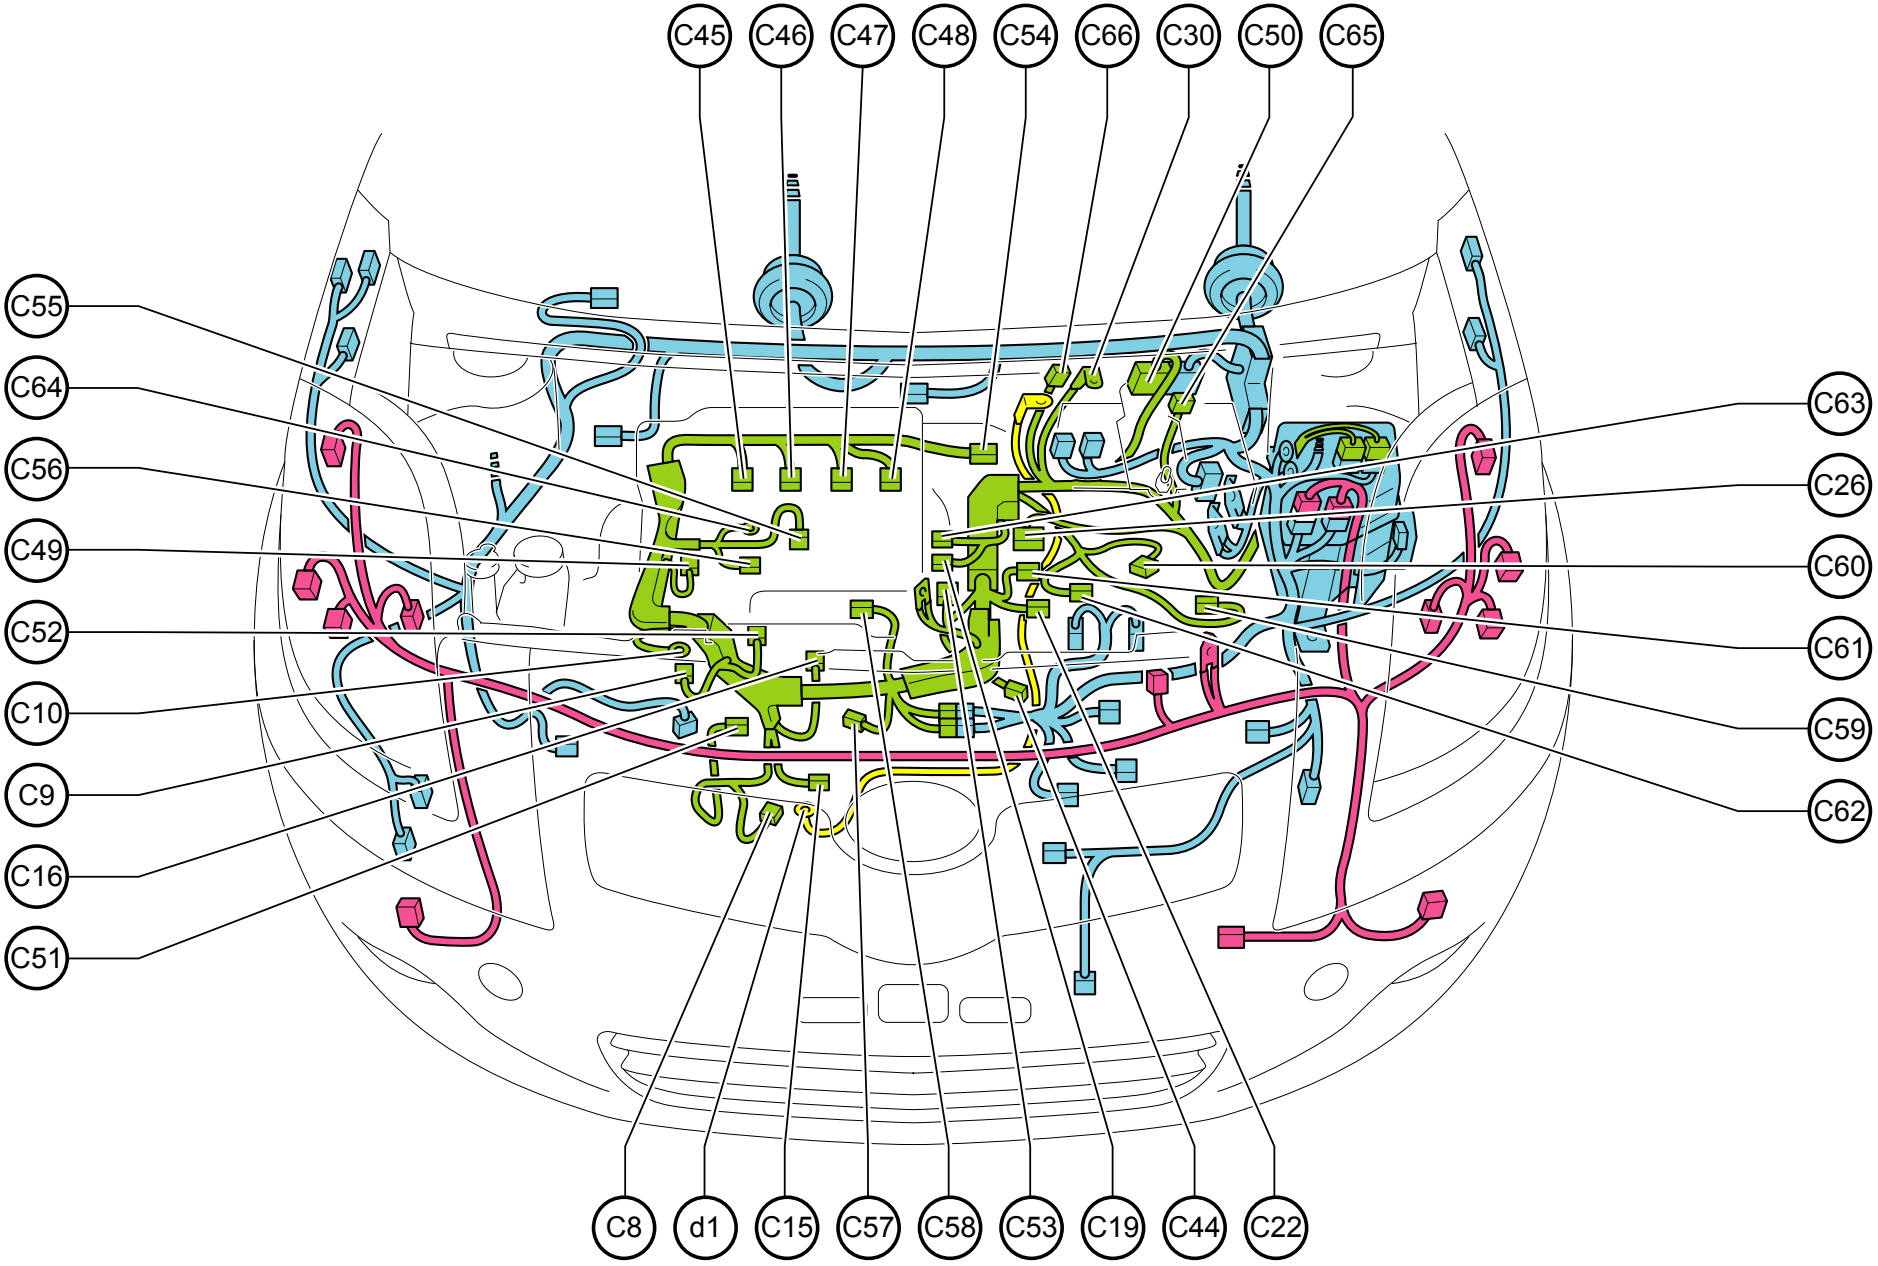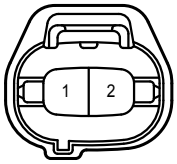

C 9
Black



C 10



(Except 2SZ-FE)

C 15
Black




C 16
Gray




C 19
Black




C 22
Gray

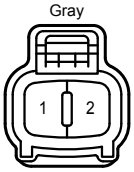

C 26
Black

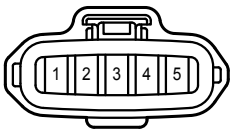


C 30




C 44
Gray




C 45
Black

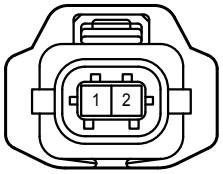


C 46
Brown

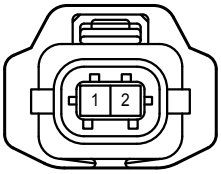


C 47
Black

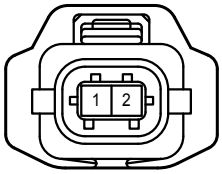


C 48
Brown

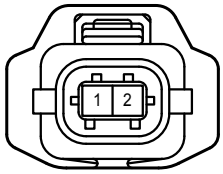


C 49
Black

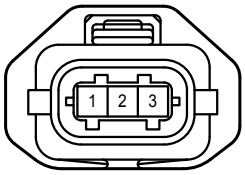

C 50
Black

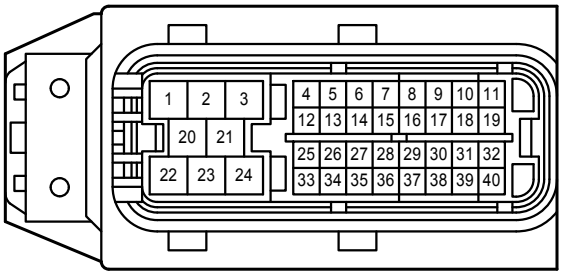


C 51
Gray

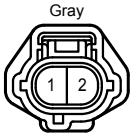


C 52
Black



C 53
Black

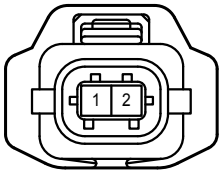


C 54
Black

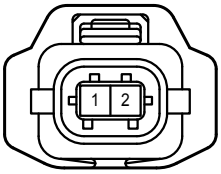

C 55
Black



C 56
Black

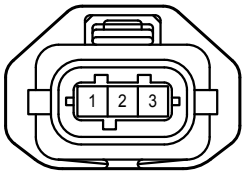


C 57
Black




C 58
Black



C 59
Black

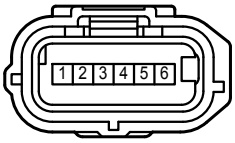

C 60
Black

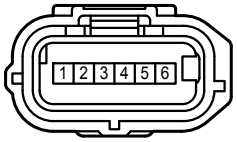


C 61
Black




C 62
Black



C 63
Black

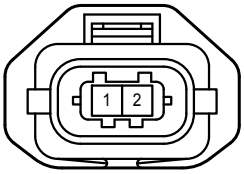


C 64



C 65
Gray



C 66
Black



d 1

