


C25
C4
C20
C11
C5
C12
C13
C6
C14
C7
C30
C36
C3
C26
C37
C19
C23
C22
C17
C29
C28
C27
C24
P1
C10
C9
C16
C2
C8
C1
C15
C18


C 1 Starter
C 2 Crankshaft Position Sensor
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 18 Camshaft Position Sensor
C 19 Water Temp. Sensor
C 20 Engine ECU
C 22 Back-Up Lamp SW
C 23 Speed Sensor
C 24 Camshaft Timing Oil Control Valve
C 25 Noise Filter (Ignition)
C 26 Air Flow Meter
C 27 Park/Neutral Position SW
C 28 ECT Solenoid
C 29 Speed Sensor (Turbine)
C 30 Fusible Link Block
C 36 Oxygen Sensor (Bank 1 Sensor 1)
C 37 Variable Resistor

P 1 Knock Control Sensor (Bank 1)


C 1

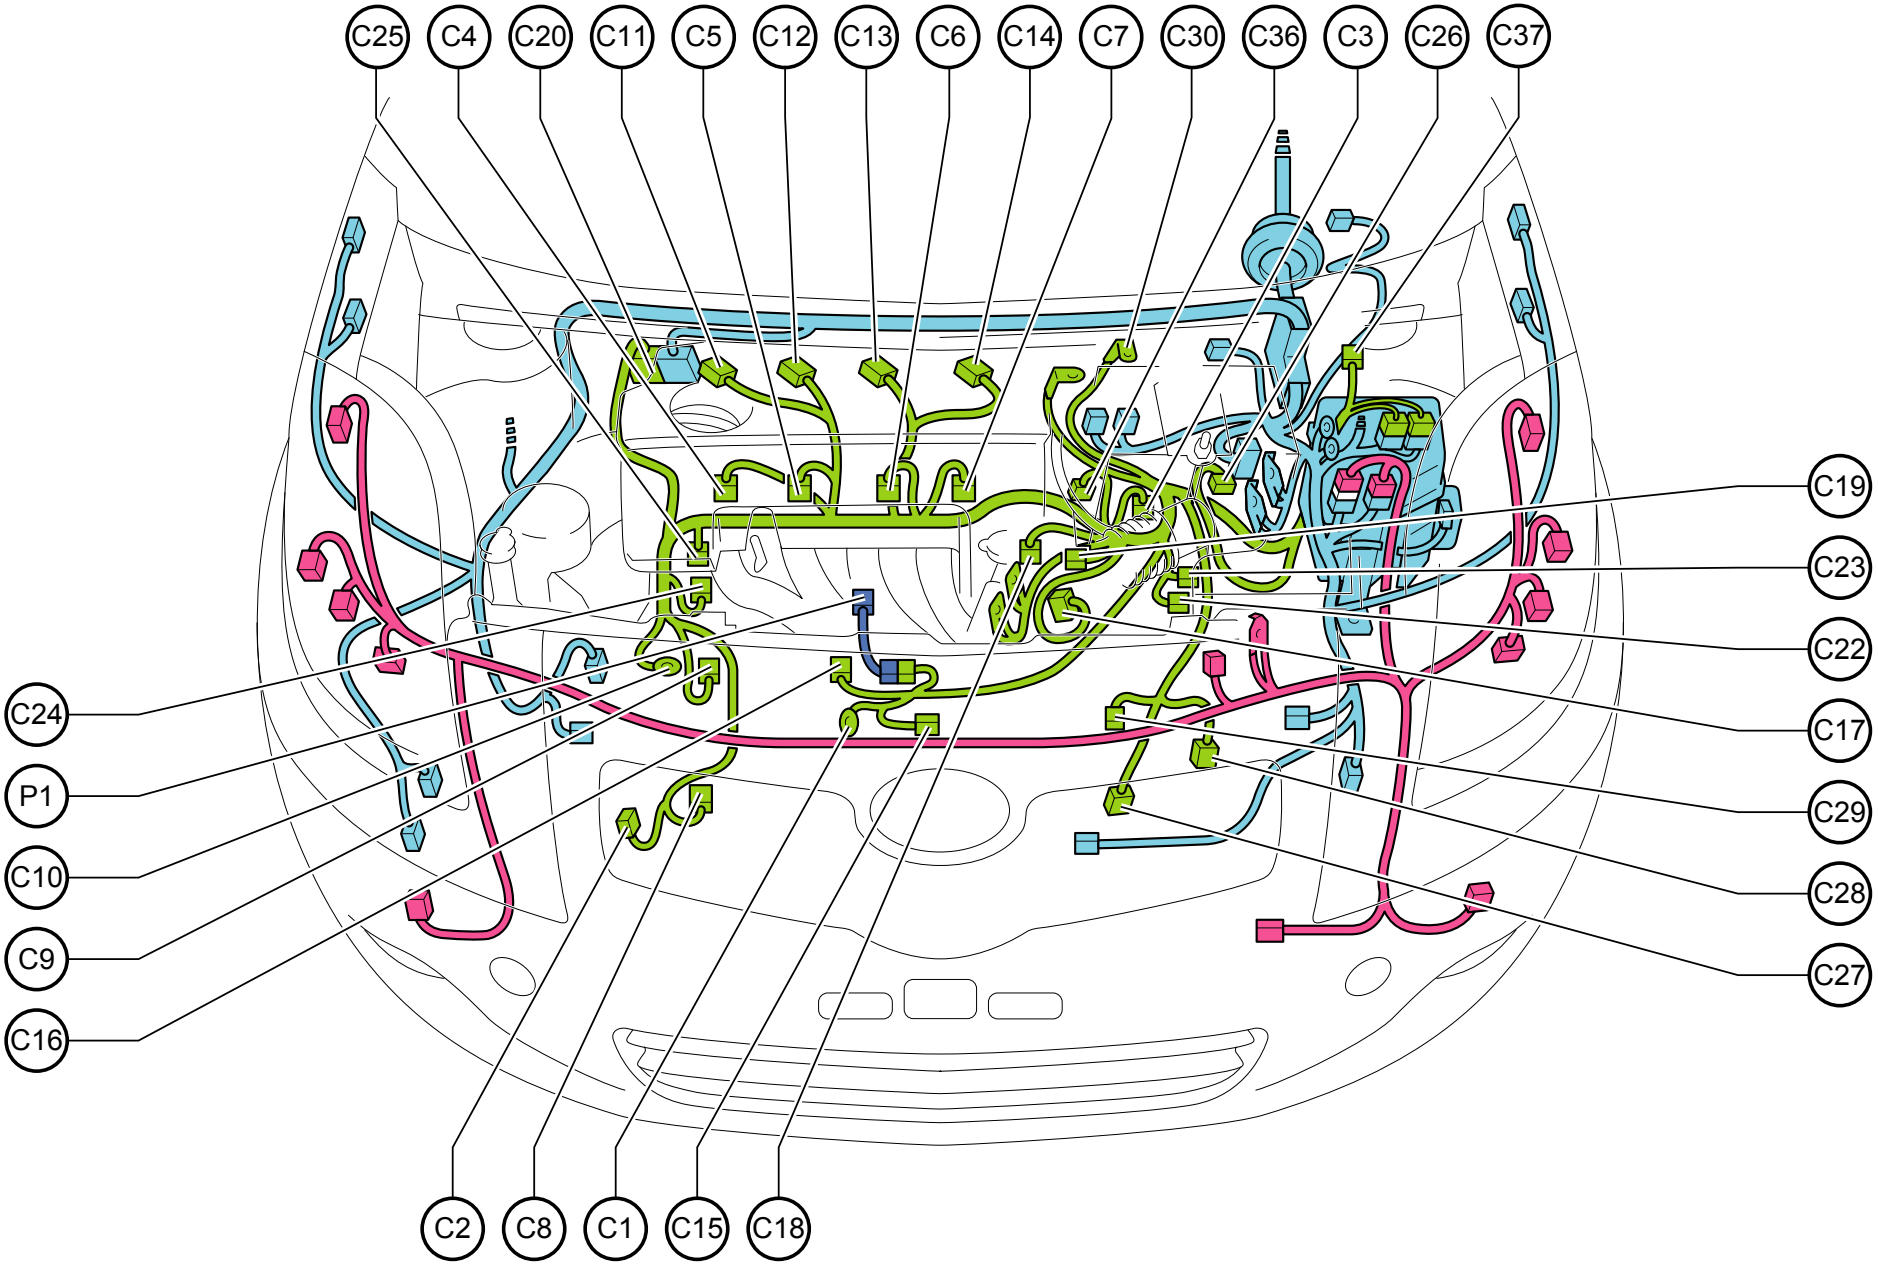


C 2
Black

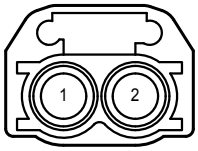


C 3
Blue

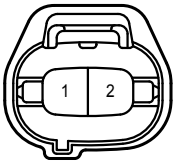


C 4
Black




C 5
Gray

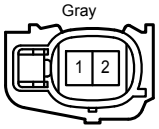


C 6
Black



C 7
Gray

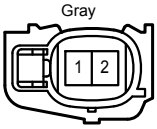


C 8
Gray

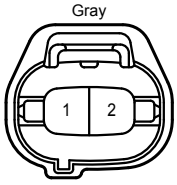

C 9
Black




C 10



(Except 2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 14
Gray




C 15
Black



C 16
Gray



C 17
Black

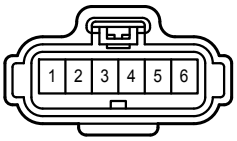


C 18
Black




C 19
Black



C 20
Black

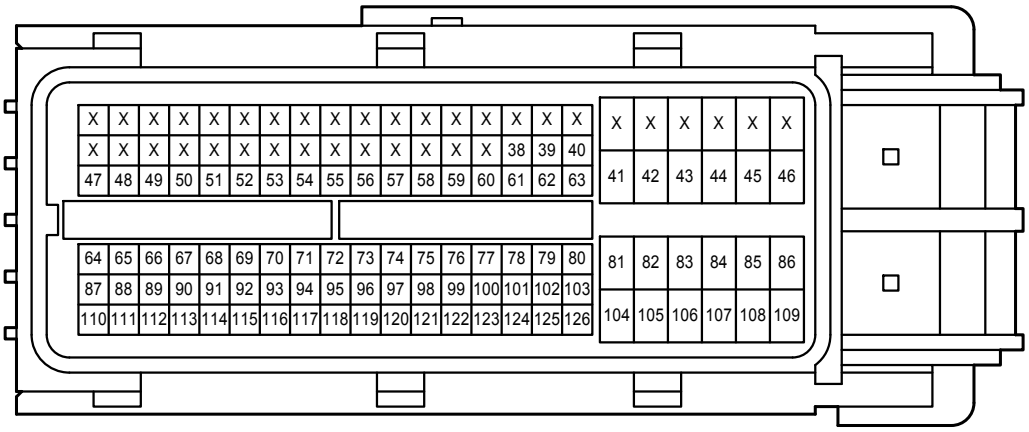

C 22
Gray

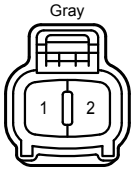

C 23
Black




C 24
Black




C 25
Gray




C 26
Black

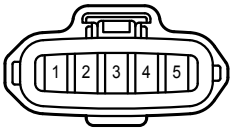


C 27
Gray

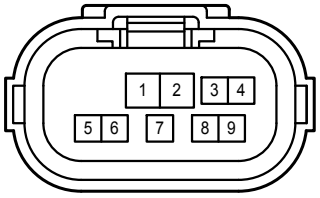


C 28
Gray

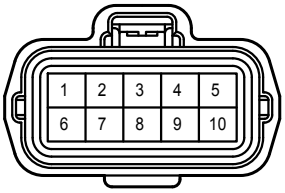

C 29
Black

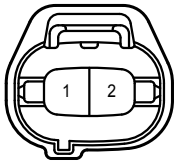

C 30



C 36
Dark Gray



C 37
Black



P 1
Black

