


C72
C11
C12
C73
C13
C14
C70
C3
C30
C20
C69
C4
C10
C16
C9
C22
C19
C71
C2
C8
C5
e4
C6
C15
C1
C7
C17
C25
C68


C 1 Starter
C 2 Crankshaft Position Sensor
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 19 Water Temp. Sensor
C 20 Engine ECU
C 22 Back-Up Lamp SW
C 25 Noise Filter (Ignition)
C 30 Fusible Link Block
C 68 Air Flow Meter
C 69 Camshaft Timing Oil Control Valve (Intake Side)
C 69 Camshaft Timing Oil Control Valve (Intake Side)
C 70 VVT Sensor (Exhaust Side)
C 71 VVT Sensor (Intake Side)
C 71 VVT Sensor (Intake Side)
C 72 Camshaft Timing Oil Control Valve (Exhaust Side)
C 72 Camshaft Timing Oil Control Valve (Exhaust Side)
C 73 Air Fuel Ratio Sensor (Bank 1 Sensor 1)

e 4 Knock Control Sensor (Bank 1)


C 1

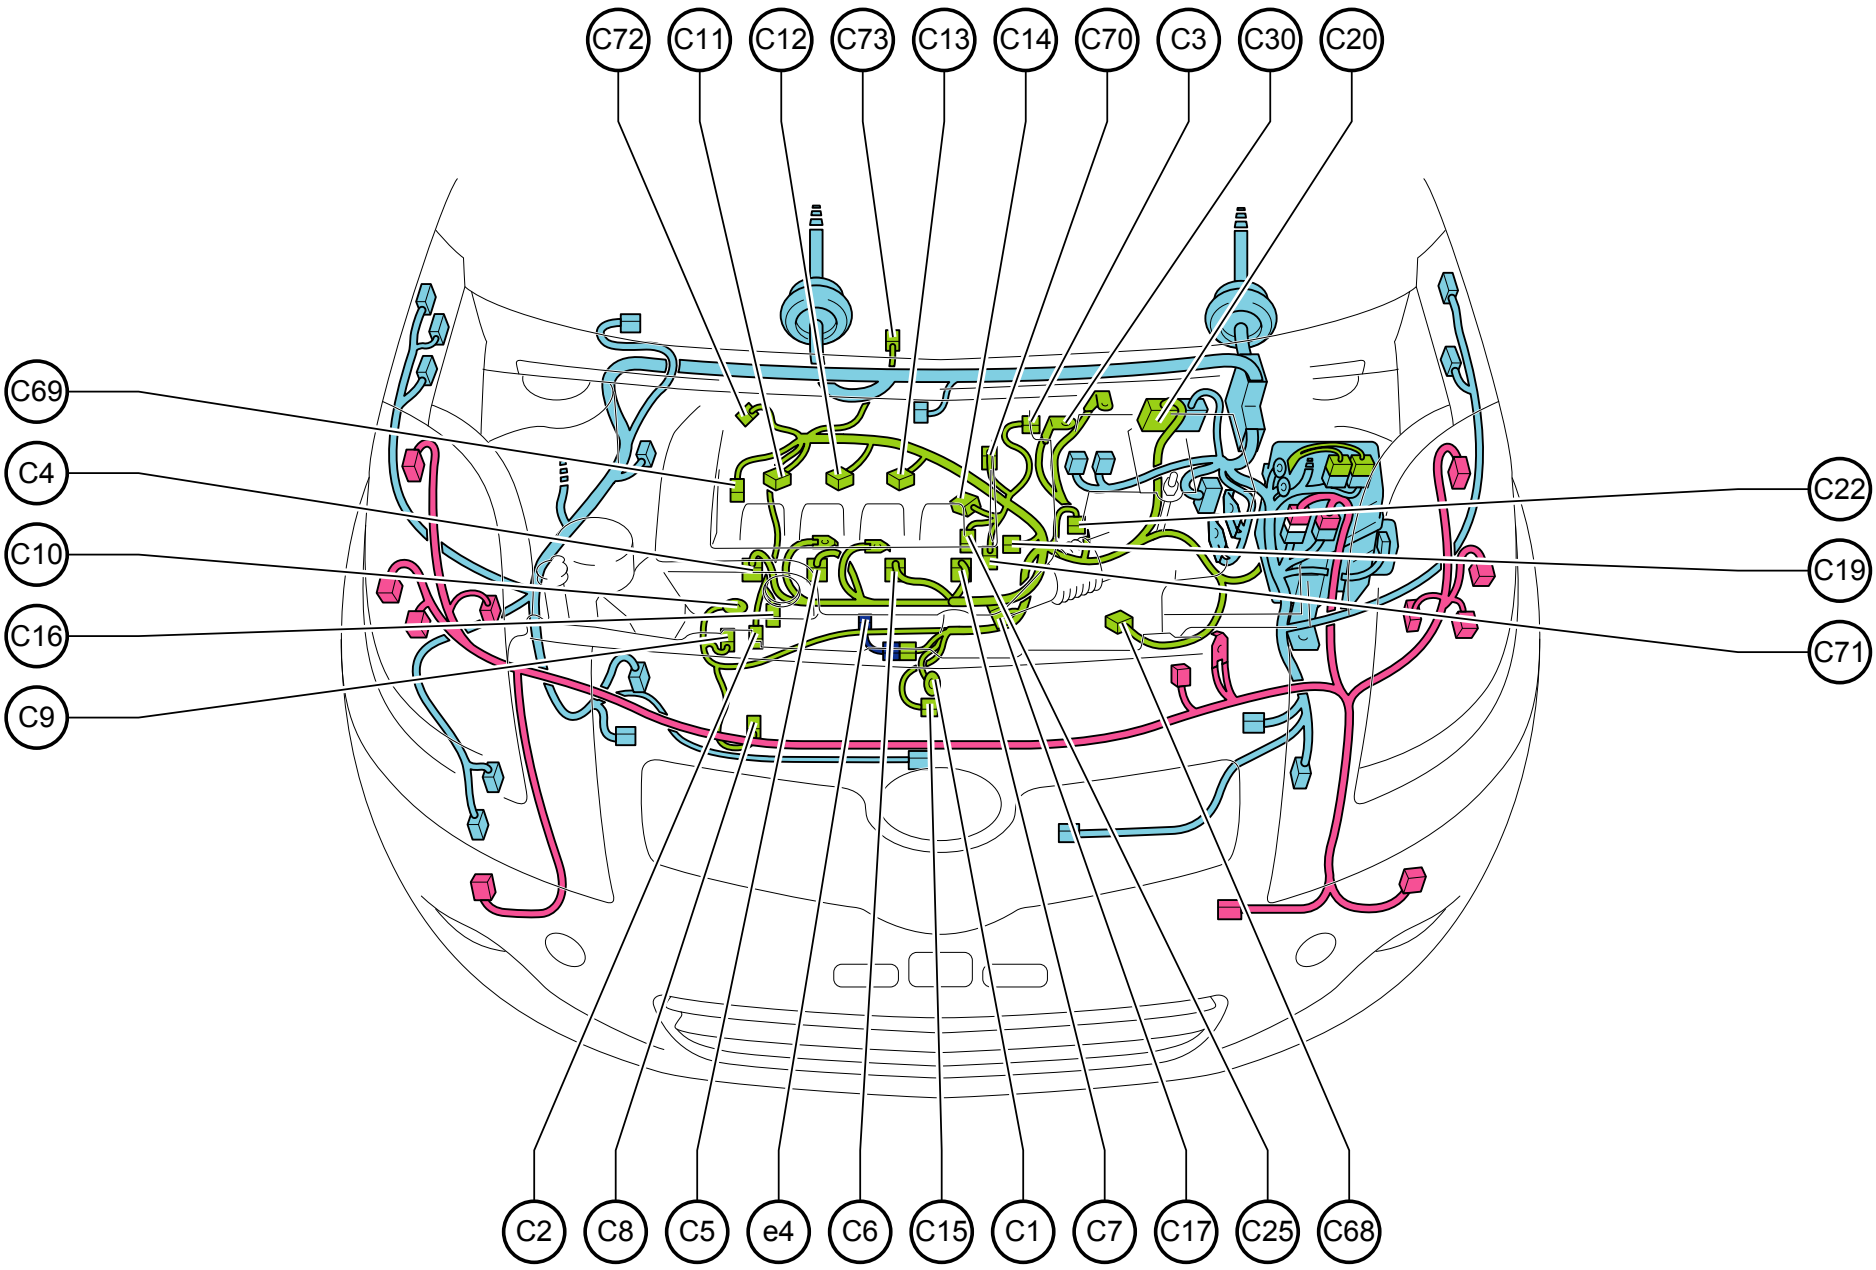


C 2
Black

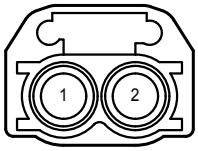


C 3
Blue

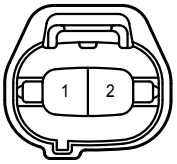


C 4
Black




C 5
Gray

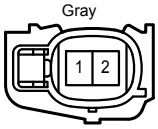


C 6
Black



C 7
Gray

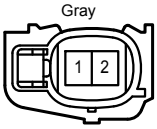


C 8
Gray

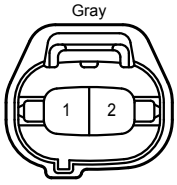

C 9
Black




C 10



(Except 2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 14
Gray




C 15
Black



C 16
Gray




C 17
Black

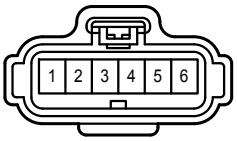


C 19
Black



C 20
Black

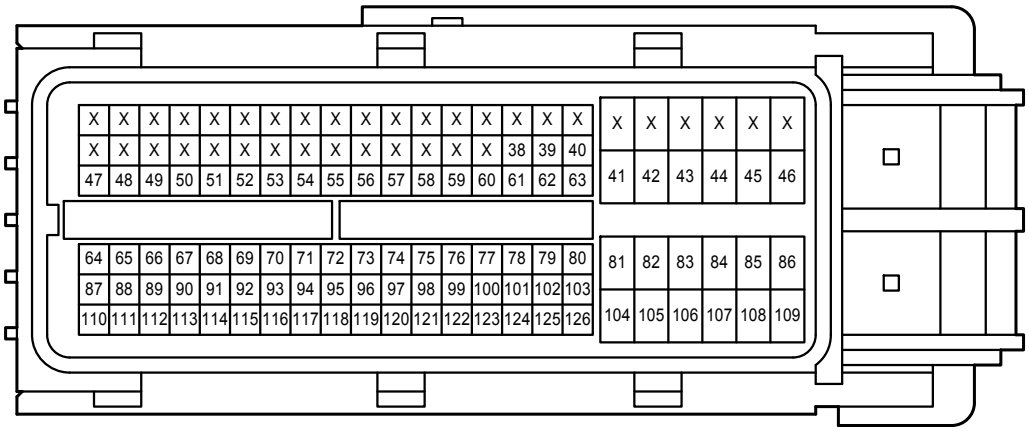


C 22
Gray

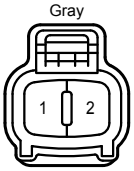

C 25
Gray



C 30



C 68
Black



C 69
Black




(Before Aug. 2007 Production)

C 69
Gray




(From Aug. 2007 Production)

C 70
Black

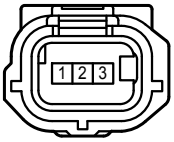


C 71
Black

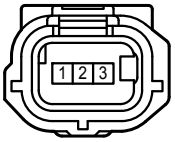

(Before Aug. 2007 Production)

C 71
Gray

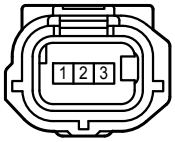

(From Aug. 2007 Production)

C 72
Gray



(Before Aug. 2007 Production)

C 72
Black



(From Aug. 2007 Production)

C 73
Dark Gray



e 4
Black

