



∗ 1 : TMMF Made
∗ 2 : TMC Made w/ VSC
∗ 3 : w/ Entry & Start System
∗ 4 : w/o Entry & Start System
∗ 5 : w/ Front Passenger Seat Belt Warning Lamp
∗ 6 : w/ Daytime Running Light
∗ 7 : w/o Daytime Running Light
∗ 8 : TMC Made w/o VSC
∗12 : Except ∗13
∗13 : S/D From Aug. 2007 Production

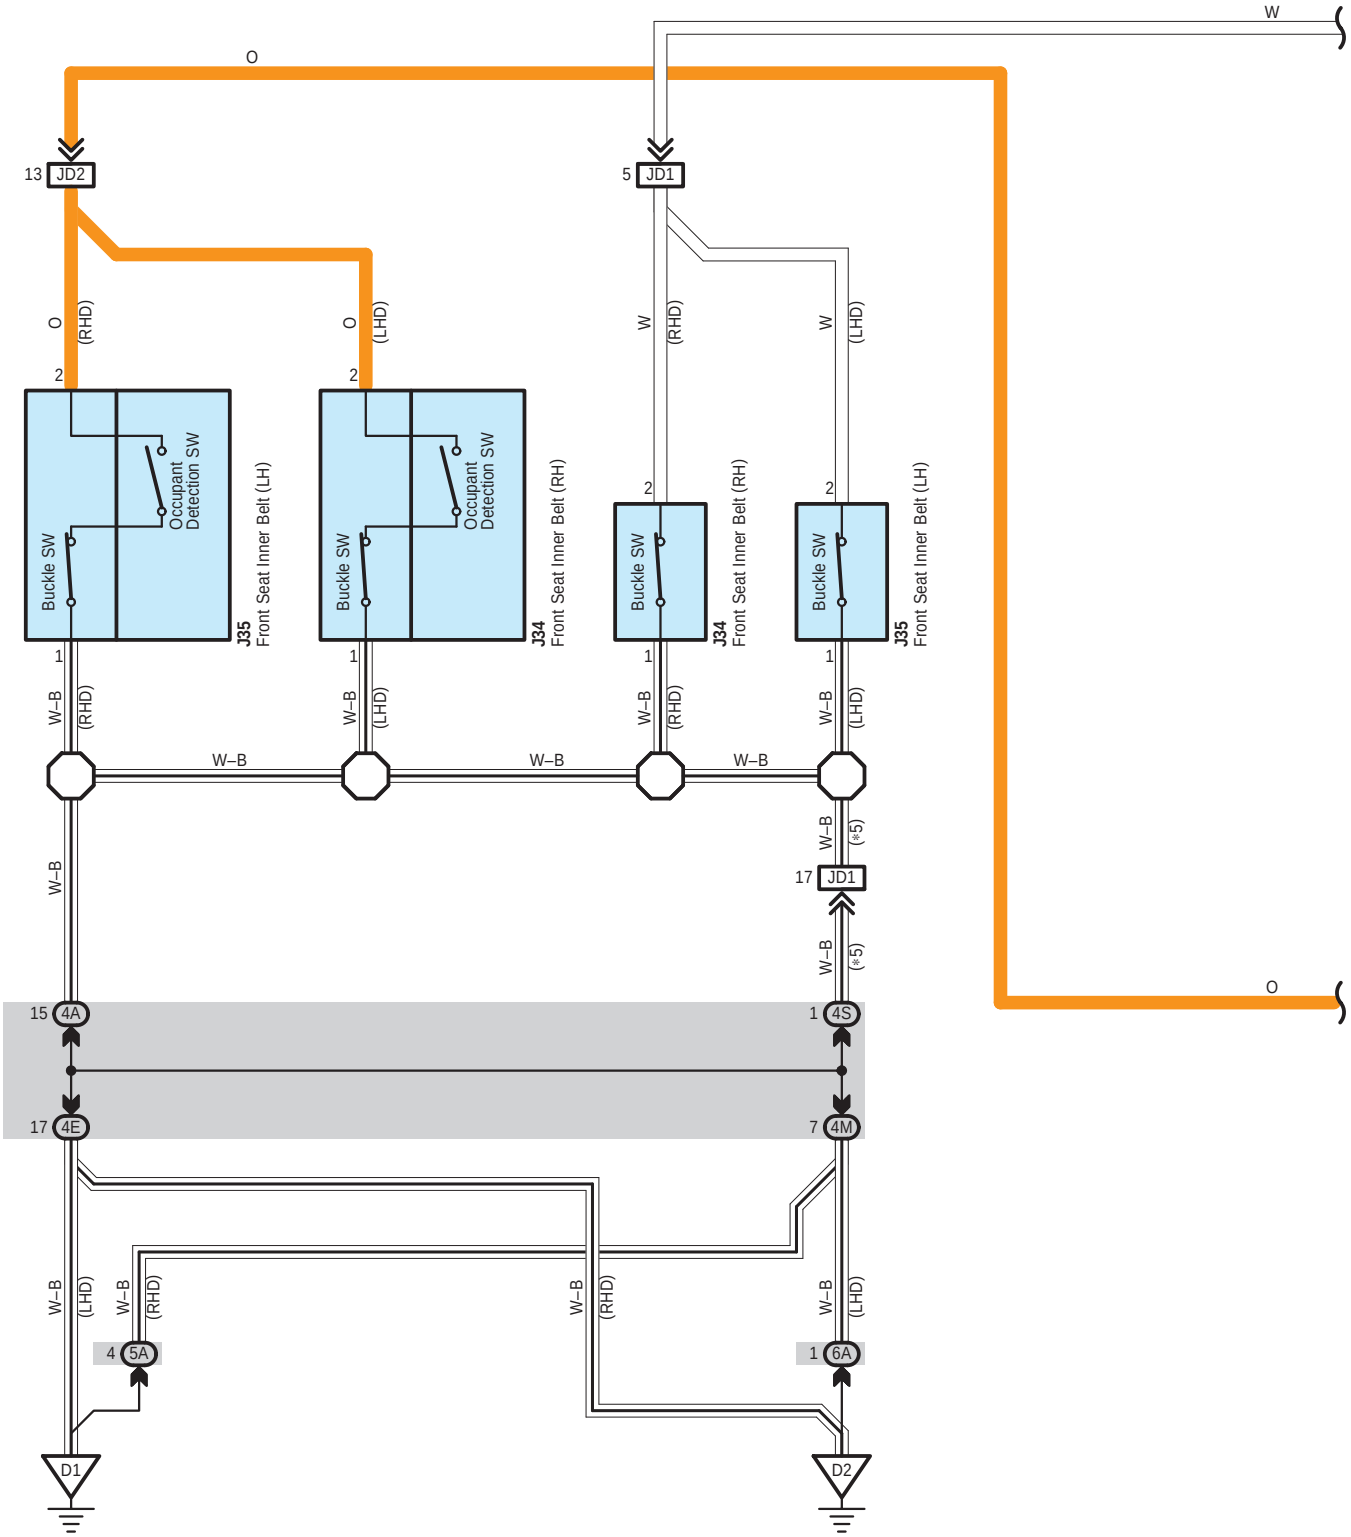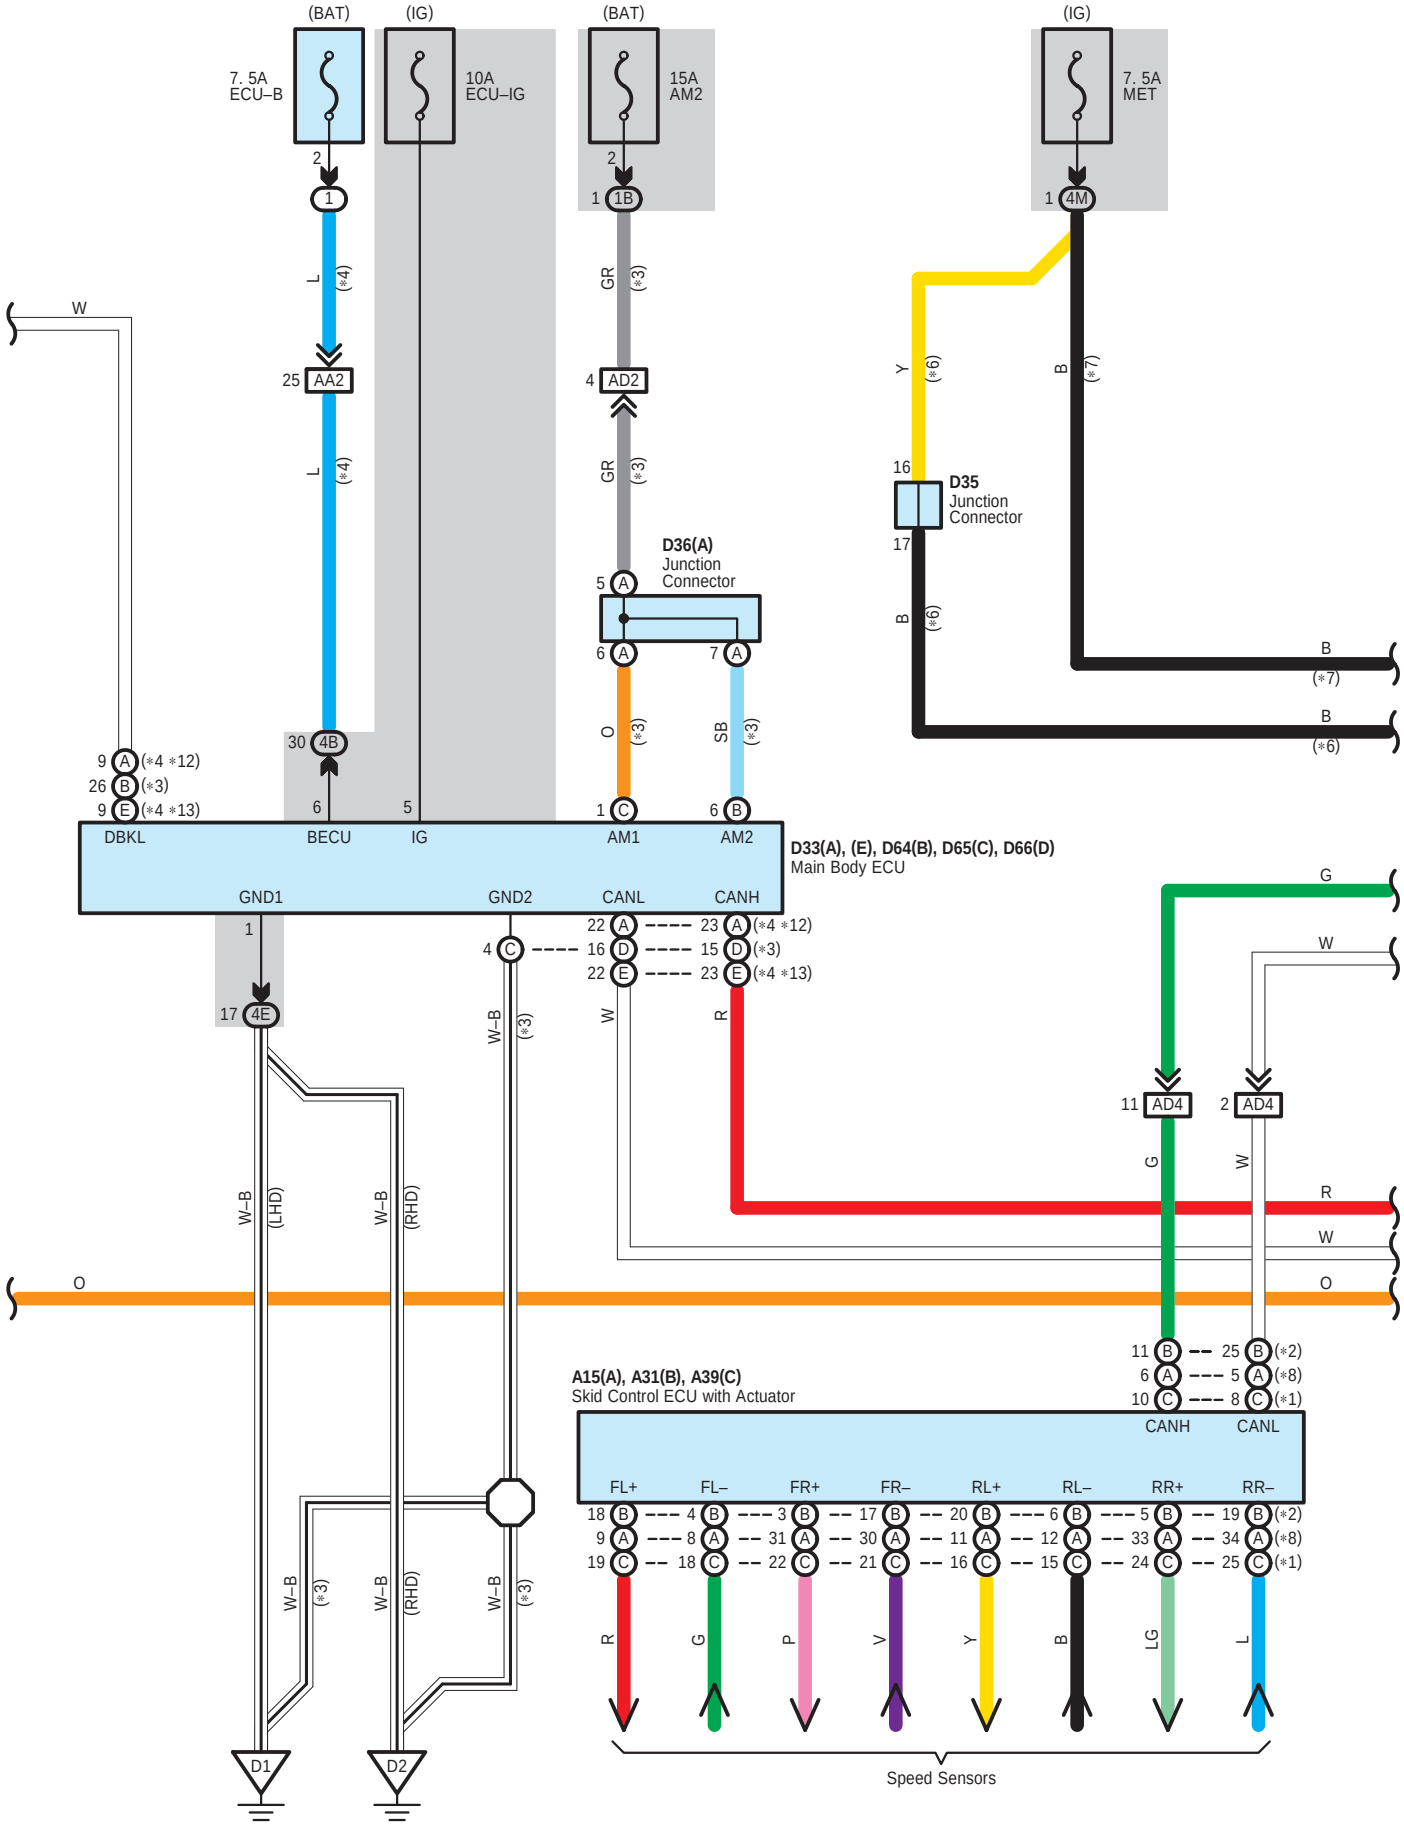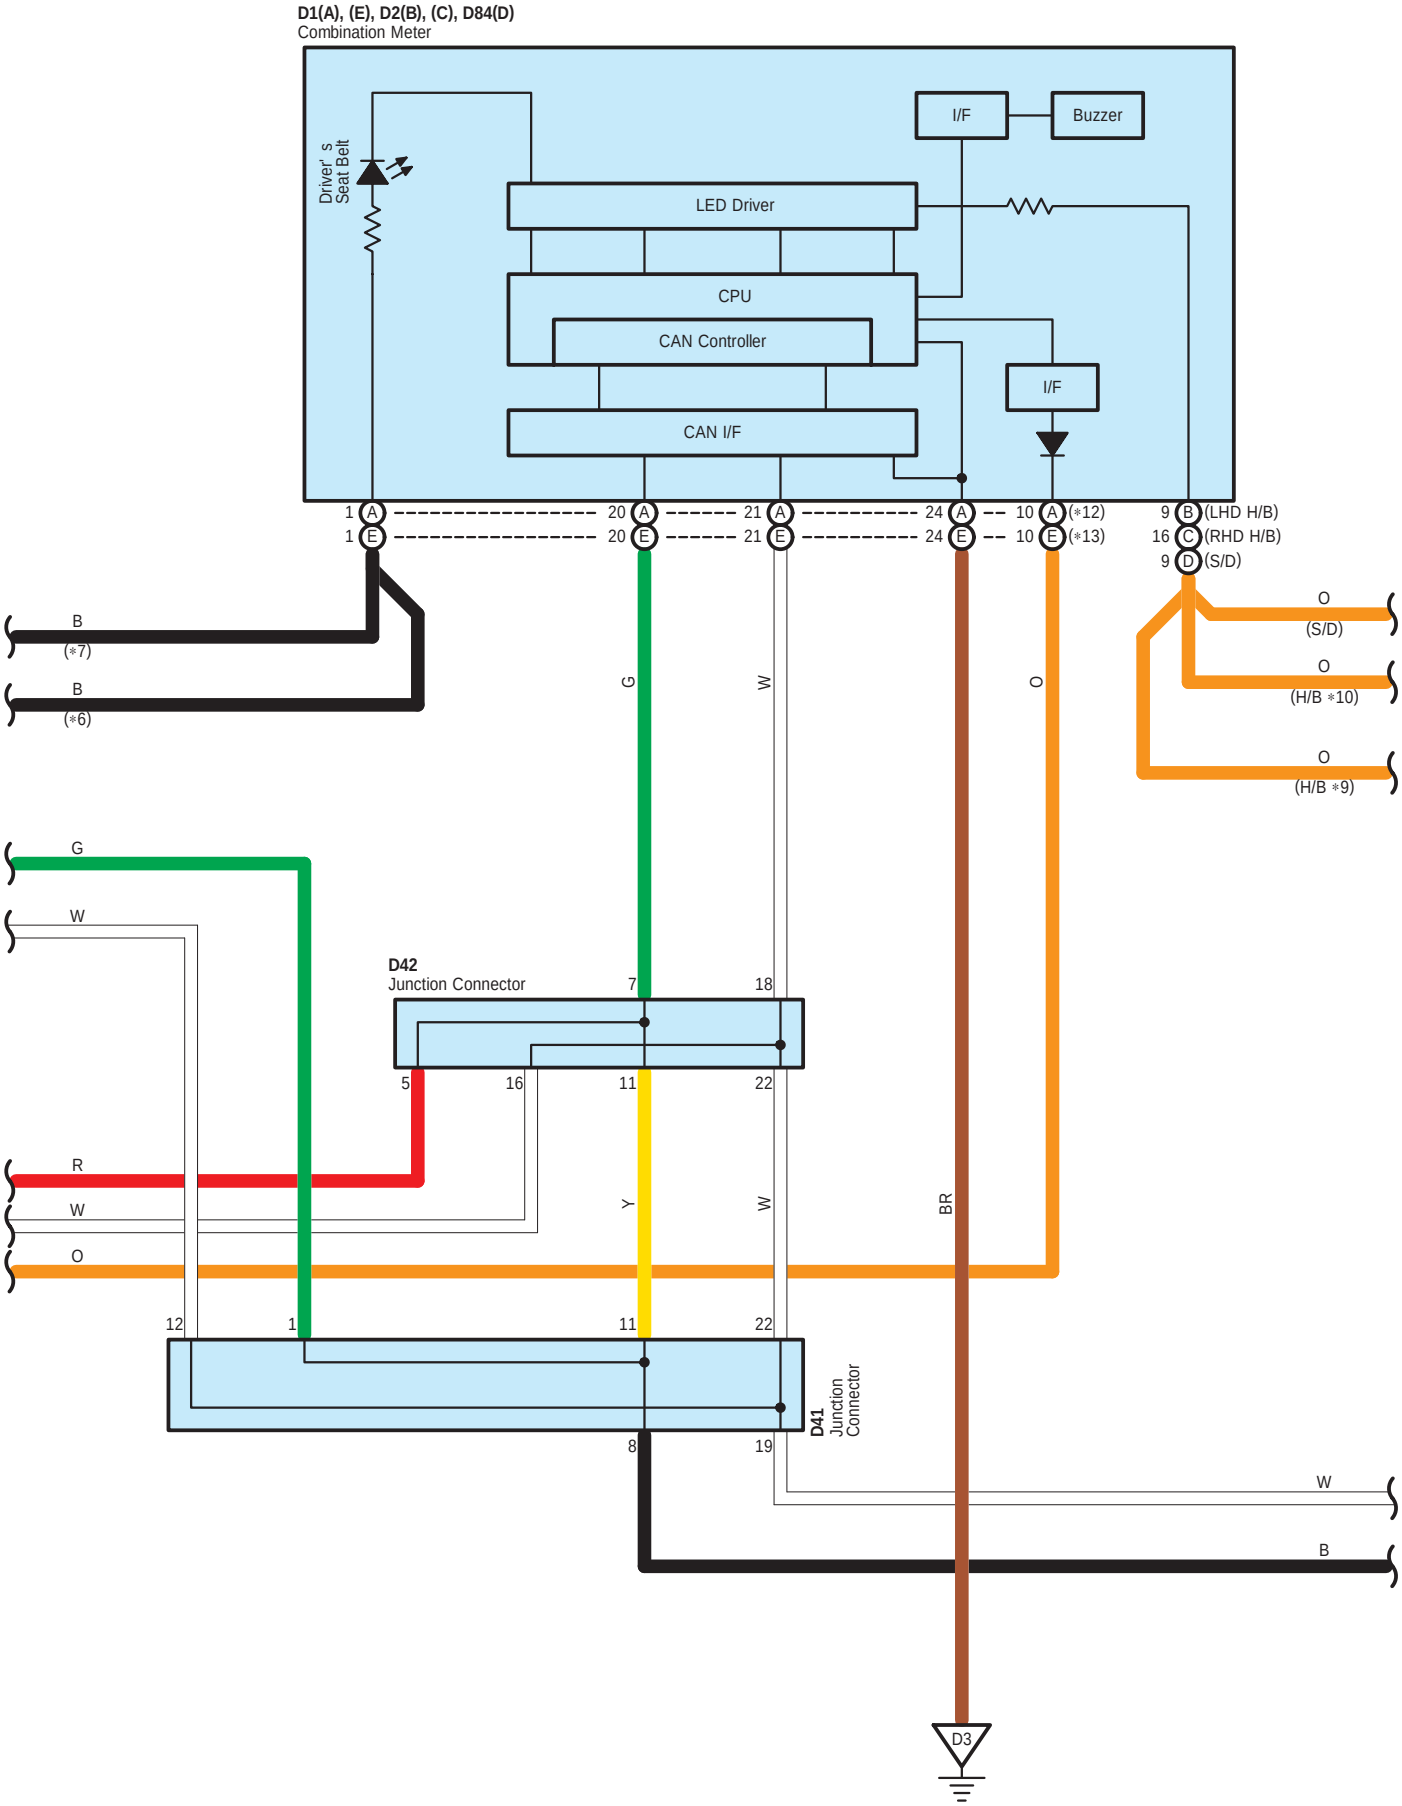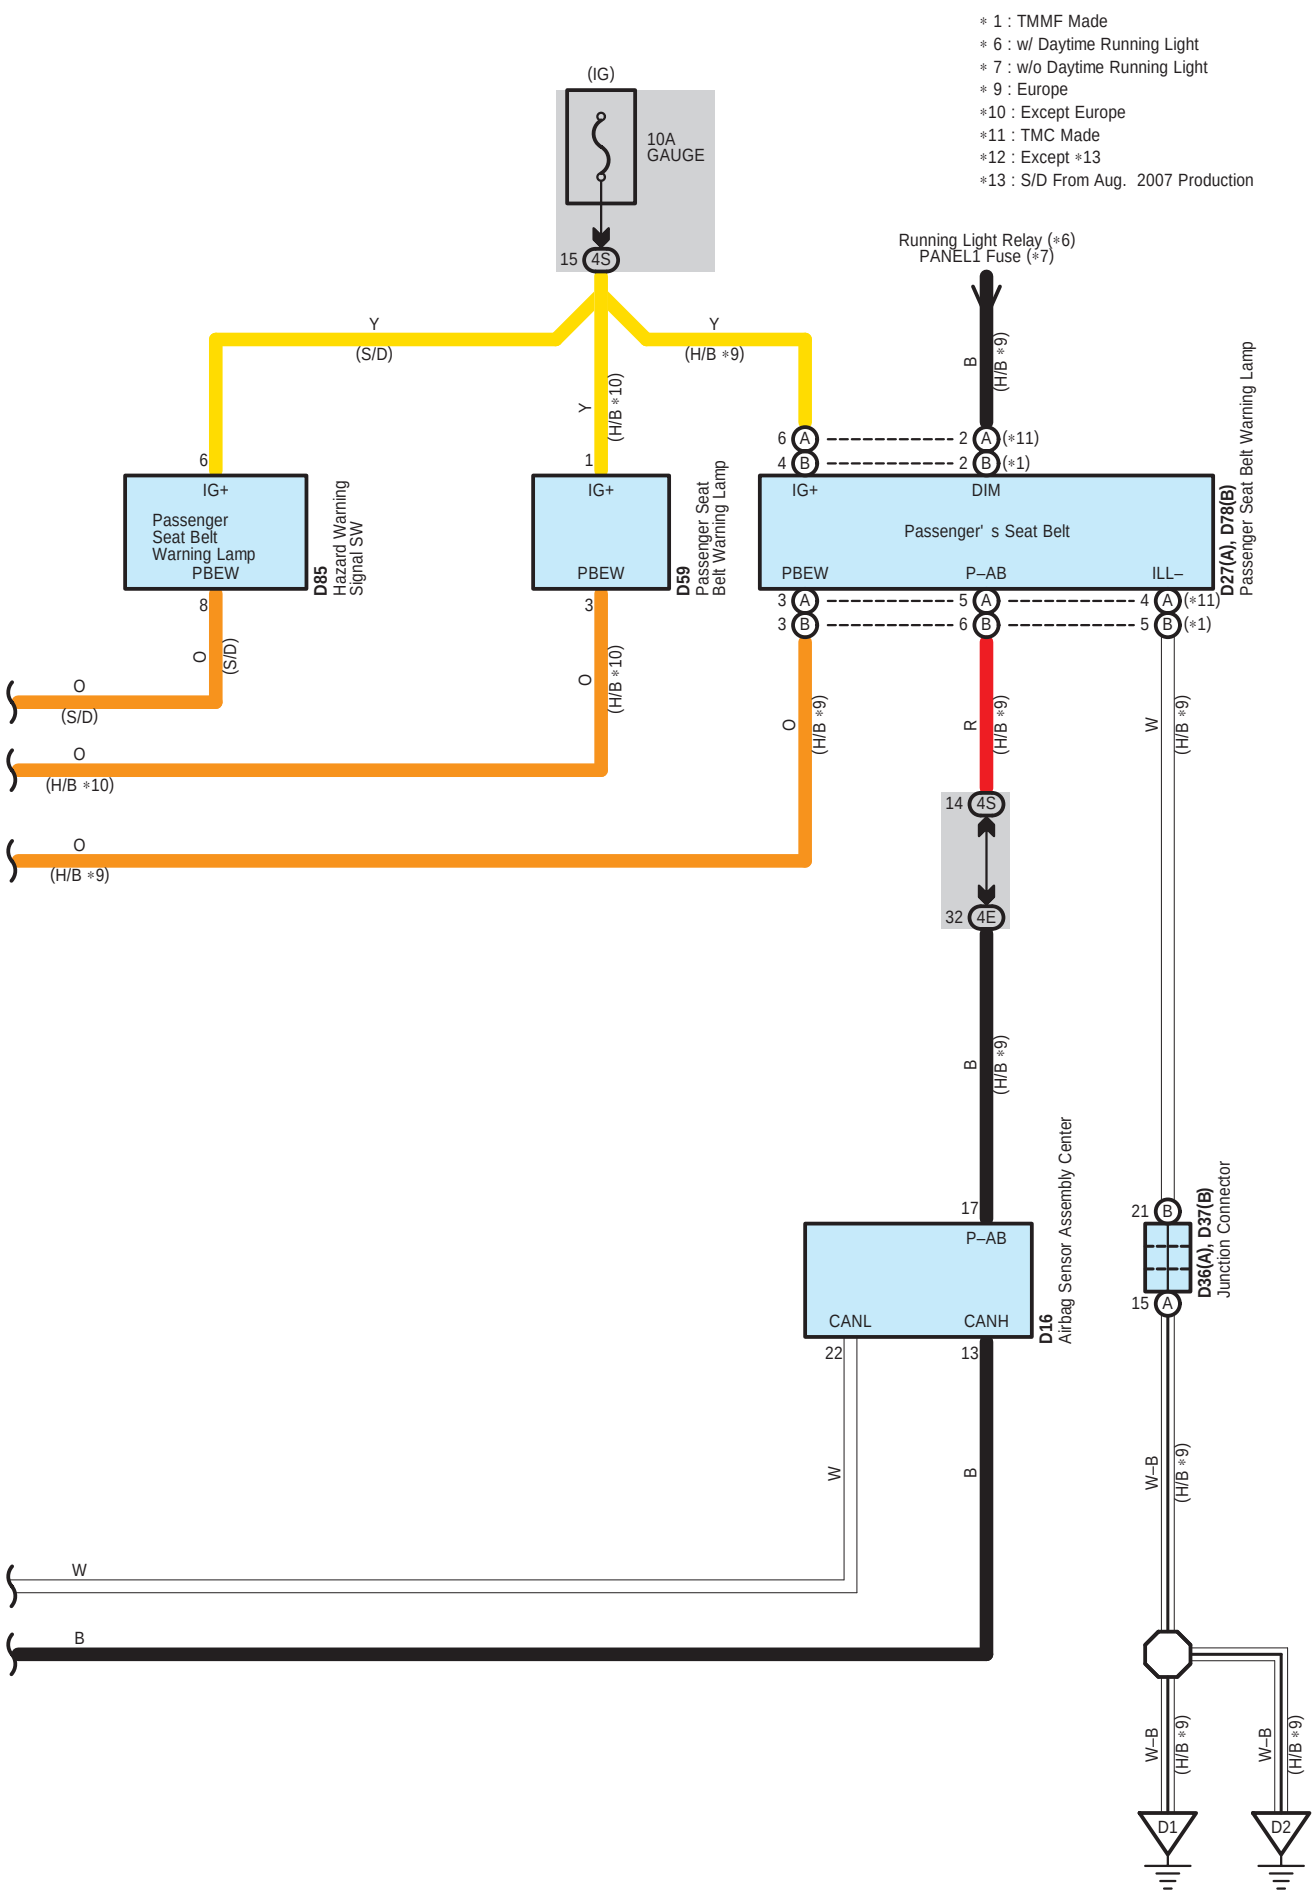



(BAT)
(IG)
7. 5A
ECU–B
10A
ECU–IG
(BAT)
15A
AM2
(IG)
7. 5A
MET
1
2
1B
4M
L
(*4)
GR
(*3)
Y
(*6)
B
(*7)
25 AA2
4 AD2
16
D35
Junction
Connector
17
D36(A)
Junction
Connector
5 A
6 A
7 A
O
(*3)
SB
(*3)
B
(*6)
W
9 A (*4 *12)
26 B (*3)
9 E (*4 *13)
30 4B
6
5
1 C
6 B
DBKL
BECU
IG
AM1
AM2
D33(A), (E), D64(B), D65(C), D66(D)
Main Body ECU
GND1
GND2
CANL
CANH
1
17 4E
4 C
22 A
16 D
22 E
23 A (*4 *12)
15 D (*3)
23 E (*4 *13)
W–B
(*3)
W
R
G
11 AD4
2 AD4
W–B
(LHD)
W–B
(RHD)
O
A15(A), A31(B), A39(C)
Skid Control ECU with Actuator
11 B
6 A
10 C
25 B (*2)
5 A (*8)
8 C (*1)
CANH
CANL
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
18 B
9 A
19 C
4 B
8 A
18 C
3 B
31 A
22 C
17 B
30 A
21 C
20 B
11 A
16 C
6 B
12 A
15 C
5 B
33 A
24 C
19 B
34 A
25 C
(*2)
(*8)
(*1)
R
G
P
V
Y
B
LG
L
D1
D2
Speed Sensors



D1(A), (E), D2(B), (C), D84(D)
Combination Meter
Driver' s Seat Belt
I/F
Buzzer
LED Driver
CPU
CAN Controller
I/F
CAN I/F
1 A
1 E
20 A
20 E
21 A
21 E
24 A
24 E
10 A (*12)
10 E (*13)
9 B (LHD H/B)
16 C (RHD H/B)
9 D (S/D)
B (*7)
B (*6)
G
W
O
O (S/D)
O (H/B *10)
O (H/B *9)
G
W
D42
Junction Connector
7
18
5
16
11
22
R
W
O
Y
W
BR
12
1
11
22
D41
Junction Connector
8
19
W
B
D3


∗ 1 : TMMF Made
∗ 6 : w/ Daytime Running Light
∗ 7 : w/o Daytime Running Light
∗ 9 : Europe
∗10 : Except Europe
∗11 : TMC Made
∗12 : Except ∗13
∗13 : S/D From Aug. 2007 Production
(IG)
10A GAUGE
15 4S
Running Light Relay (∗6)
PANEL1 Fuse (∗7)
Y (S/D)
Y (H/B ∗9)
Y (H/B ∗10)
B (H/B ∗9)
6 IG+ Passenger Seat Belt Warning Lamp PBEW
D85 Hazard Warning Signal SW
1 IG+ PBEW
D59 Passenger Seat Belt Warning Lamp
IG+ DIM Passenger' s Seat Belt PBEW P–AB ILL–
D27(A), D78(B) Passenger Seat Belt Warning Lamp
6 A 4 B 2 A (∗11) 2 B (∗1)
8 O (S/D)
3 O (H/B ∗10)
3 A 3 B 5 A 6 B 4 A (∗11) 5 B (∗1)
O (S/D)
O (H/B ∗10)
O (H/B ∗9)
O (H/B ∗9)
R (H/B ∗9)
W (H/B ∗9)
14 4S
32 4E
B (H/B ∗9)
17 P–AB CANL CANH
D16 Airbag Sensor Assembly Center
22 13
W
B
21 B 15 A
D36(A), D37(B) Junction Connector
W–B (H/B ∗9)
W–B (H/B ∗9)
W–B (H/B ∗9)
D1
D2


A 15
Black

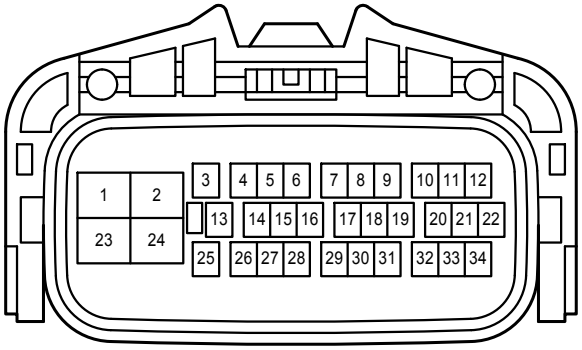


A 31
Black

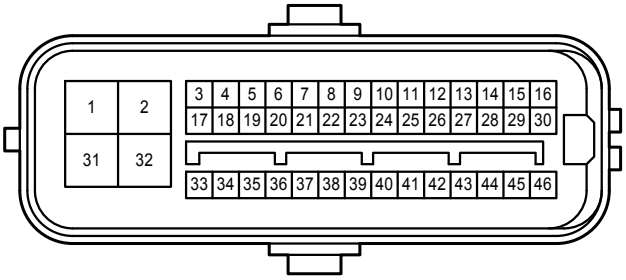

A 39
Black

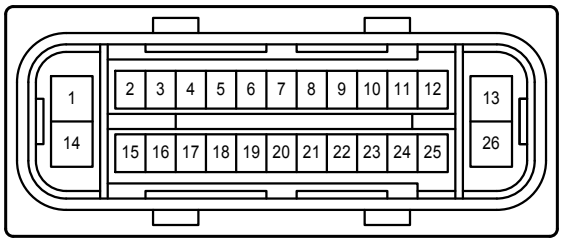


D 1
White

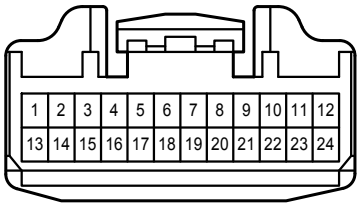


(S/D From Aug. 2007 Production)

D 1
White

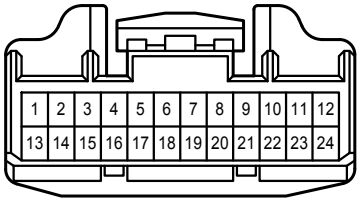


(H/B, S/D Before Aug. 2007 Production)


D 2
White

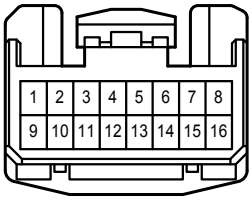


D 16
Yellow

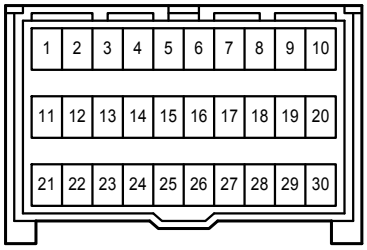

D 27
White




D 33
White

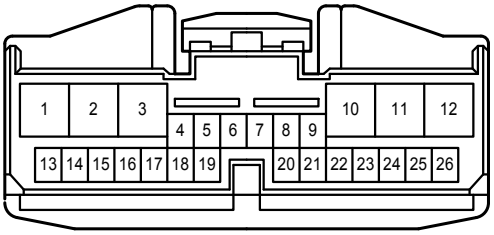


(S/D From Aug. 2007 Production)

D 33
White

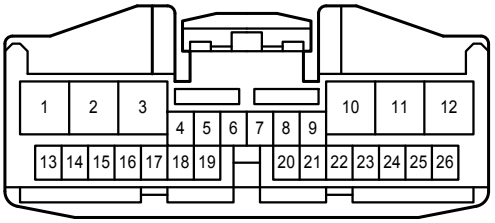


(H/B, S/D Before Aug. 2007 Production)


D 35
White

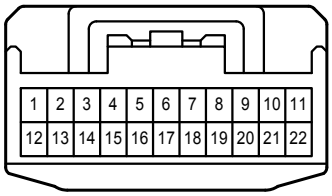


D 36
White

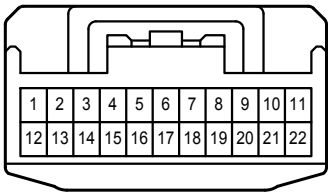


D 37
White

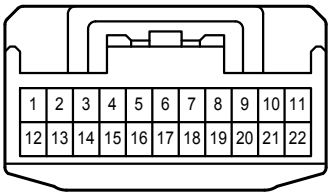


D 41
White

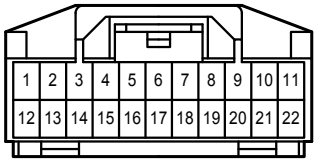


D 42
White

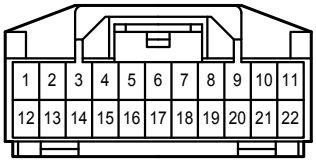


D 59
White

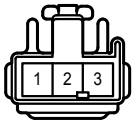


D 64
White

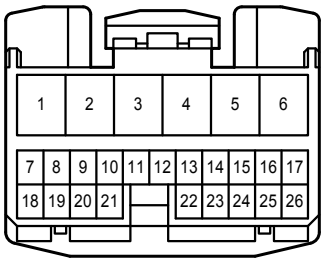


D 65
White

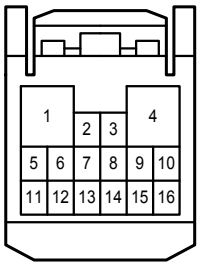


D 66
White

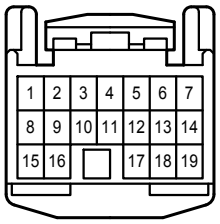


D 78
White

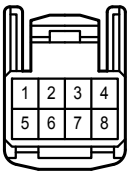


D 84
White

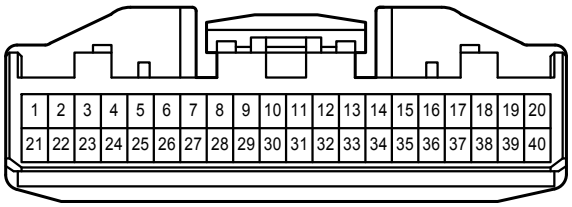


D 85
White

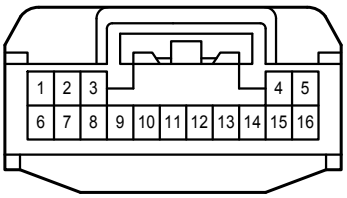


J 34
White




J 35
White




1B
White

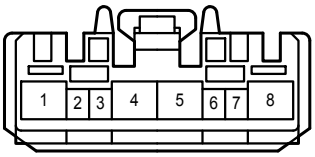


4A
White

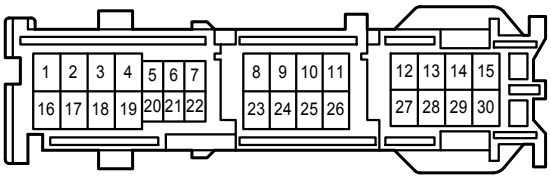


4B
White

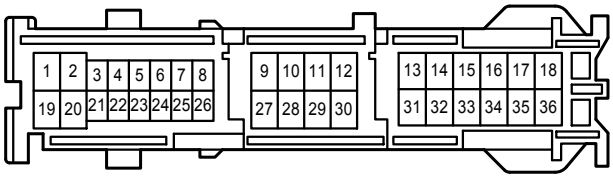


4E
White

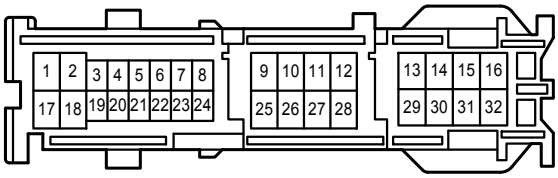

4M
White

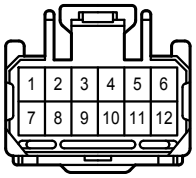

4S
White

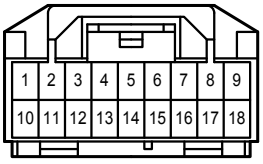


5A
White




6A
White




AA2
White

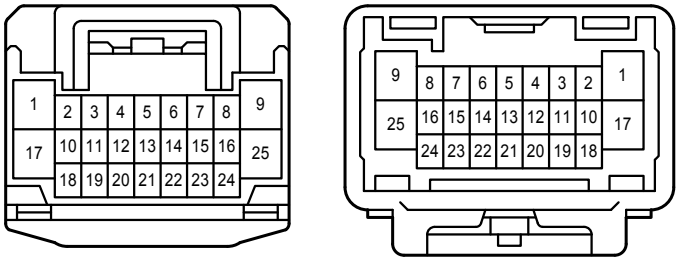


AD2
White

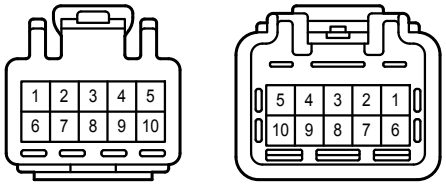

AD4
Gray

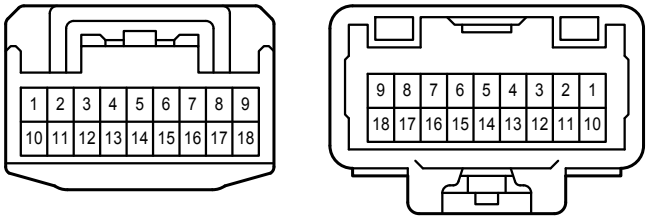

JD1
White

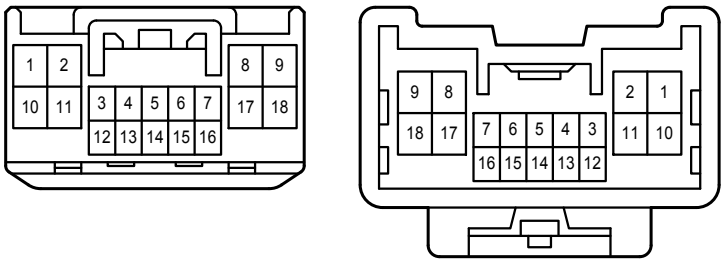

JD2
White

