
■AXLE

- The double-row angular ball bearings are used in the front and rear axles.
- Due to an active type speed sensor being adopted, a sensor rotor is provided on the bearing inner race. For details on the speed sensor, see page CH-89.

▶ Front Axle ◀

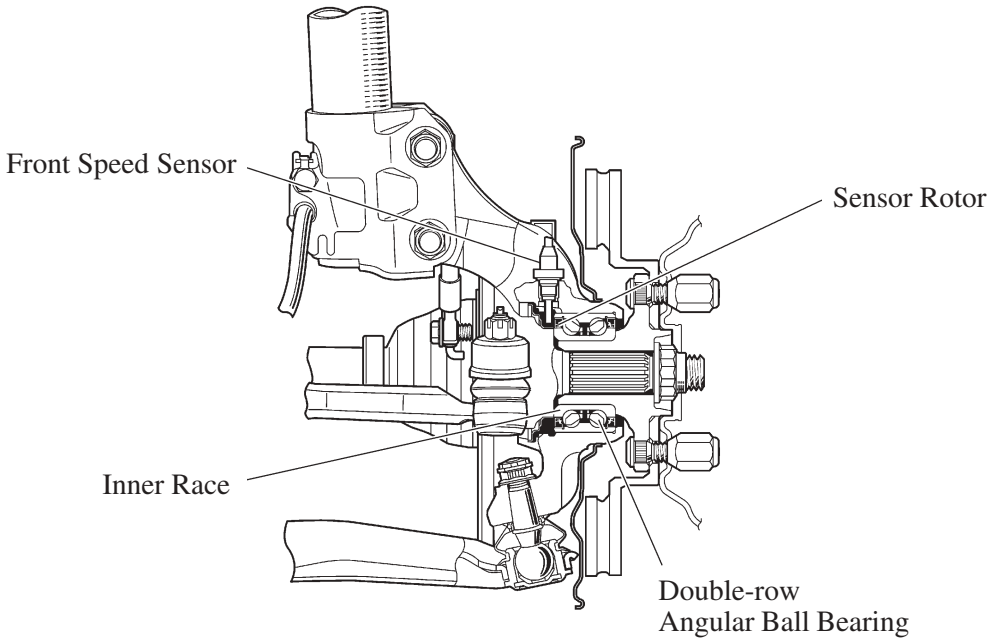

▶ Rear Axle ◀

