

COWL TOP SIDE PANEL (ASSY): Hatchback


F22832A

REPLACEMENT


REMOVAL

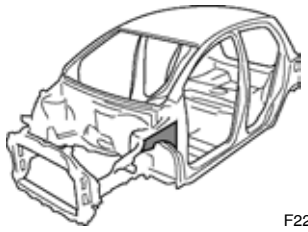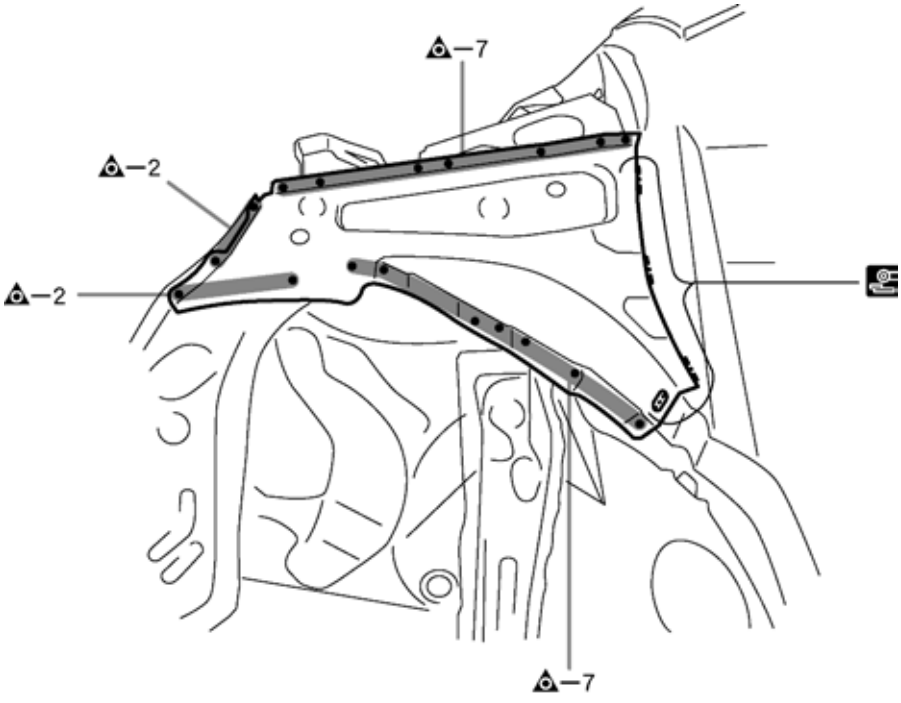

F22832


INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

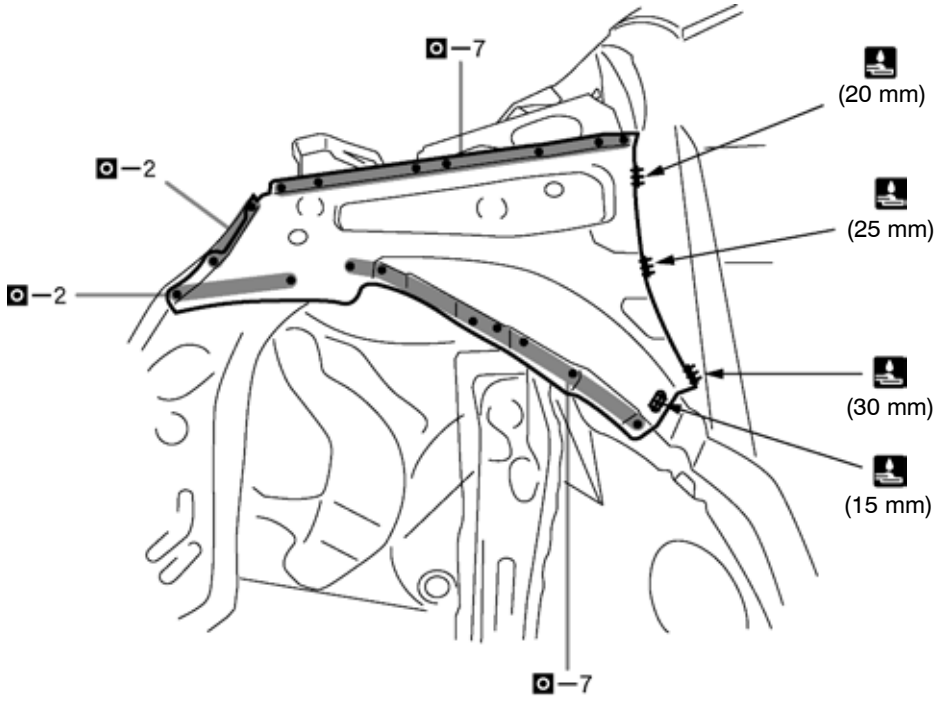


15 mm (0.59 in.) 20 mm (0.79 in.) 25 mm (0.98 in.) 30 mm (1.18 in.)

COWL TOP SIDE PANEL (ASSY): Sedan

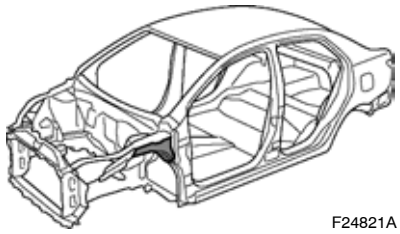
F24821A

REPLACEMENT


REMOVAL

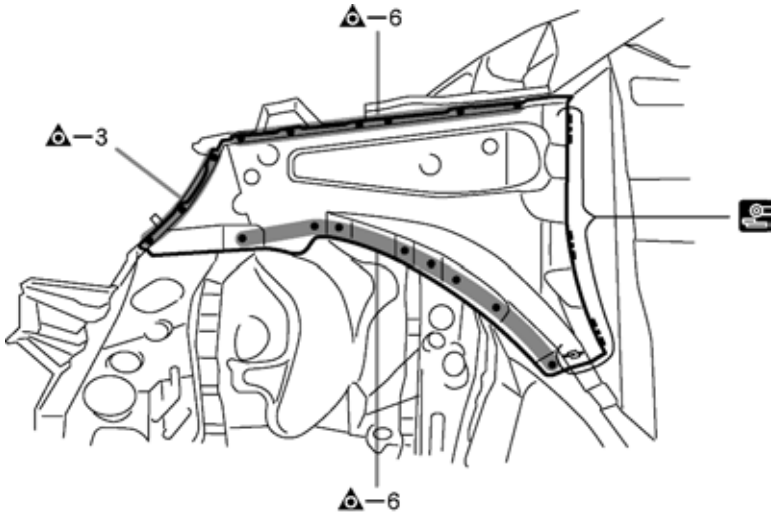

F24821-1

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

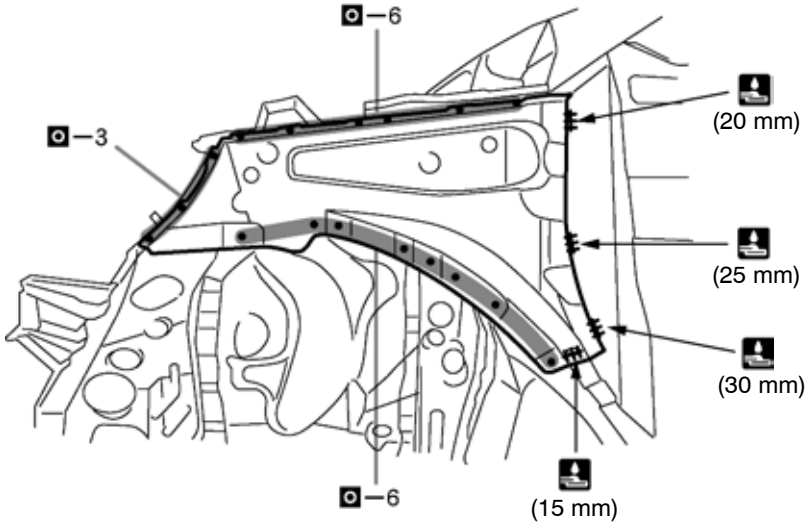

F24821-2

15 mm (0.59 in.) 20 mm (0.79 in.) 25 mm (0.98 in.) 30 mm (1.18 in.)