
BODY PANEL SEALING AREAS

HINT:
1) Prior to applying body sealer, clean the area with a rag soaked in silicone remover.
2) If weld-through primer was used, first wipe off any excess and than coat with anti-corrosion primer before applying body sealer.
3) Wipe off excess body sealer with a rag soaked in silicone remover.
4) Besure to repair as necessary if the body sealer shows signs of damage such as peeling or cracking.

++++++++++	Flat Finishing	————	No Flat Finishing


1. ENGINE COMPARTMENT

[Hatchback]

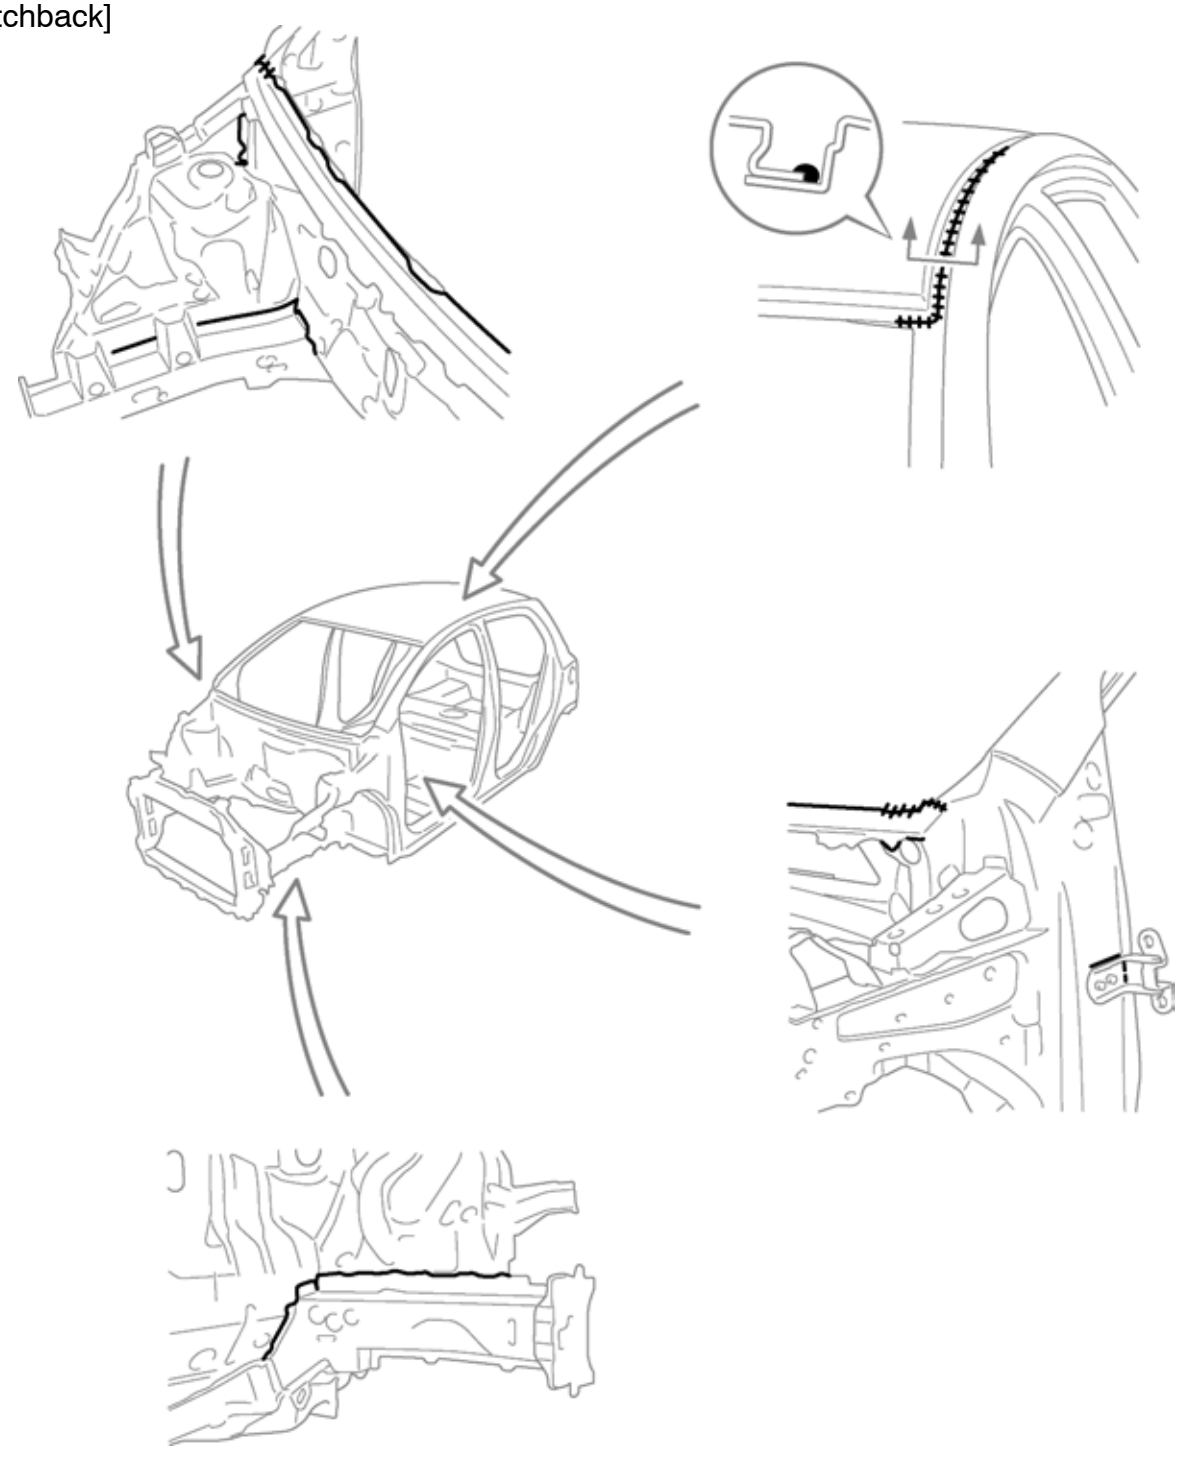

F22806


[Sedan]

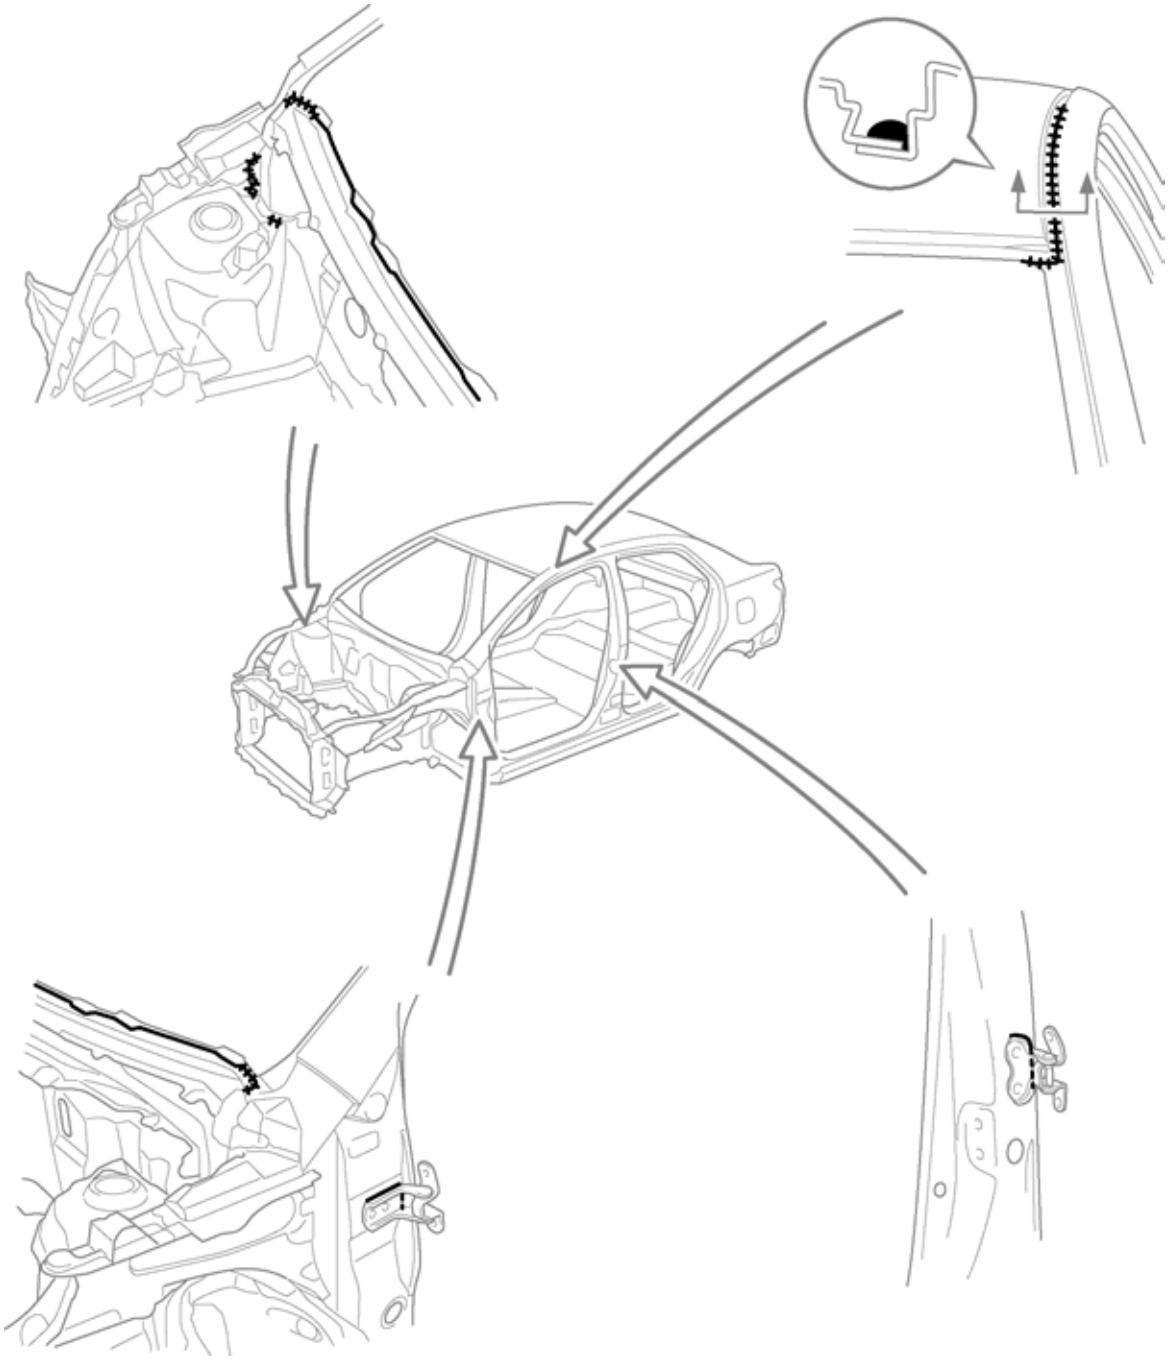

F24801-1


2. INSIDE

[Hatchback]

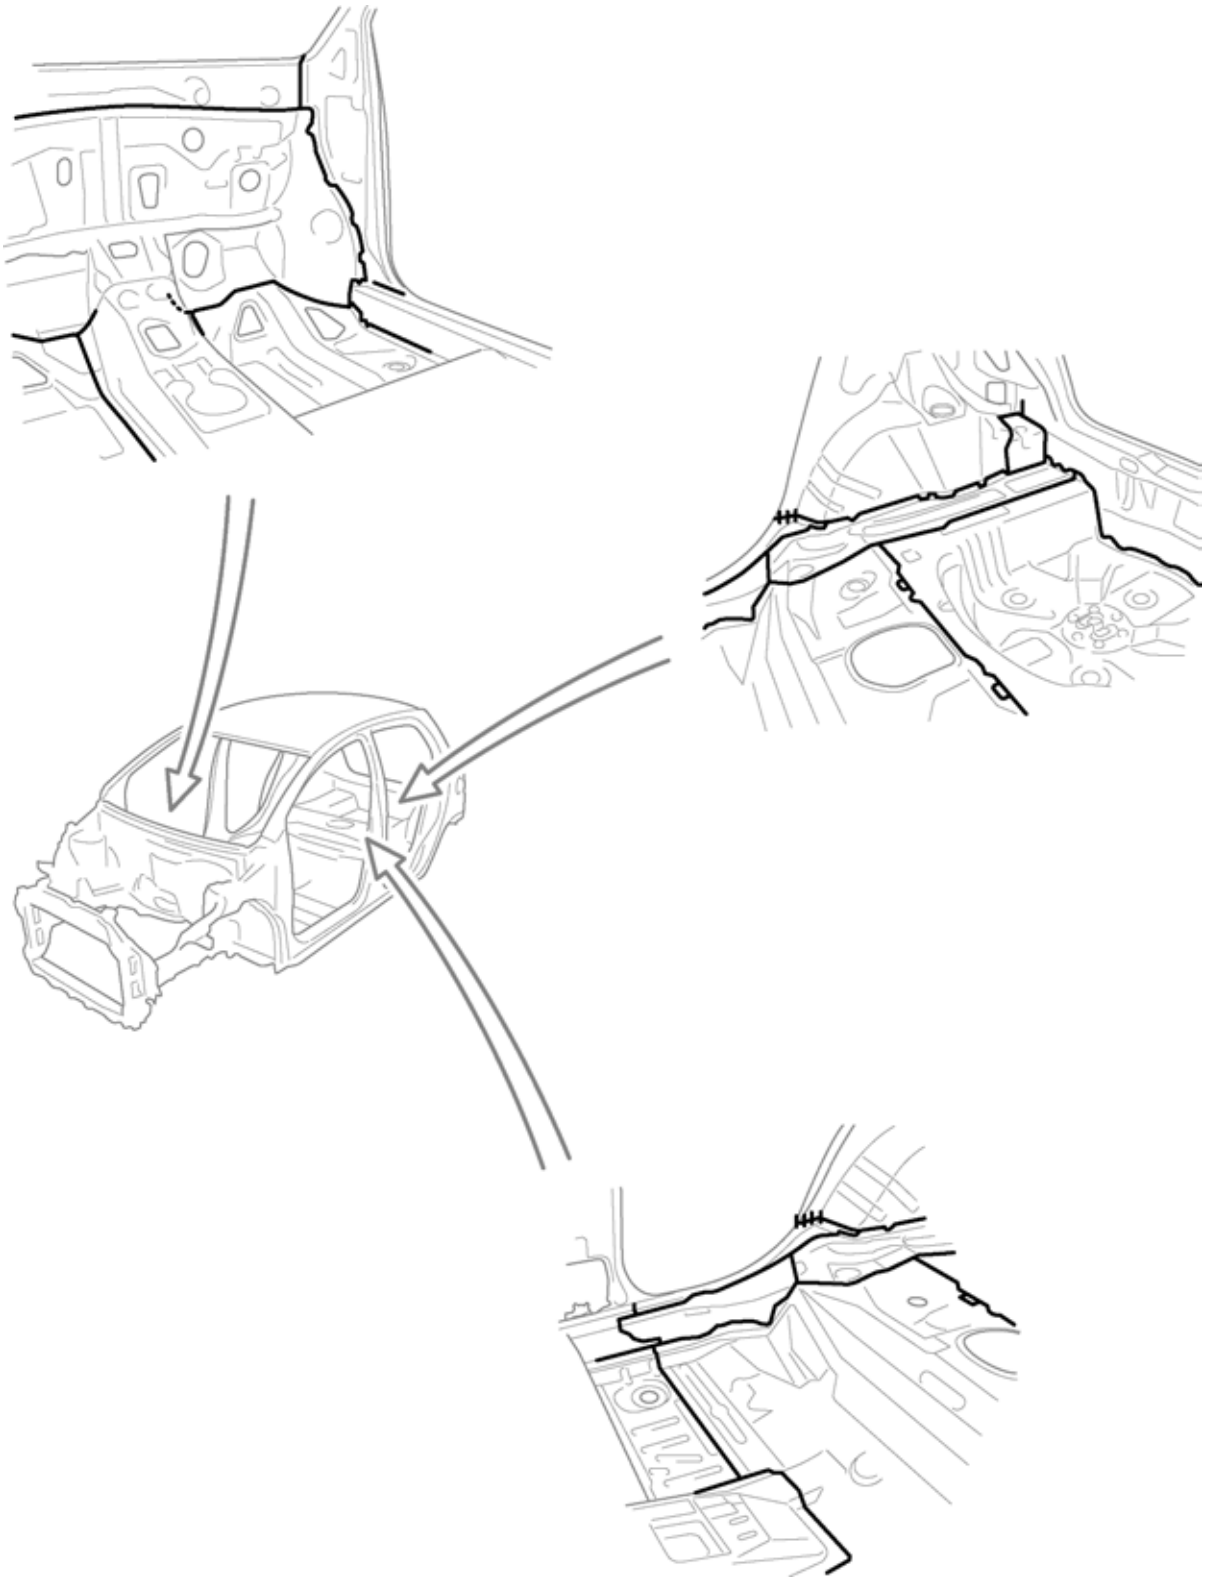

F22336


[Sedan]

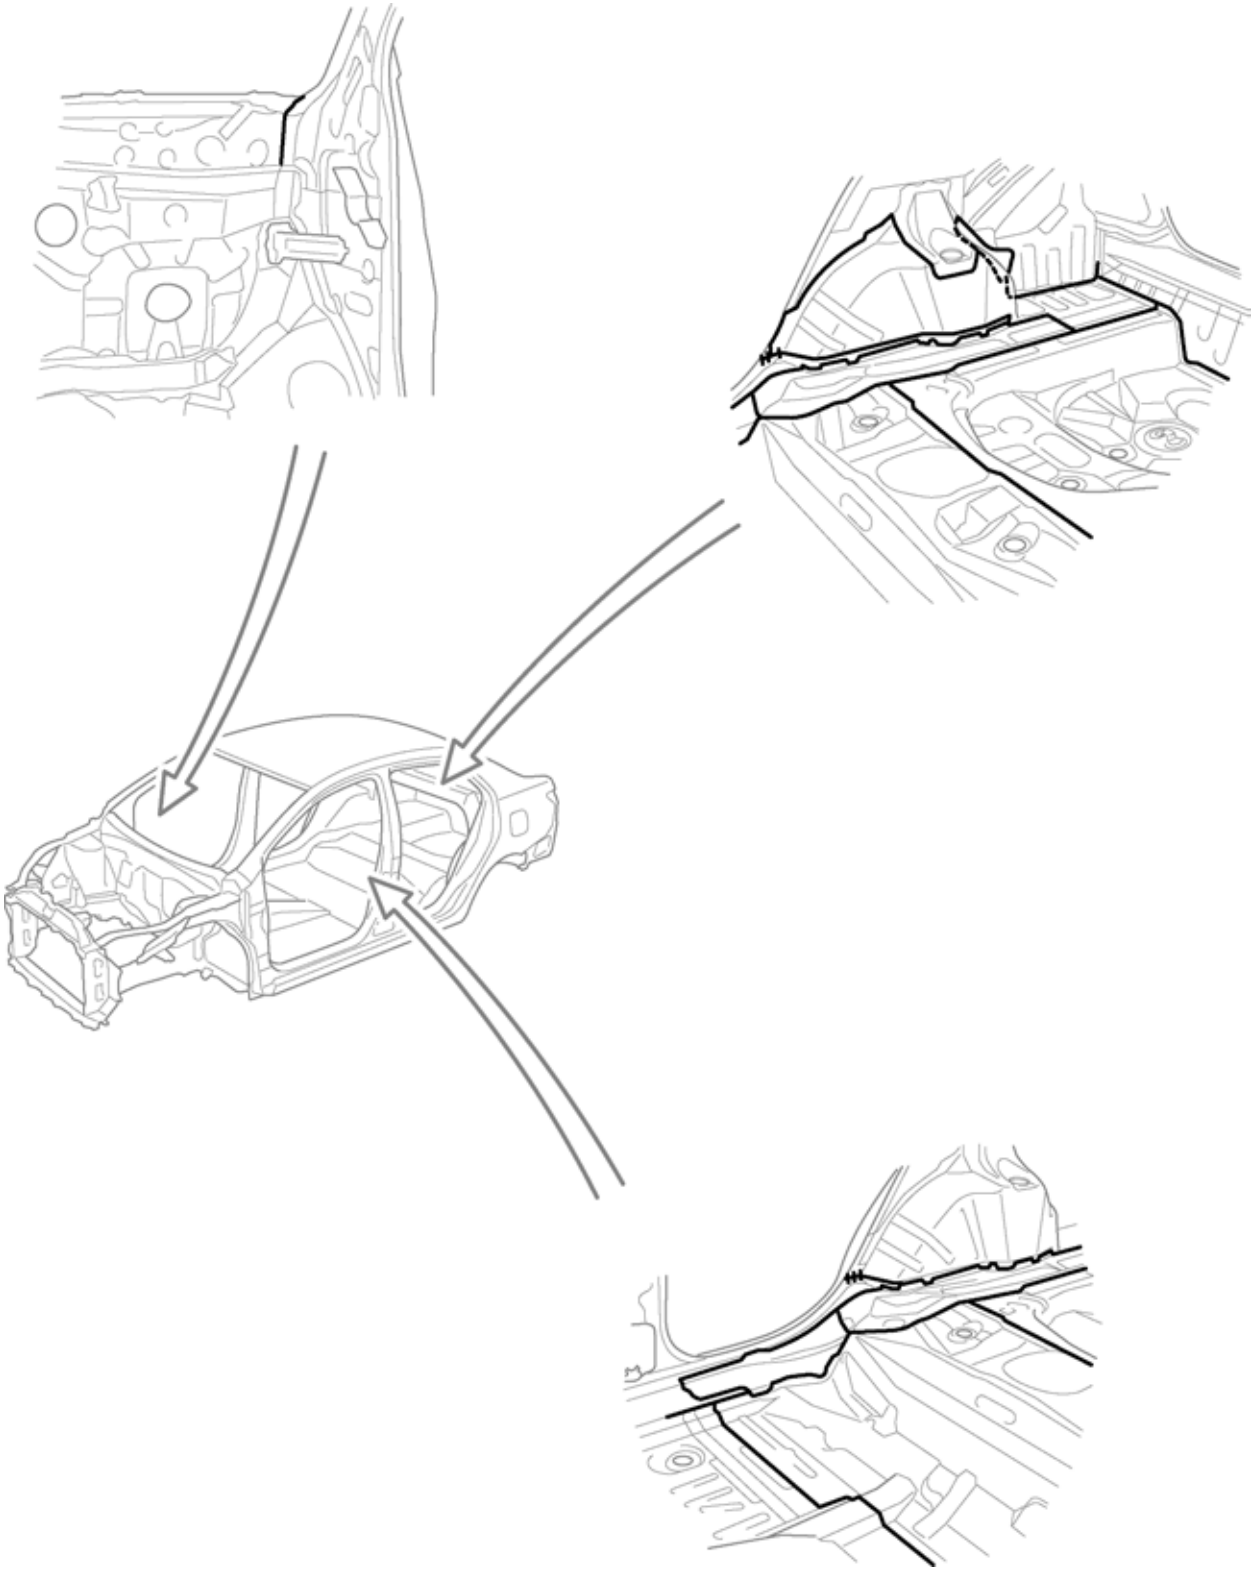

F24802-1


3. OUTSIDE

[Hatchback]

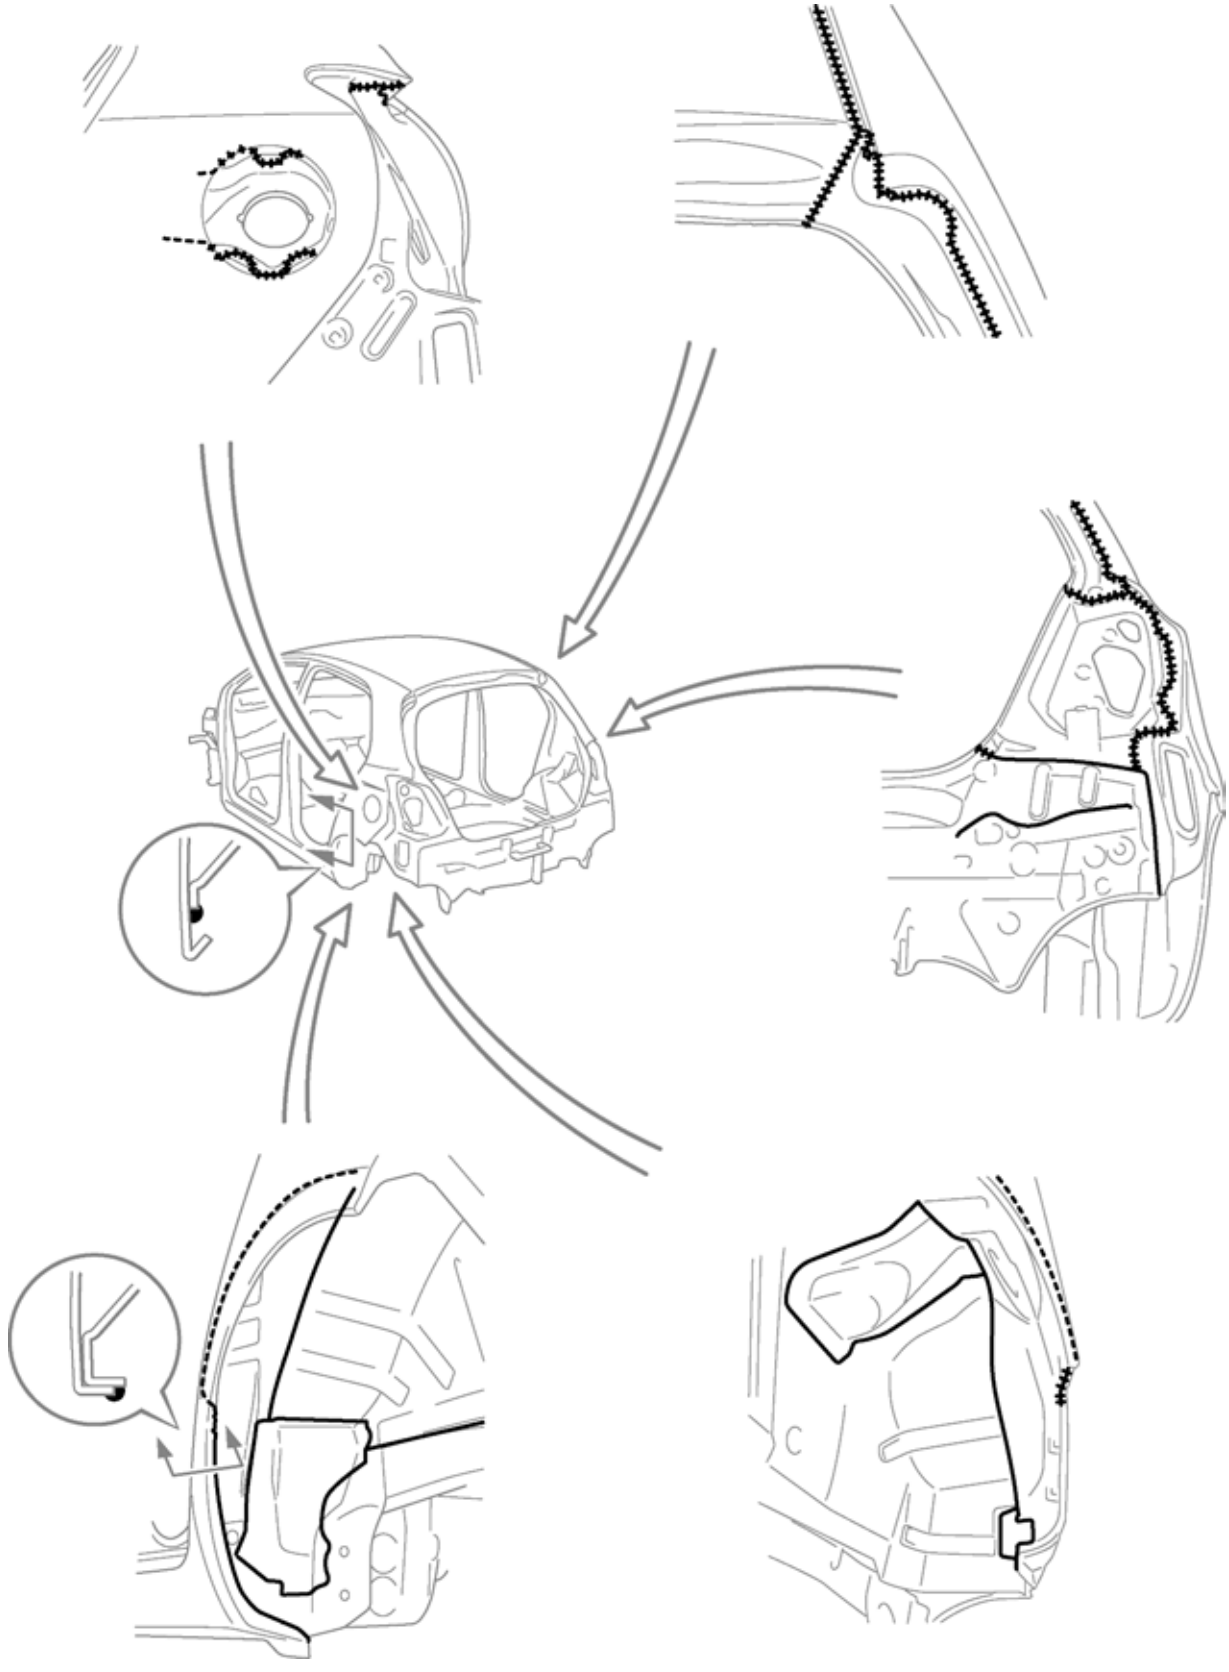

F22337


[Sedan]

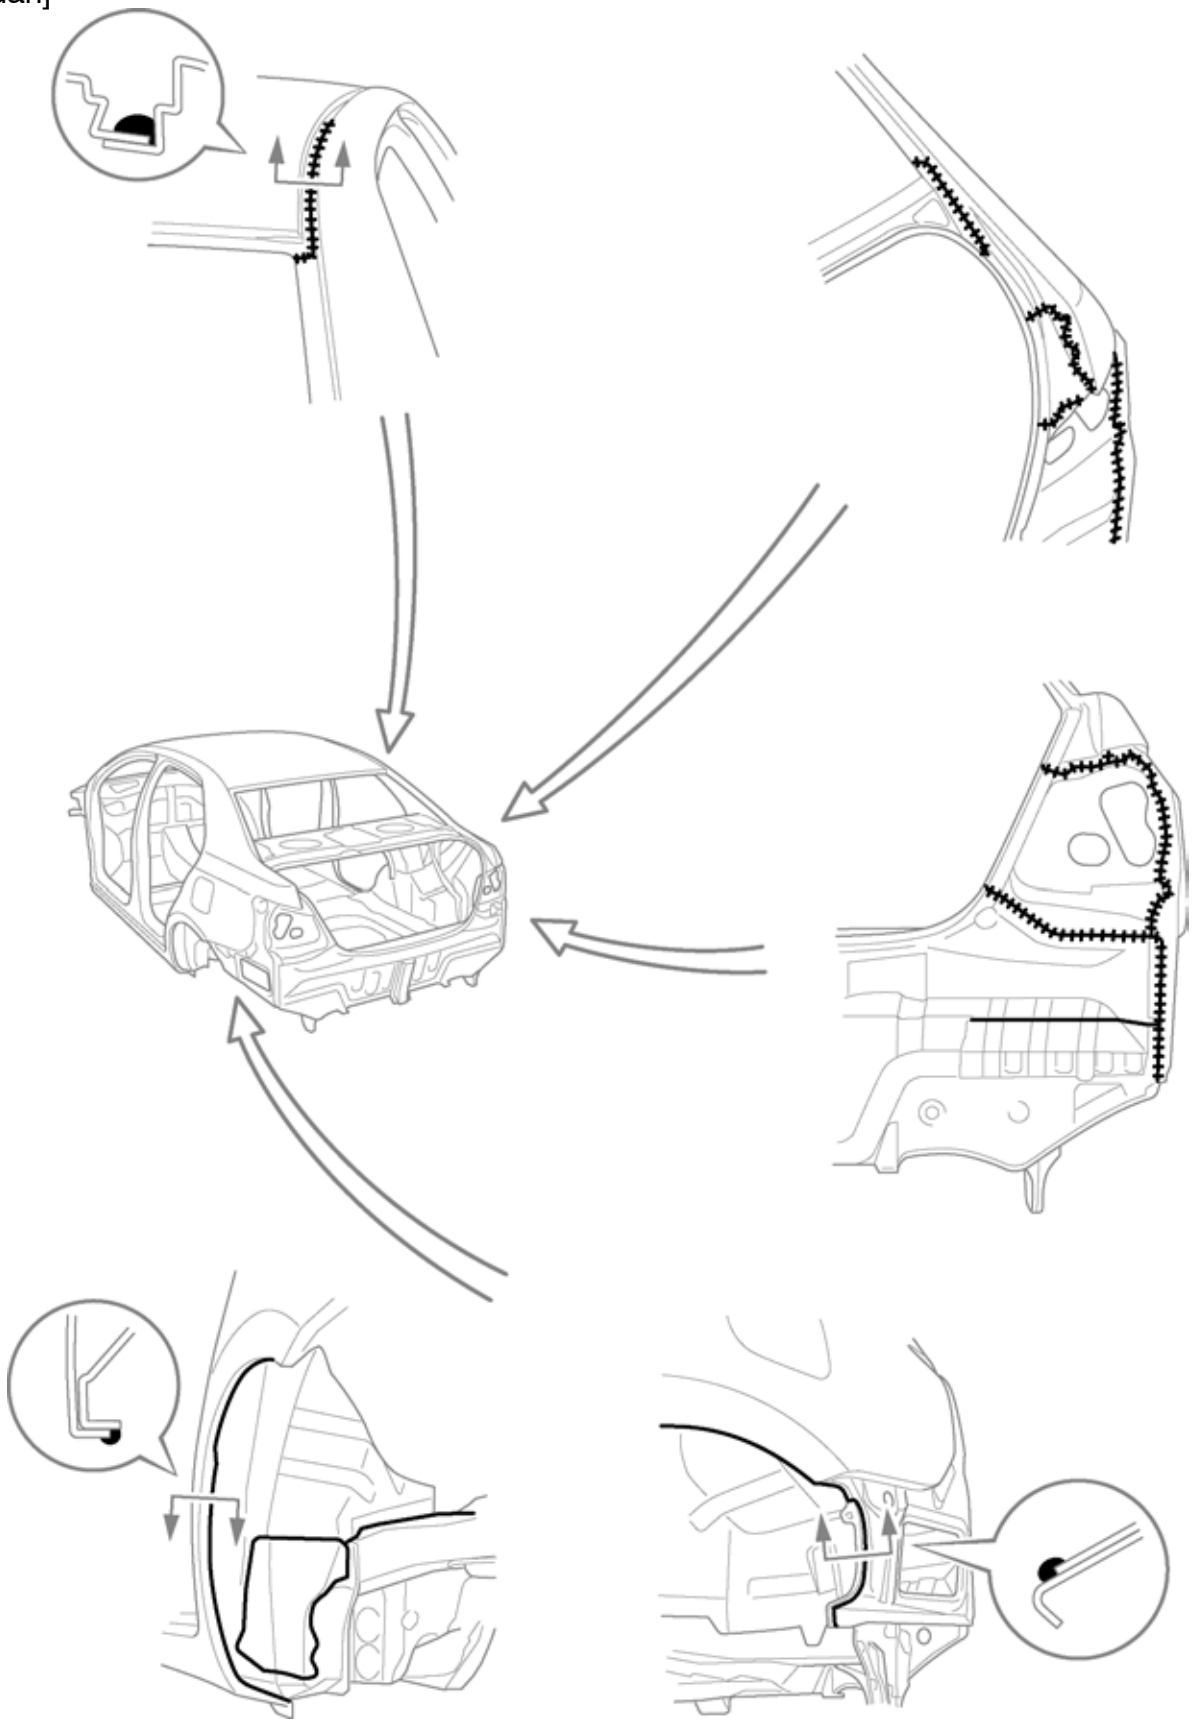

F24803-1


4. DOOR PARTS

[Hatchback 3 Door]

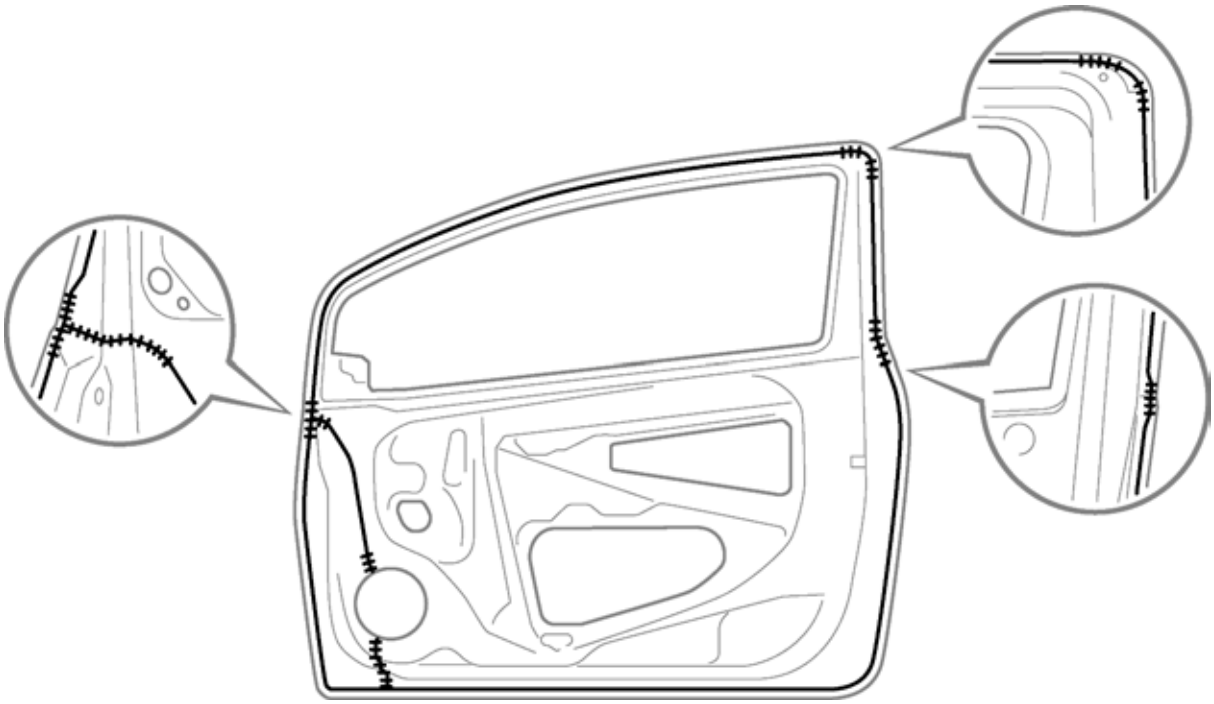


F22338

[Hatchback 5 Door]

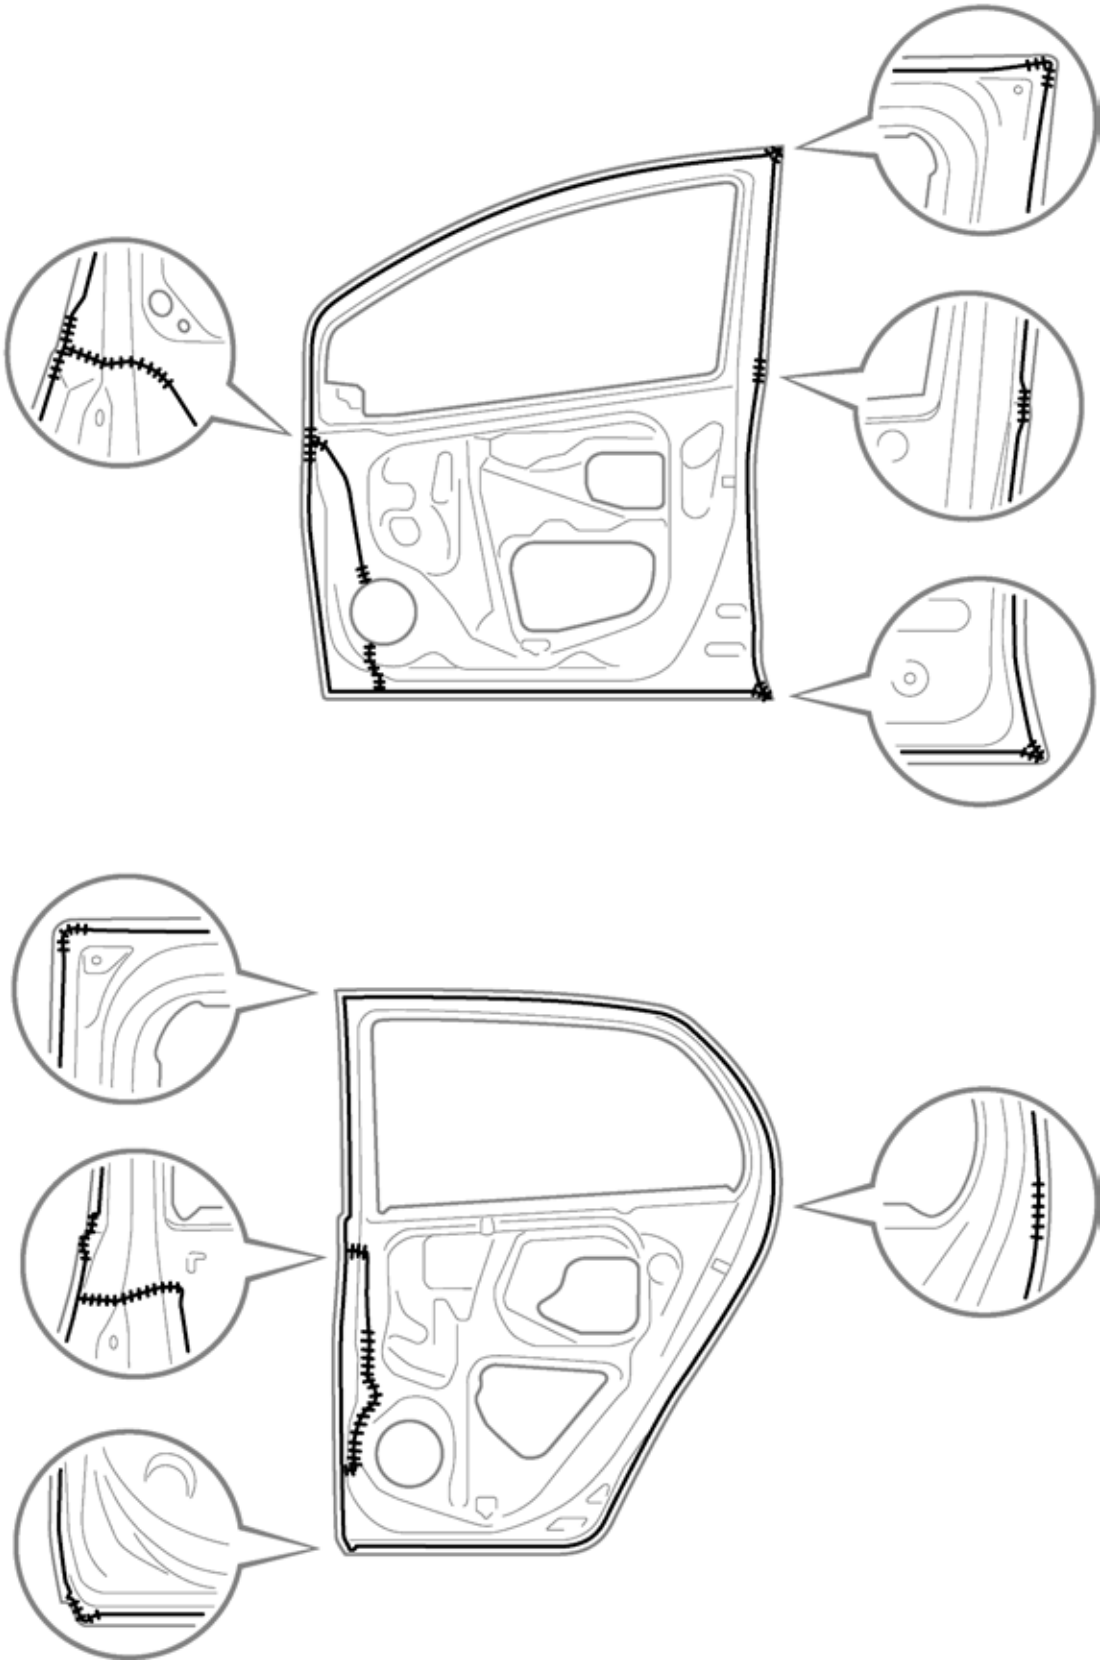


F23339

[Sedan]

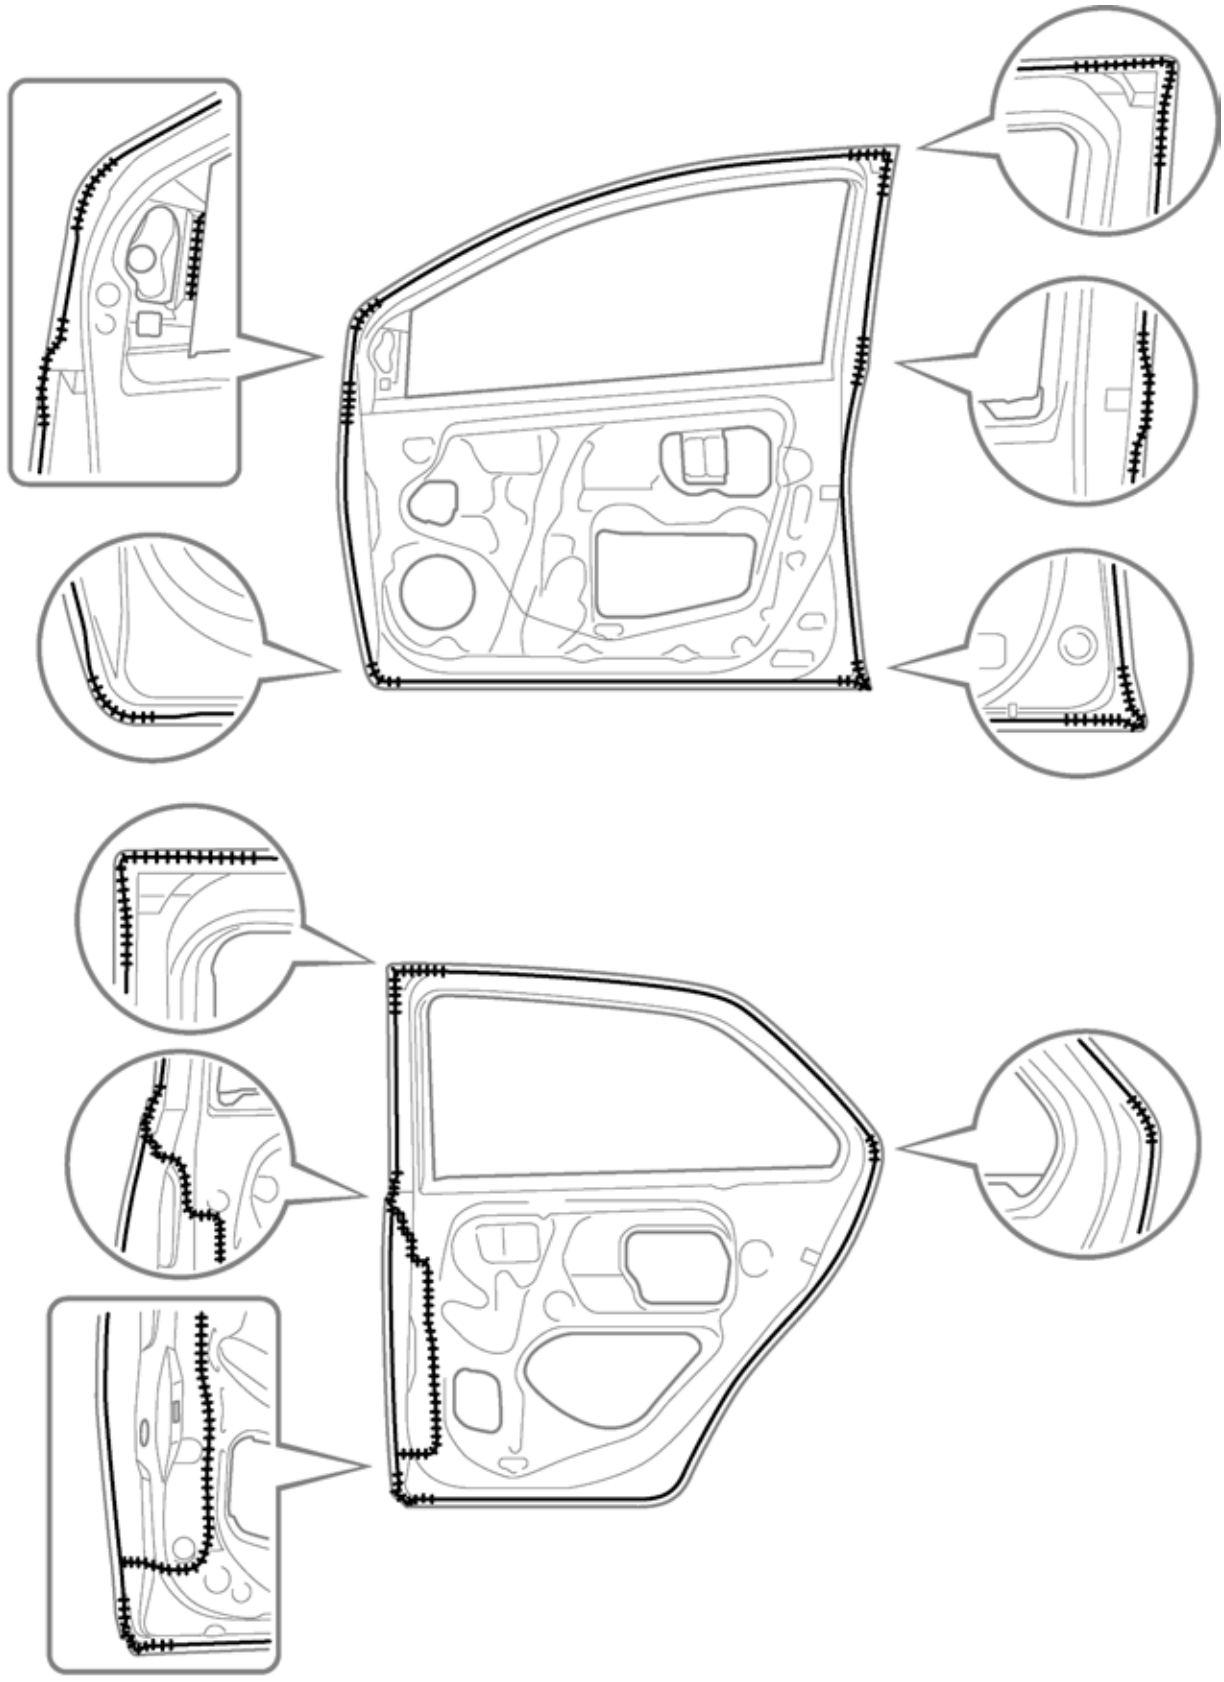


F24804-1

[Hatchback]

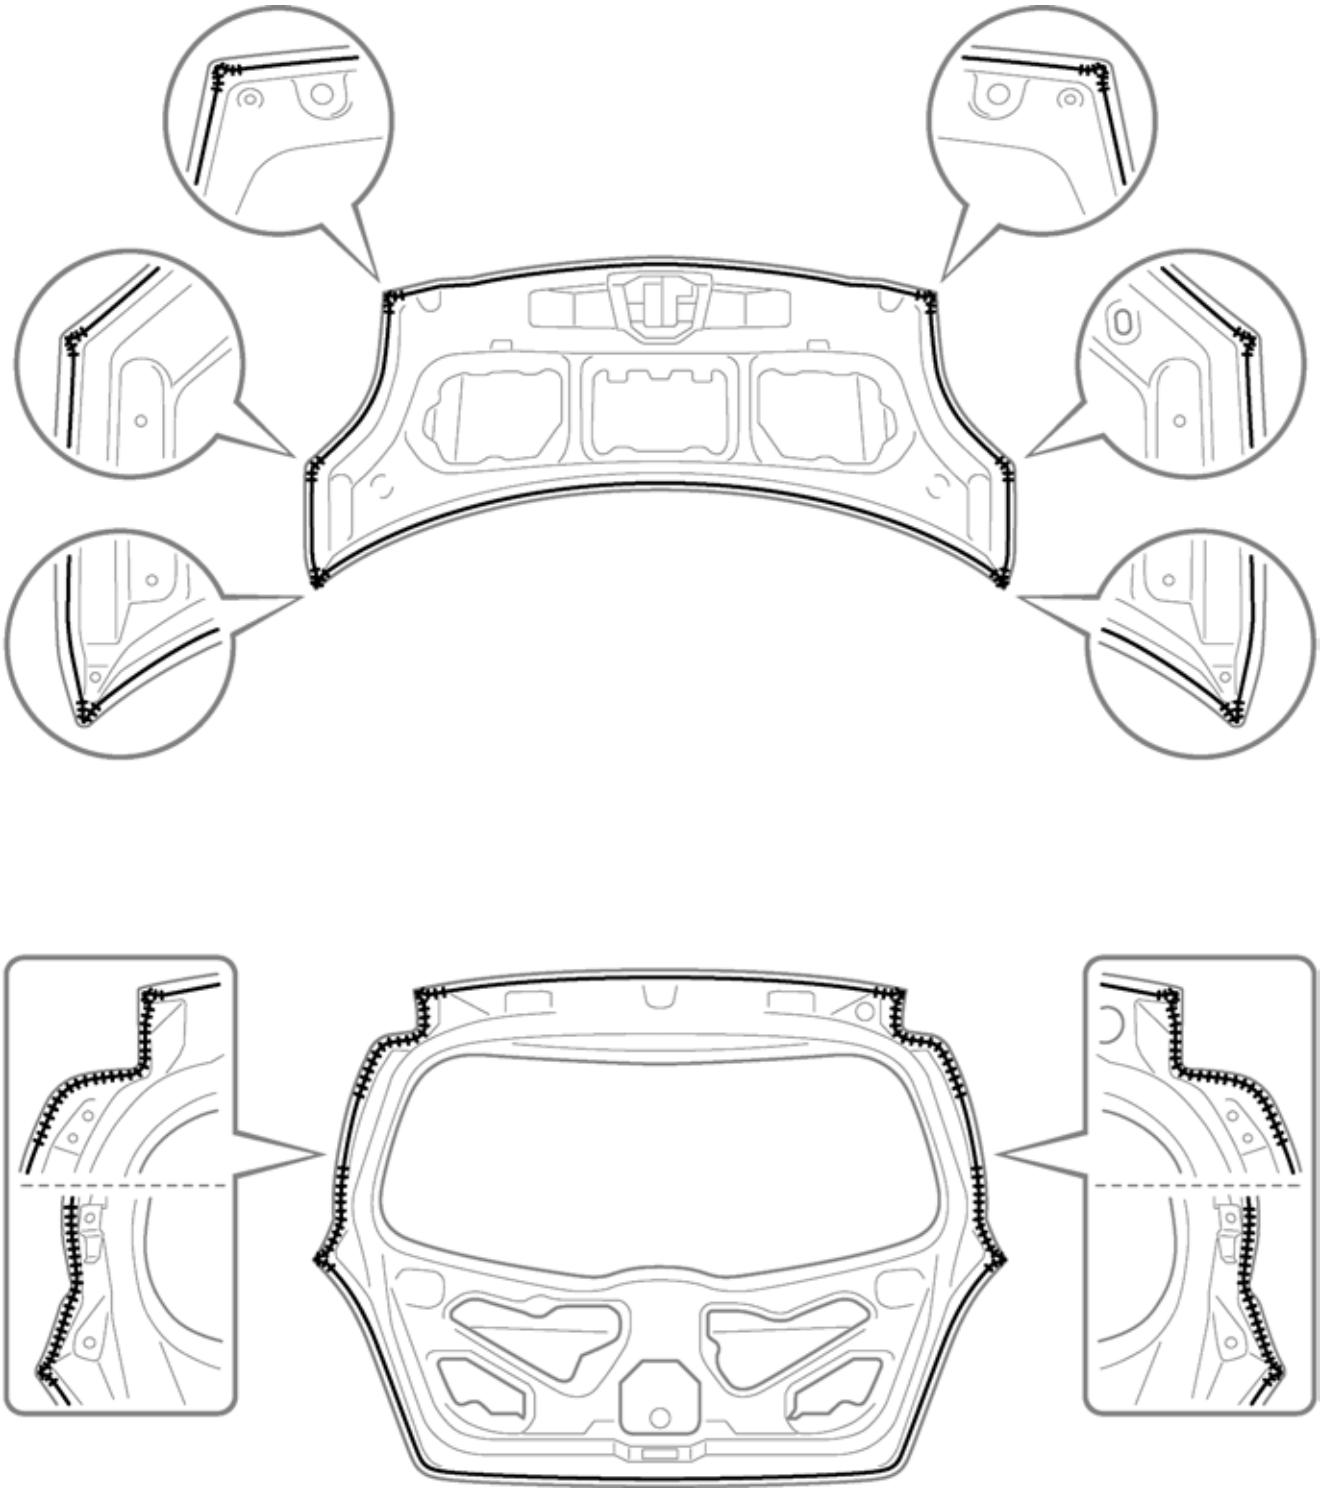

F22810

[Sedan]

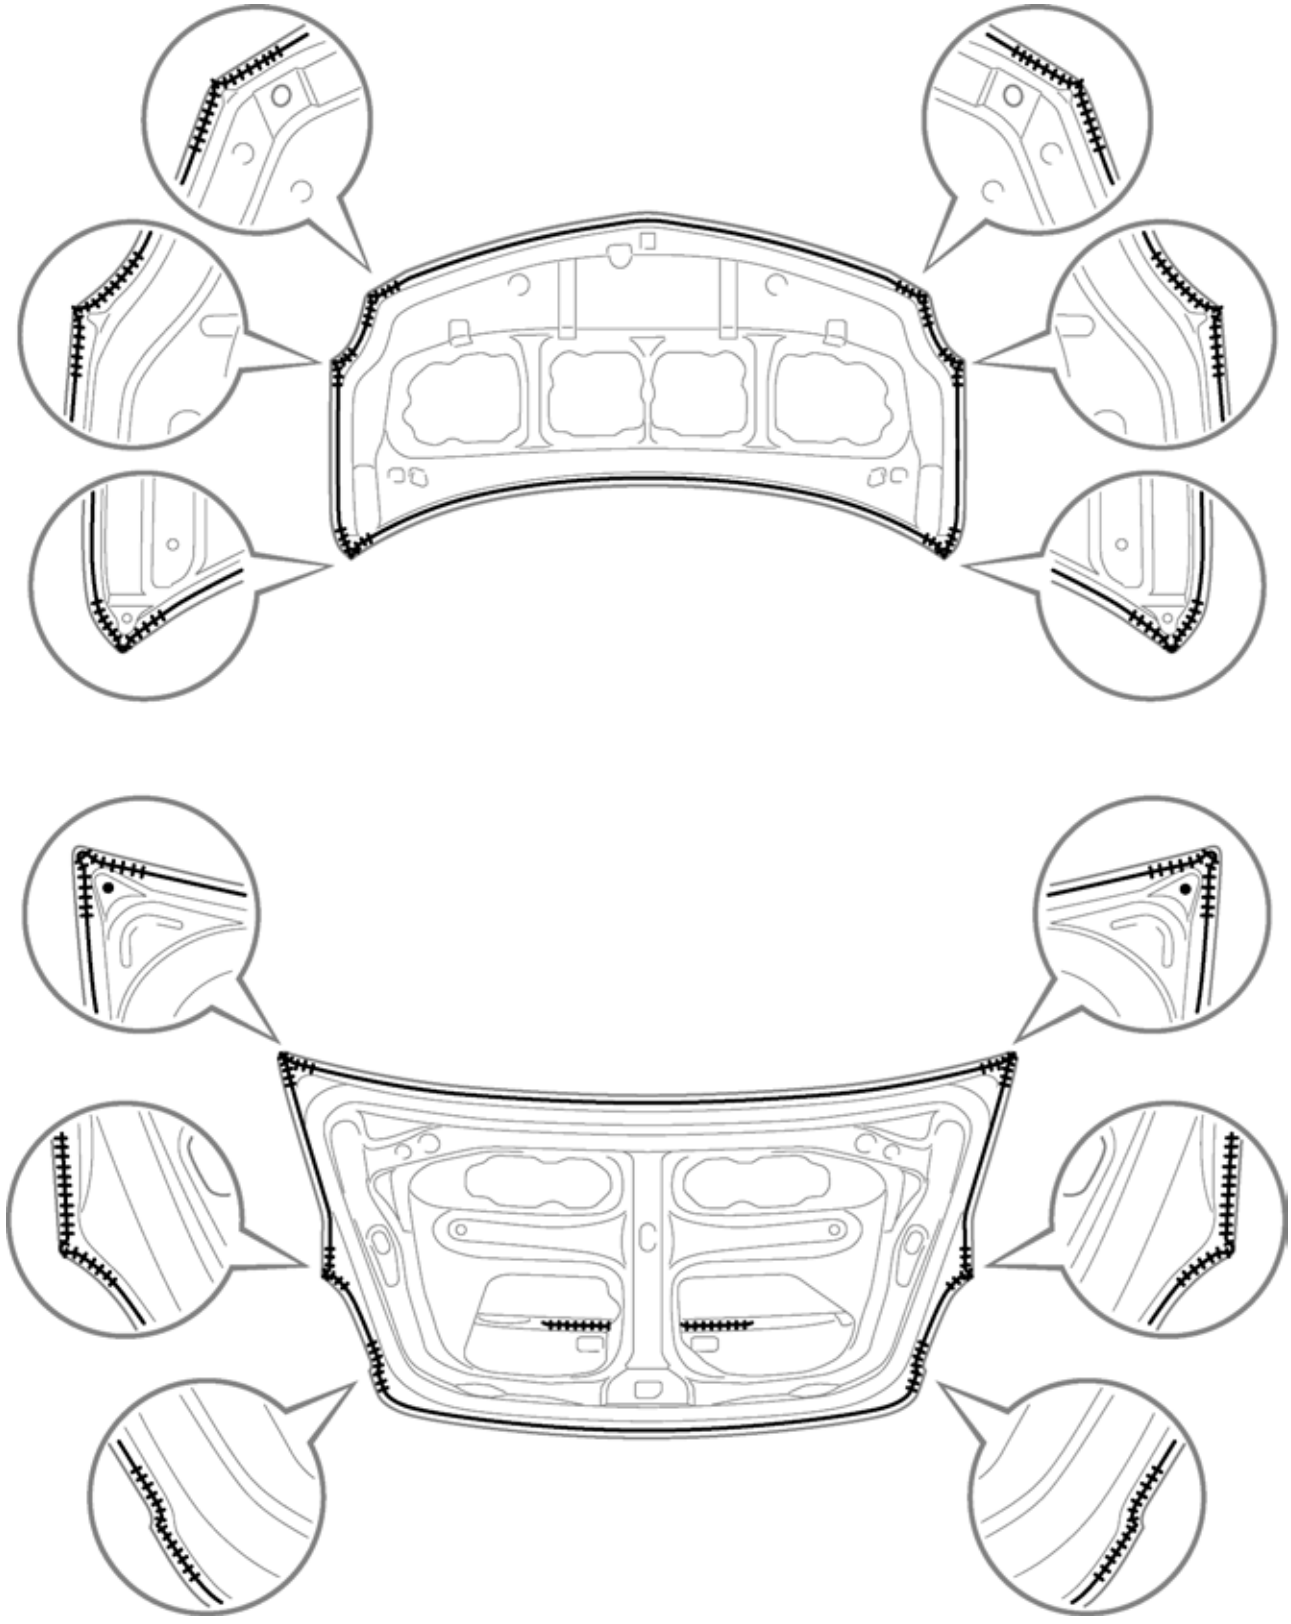

F24805-1