
(Cont. next page)


Taillight and Illumination


* 1 : w/ Daytime Running Light
* 2 : w/o Daytime Running Light

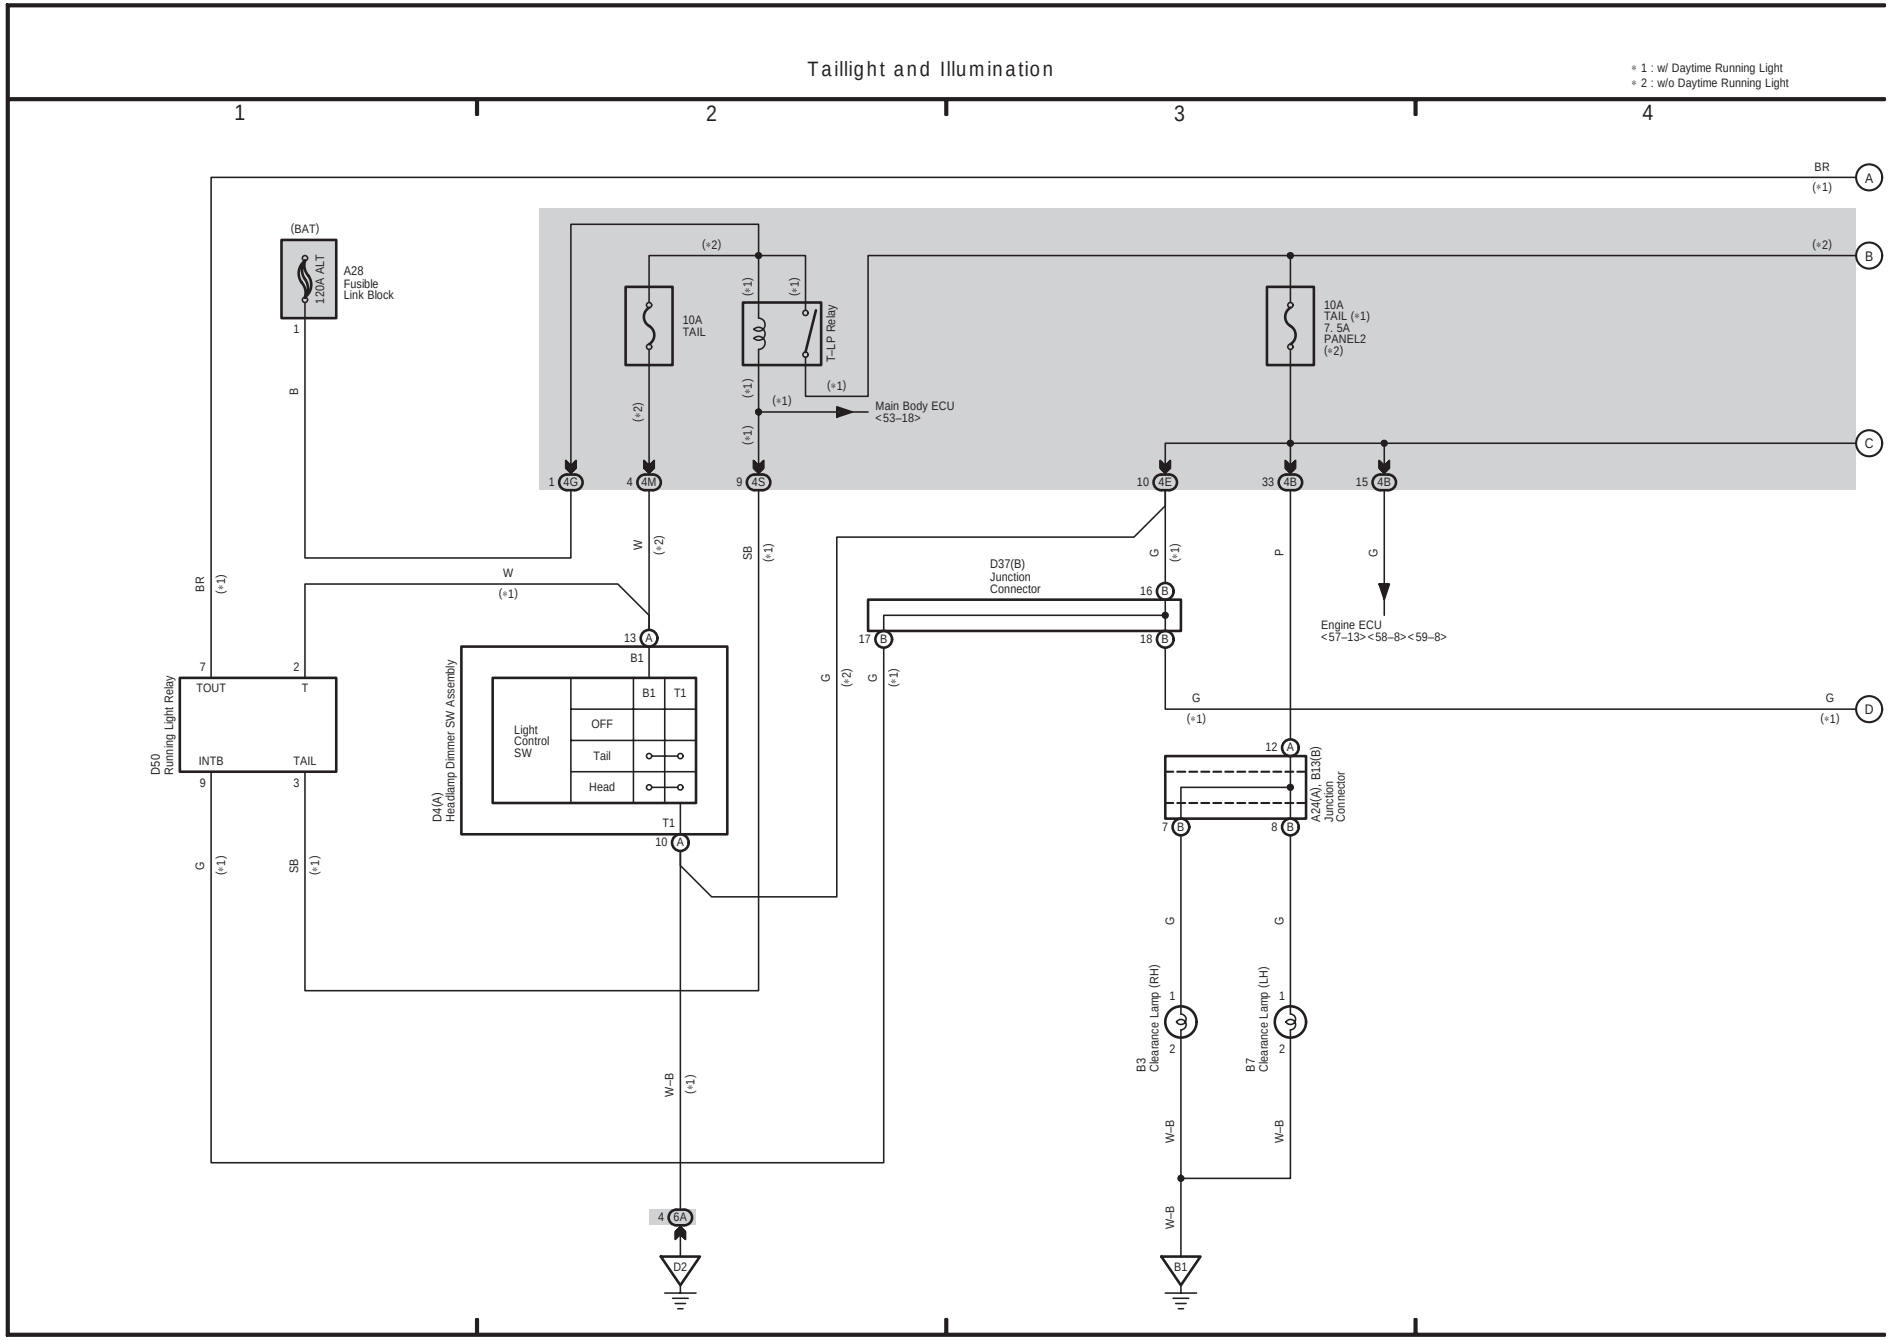

(Cont. next page)

Taillight and Illumination

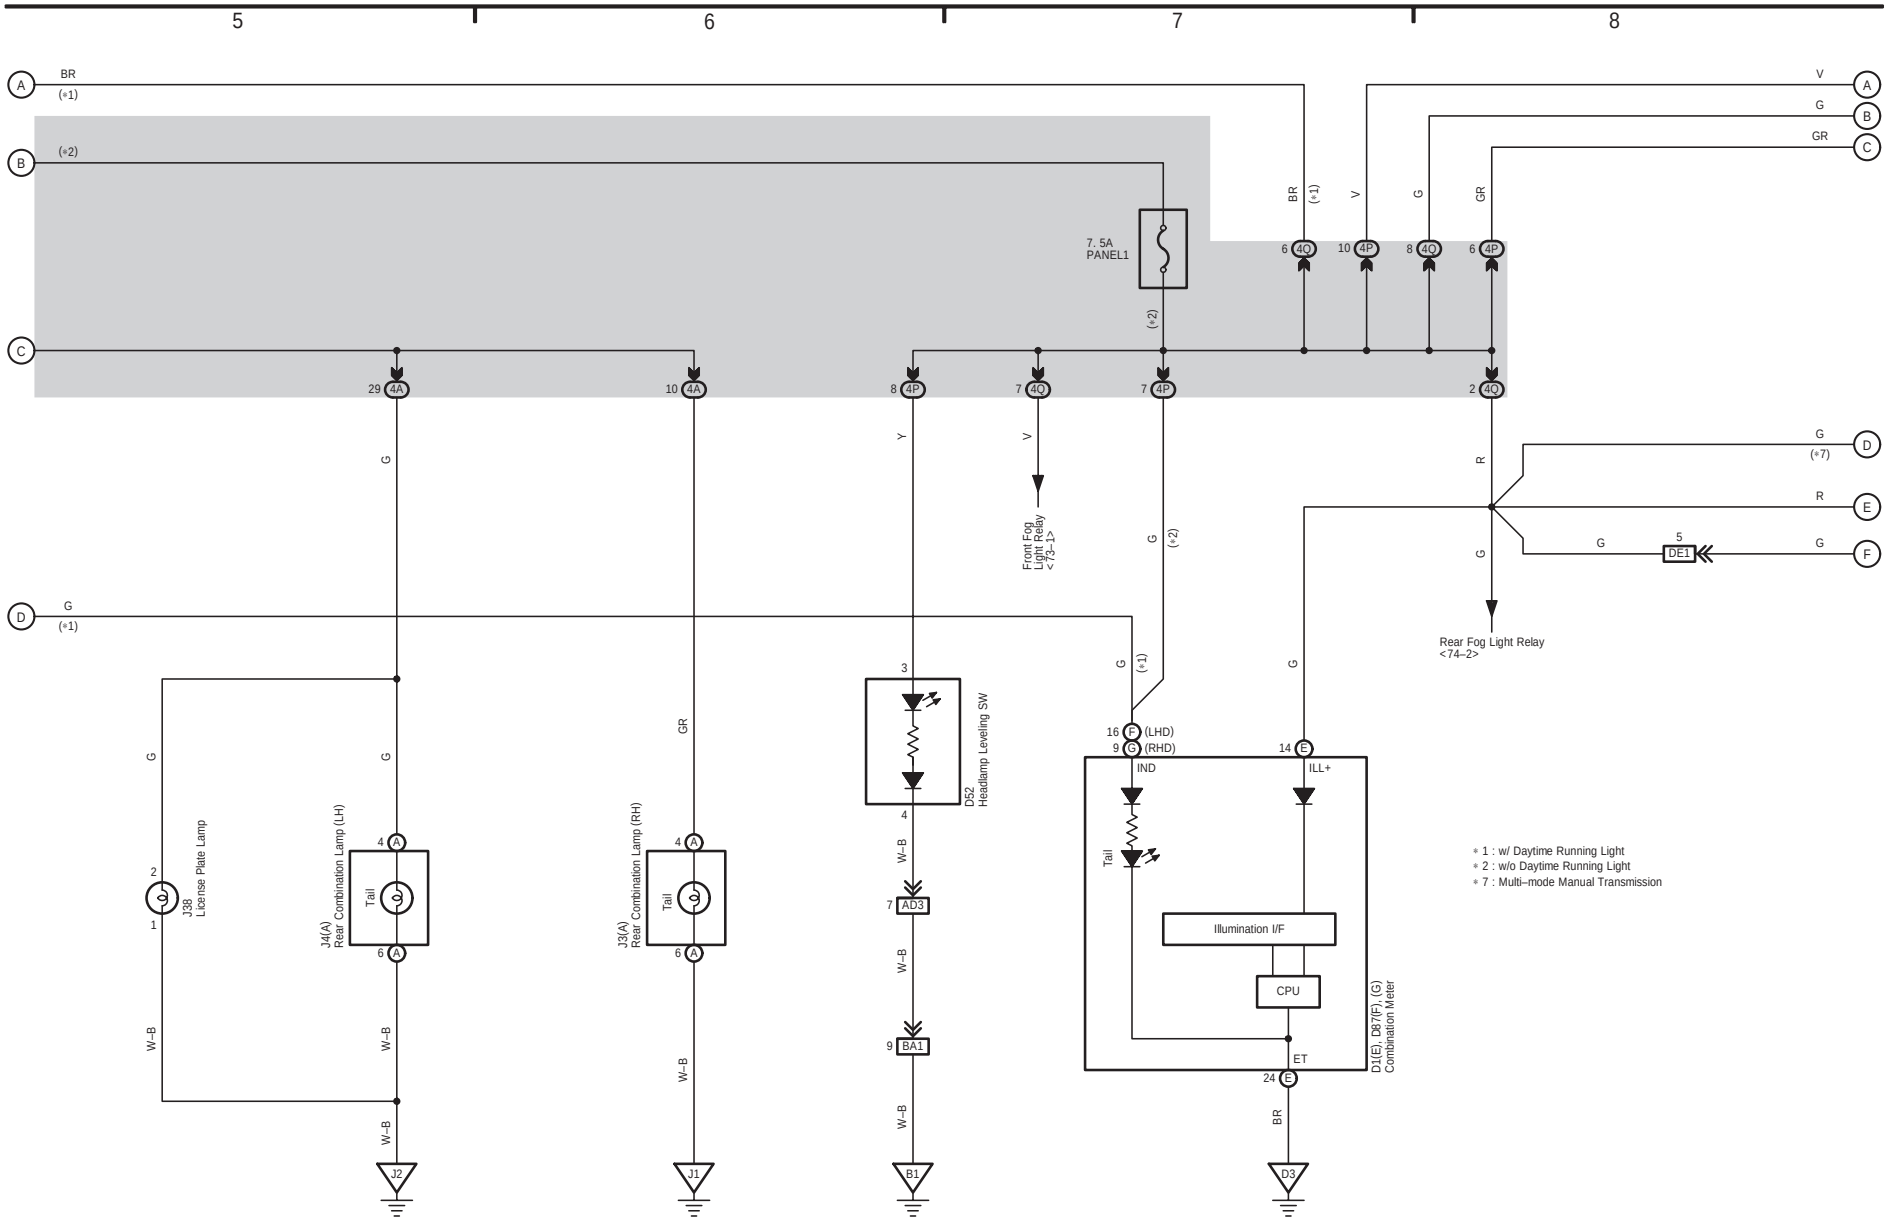

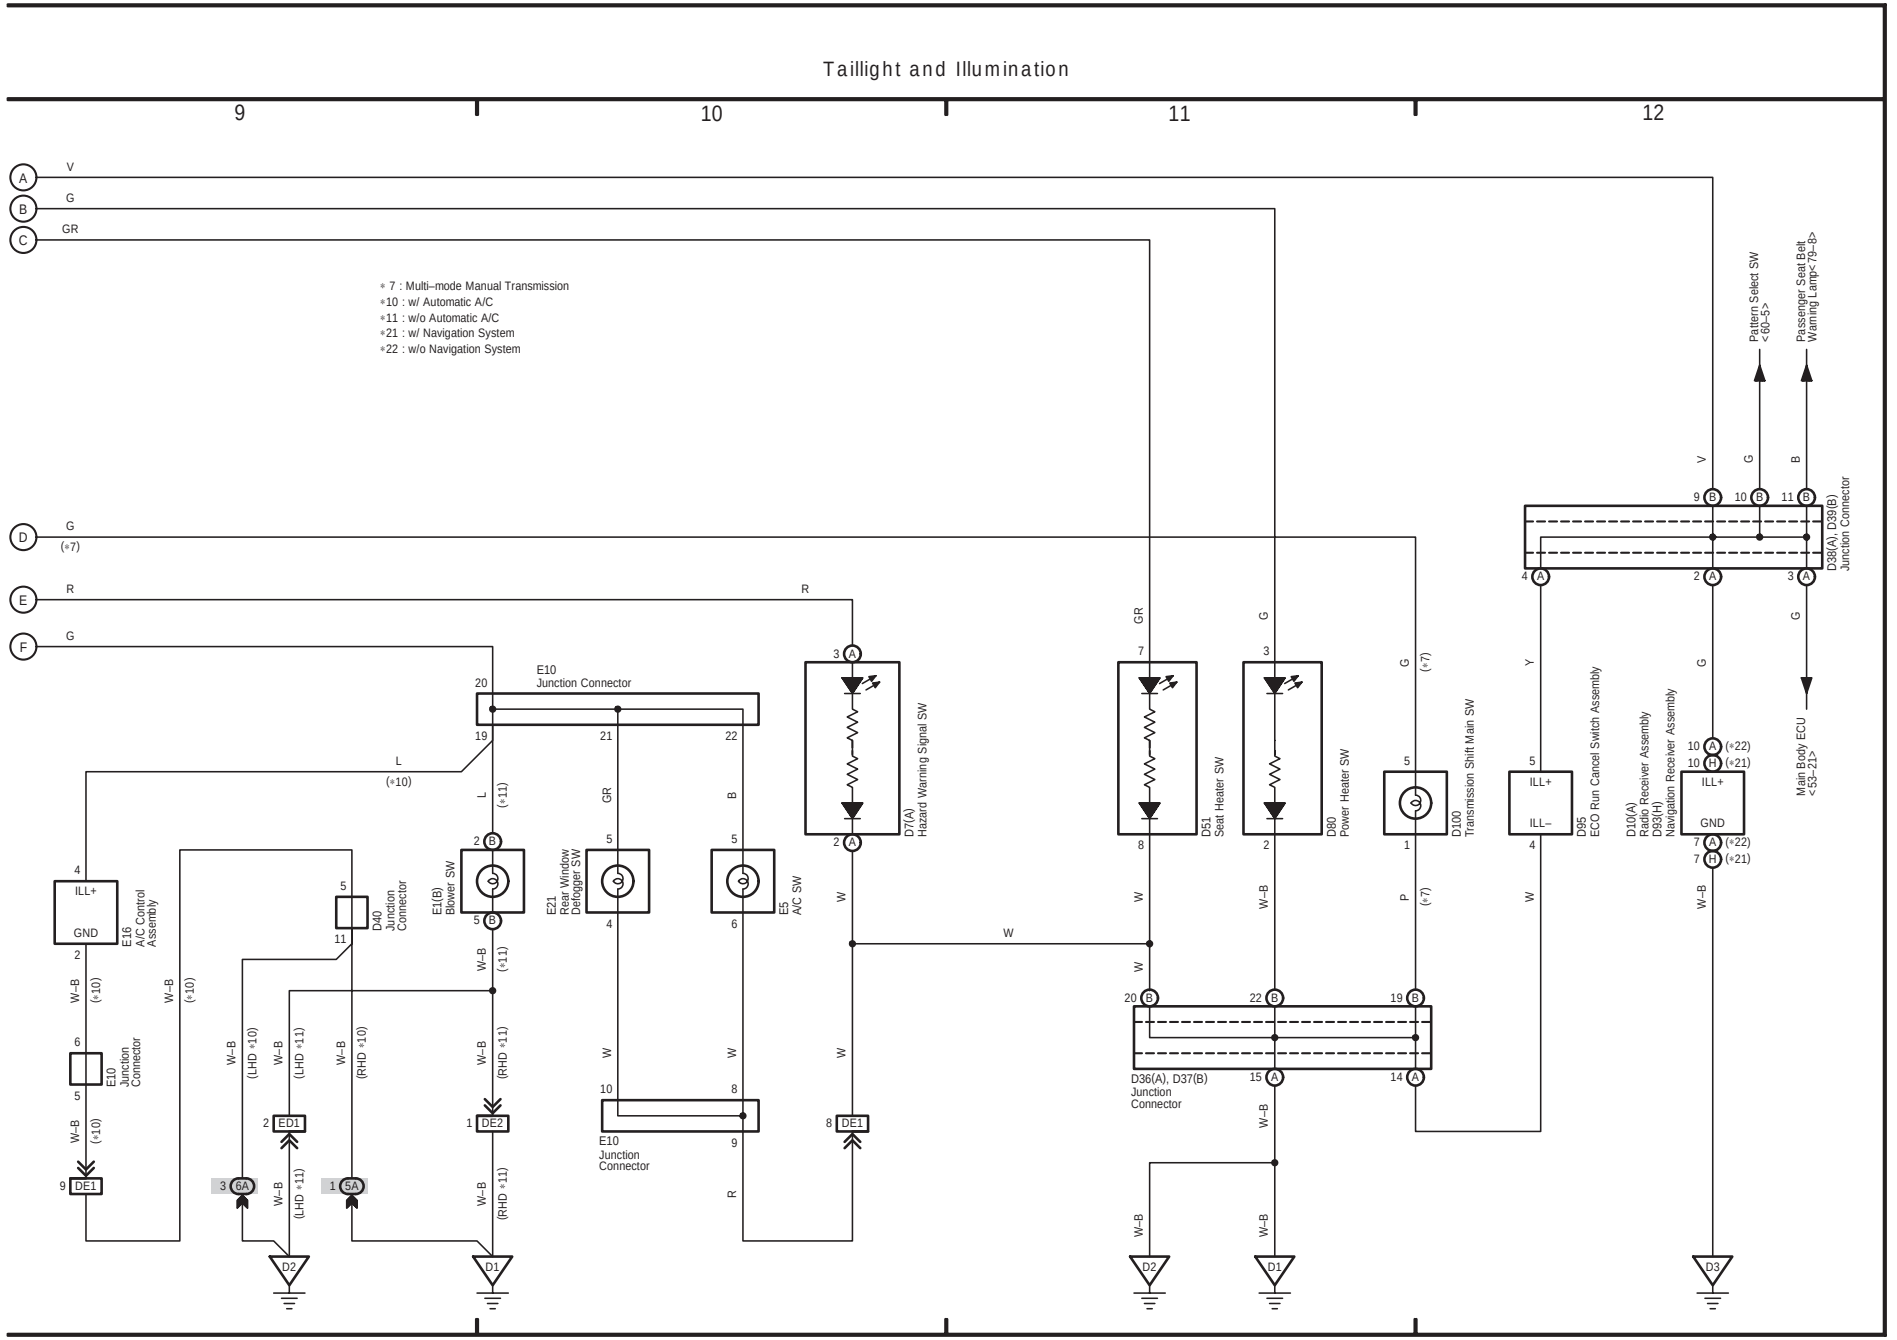
Taillight and Illumination
9
10
11
12
∗ 7 : Multi–mode Manual Transmission
∗10 : w/ Automatic A/C
∗11 : w/o Automatic A/C
∗21 : w/ Navigation System
∗22 : w/o Navigation System
E10 Junction Connector
E16 A/C Control Assembly
E1(B) Blower SW
E21 Rear Window Defogger SW
E5 A/C SW
D7(A) Hazard Warning Signal SW
D51 Seat Heater SW
D80 Power Heater SW
D100 Transmission Shift Main SW
D85 ECO Run Cancel Switch Assembly
D10(A) Radio Receiver Assembly
D93(H) Navigation Receiver Assembly
Main Body ECU <53–21>
Pattern Select SW <60–5>
Passenger Seat Belt Warning Lamp<79–8>
D36(A), D37(B) Junction Connector
D38(A), D39(B) Junction Connector
D40 Junction Connector
E10 Junction Connector
E10 Junction Connector
ED1
DE1
DE2
6A
5A
D1
D2
D3