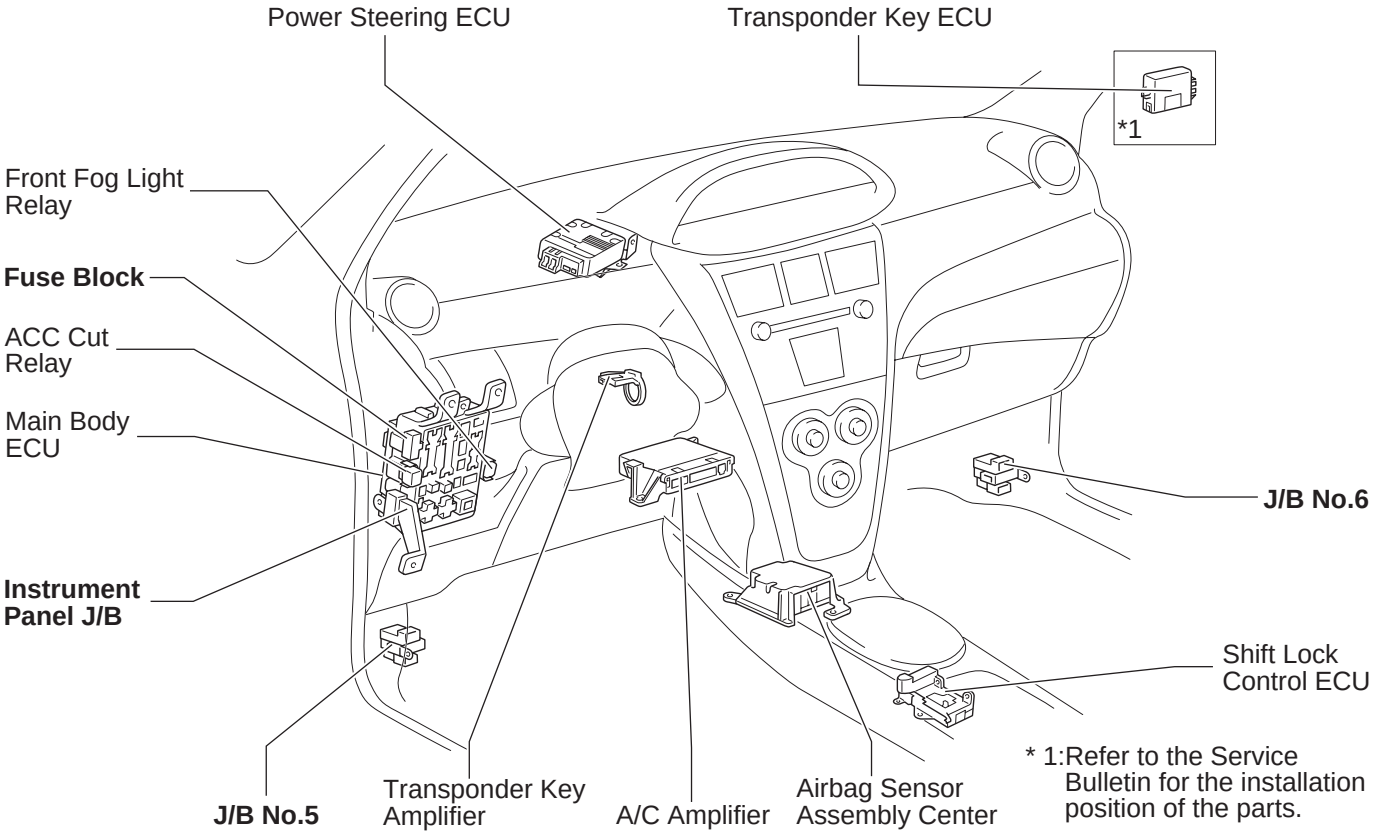
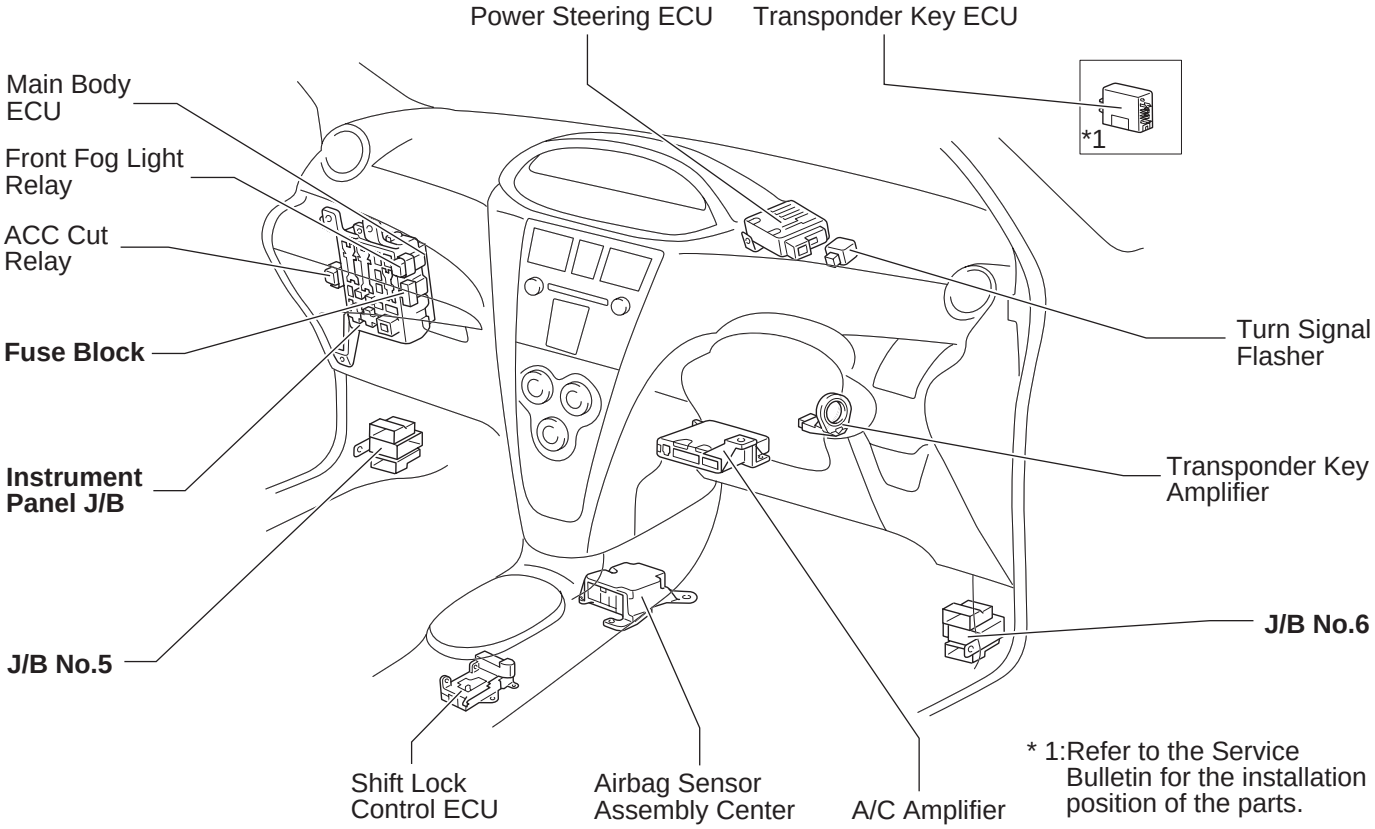
(LHD S/D)


Power Steering ECU
Transponder Key ECU
*1
Front Fog Light Relay
Fuse Block
ACC Cut Relay
Main Body ECU
J/B No.6
Instrument Panel J/B
Shift Lock Control ECU
J/B No.5
Transponder Key Amplifier
A/C Amplifier
Airbag Sensor Assembly Center
* 1:Refer to the Service Bulletin for the installation position of the parts.

(RHD S/D)


Power Steering ECU
Transponder Key ECU
*1
Main Body ECU
Front Fog Light Relay
ACC Cut Relay
Fuse Block
Turn Signal Flasher
Instrument Panel J/B
Transponder Key Amplifier
J/B No.6
J/B No.5
Shift Lock Control ECU
Airbag Sensor Assembly Center
A/C Amplifier
* 1:Refer to the Service Bulletin for the installation position of the parts.