


C11
C4
C17
C26
C5
C12
C6
C3
C7
C30
C20
C13
C14
C25
e2
e3
C18
e1
C22
C24
C43
C10
C16
C8
C2
C9
C41
C1
C15
C42
C19


C 1 Starter
C 2 Crankshaft Position Sensor
C 3 VSV (Purge)
C 4 Fuel Injector (No.1)
C 5 Fuel Injector (No.2)
C 6 Fuel Injector (No.3)
C 7 Fuel Injector (No.4)
C 8 A/C Compressor
C 9 Alternator
C 10 Alternator
C 11 Ignition Coil (No.1)
C 12 Ignition Coil (No.2)
C 13 Ignition Coil (No.3)
C 14 Ignition Coil (No.4)
C 15 Starter
C 16 Engine Oil Pressure SW
C 17 Throttle Body Assembly
C 18 Camshaft Position Sensor
C 19 Water Temp. Sensor
C 20 Engine ECU
C 22 Back-Up Lamp SW
C 24 Camshaft Timing Oil Control Valve
C 25 Noise Filter (Ignition)
C 26 Air Flow Meter
C 30 Fusible Link Block
C 41 Knock Control Sensor (Bank 1)
C 42 Oxygen Sensor (Bank 1 Sensor 2)
C 43 Oxygen Sensor (Bank 1 Sensor 1)

e 1 Clutch Actuator
e 2 Shift Actuator
e 3 Select Actuator


C 1

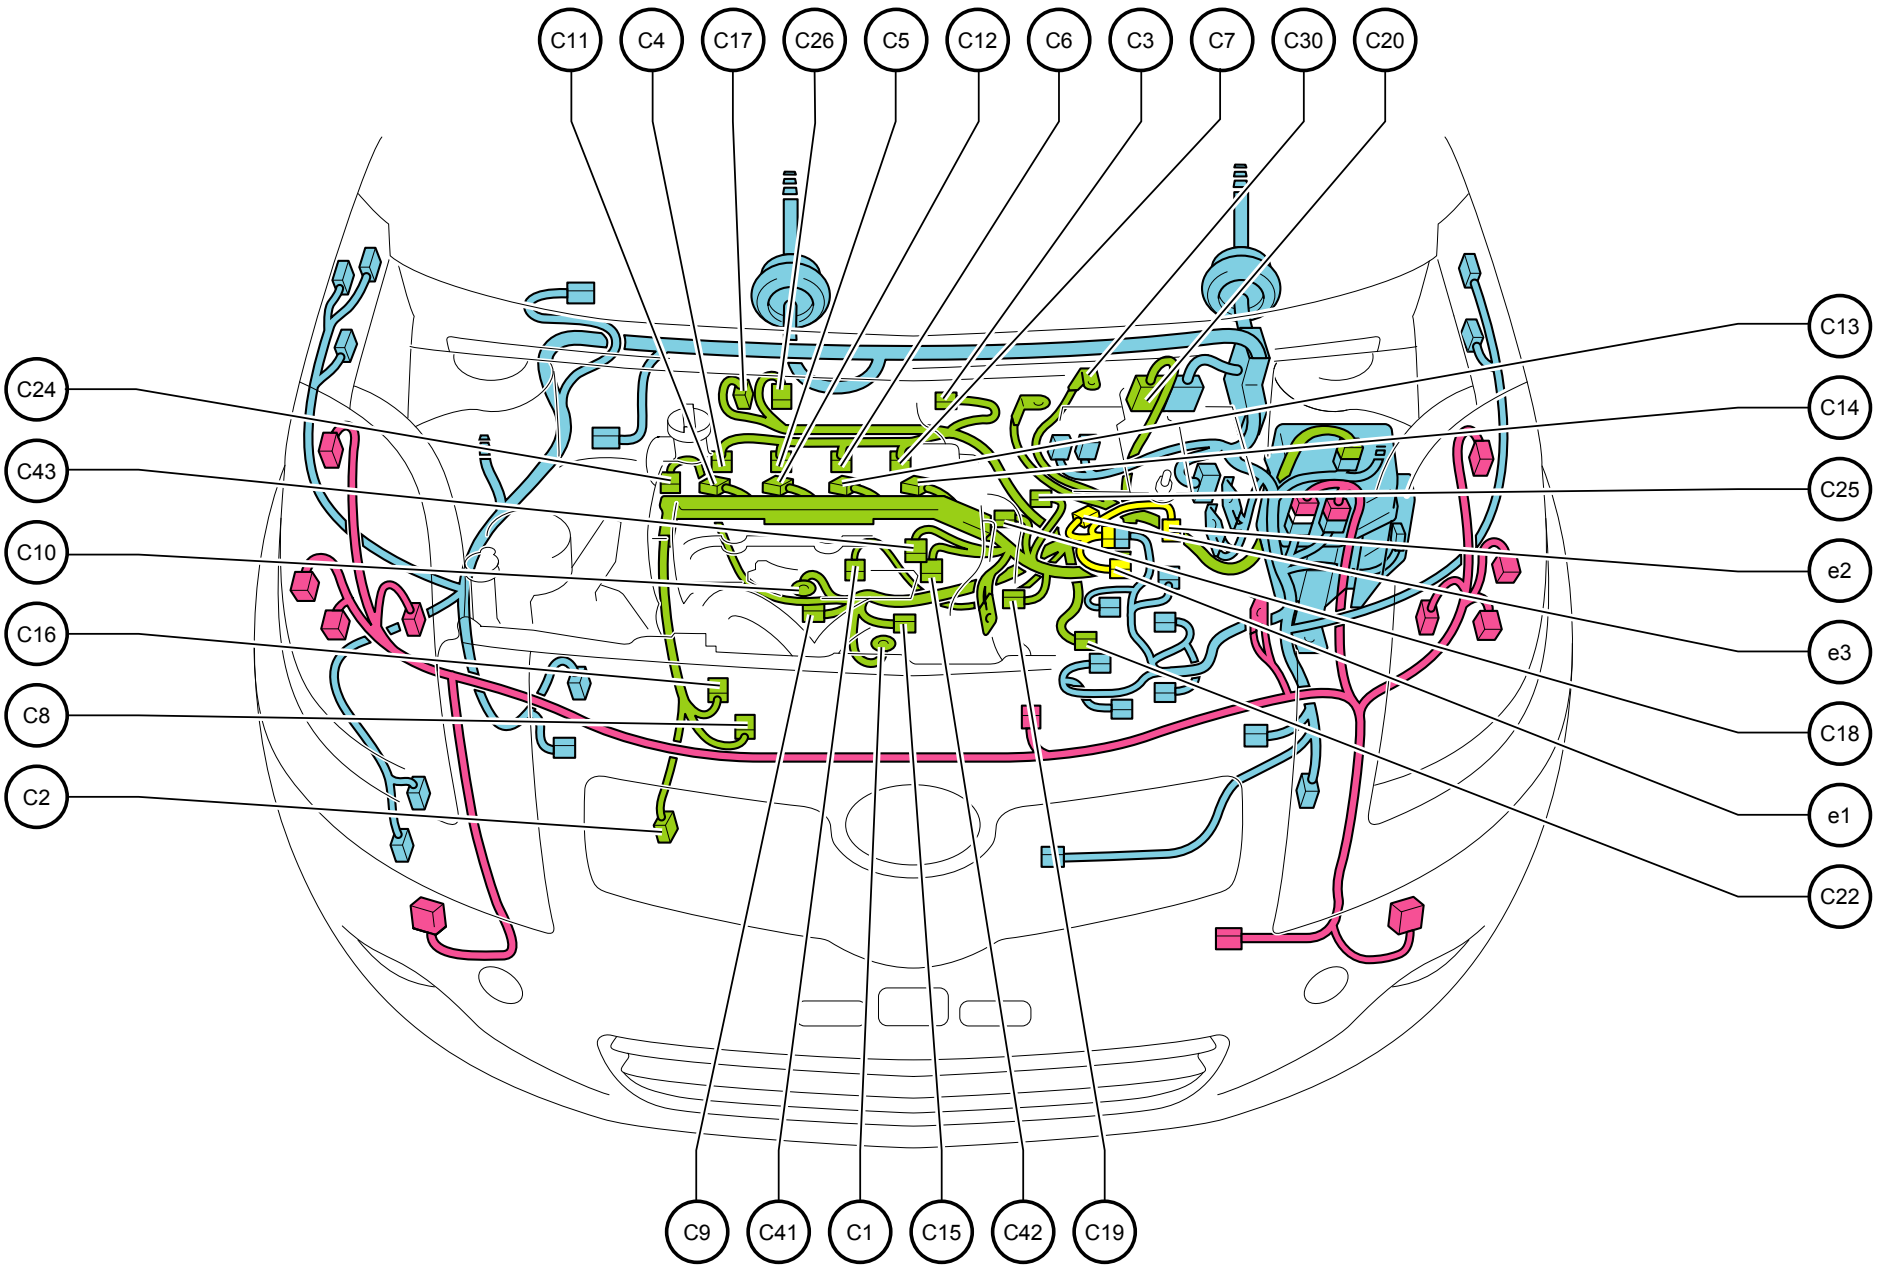


C 2
Black

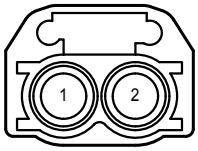


C 3
Blue

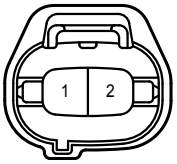


C 4
Black




C 5
Gray

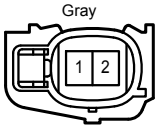


C 6
Black



C 7
Gray

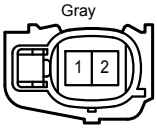


C 8
Gray

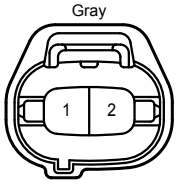

C 9
Black




C 10



(2SZ-FE)


C 11
Black



C 12
Gray



C 13
Black



C 14
Gray




C 15
Black



C 16
Gray



C 17
Black

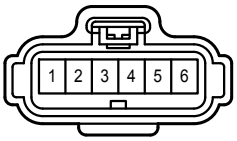


C 18
Black




C 19
Black



C 20
Black

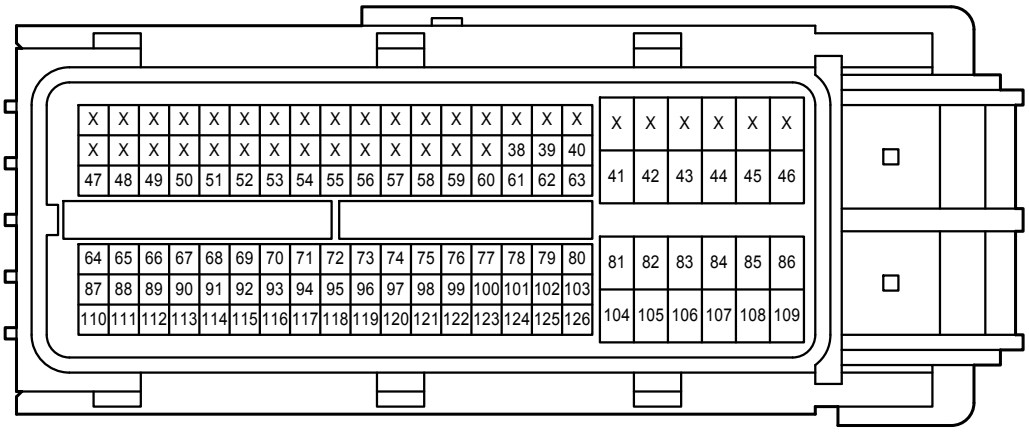

C 22
Gray

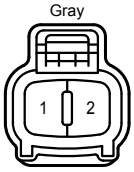


C 24
Black



C 25
Gray




C 26
Black

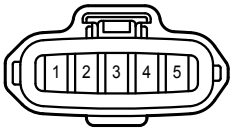


(Except 2ZR-FE From Aug. 2008 Production)

C 30



C 41
Black



C 42
Dark Gray



C 43
Black



e 1
Black



e 2
Black



e 3
Black

