
■ILLUMINATED ENTRY SYSTEM

- The illuminated entry system is provided as standard equipment for the Europe models and sedan models for all other destinations, and available as optional equipment for all other models.
- This system is controlled by the main body ECU.
- When any one of the following conditions is satisfied, the illuminated entry system turns ON the room light and engine switch illumination*1.
  1) Any door is opened.
  2) A door is unlocked through a driver door key operation or transmitter operation. *3
  3) The key is in any of the actuation areas. *1
  4) All doors are closed and the power source mode is changed from IG-ON to OFF. *1
  5) All doors are closed and the ignition switch is turned from ACC to Lock. *2
- When any one of the following conditions is satisfied, these lights will fade out (in approximately 1 second).
  1) After continuing to be ON for approximately 15 seconds after all doors have been properly closed.
  2) All doors are closed and locked.
  3) All doors are closed and the power source mode is changed to ACC or IG-ON.
- A battery saving function is used to automatically turn the room light and engine switch illumination OFF when the following condition occurs continuously for over 20 minutes: the key is not in the ignition key cylinder or the power source mode is OFF when any door is either ajar or open.


▶ System Diagram ◀

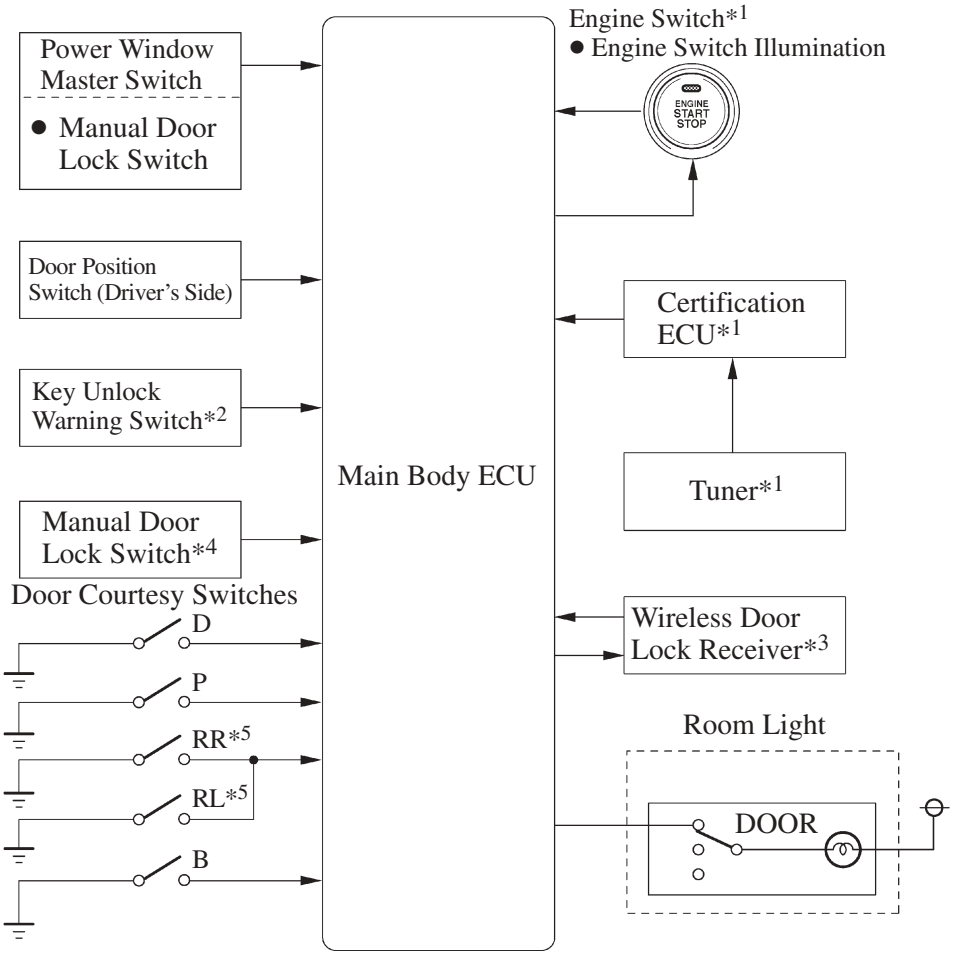

00SBE48Y

*1: Models with Smart Entry & Start System
*2: Models without Smart Entry & Start System
*3: Models with Wireless Door Lock Remote Control System
*4: Models without Power Window System
*5: Except 3-door Hatchback Models

Layout of Main Components

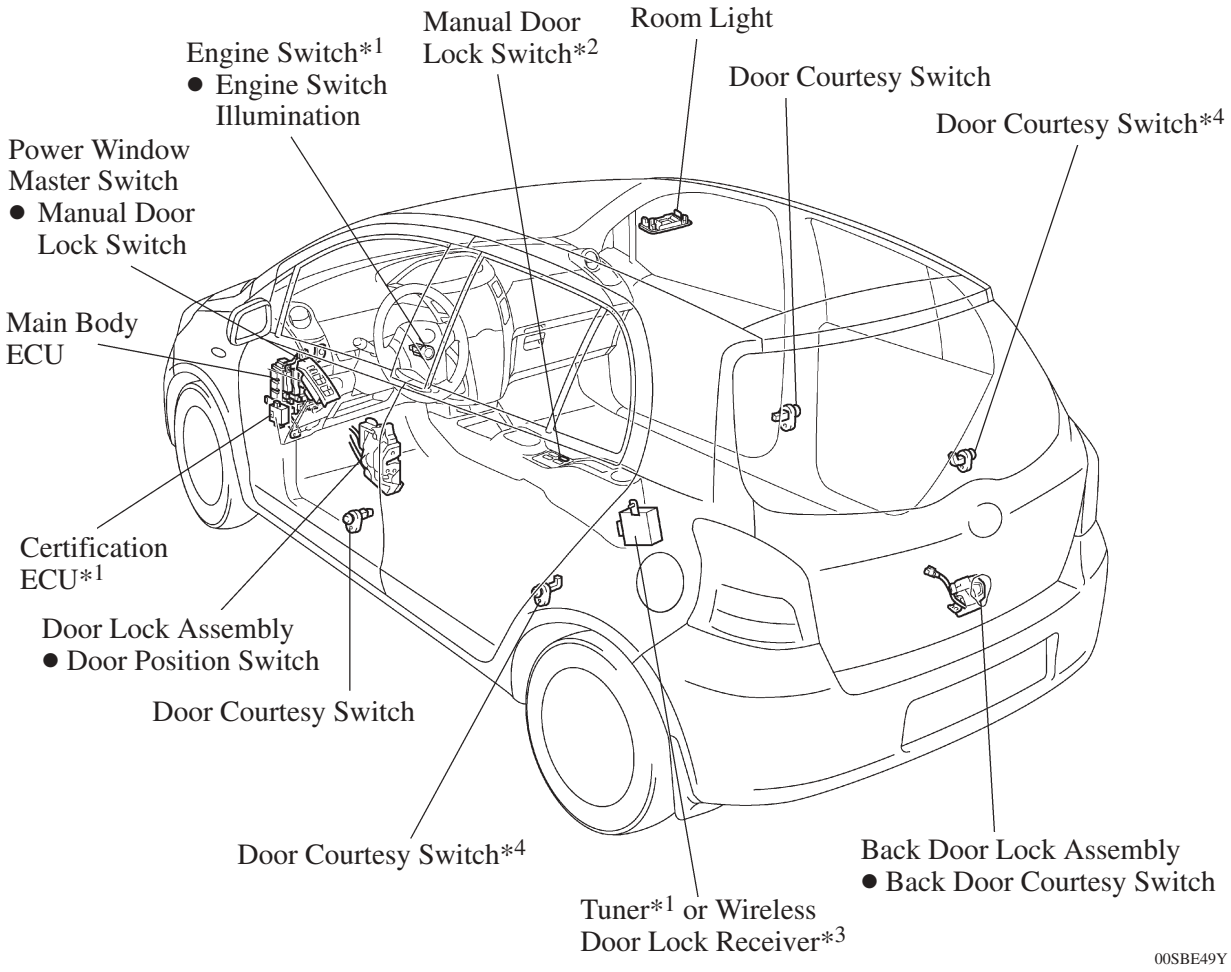

5-door Hatchback Models

*1: Models with Smart Entry & Start System
*2: Models without Power Window System
*3: Models with Wireless Door Lock Remote Control System
*4: Except 3-door Hatchback Models