
■MULTI-INFORMATION DISPLAY


1. General

- The multi-information display is provided as standard equipment for the Europe models.
- The display functions can be switched by pushing the display knob.
- In this system, the meter ECU calculates the contents to be displayed and controls the displays.

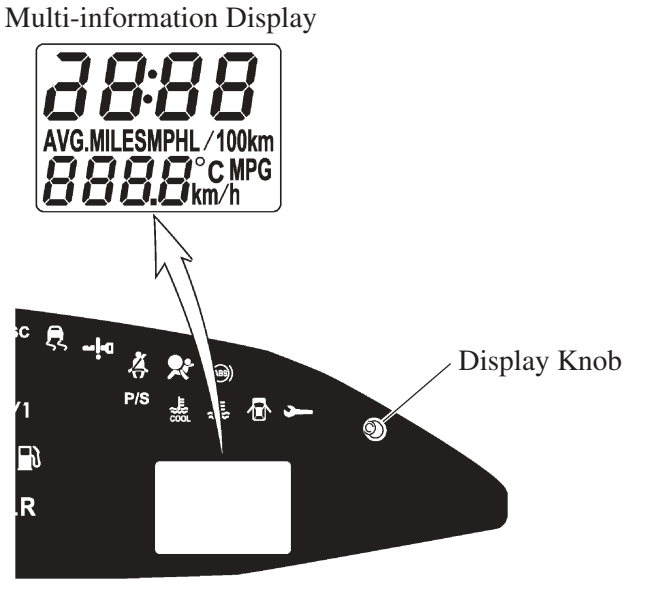

Hatchback Models



▶ System Diagram ◀

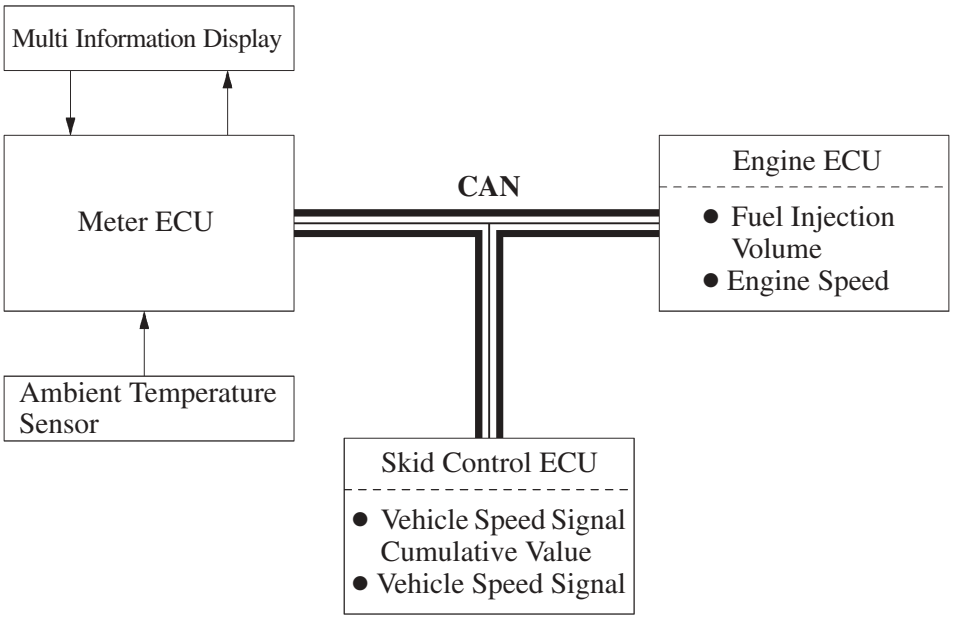

2. Function of Main Components

Display Portion

The multi-information display has following functions.

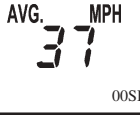
Item			Display Content	Outline
Trip-information Display	Ambient Temperature Display		 00SB71Y	● Displays ambient temperature in accordance with the ambient temperature sensor signal.
	Instant Fuel Consumption	Km/h Display	 00SB72Y	● Displays the value that has been calculated by the meter ECU, which is based on the mileage and the fuel consumption volume (fuel injection signal from No.1 injector), provided that the power source mode is changed to IG-ON. ● The display updates every 2 seconds.
		Mph Display	 00SB73Y	
	Average Fuel Consumption after Refueling	Km/h Display	 00SB74Y	● Displays the value that has been calculated by the meter ECU, which is based on the mileage after refueling and the fuel consumption volume (fuel injection signal from No.1 injector). ● The meter ECU resets the value when determining that the vehicle has been refueled in accordance with the signal from the fuel sender gauge. The value is also reset by pushing the display knob for 0.8 seconds or longer. ● The display updates every 10 seconds.
		Mph Display	 00SB75Y	
	Drivable Distance	Km/h Display	 00SB76Y	● Displays the value that has been calculated by the meter ECU, which is based on the fuel consumption data that the meter ECU continuously monitors and stores in its memory and the remaining fuel volume data, provided that the power source mode is changed to IG-ON. ● The display updates every kilometer or mile.
		Mph Display	 00SB77Y	
	Average Vehicle Speed after Starting	Km/h Display	 00SB78Y	● Displays the value that has been calculated by the meter ECU, which is based on the elapsed time and mileage after the power source mode has been changed to IG-ON or the display knob has been pushed for 0.8 seconds or longer. ● The display updates every 10 seconds.
		Mph Display	 00SB79Y	

The time is always displayed even if the display contents are switched.

Switch

- The contents of a trip-information display can be changed by pushing a display knob in the combination meter while the power source mode is IG-ON.
- Pushing a display knob for 0.8 seconds or longer resets the display contents of each mode except the instant fuel consumption and drivable distance.

▶ Sequence for Switching Contents of Trip-information Display ◀

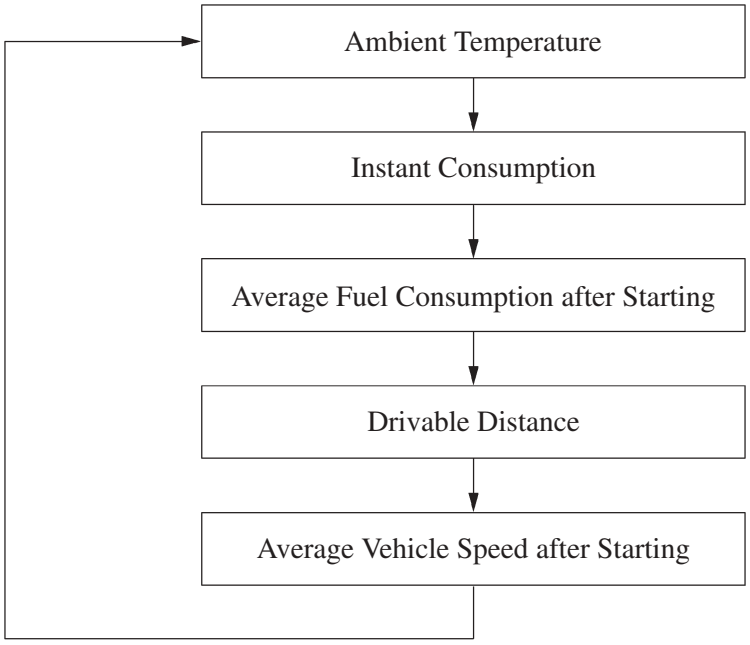

281BE27