POWER WINDOW SYSTEM

■ DESCRIPTION

The new models have the power window system with the following equipments:

—: Not Available ●: Standard OP: Option


Destination	Grade or Door	Front Door	Rear Door
Europe	Standard	OP	—
	SOL	●	—
Australia	5-Door and 4-Door	OP	OP
	3-Door	OP	—
G. C. C. Countries	5-Door and 4-Door	OP	OP
General Countries	5-Door and 4-Door	OP	OP
	3-Door	OP	—

The power window system has the following functions:

Function	Outline
Manual-up-and-down Function	The manual-up-and-down function causes the window to open or close while the power window switch is being pulled halfway up or pushed halfway down. The window stops as soon as the switch is released.
Driver's Door One-touch Auto Up-and-down Function*1	The driver's door one-touch auto up-and-down function is used in the driver's window. The driver's one-touch auto up-and-down function automatically opens or closes the driver's door window fully.
Driver's Door One-touch Auto Down Function*2	The driver's door one-touch auto down function is used in the driver's window. The driver's door one-touch auto down function enables the window of driver's door to be fully opened at a touch of the power window switch.
Jam Protection Function*1	The jam protection function automatically stops the power window and moves it downward if a foreign object gets jammed in the all door windows during one-touch auto-up operation or manual-up operation.
Remote Control Function	The up-and-down operations of the front passenger's door window and the rear door windows*3 can be controlled by operating the power window master switch.

*1: Only for Europe Models
*2: Except Europe Models
*3: Except 3-door Hatchback Models

▶ System Diagram ◀

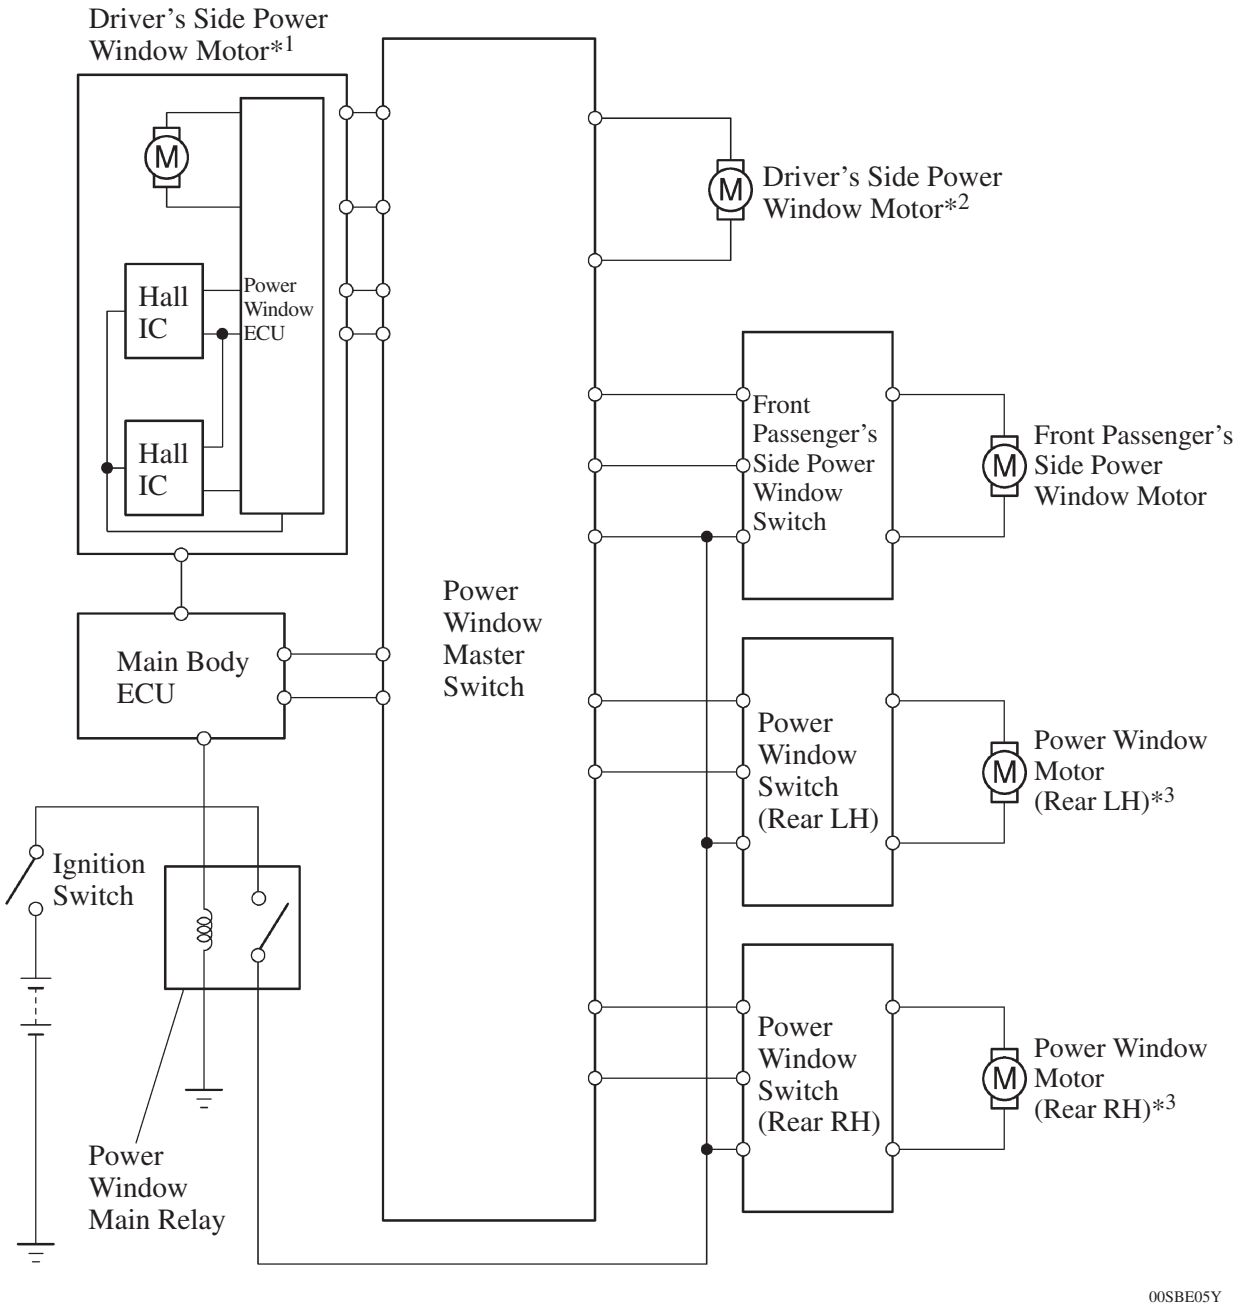

*1: Only for Europe Models
*2: Except for Europe Models
*3: Except 3-door Hatchback Models