DOOR LOCK CONTROL SYSTEM


■ DESCRIPTION

- The door lock control system is provided as standard equipment on the Europe models and is available as optional equipment on all other models.
- This system is controlled by the main body ECU. The main body ECU outputs signals to the respective door lock motors.
- The door lock system in the new models has the following functions:

Function	Outline
Manual Lock and Unlock	This function can lock or unlock all doors by the door lock control switch operation.
Key-linked Lock and Unlock*1	This function which is linked with the key cylinder can lock or unlock all the doors when a lock or unlock operation is effected.
Key Confine Prevention	When the key is inserted in the ignition key cylinder with the driver's door open and if you perform the door lock operation, all the doors will be unlocked.
Manual Unlock Prohibition	Performing the door lock operation with a transmitter or key will prohibit the unlock operation by the door lock control switch.
Double Locking System*2	● The double locking system also prevents the doors from being opened through the operation of the inside door knobs. Thus, the doors cannot be opened either from the inside or the outside of the vehicle. ● To lock the doors with this system, pressing the transmitter's lock button, then pressing it again within 5 seconds activates the double locking system. However, as an emergency unlocking maneuver, only the driver's door can be unlocked with a key. **CAUTION:** Never activate the double locking system when there are people in the vehicle because the doors cannot be opened from the inside of the vehicle. If locking the doors by accident, press "unlock" button of the transmitter.
Entry Unlock Function*3	With this function, the user can unlock the driver's or front passenger's door by keeping a key in his or her possession and touching the outside door handle.
Entry Lock Function*3	With this function, the user can lock all doors by keeping a key in his or her possession and pressing the lock button that is provided on the outside door handle.
Door Lock with Transmitter Function (see page BE-59)	Pressing the door lock button of the transmitter locks all doors.
Door Unlock with Transmitter Function (see page BE-59)	Pressing the door unlock button of the transmitter unlocks all doors.

*1: On the models with the double locking system, when the double locking system is operating, all doors can be locked through the key-linked function, but they cannot be unlocked. Only the driver's door can be unlocked by the key.
*2: Optional Equipment on RHD Models for Europe
*3: Models with Smart Entry & Start System

▶ System Diagram ◀

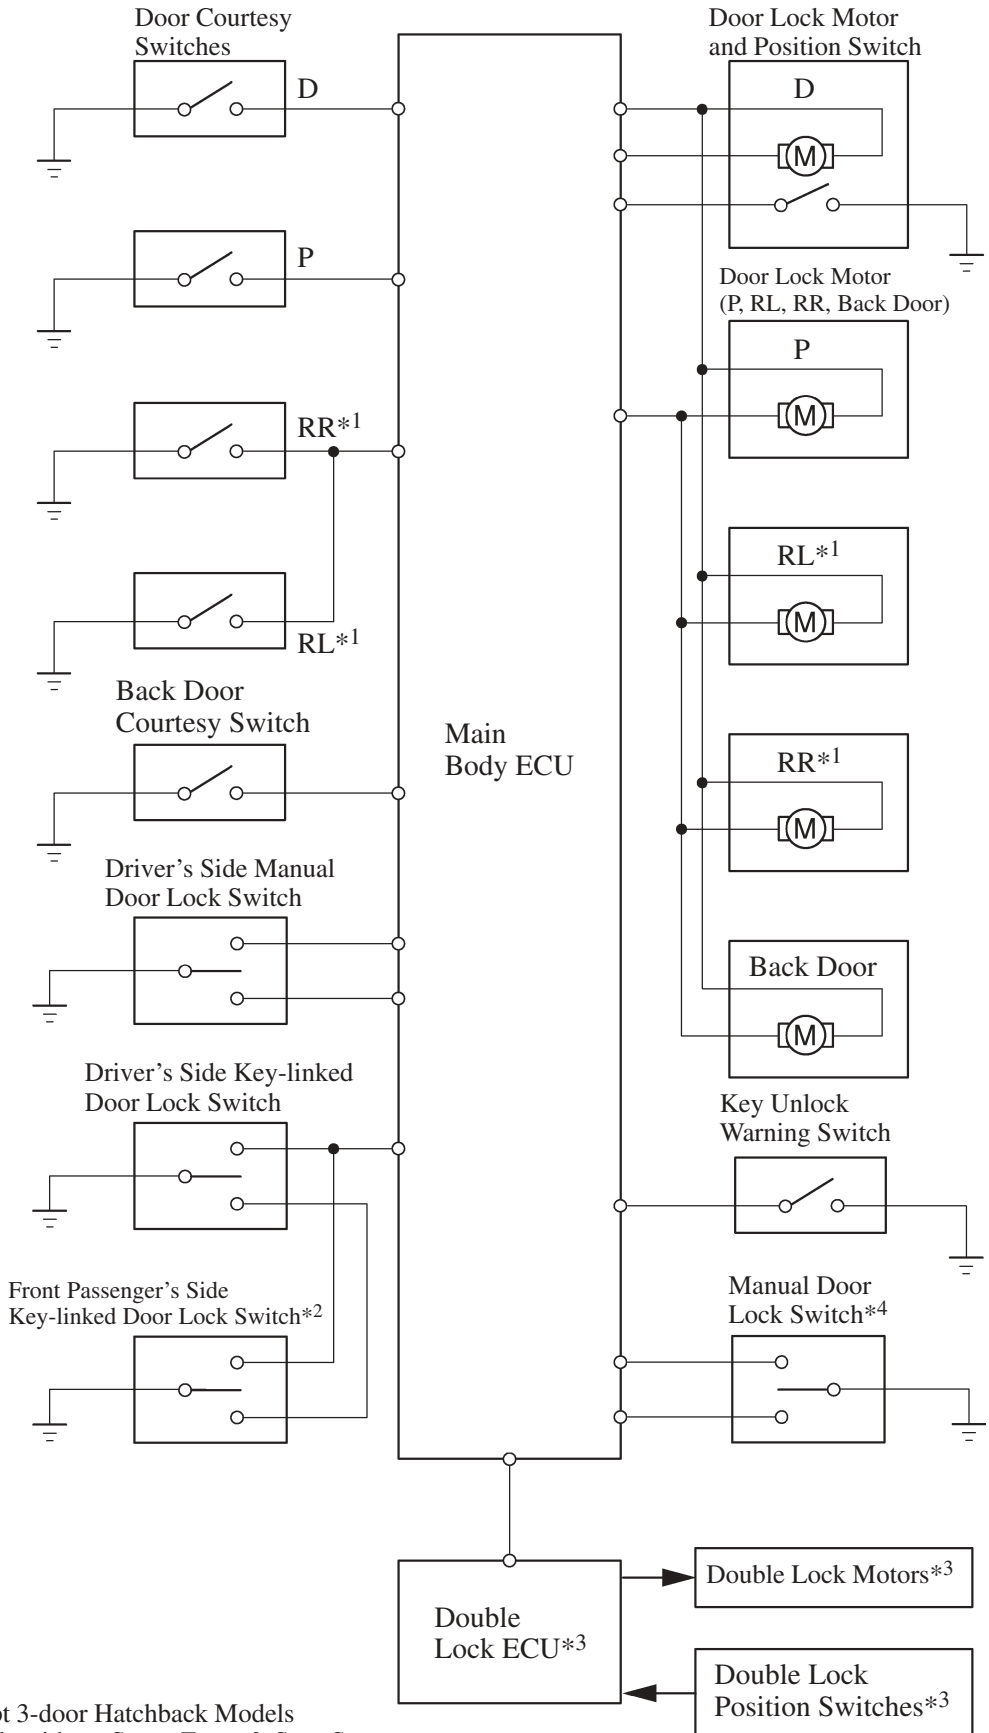

*1: Except 3-door Hatchback Models
*2: Models without Smart Entry & Start System
*3: Models with Double Locking System
*4: Models without Power Window System

00SBE61Y

BE