
EQUIPMENT

Smart Entry & Start System

The smart entry & start system mainly consists of the wireless door lock remote control function, engine immobilizer function, start function and entry function.
This system is available as optional equipment on the SOL grade for the Europe hatchback models.

Start Function

In the start function, the power source mode can be switched between OFF, ACC, and IG-ON by pushing the engine switch when the driver carries the key.
In addition, when the driver carries the key, the driver can start the engine by pushing the engine switch while depressing the brake pedal (the multi-mode manual transmission models) or the clutch pedal (the manual transaxle models).

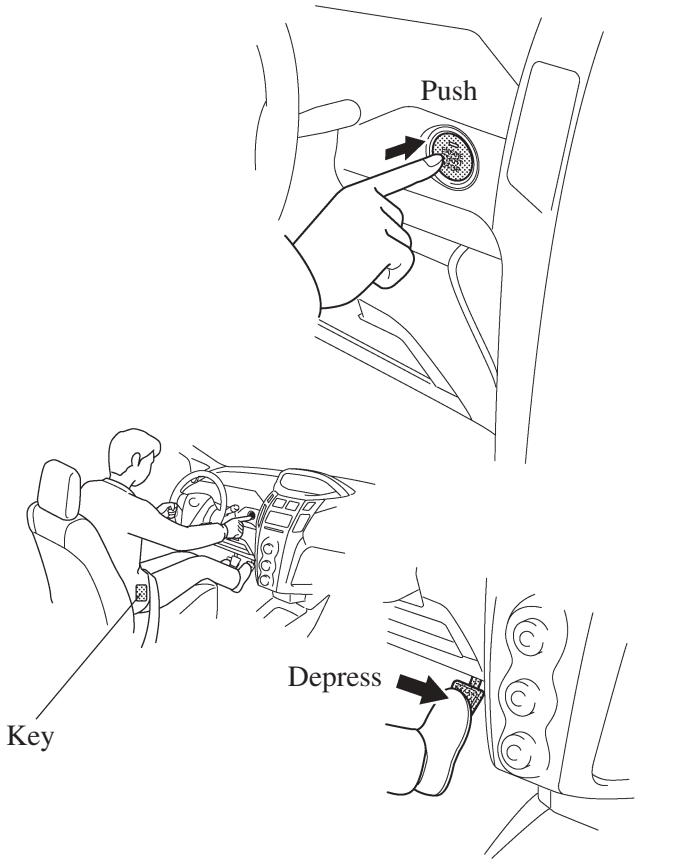



00SMO13Y

Entry Function

In the entry function, the following functions can be operated when the driver carries the key:

- The engine switch illumination and room light come ON if the driver gets close to the vehicle. (Entry Illumination)
- The doors unlock if the outside door handle is gripped. (Entry Unlock)
- The doors lock if the lock switch on the outside door handle is pushed. (Entry Lock)
- The back door opens if the back door open switch is pushed. (Entry Back Door Open)

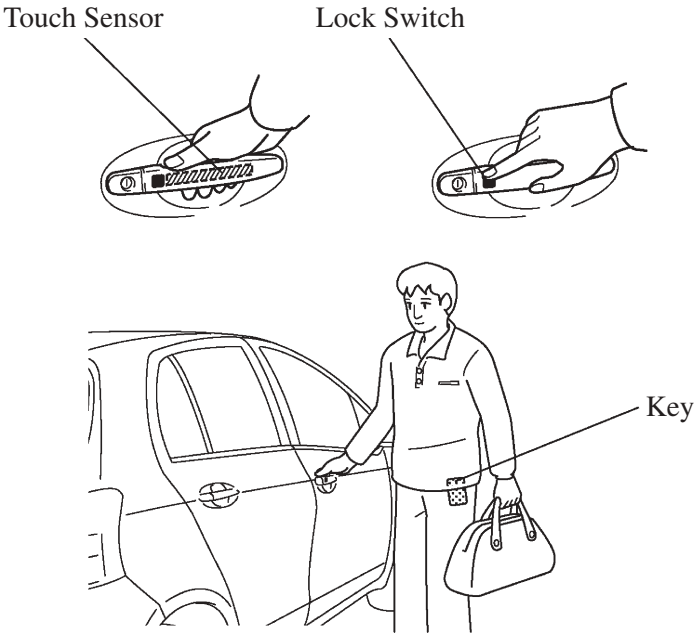

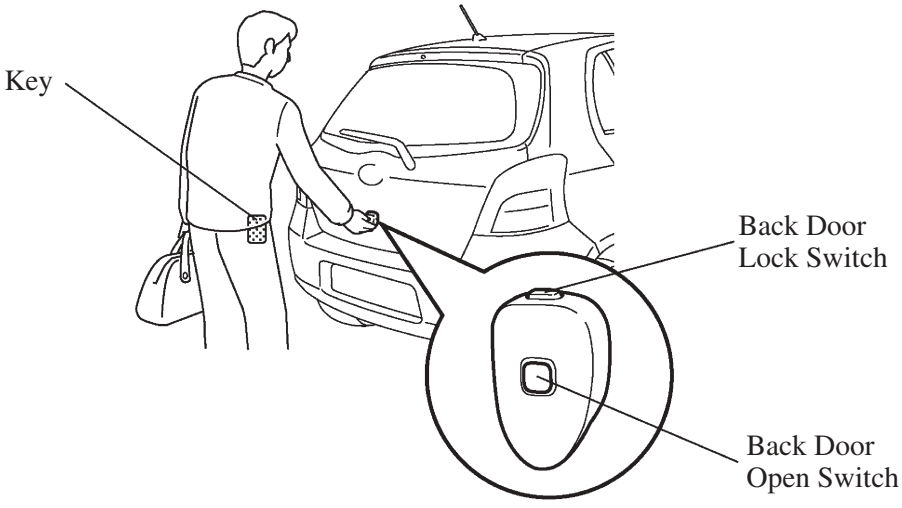

00SMO14Y