
■SYSTEM OPERATION

Basic Operation

This system activates as described in the diagram below when one of items places in the respective state.

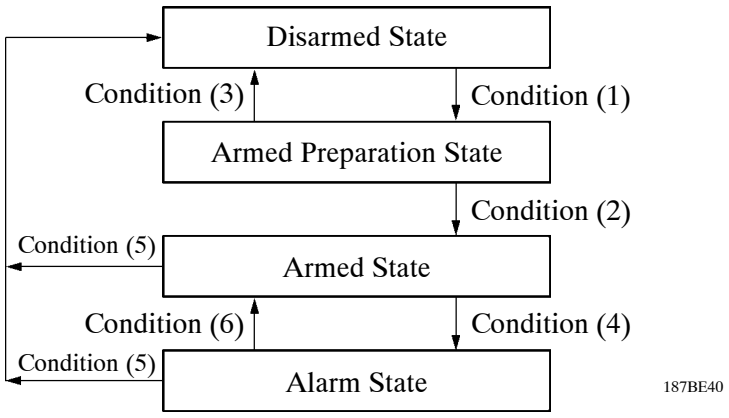

Condition	Item
(1)	● The engine switch is OFF. ● When the doors, engine hood, and back door are all closed, the entry lock function is used to lock all doors.
(2)	When the doors, engine hood, and back door are all closed and locked, and 30 seconds have elapsed.
(3)	● When one of the doors, engine hood, or back door is changed from “close” to “open”. ● When one of the doors or back door is changed from “lock” to “unlock”. ● When the engine switch is pushed. ● When a terminal is disconnected from the battery and reconnected.
(4)	● Any door, engine hood, or back door is opened. ● Any door is changed from “lock” to “unlock” through an operation other than the entry unlock function. ● A terminal is disconnected from the battery and reconnected.
(5)	● The entry unlock function is used to unlock the doors. ● After the engine start, 2 seconds have elapsed.
(6)	After approximately 30.0 seconds of the alarm time have elapsed.