HEIGHT CONTROL SENSOR

COMPONENTS

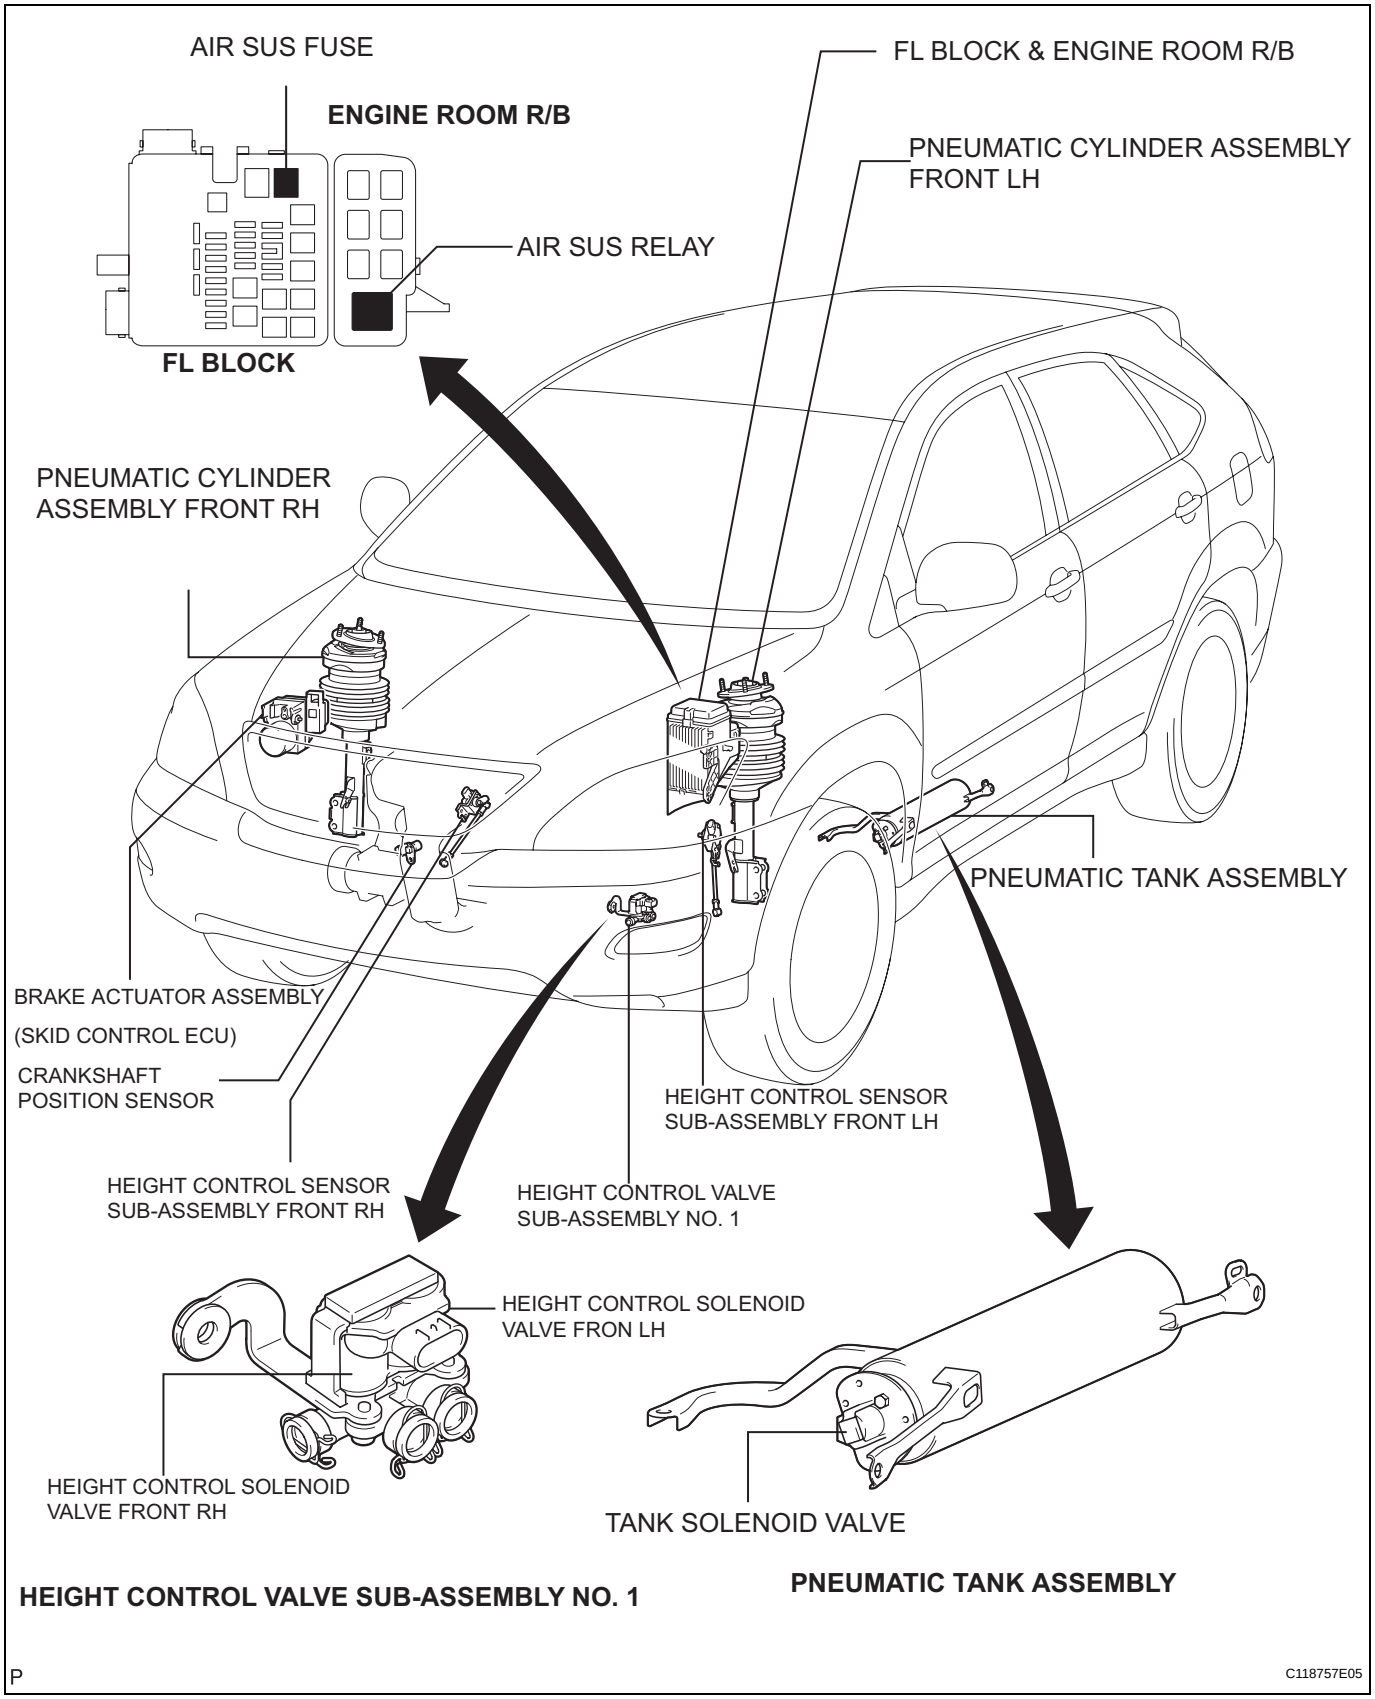

SC

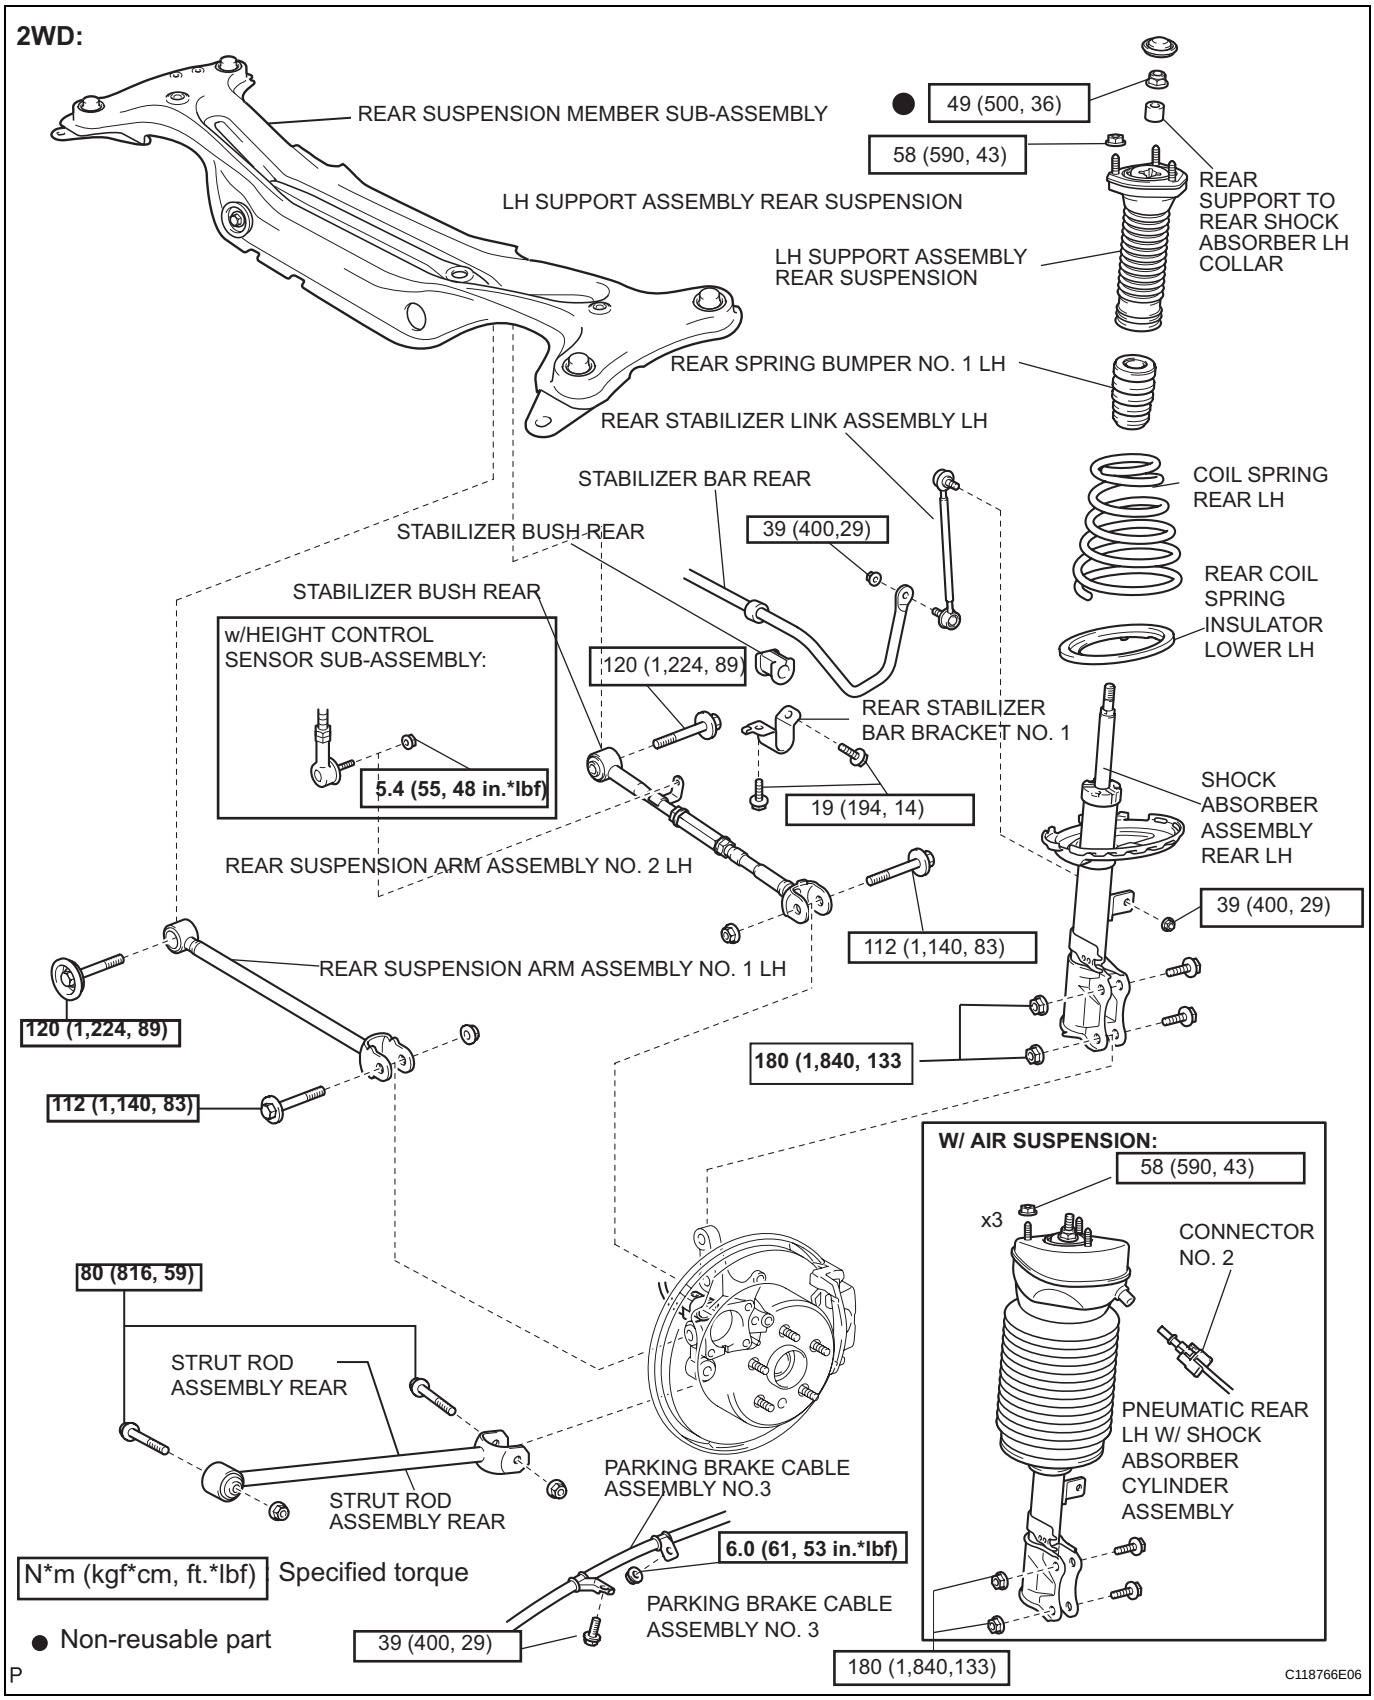
2WD:
REAR SUSPENSION MEMBER SUB-ASSEMBLY
49 (500, 36)
58 (590, 43)
REAR SUPPORT TO REAR SHOCK ABSORBER LH COLLAR
LH SUPPORT ASSEMBLY REAR SUSPENSION
LH SUPPORT ASSEMBLY REAR SUSPENSION
REAR SPRING BUMPER NO. 1 LH
REAR STABILIZER LINK ASSEMBLY LH
STABILIZER BAR REAR
COIL SPRING REAR LH
STABILIZER BUSH REAR
39 (400,29)
REAR COIL SPRING INSULATOR LOWER LH
STABILIZER BUSH REAR
w/HEIGHT CONTROL SENSOR SUB-ASSEMBLY:
120 (1,224, 89)
5.4 (55, 48 in.*lbf)
REAR STABILIZER BAR BRACKET NO. 1
19 (194, 14)
SHOCK ABSORBER ASSEMBLY REAR LH
REAR SUSPENSION ARM ASSEMBLY NO. 2 LH
39 (400, 29)
112 (1,140, 83)
REAR SUSPENSION ARM ASSEMBLY NO. 1 LH
120 (1,224, 89)
180 (1,840, 133
112 (1,140, 83)
W/ AIR SUSPENSION:
58 (590, 43)
x3
CONNECTOR NO. 2
80 (816, 59)
STRUT ROD ASSEMBLY REAR
PNEUMATIC REAR LH W/ SHOCK ABSORBER CYLINDER ASSEMBLY
PARKING BRAKE CABLE ASSEMBLY NO.3
STRUT ROD ASSEMBLY REAR
6.0 (61, 53 in.*lbf)
N*m (kgf*cm, ft.*lbf) Specified torque
PARKING BRAKE CABLE ASSEMBLY NO. 3
● Non-reusable part
39 (400, 29)
180 (1,840,133)
P
C118766E06

SC

4WD:

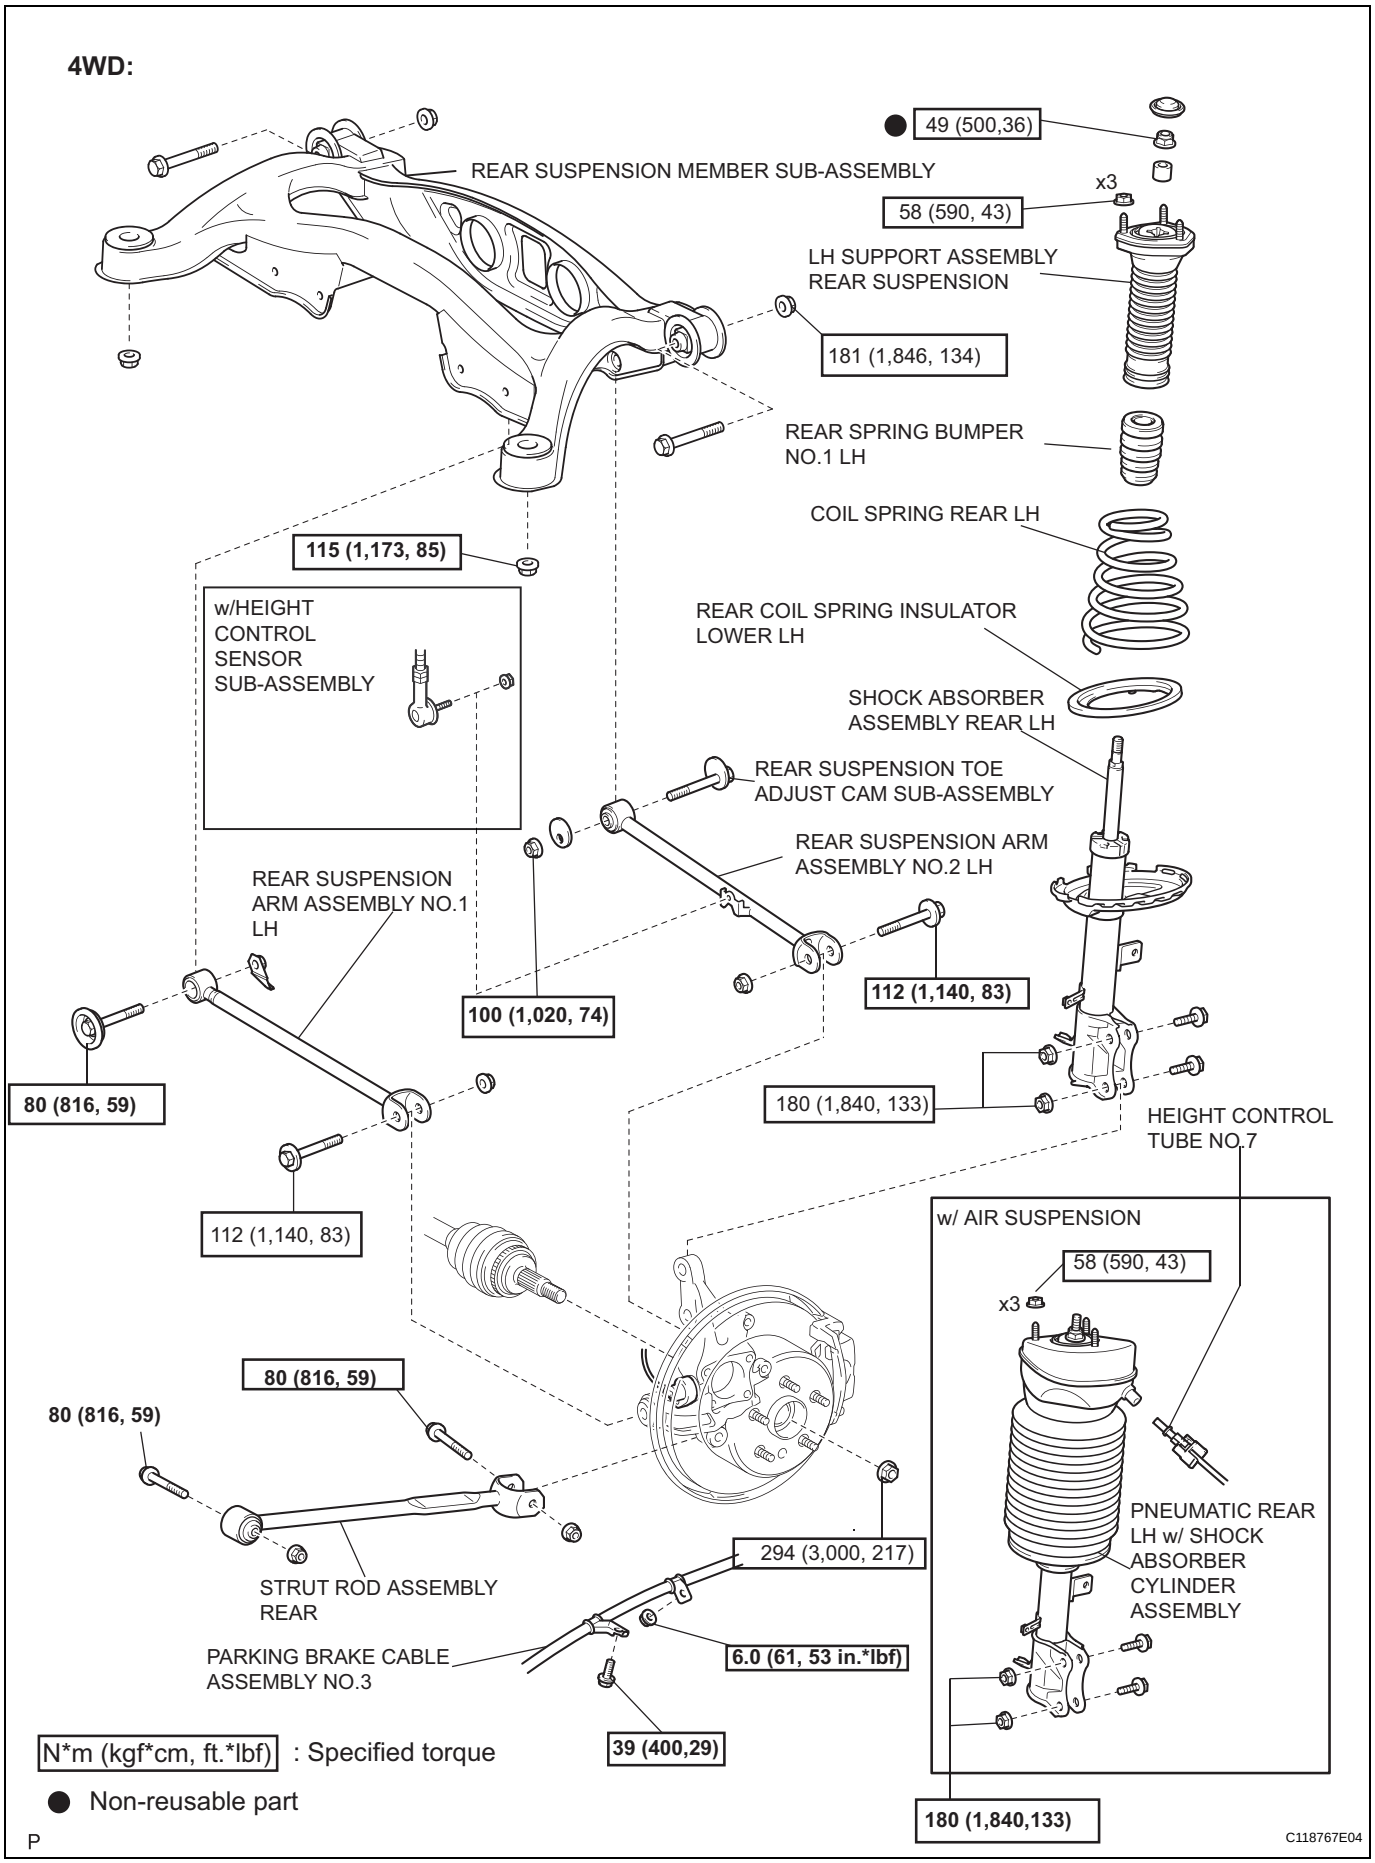
49 (500,36)
REAR SUSPENSION MEMBER SUB-ASSEMBLY
x3
58 (590, 43)
LH SUPPORT ASSEMBLY REAR SUSPENSION
181 (1,846, 134)
REAR SPRING BUMPER NO.1 LH
COIL SPRING REAR LH
115 (1,173, 85)
w/HEIGHT CONTROL SENSOR SUB-ASSEMBLY
REAR COIL SPRING INSULATOR LOWER LH
SHOCK ABSORBER ASSEMBLY REAR LH
REAR SUSPENSION TOE ADJUST CAM SUB-ASSEMBLY
REAR SUSPENSION ARM ASSEMBLY NO.2 LH
REAR SUSPENSION ARM ASSEMBLY NO.1 LH
100 (1,020, 74)
112 (1,140, 83)
80 (816, 59)
180 (1,840, 133)
HEIGHT CONTROL TUBE NO.7
112 (1,140, 83)
w/ AIR SUSPENSION
58 (590, 43)
x3
80 (816, 59)
80 (816, 59)
PNEUMATIC REAR LH w/ SHOCK ABSORBER CYLINDER ASSEMBLY
294 (3,000, 217)
STRUT ROD ASSEMBLY REAR
PARKING BRAKE CABLE ASSEMBLY NO.3
6.0 (61, 53 in.*lbf)
39 (400,29)
N*m (kgf*cm, ft.*lbf) : Specified torque
Non-reusable part
180 (1,840,133)
P
C118767E04

SC