HEIGHT CONTROL VALVE

COMPONENTS

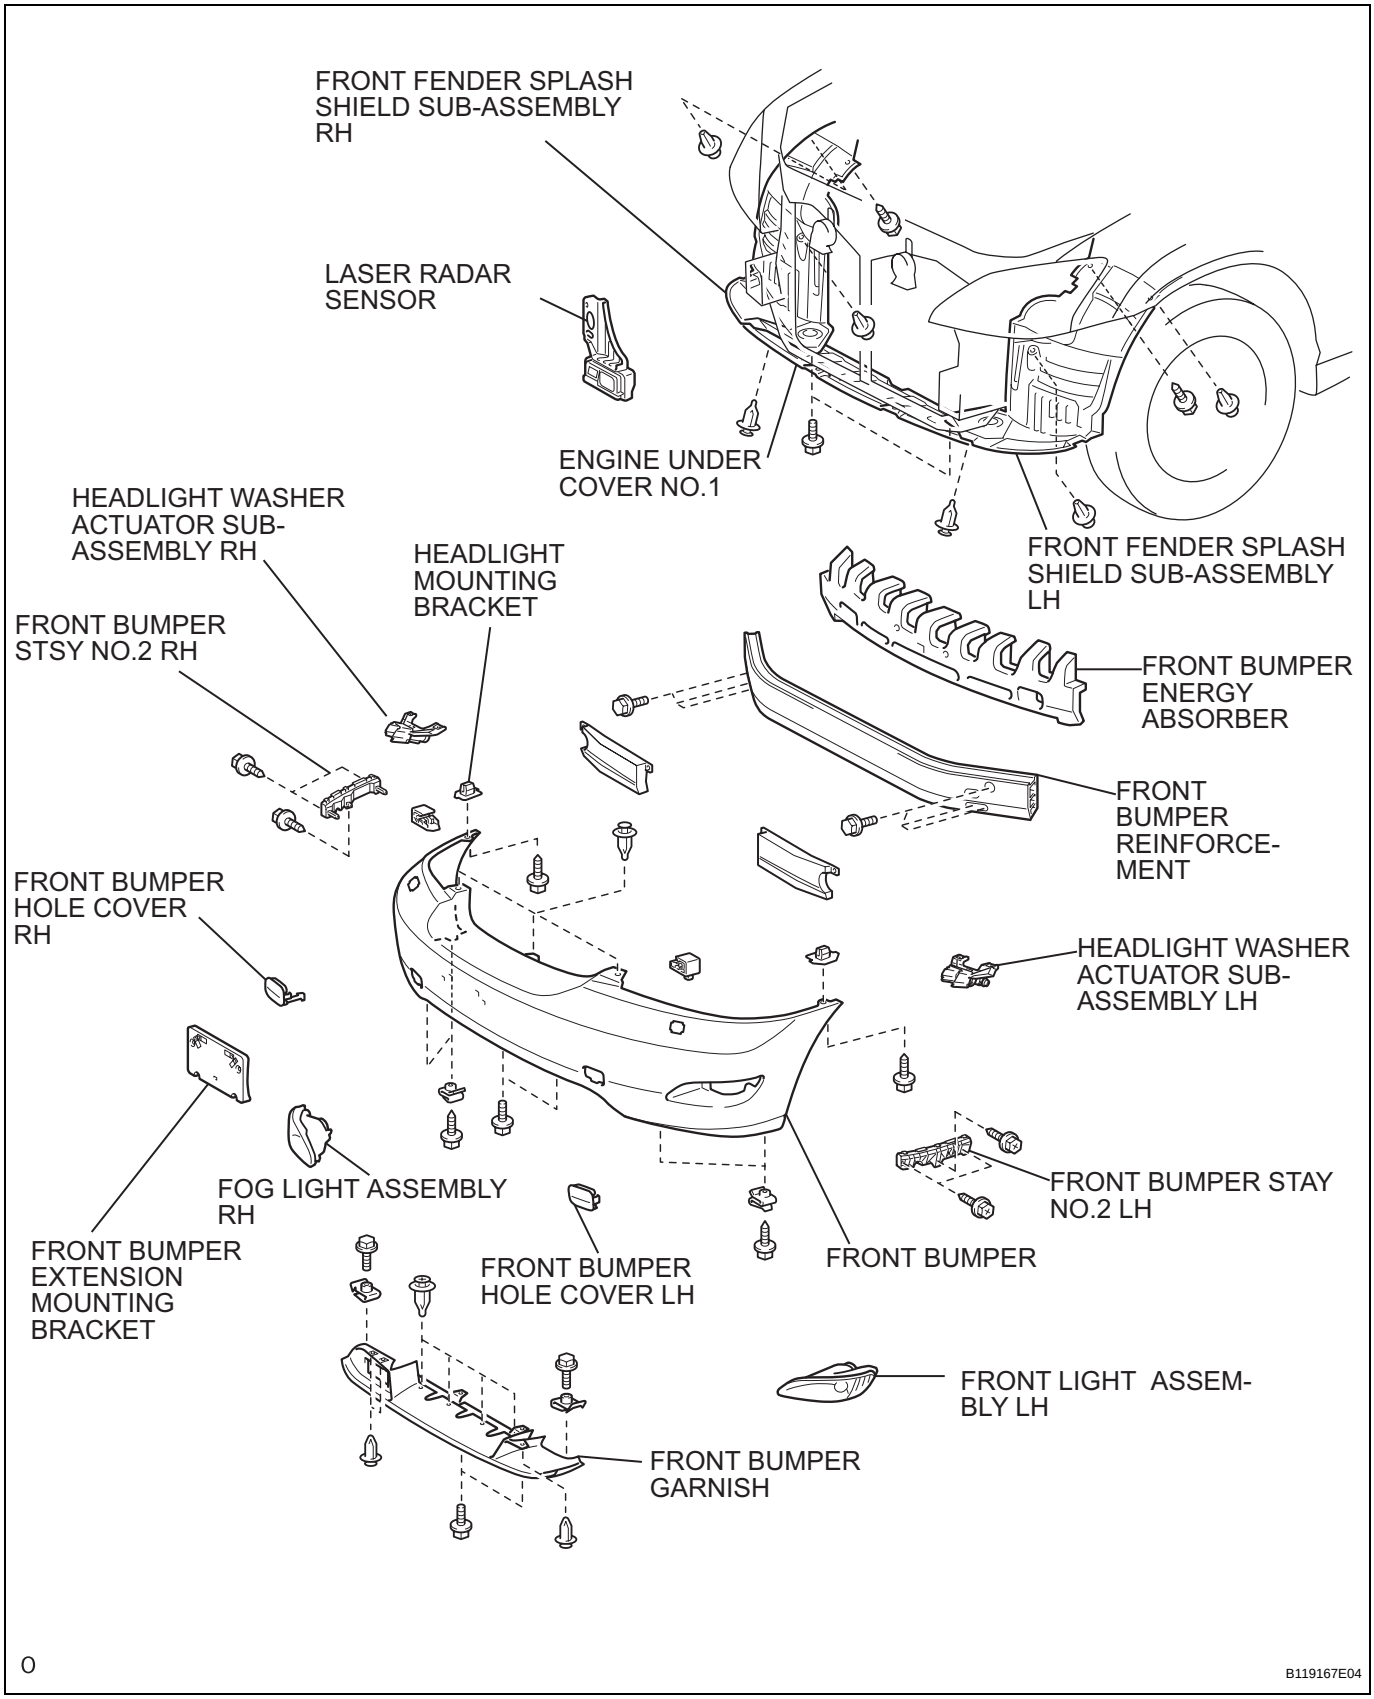

SC

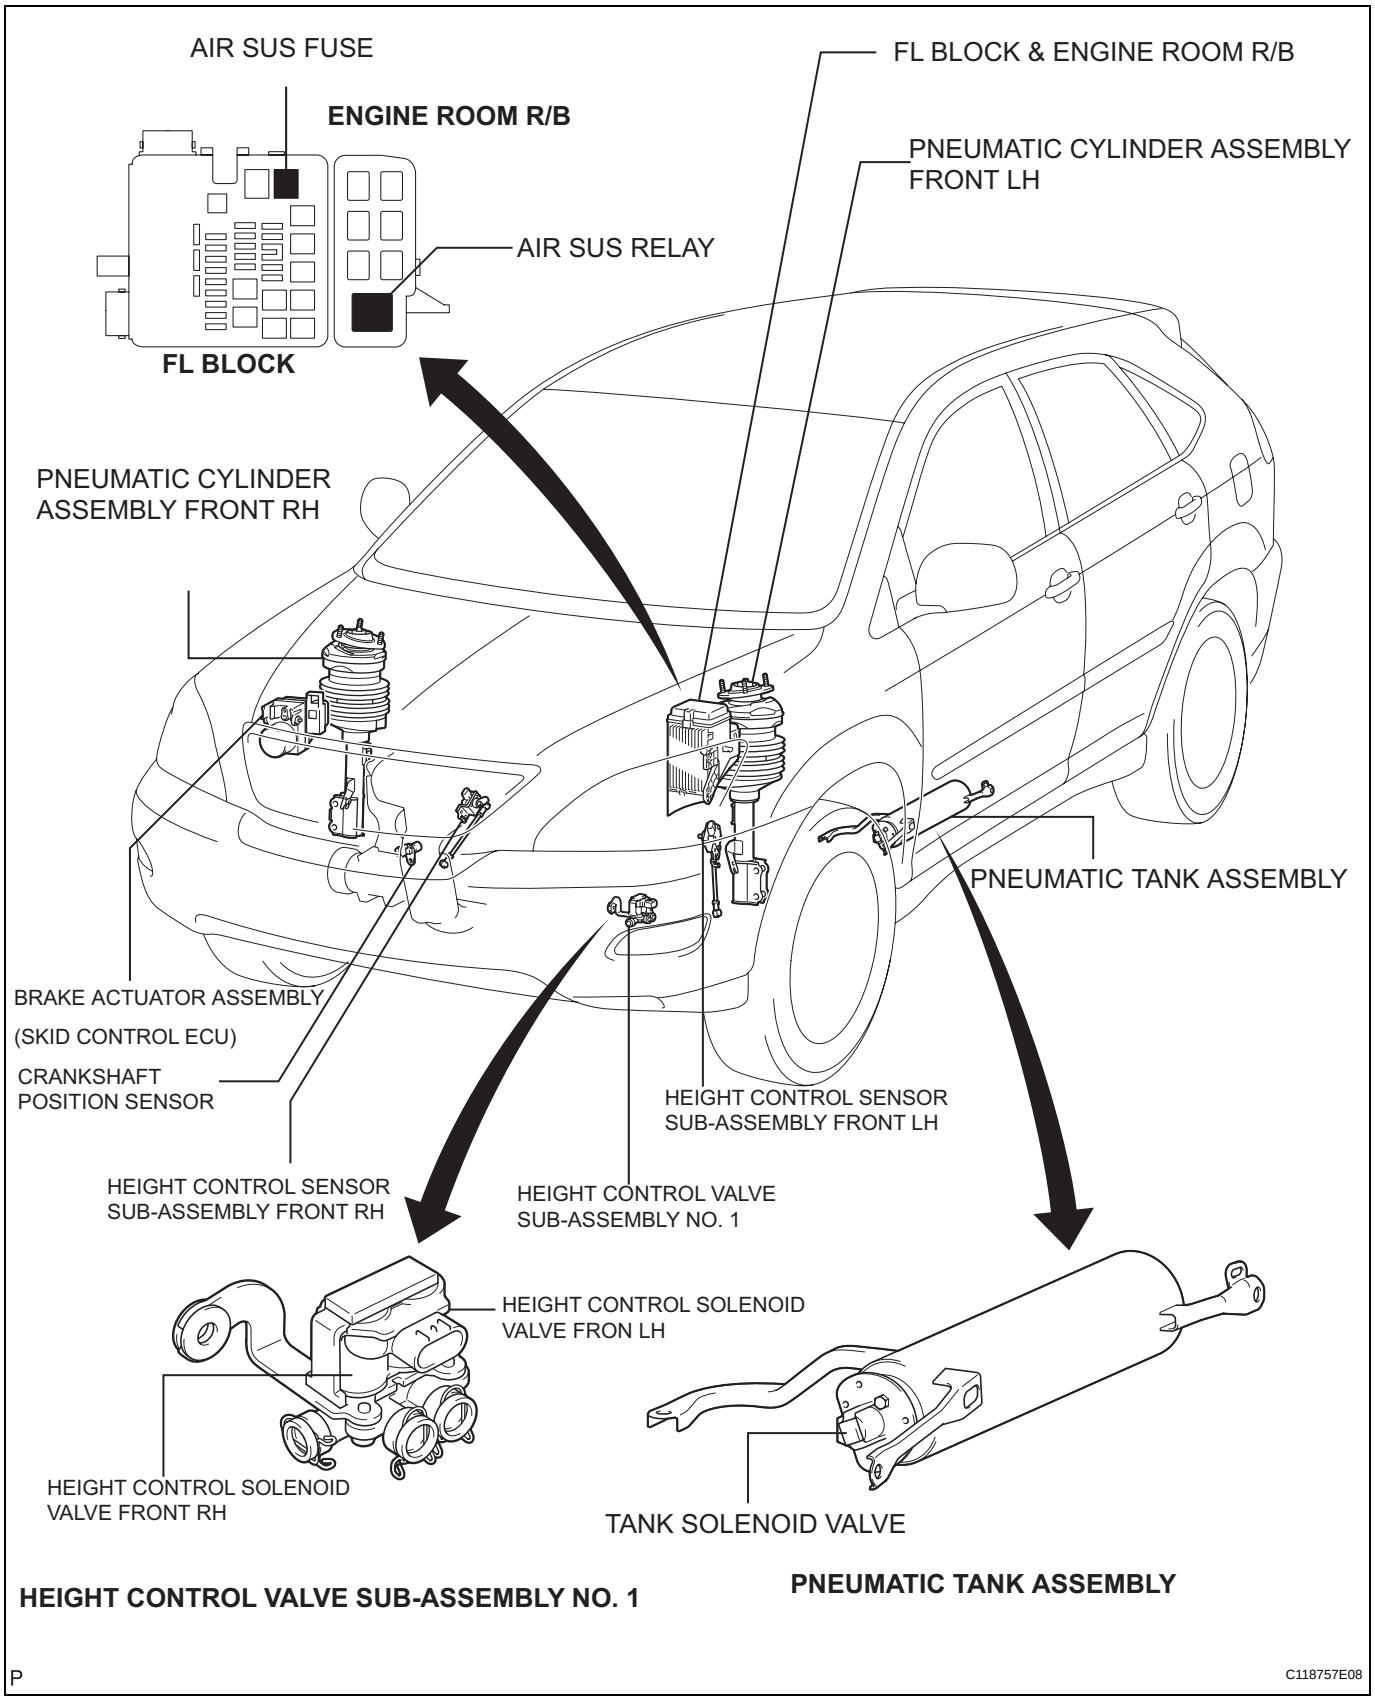
AIR SUS FUSE
ENGINE ROOM R/B
AIR SUS RELAY
FL BLOCK
FL BLOCK & ENGINE ROOM R/B
PNEUMATIC CYLINDER ASSEMBLY FRONT LH
PNEUMATIC CYLINDER ASSEMBLY FRONT RH
PNEUMATIC TANK ASSEMBLY
BRAKE ACTUATOR ASSEMBLY
(SKID CONTROL ECU)
CRANKSHAFT POSITION SENSOR
HEIGHT CONTROL SENSOR SUB-ASSEMBLY FRONT LH
HEIGHT CONTROL SENSOR SUB-ASSEMBLY FRONT RH
HEIGHT CONTROL VALVE SUB-ASSEMBLY NO. 1
HEIGHT CONTROL SOLENOID VALVE FRON LH
HEIGHT CONTROL SOLENOID VALVE FRONT RH
TANK SOLENOID VALVE
HEIGHT CONTROL VALVE SUB-ASSEMBLY NO. 1
PNEUMATIC TANK ASSEMBLY
P
C118757E08

SC

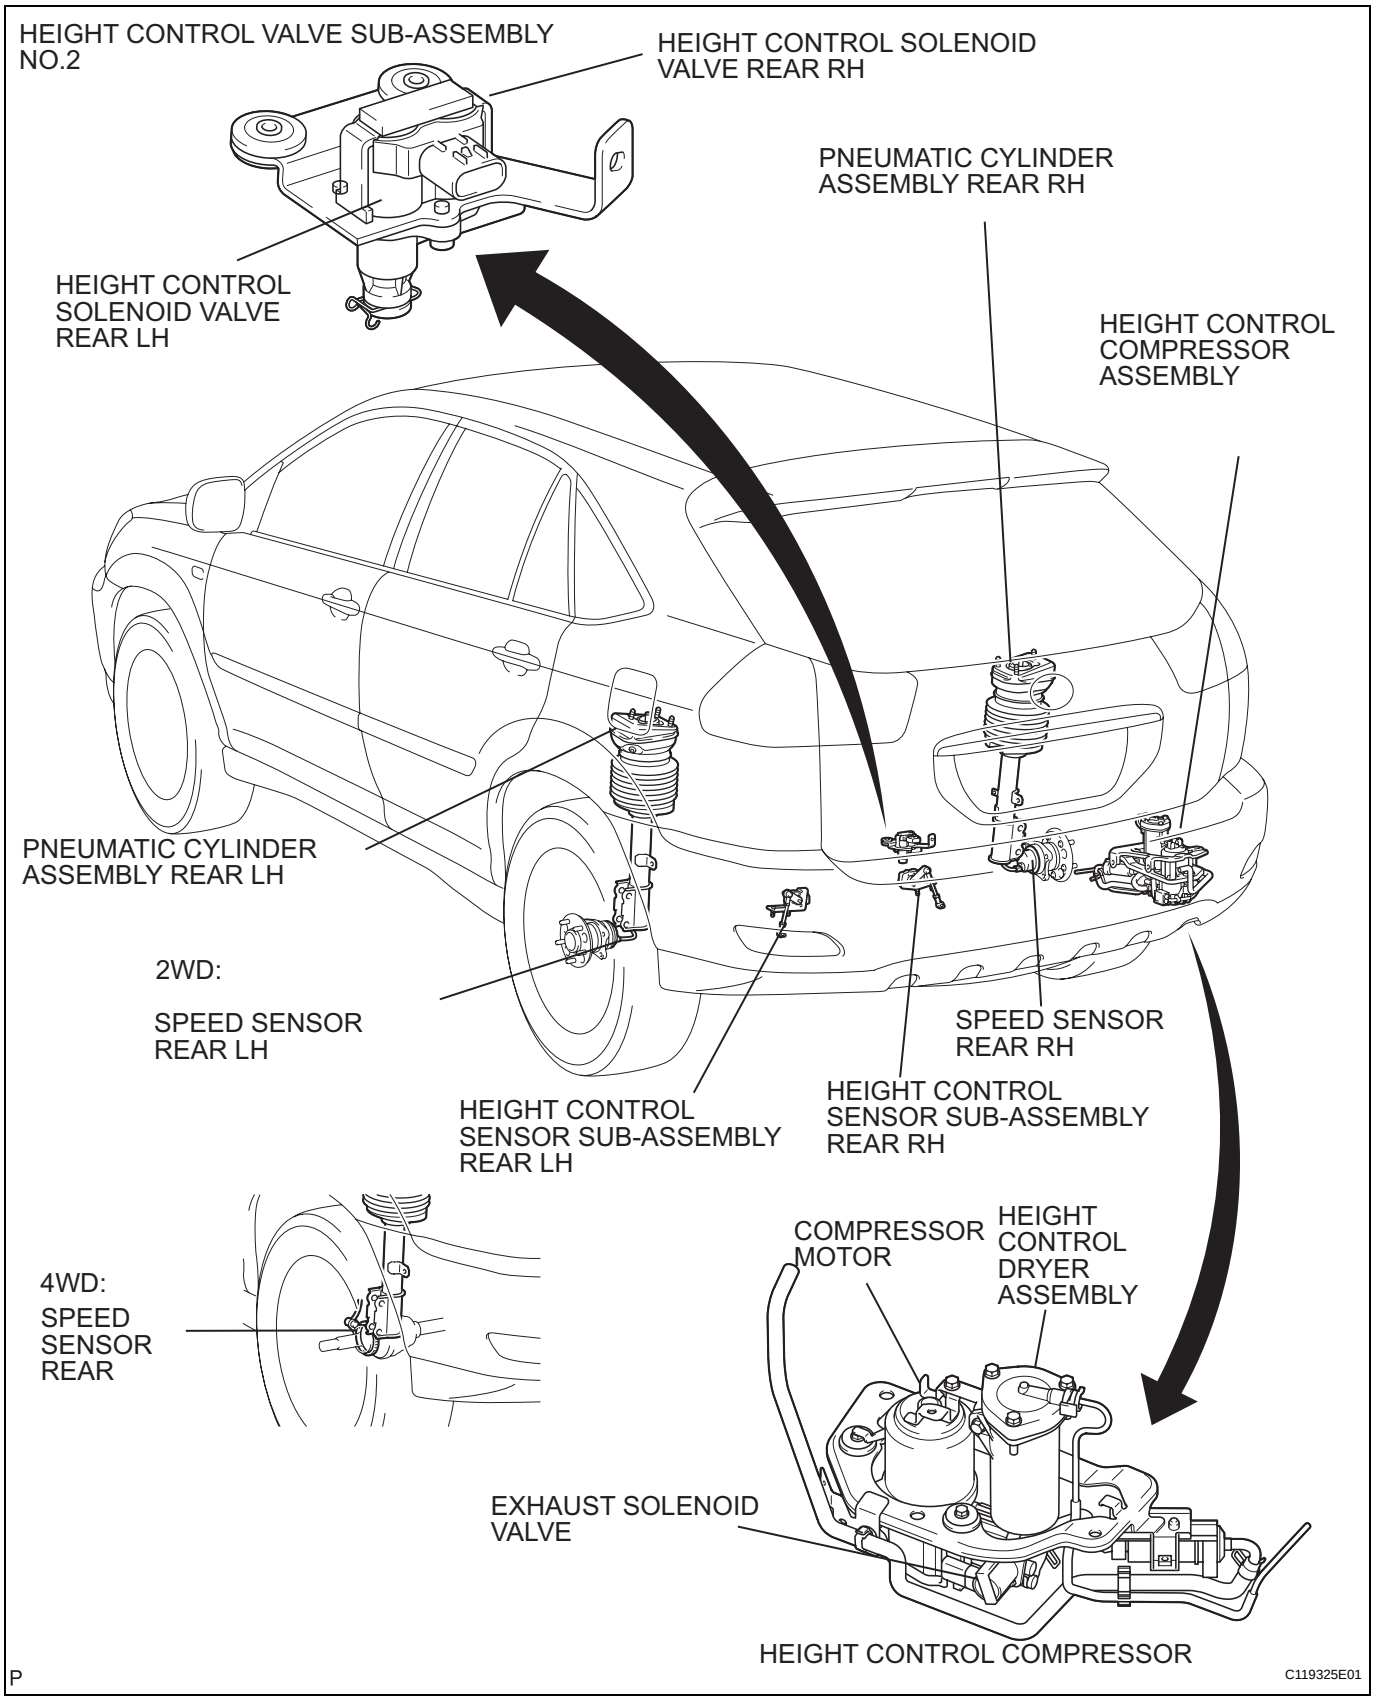
HEIGHT CONTROL VALVE SUB-ASSEMBLY NO.2
HEIGHT CONTROL SOLENOID VALVE REAR RH
PNEUMATIC CYLINDER ASSEMBLY REAR RH
HEIGHT CONTROL SOLENOID VALVE REAR LH
HEIGHT CONTROL COMPRESSOR ASSEMBLY
PNEUMATIC CYLINDER ASSEMBLY REAR LH
2WD:
SPEED SENSOR REAR LH
SPEED SENSOR REAR RH
HEIGHT CONTROL SENSOR SUB-ASSEMBLY REAR LH
HEIGHT CONTROL SENSOR SUB-ASSEMBLY REAR RH
4WD:
SPEED SENSOR REAR
COMPRESSOR MOTOR
HEIGHT CONTROL DRYER ASSEMBLY
EXHAUST SOLENOID VALVE
HEIGHT CONTROL COMPRESSOR
P
C119325E01