11.Rear Washer

A: REMOVAL

1) Disconnect the ground cable from battery.
2) Remove the rear gate upper trim.
   (1) Remove the claws on the trim edge.
   (2) Disconnect the claws in the center of trim, and remove the rear gate upper trim.

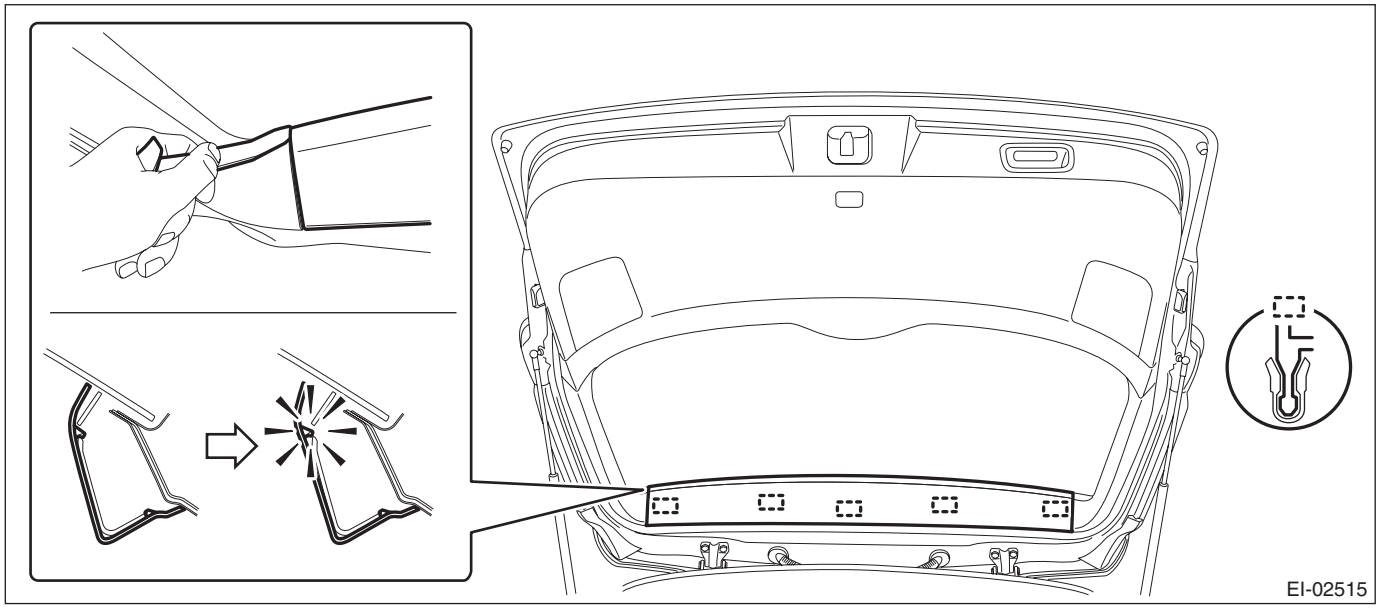

3) Remove the high-mounted stop light.
   (1) Remove the nut.

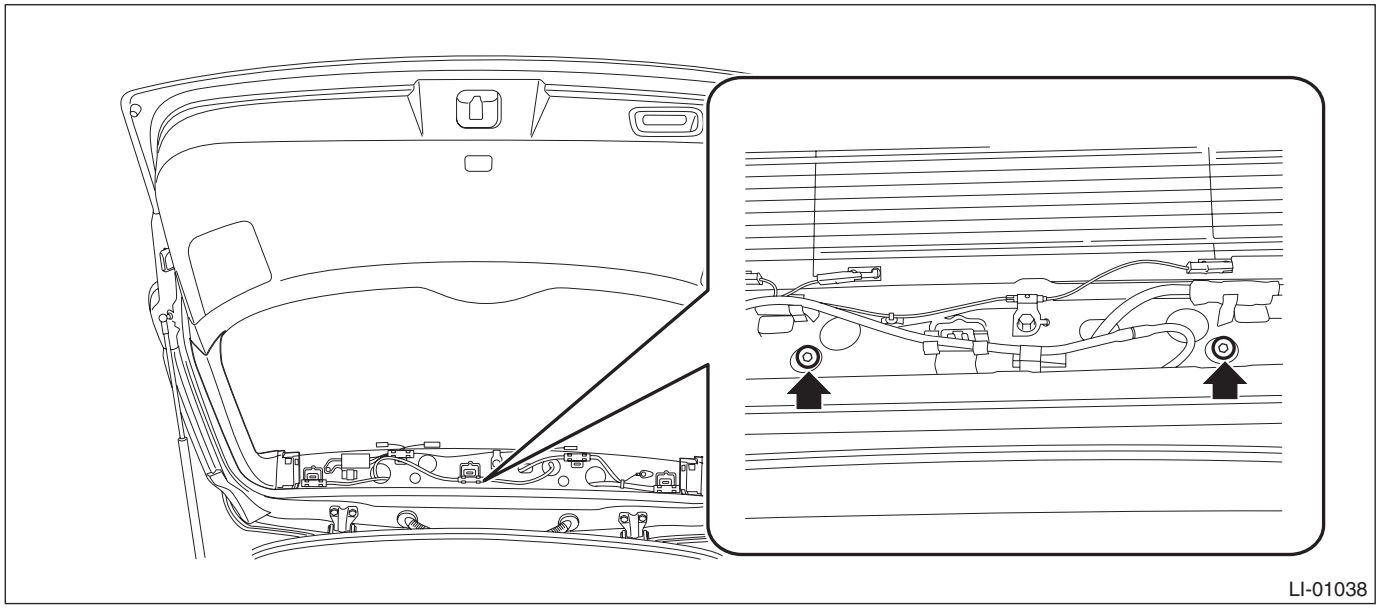

(2) Disconnect the connector and remove the high-mounted stop light.

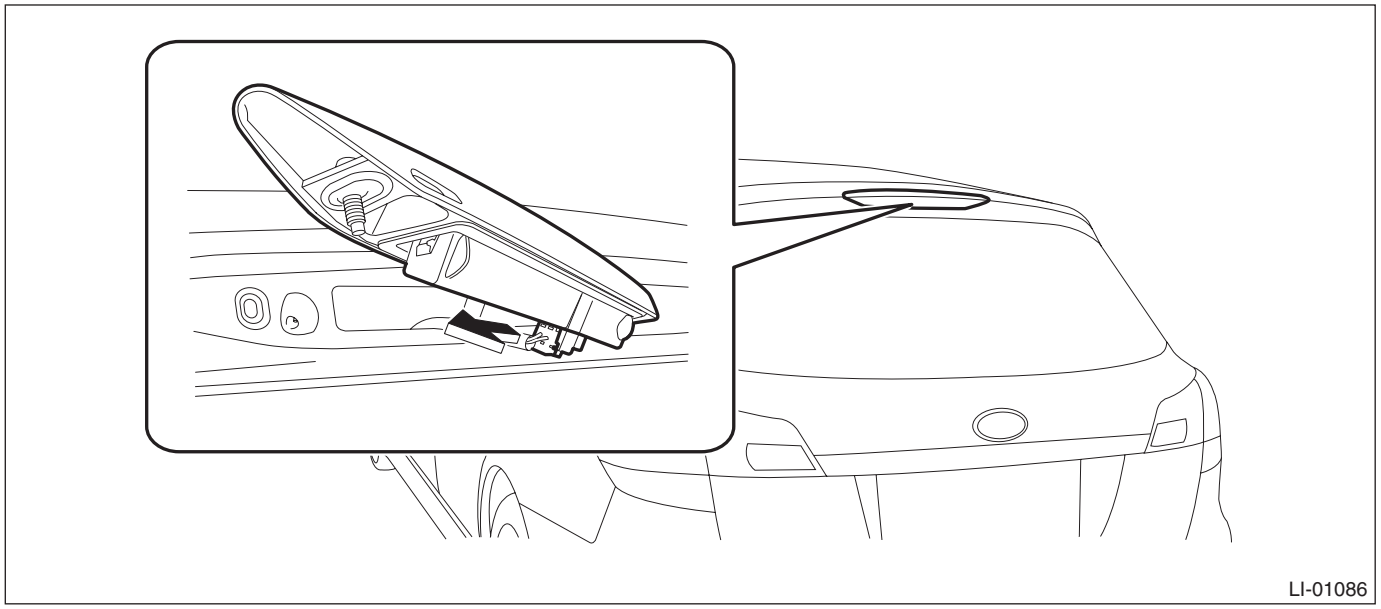

4) Remove the rear washer nozzle.

CAUTION:
Before removing, apply protective tape to the body panel and used tools not to damage the rear gate panel.

(1) Push the claw using a flat tip screwdriver, etc.
(2) When the washer nozzle lifts up, pull out the nozzle using a clip remover, etc.
(3) Disconnect the washer hose and remove the washer nozzle.

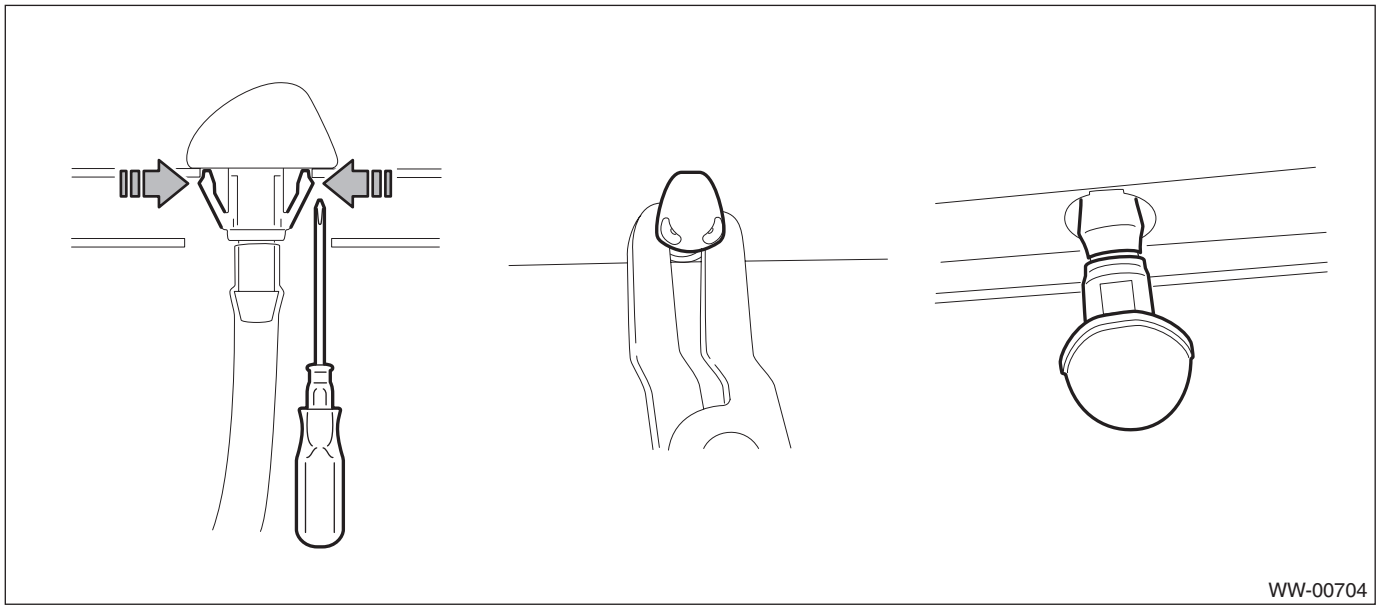

B: INSTALLATION

1) Install each part in the reverse order of removal.

Tightening torque:
High-mounted stop light assembly: 4.5 N·m (0.46 kgf-m, 3.3 ft-lb)

2) Check the washer nozzle position. <Ref. to WW-47, VISUAL INSPECTION, INSPECTION, Rear Washer.>

C: INSPECTION

1. VISUAL INSPECTION

Check for the following items, and if any malfunction is found, replace the corresponding part.
- Make sure the nozzle and hose are not clogged.
- Make sure the hose is not bent.

2. INSPECTING THE SPRAY POSITION

1) Turn the wiper switch to OFF position.
2) While the vehicle is stopped, check that the washer spray position is as shown in the figure.
3) After inspection, if the spray position is out of the specified range, adjust the position or replace with the new washer nozzle.

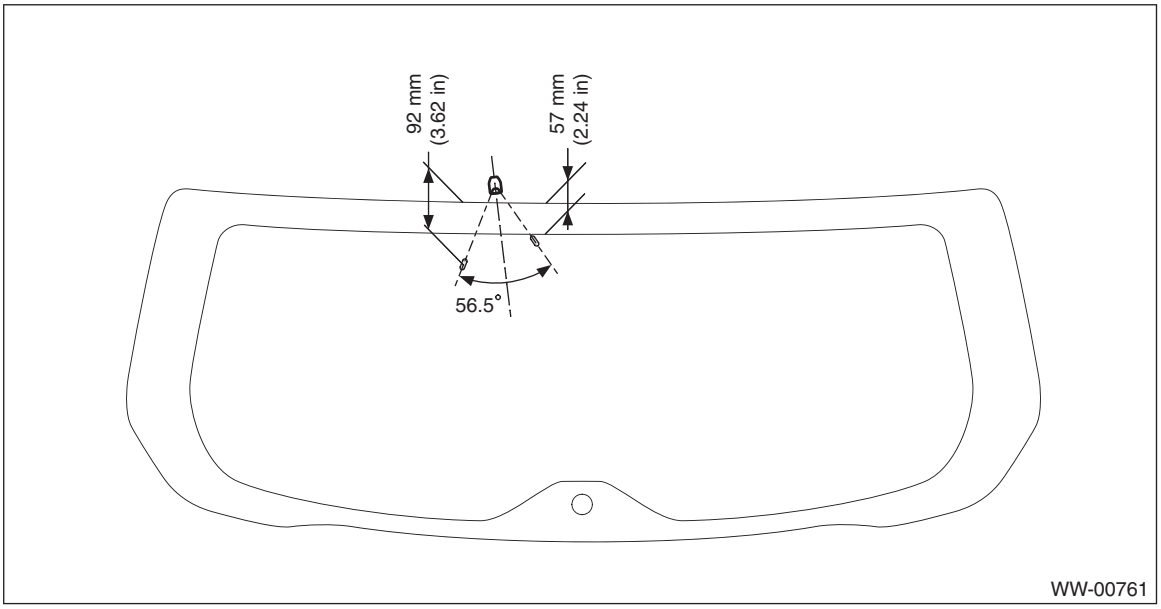

ENTERTAINMENT

ET

		Page
1.	General Description	2
2.	Audio System	3
3.	Navigation System	8
4.	Audio	11
5.	Front Speaker	13
6.	Rear Speaker	16
7.	Woofer	18
8.	Power Amplifier	20
9.	Antenna	21
10.	Noise Suppressor	35
11.	Steering Satellite Switch	37
12.	Navigation Body	45
13.	GPS Antenna	47
14.	Rearview Camera System	52
15.	Front Accessory Power Supply Socket	61
16.	Rear Accessory Power Supply Socket	65
17.	AUX Input Terminal	68