(Cont. next page)

ABS, Hill–Start Assist Control, TRC and VSC

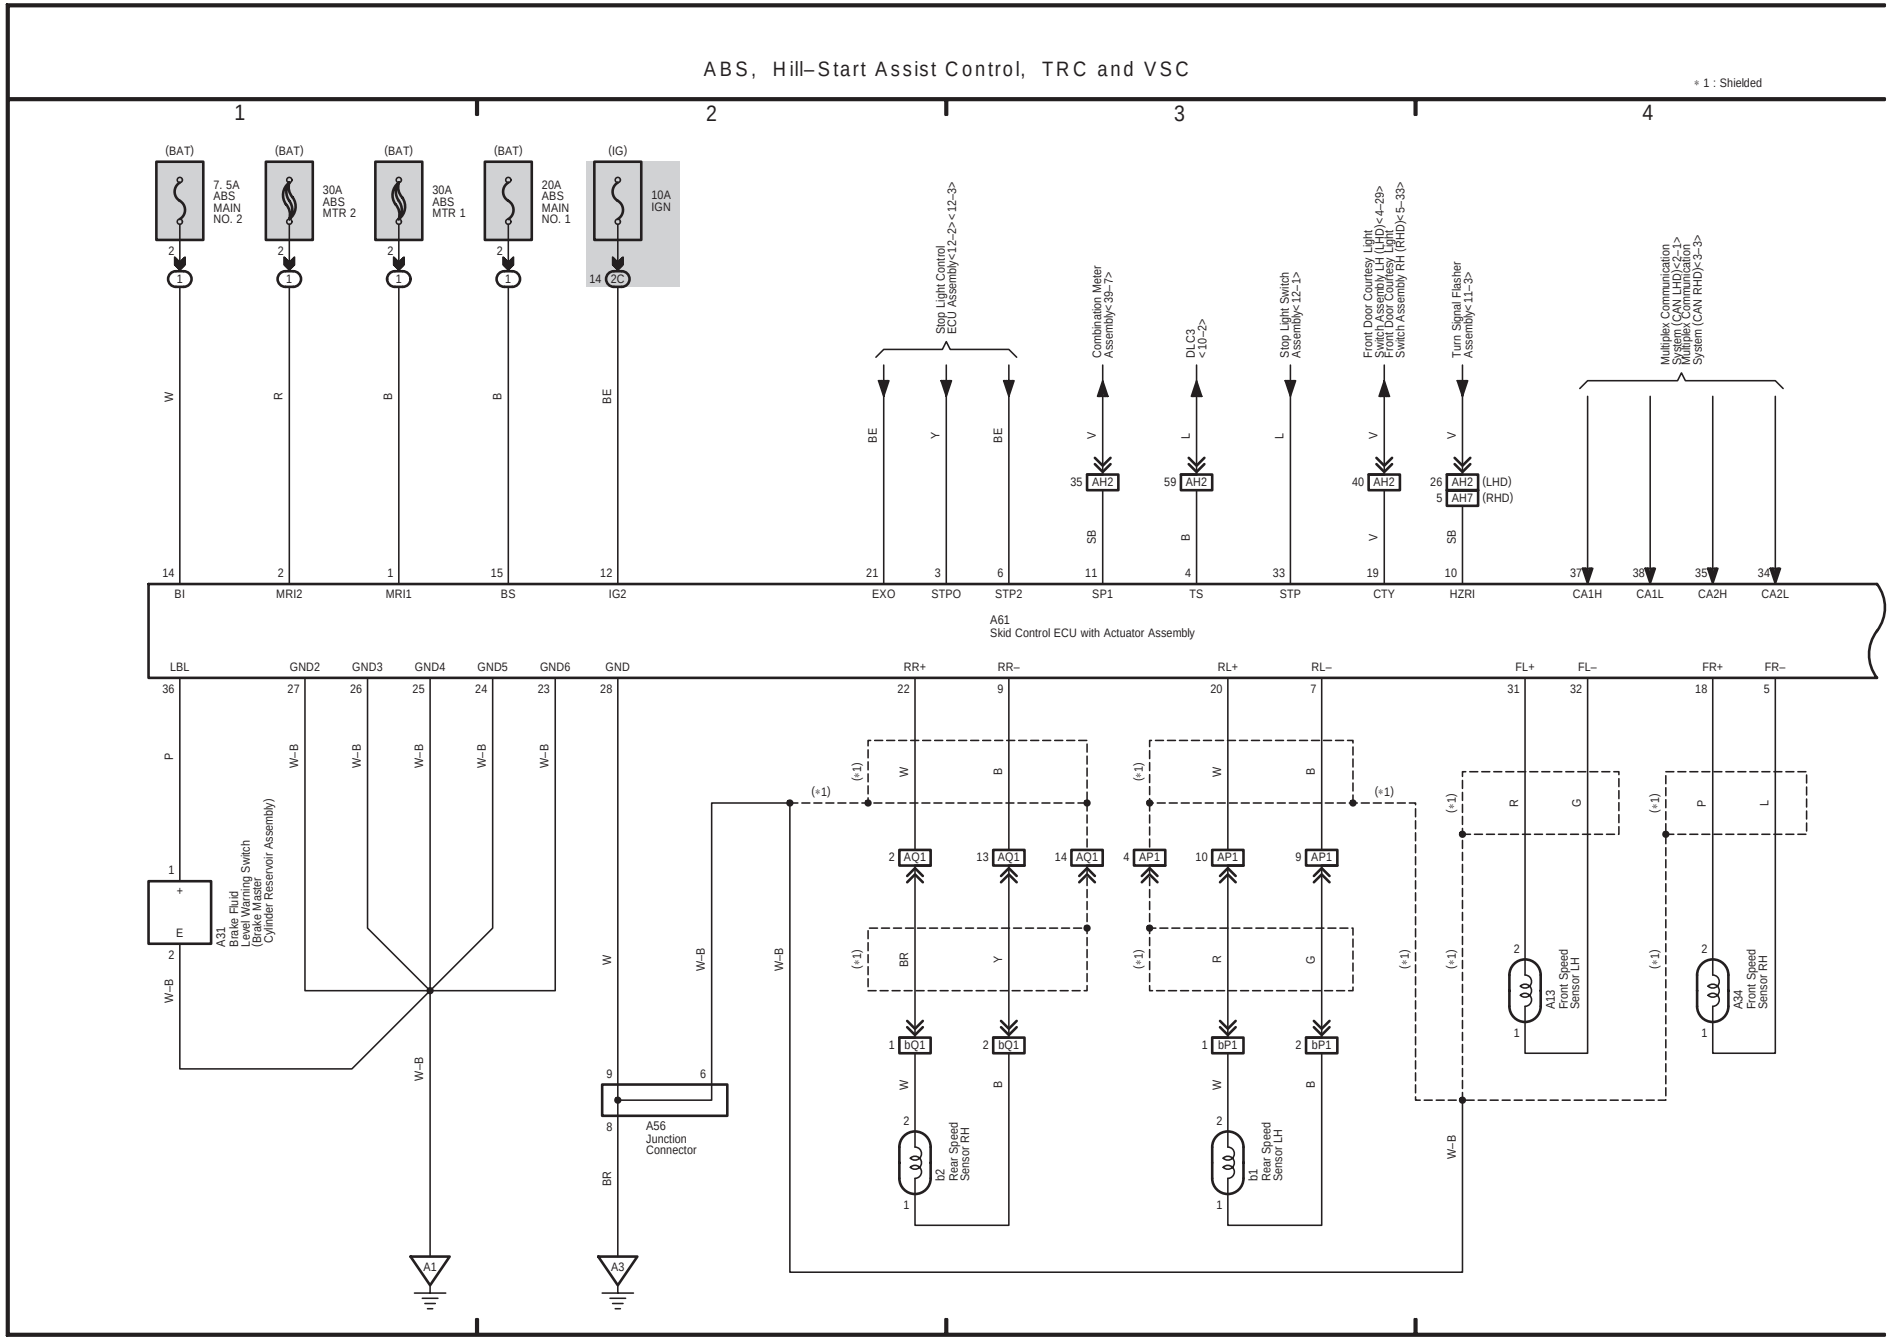

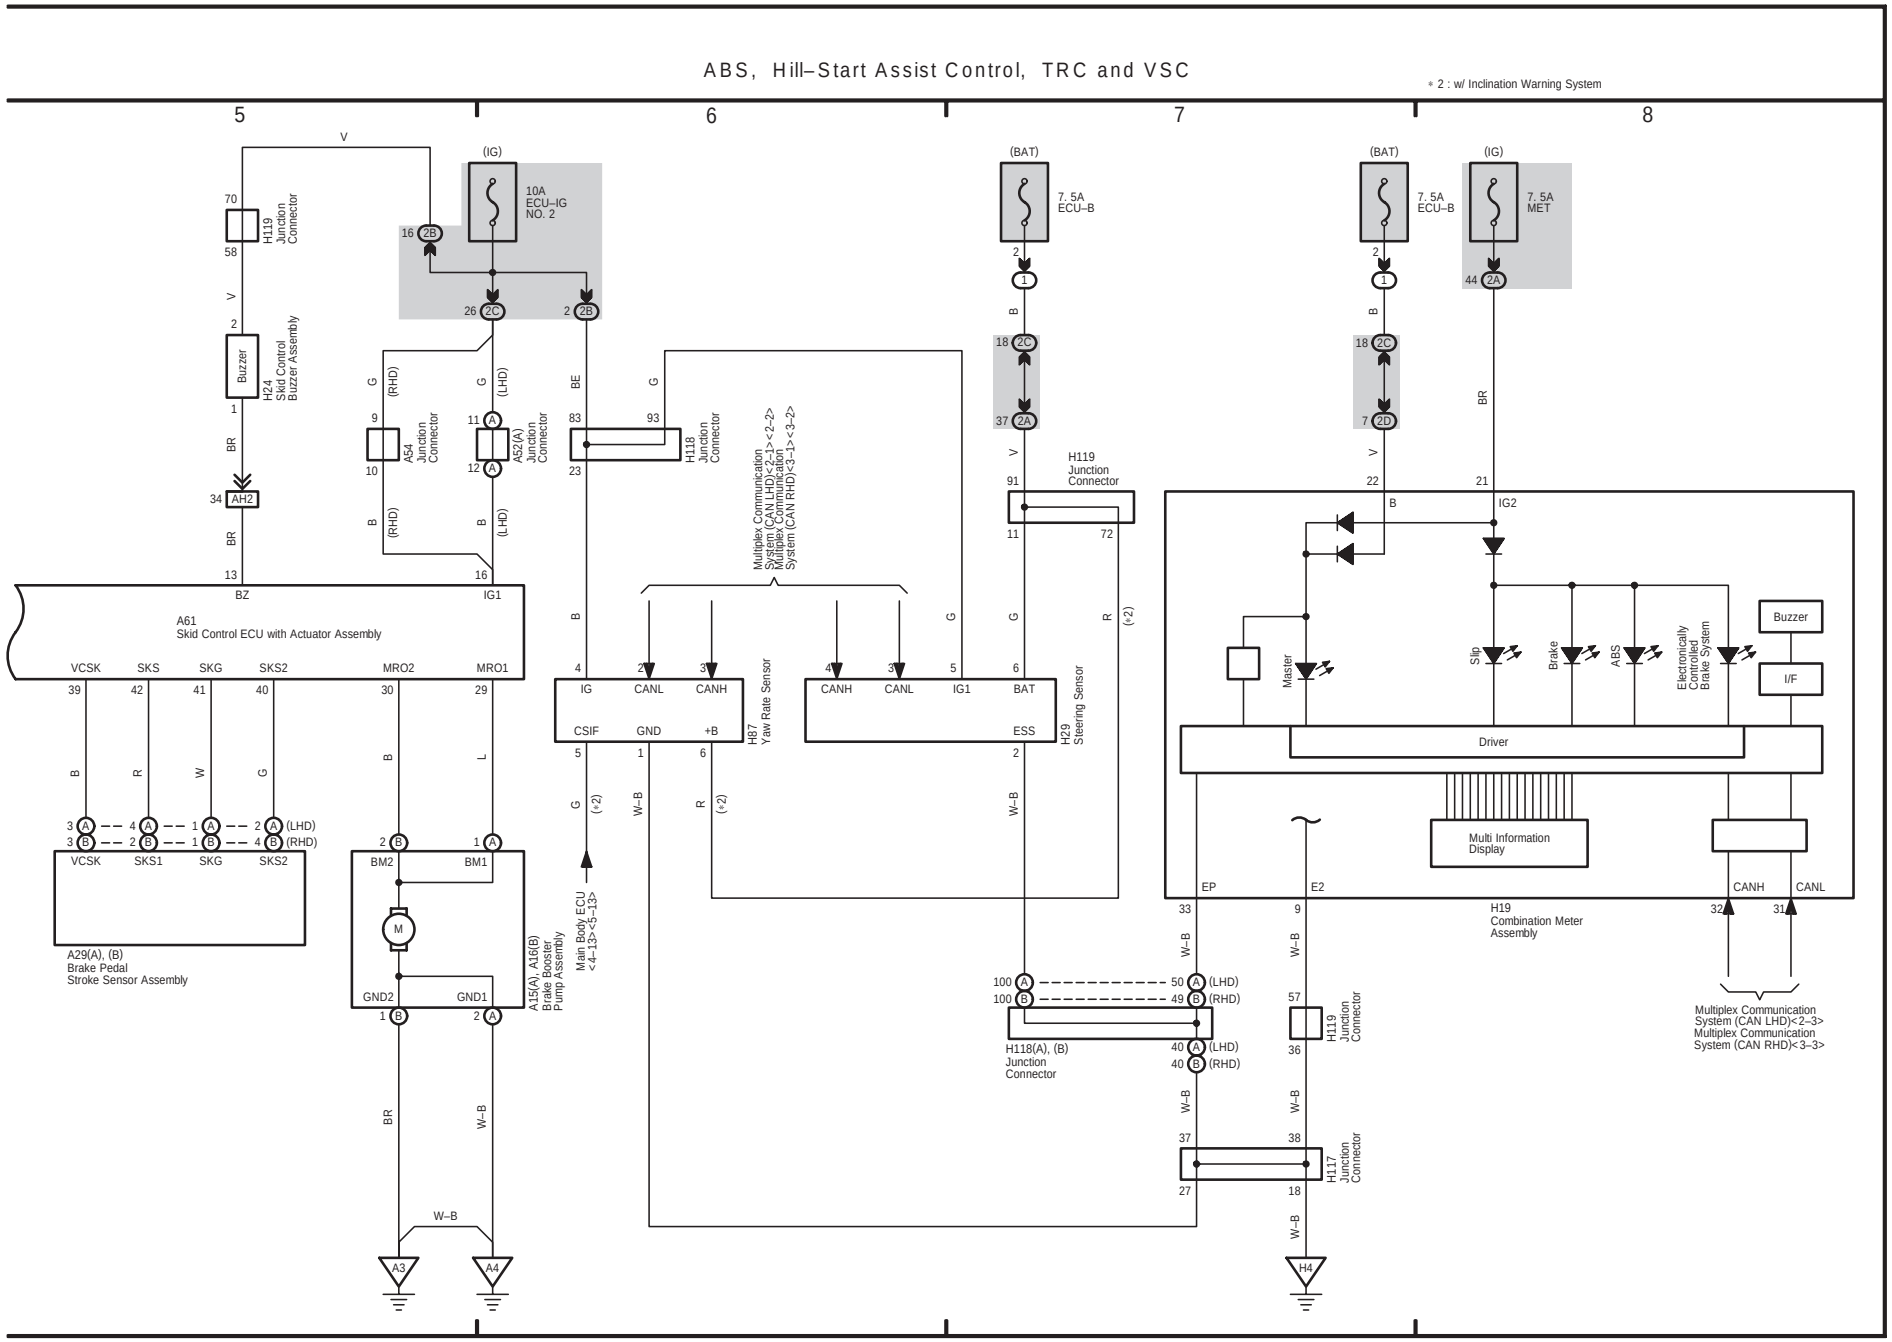
ABS, Hill–Start Assist Control, TRC and VSC
* 2 : w/ Inclination Warning System
5
6
7
8
(IG)
10A
ECU–IG
NO. 2
(BAT)
7. 5A
ECU–B
7. 5A
MET
H119
Junction
Connector
Buzzer
H24
Skid Control
Buzzer Assembly
AH2
A54
Junction
Connector
A52(A)
Junction
Connector
H118
Junction
Connector
Multiplex Communication
System (CAN LHD)<2–2>
Multiplex Communication
System (CAN RHD)<3–1><3–2>
A61
Skid Control ECU with Actuator Assembly
VCSK
SKS
SKG
SKS2
MRO2
MRO1
BZ
IG1
A29(A), (B)
Brake Pedal
Stroke Sensor Assembly
BM2
BM1
GND2
GND1
A15(A), A16(B)
Brake Booster
Pump Assembly
Main Body ECU
<4–13><5–13>
IG
CANL
CANH
CSIF
GND
+B
H87
Yaw Rate Sensor
BAT
ESS
H29
Steering Sensor
H118(A), (B)
Junction
Connector
H117
Junction
Connector
A3
A4
H4
Master
Slip
Brake
ABS
Electronically
Controlled
Brake System
Buzzer
I/F
Driver
Multi Information
Display
EP
E2
H19
Combination Meter
Assembly
Multiplex Communication
System (CAN LHD)<2–3>
Multiplex Communication
System (CAN RHD)<3–3>