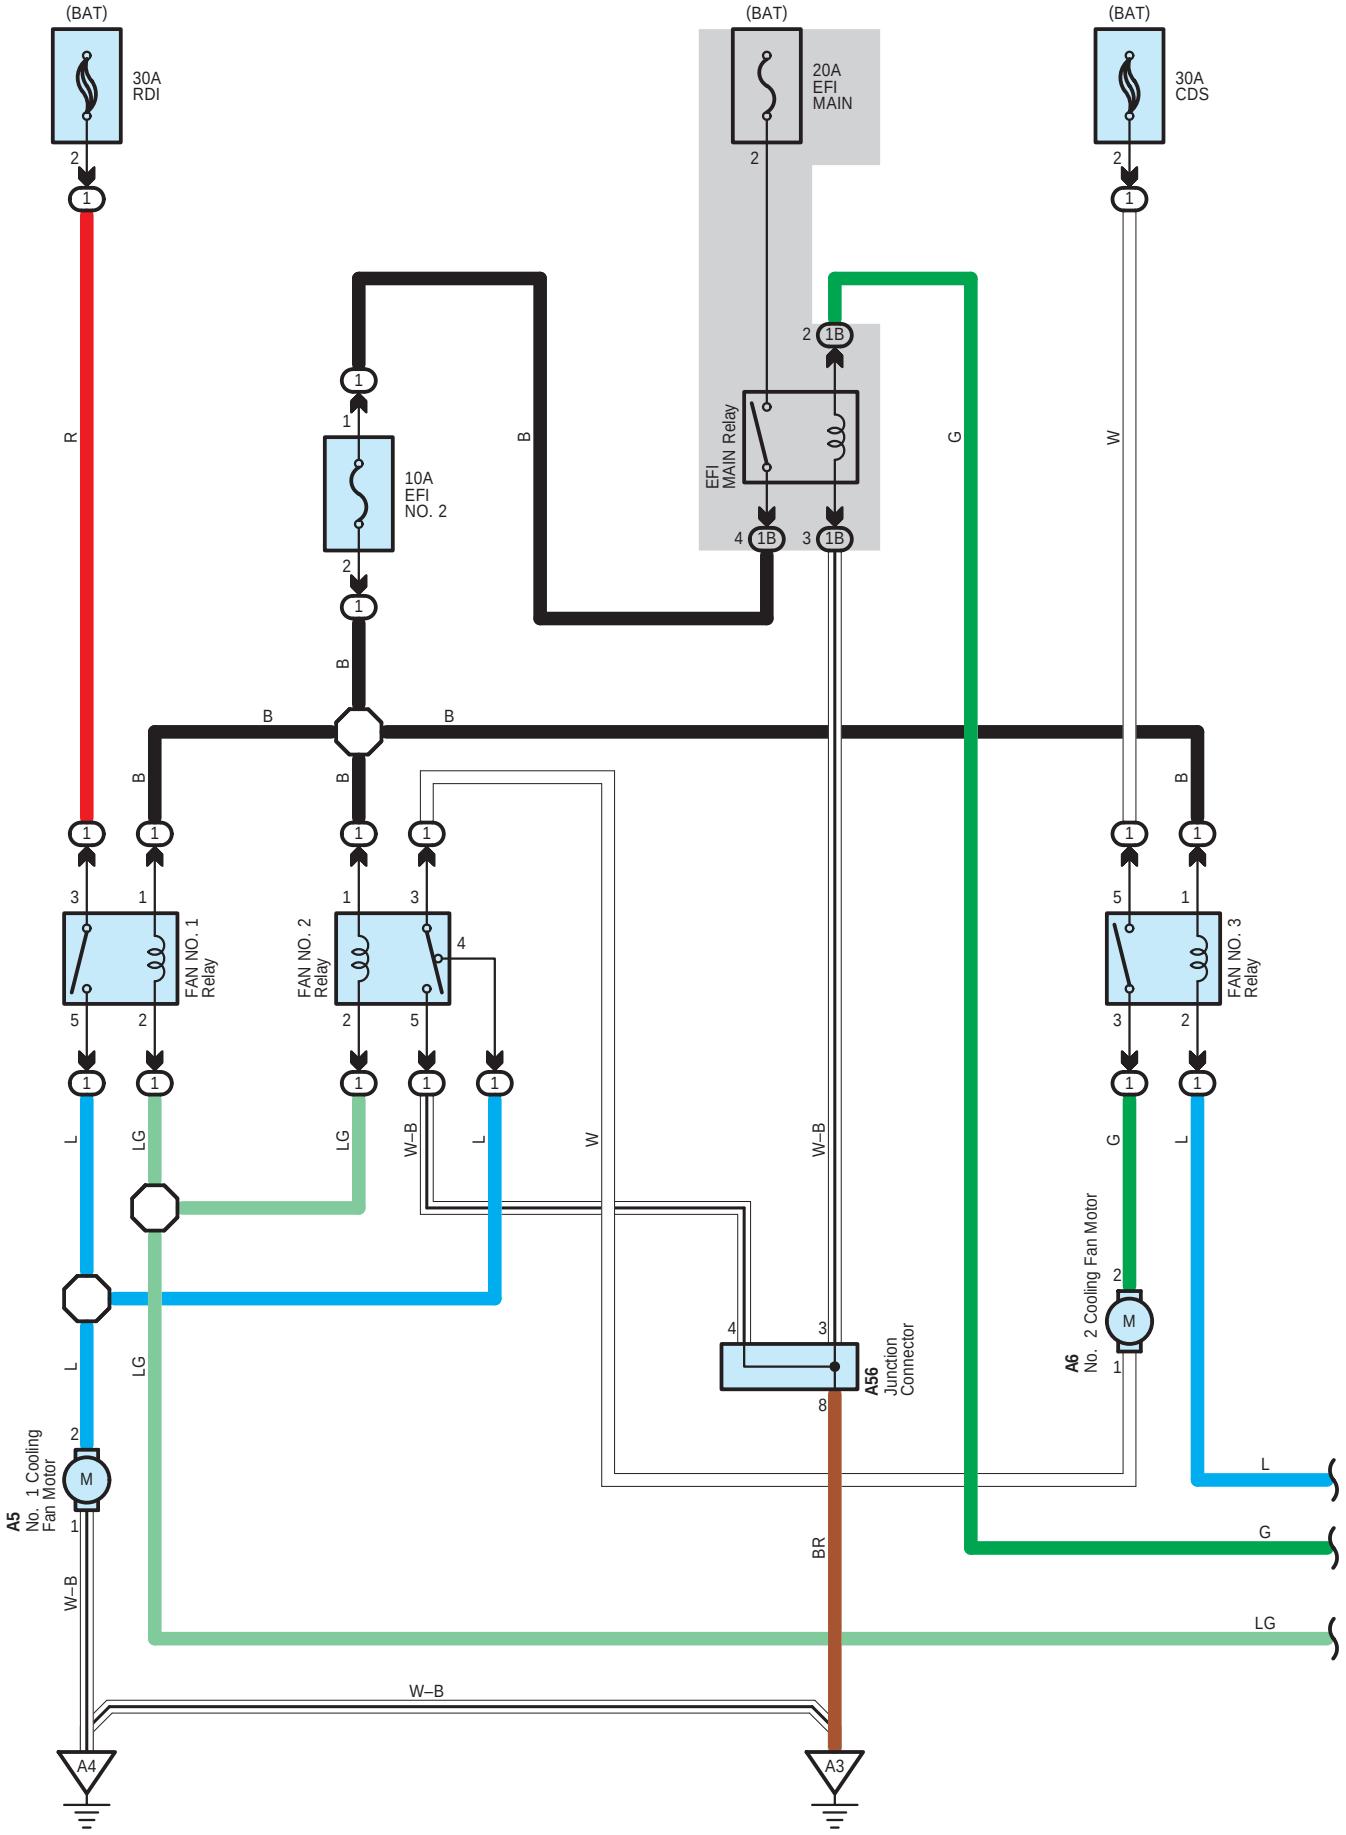
(BAT)
30A
RDI
(BAT)
20A
EFI
MAIN
(BAT)
30A
CDS
10A
EFI
NO. 2
EFI
MAIN Relay
FAN NO. 1
Relay
FAN NO. 2
Relay
FAN NO. 3
Relay
A5
No. 1 Cooling
Fan Motor
A6
No. 2 Cooling Fan Motor
A56
Junction
Connector
A4
A3
R
B
G
W
L
LG
W–B
BR

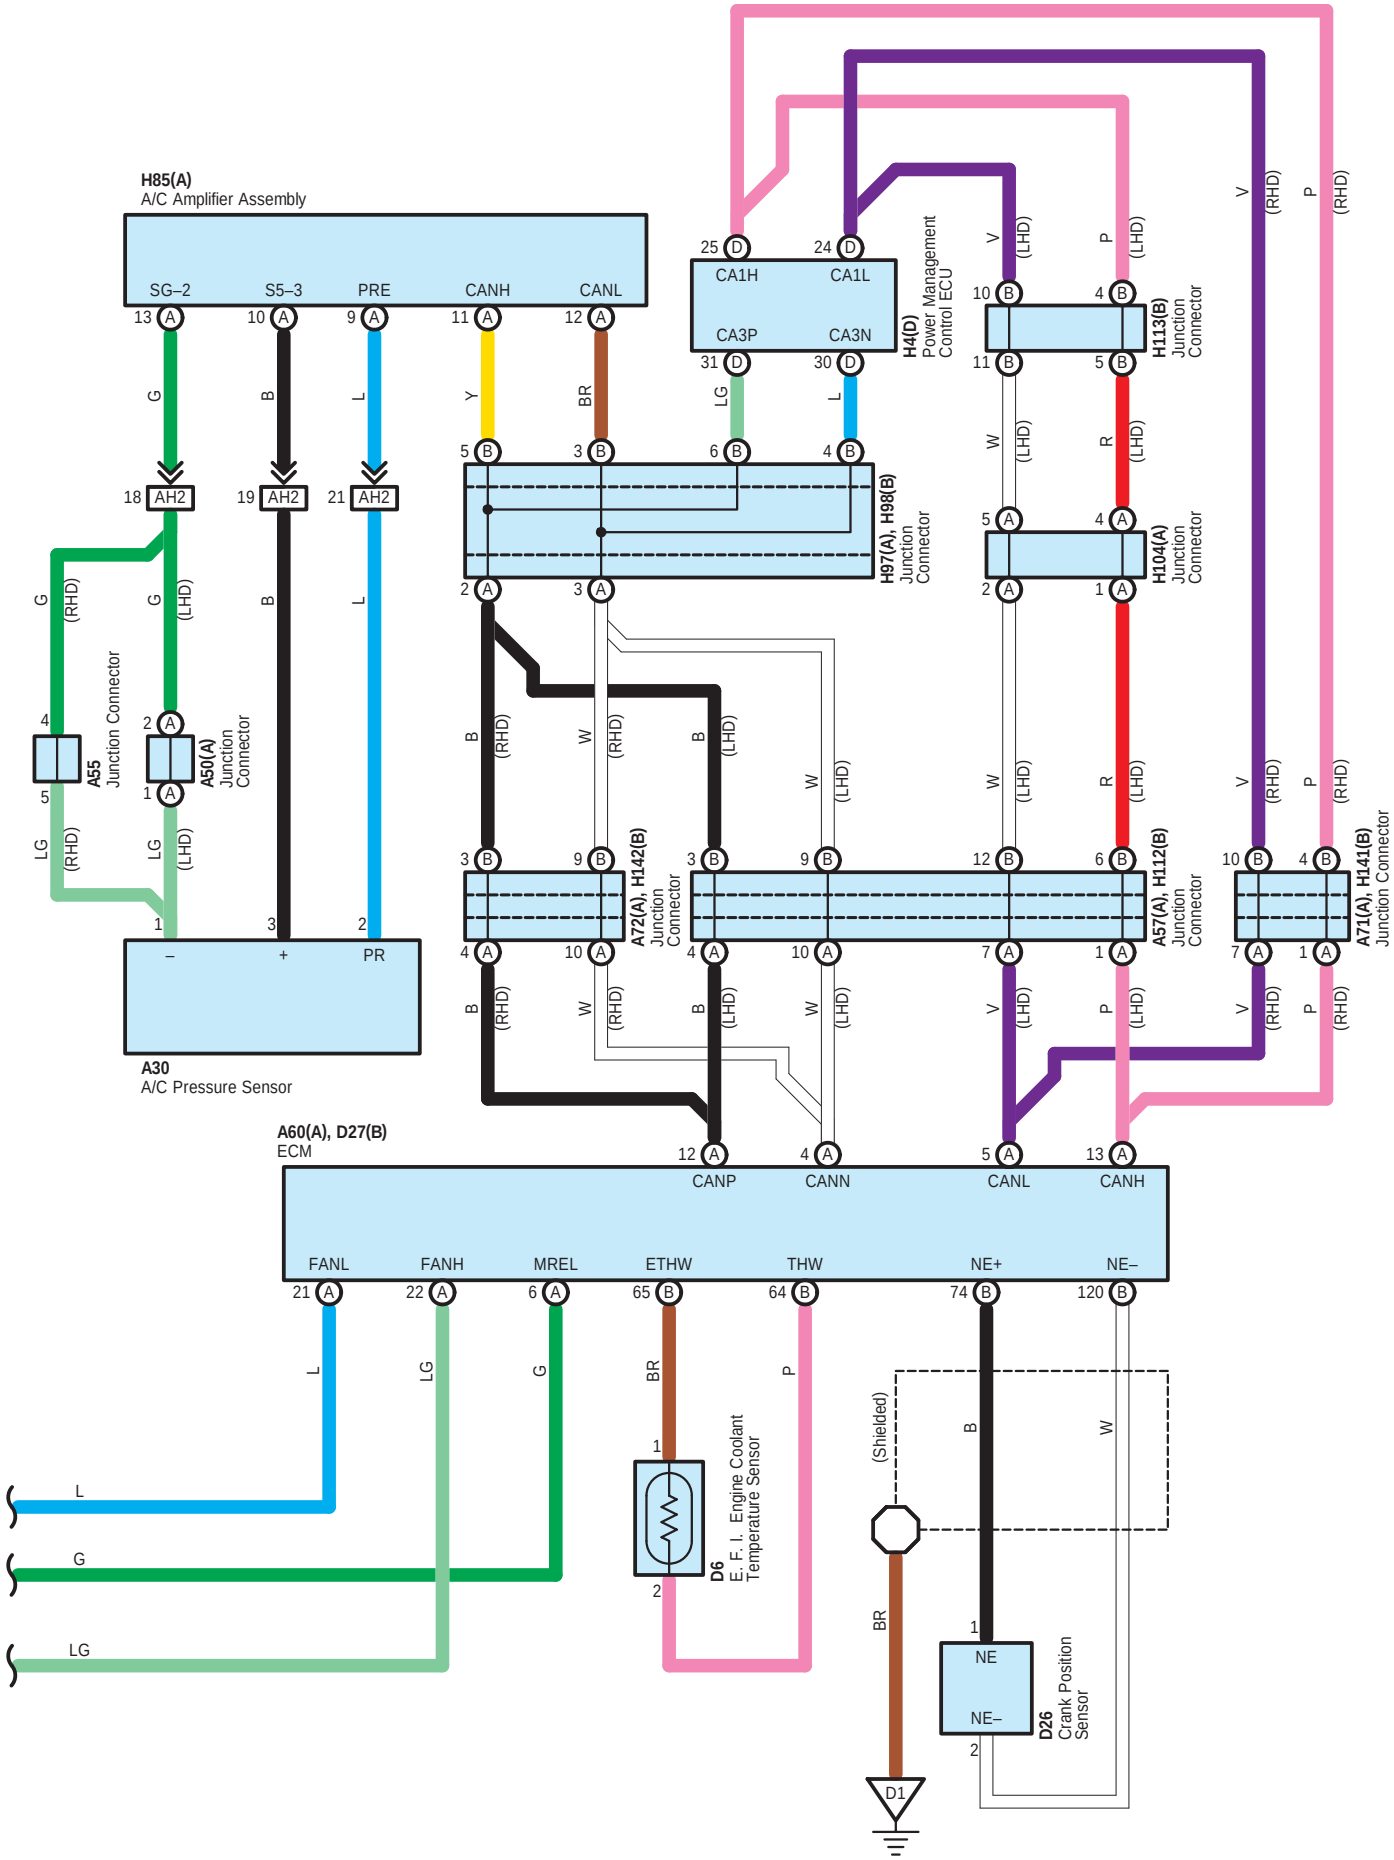
H85(A)
A/C Amplifier Assembly
SG–2
S5–3
PRE
CANH
CANL
AH2
H4(D)
Power Management Control ECU
CA1H
CA1L
CA3P
CA3N
H113(B)
Junction Connector
H97(A), H98(B)
Junction Connector
H104(A)
Junction Connector
A55
Junction Connector
A50(A)
Junction Connector
A72(A), H142(B)
Junction Connector
A57(A), H112(B)
Junction Connector
A71(A), H141(B)
Junction Connector
A30
A/C Pressure Sensor
PR
A60(A), D27(B)
ECM
CANP
CANN
CANL
CANH
FANL
FANH
MREL
ETHW
THW
NE+
NE–
D6
E. F. I. Engine Coolant Temperature Sensor
(Shielded)
D26
Crank Position Sensor
NE
NE–
D1

A 5
Gray

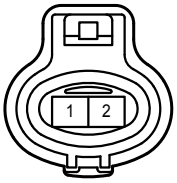

A 6
Black

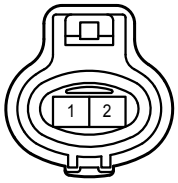

A 30
Black

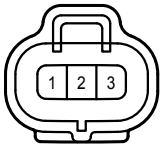

A 50
White

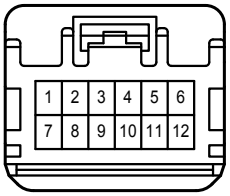

A 55
Black

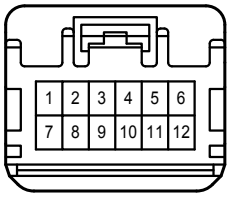

A 56
White

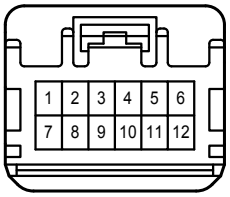

A 57
Blue

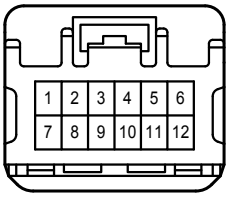

A 60
Black

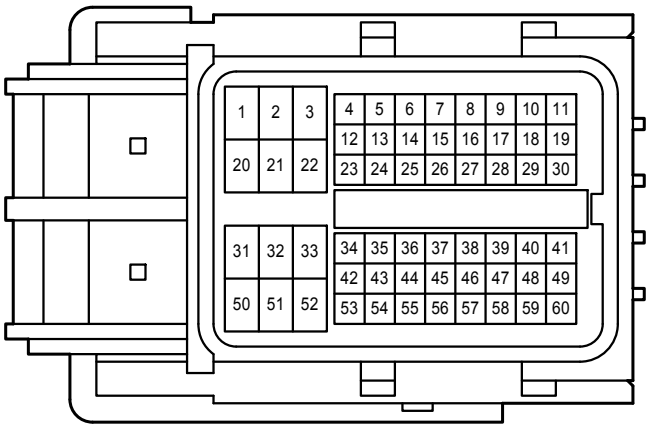

A 71
Gray

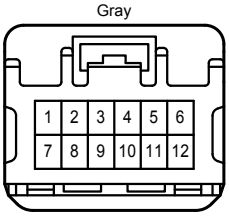

A 72
Blue

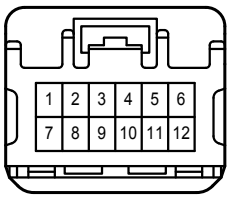

D 6
Black

D 26
Black

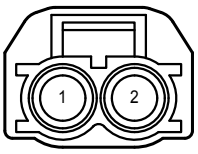

D 27
Black

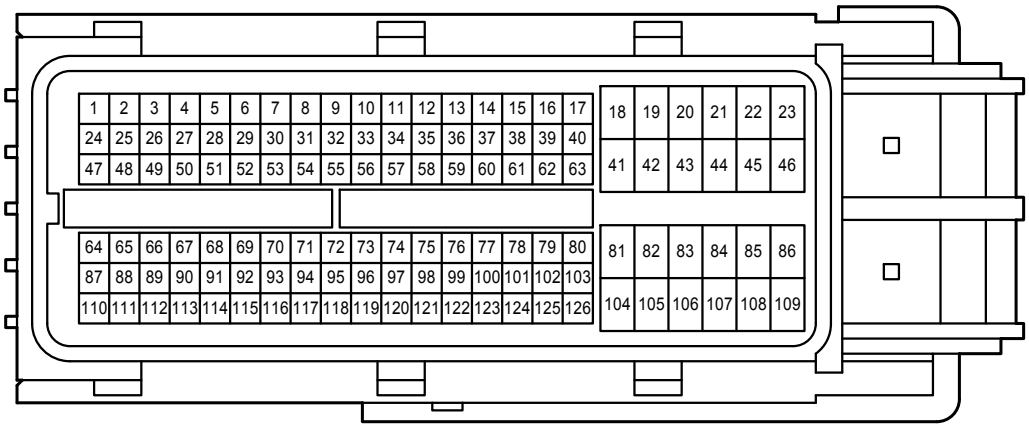

H 4
Gray

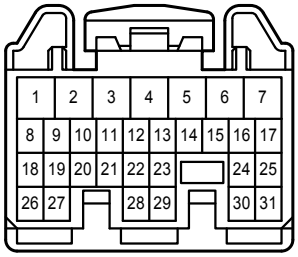

H 85
White

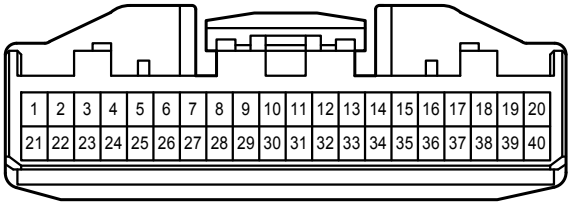

H 97
Black

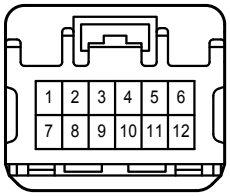

H 98
Black

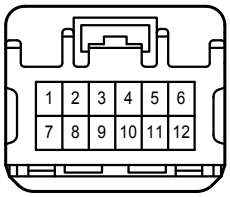

H104
White

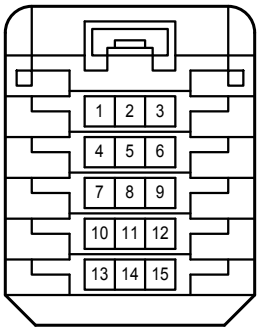

H112
Blue

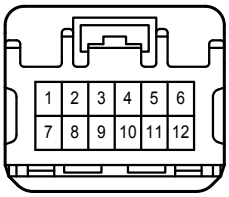

H113
Gray

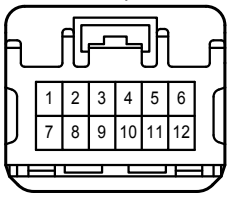

H141
Gray

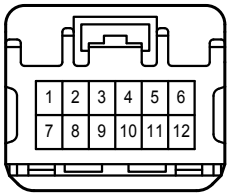

H142
Blue

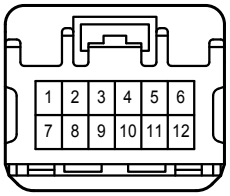

1B
White

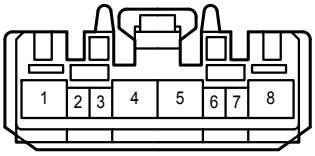
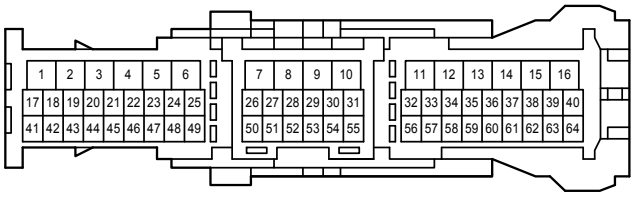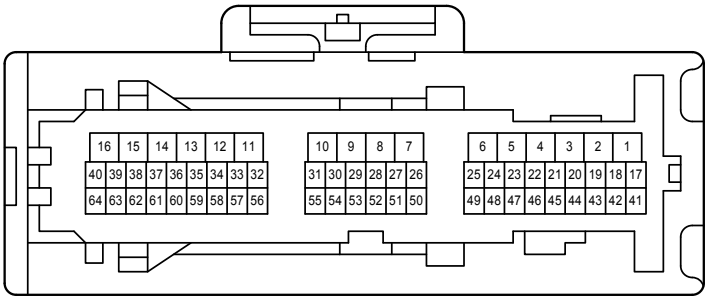
AH2
White