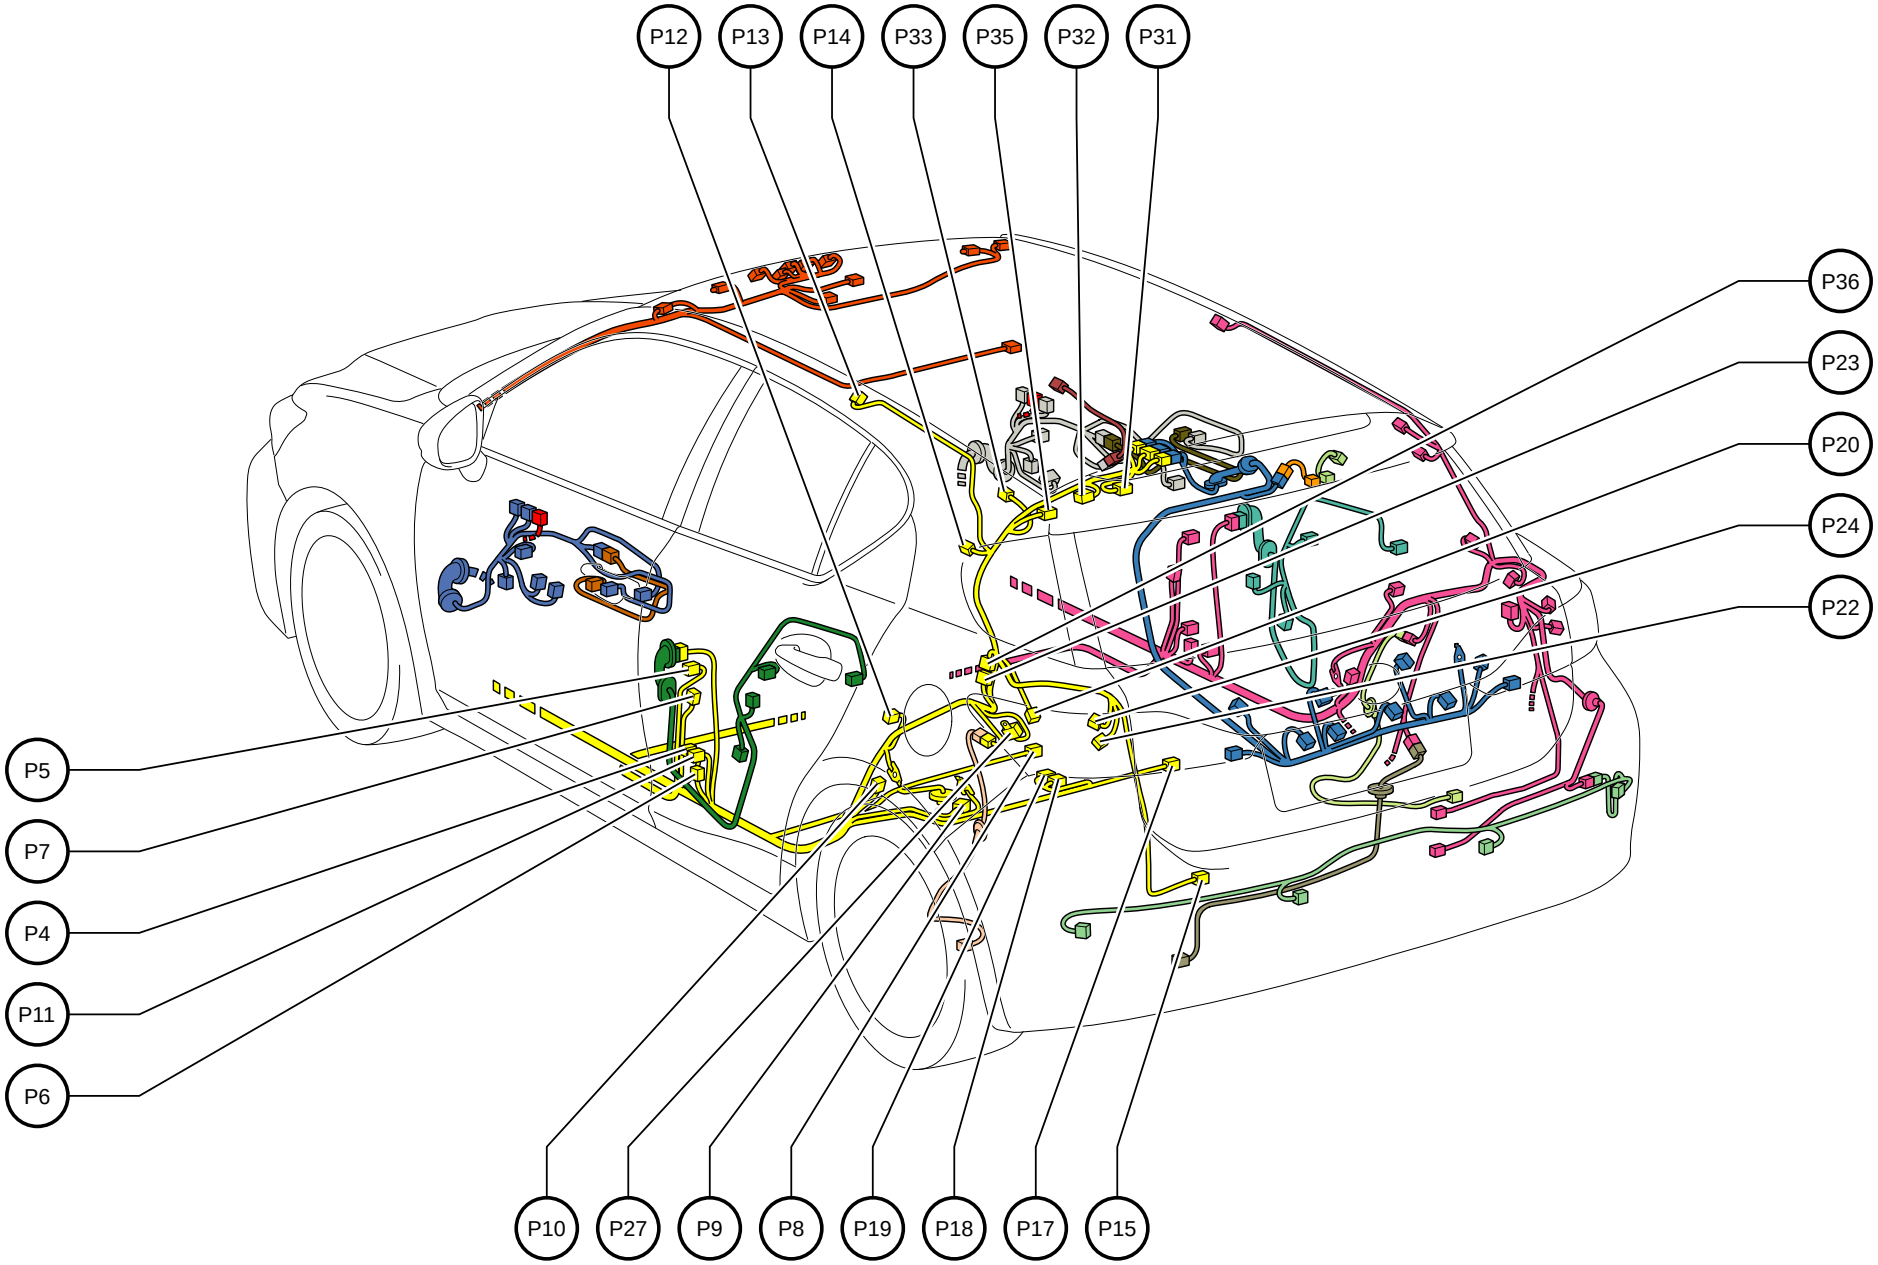
P12
P13
P14
P33
P35
P32
P31
P36
P23
P20
P24
P22
P5
P7
P4
P11
P6
P10
P27
P9
P8
P19
P18
P17
P15

P 4 Front Seat Outer Belt Assembly LH
P 5 Front Door Courtesy Light Switch Assembly LH
P 6 Front Seat Outer Belt Assembly LH
P 7 Front Side Airbag Sensor Assembly LH
P 8 No. 2 Indoor Electrical Key Antenna Assembly
P 9 Fuel Sender Gage Assembly
P 10 Rear Side Airbag Sensor Assembly LH
P 11 Front Seat Outer Belt Assembly LH
P 12 Rear Door Courtesy Light Switch Assembly LH
P 13 Curtain Shield Airbag Assembly LH
P 14 Rear No. 2 Speaker Assembly LH
P 15 No. 1 Box Speaker Assembly
P 17 Rear Seat Inner Belt Assembly RH
P 18 Rear Seat Inner Belt Assembly Center
P 19 Rear Seat Inner Belt Assembly LH
P 20 Fuel Lid Lock Assembly with Motor
P 22 Rear Combination Light Assembly LH
P 23 Junction Connector
P 24 Junction Connector
P 27 Noise Filter (Stop Light No. 1)
P 31 Noise Filter (Stop Light No. 2)
P 32 Noise Filter (Defogger)
P 33 Tire Pressure Warning ECU and Receiver (Tire Pressure Monitor Receiver Assembly)
P 35 Junction Connector
P 36 Junction Connector

Position of Parts in Body <RHD>

P 4
White



P 5
White

P 6
Black



P 7
Yellow

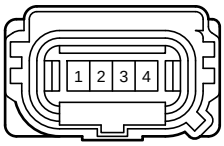

P 8
White

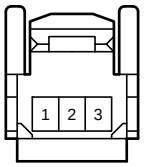

P 9
White

P 10
Yellow

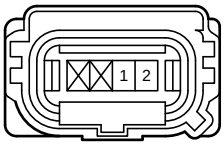

P 11
White



P 12
White

P 13
Black

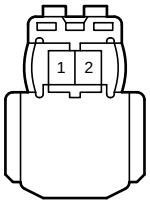

P 14
White

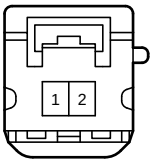

P 15
Black

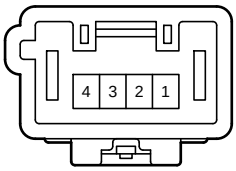

P 17
Gray

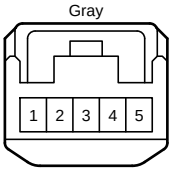

P 18
Black

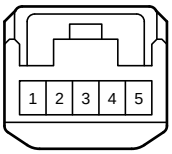

P 19
White

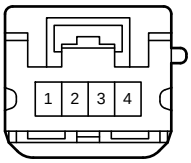

P 20
Black

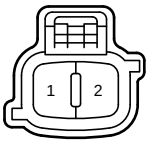

P 22
White

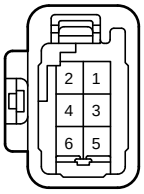

P 23
Black

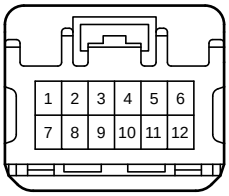

P 24
White

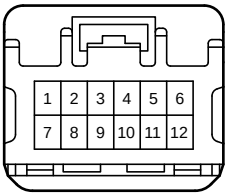

P 27
Black



P 31
Blue



P 32
White



P 33
Black

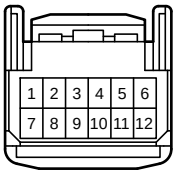

P 35
Blue

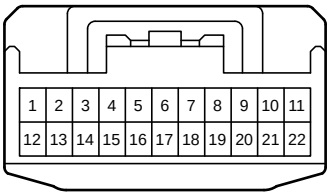
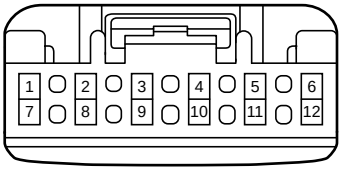
P 36
White