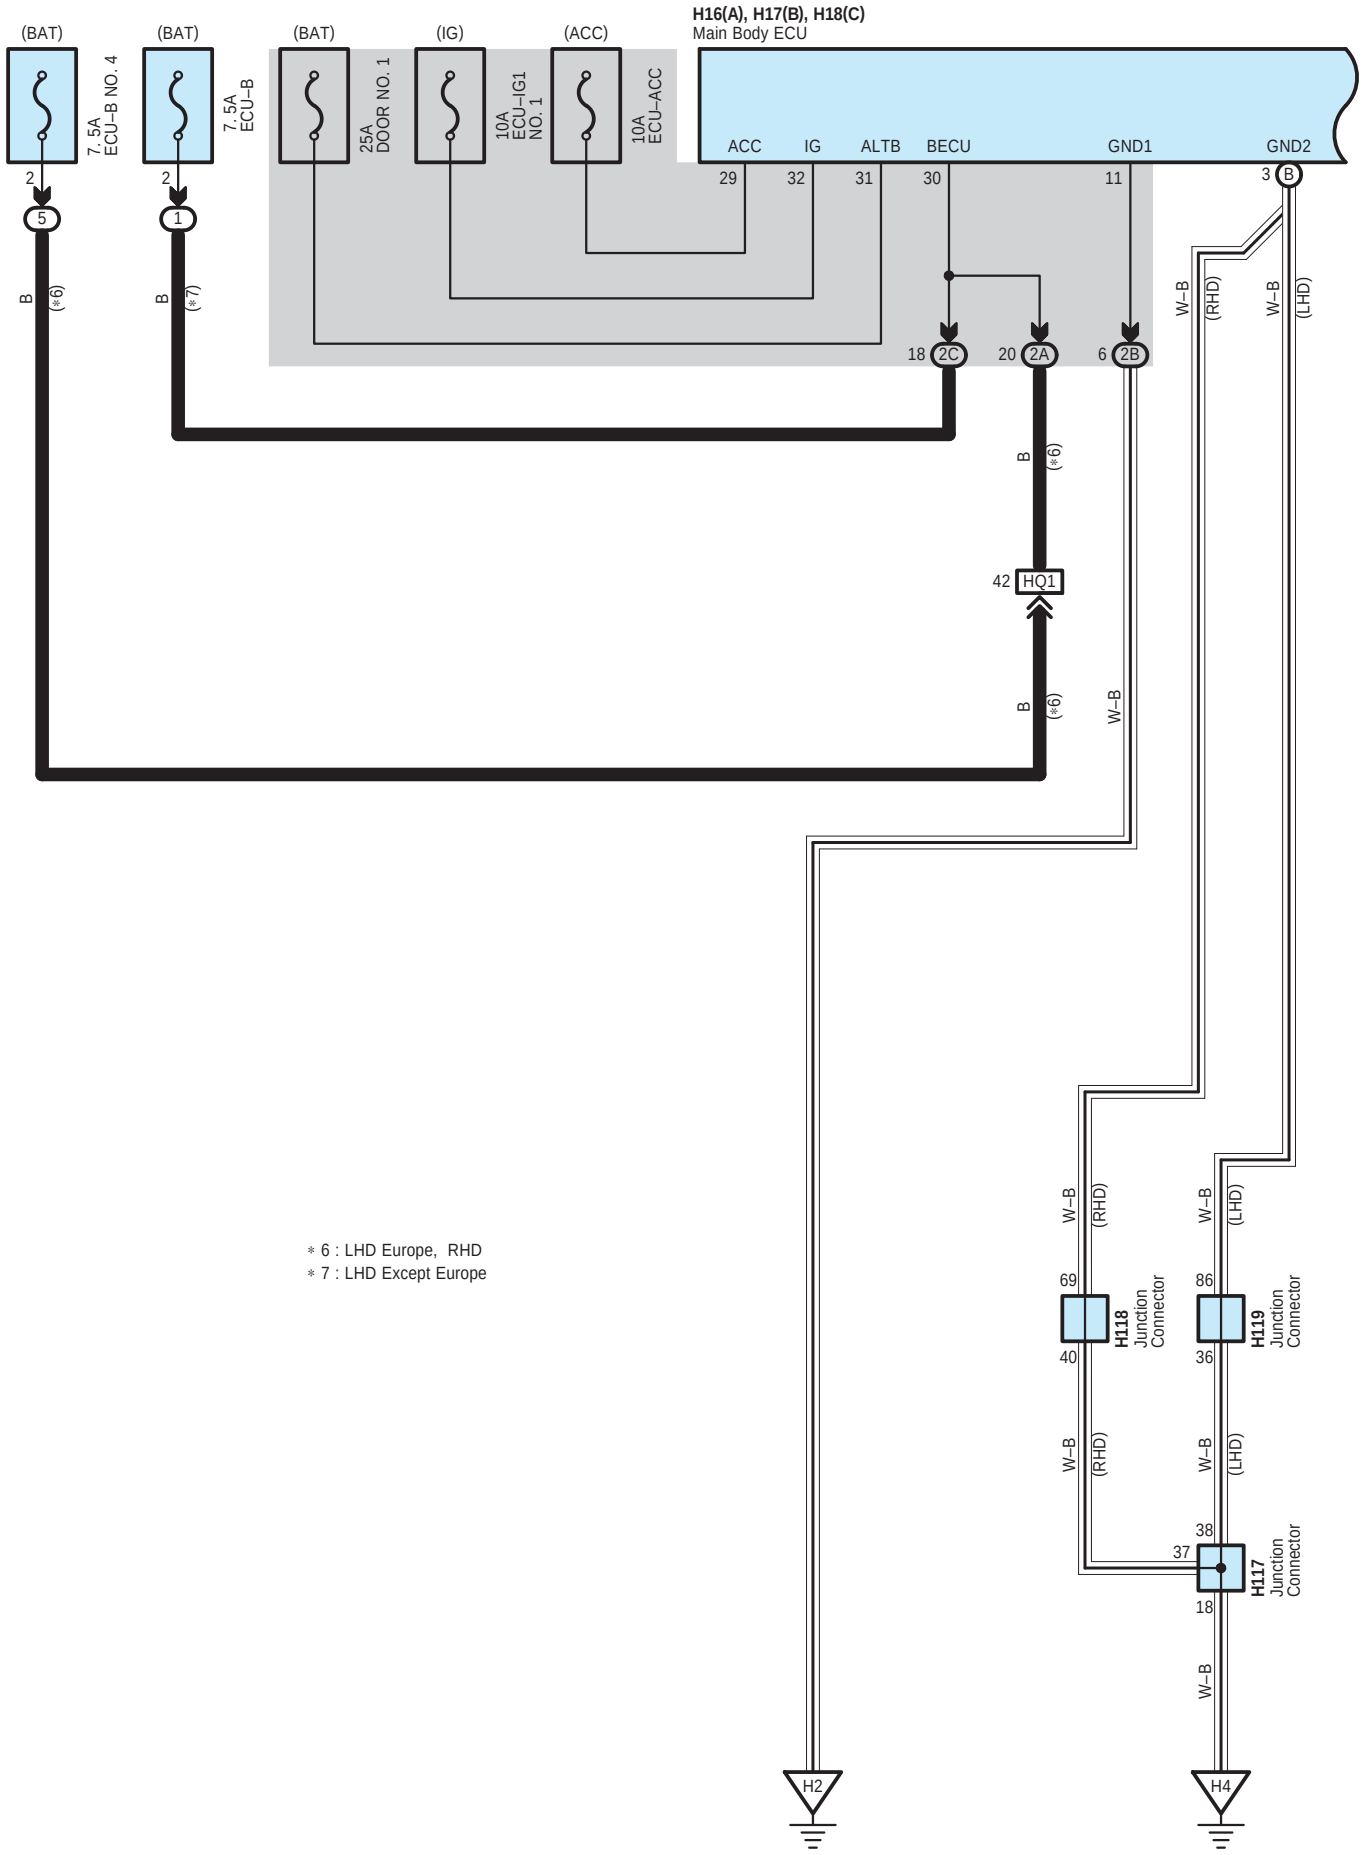
(BAT)
7. 5A
ECU–B NO. 4
(BAT)
7. 5A
ECU–B
(BAT)
25A
DOOR NO. 1
(IG)
10A
ECU–IG1
NO. 1
(ACC)
10A
ECU–ACC
H16(A), H17(B), H18(C)
Main Body ECU
ACC
IG
ALTB
BECU
GND1
GND2
29
32
31
30
11
3
B
2
5
2
1
B
(*6)
B
(*7)
18
2C
20
2A
6
2B
W–B
(RHD)
W–B
(LHD)
B
(*6)
42
HQ1
B
(*6)
W–B
W–B
(RHD)
69
H118
Junction
Connector
40
W–B
(RHD)
W–B
(LHD)
86
H119
Junction
Connector
36
W–B
(LHD)
38
37
H117
Junction
Connector
18
W–B
H2
H4
* 6 : LHD Europe, RHD
* 7 : LHD Except Europe

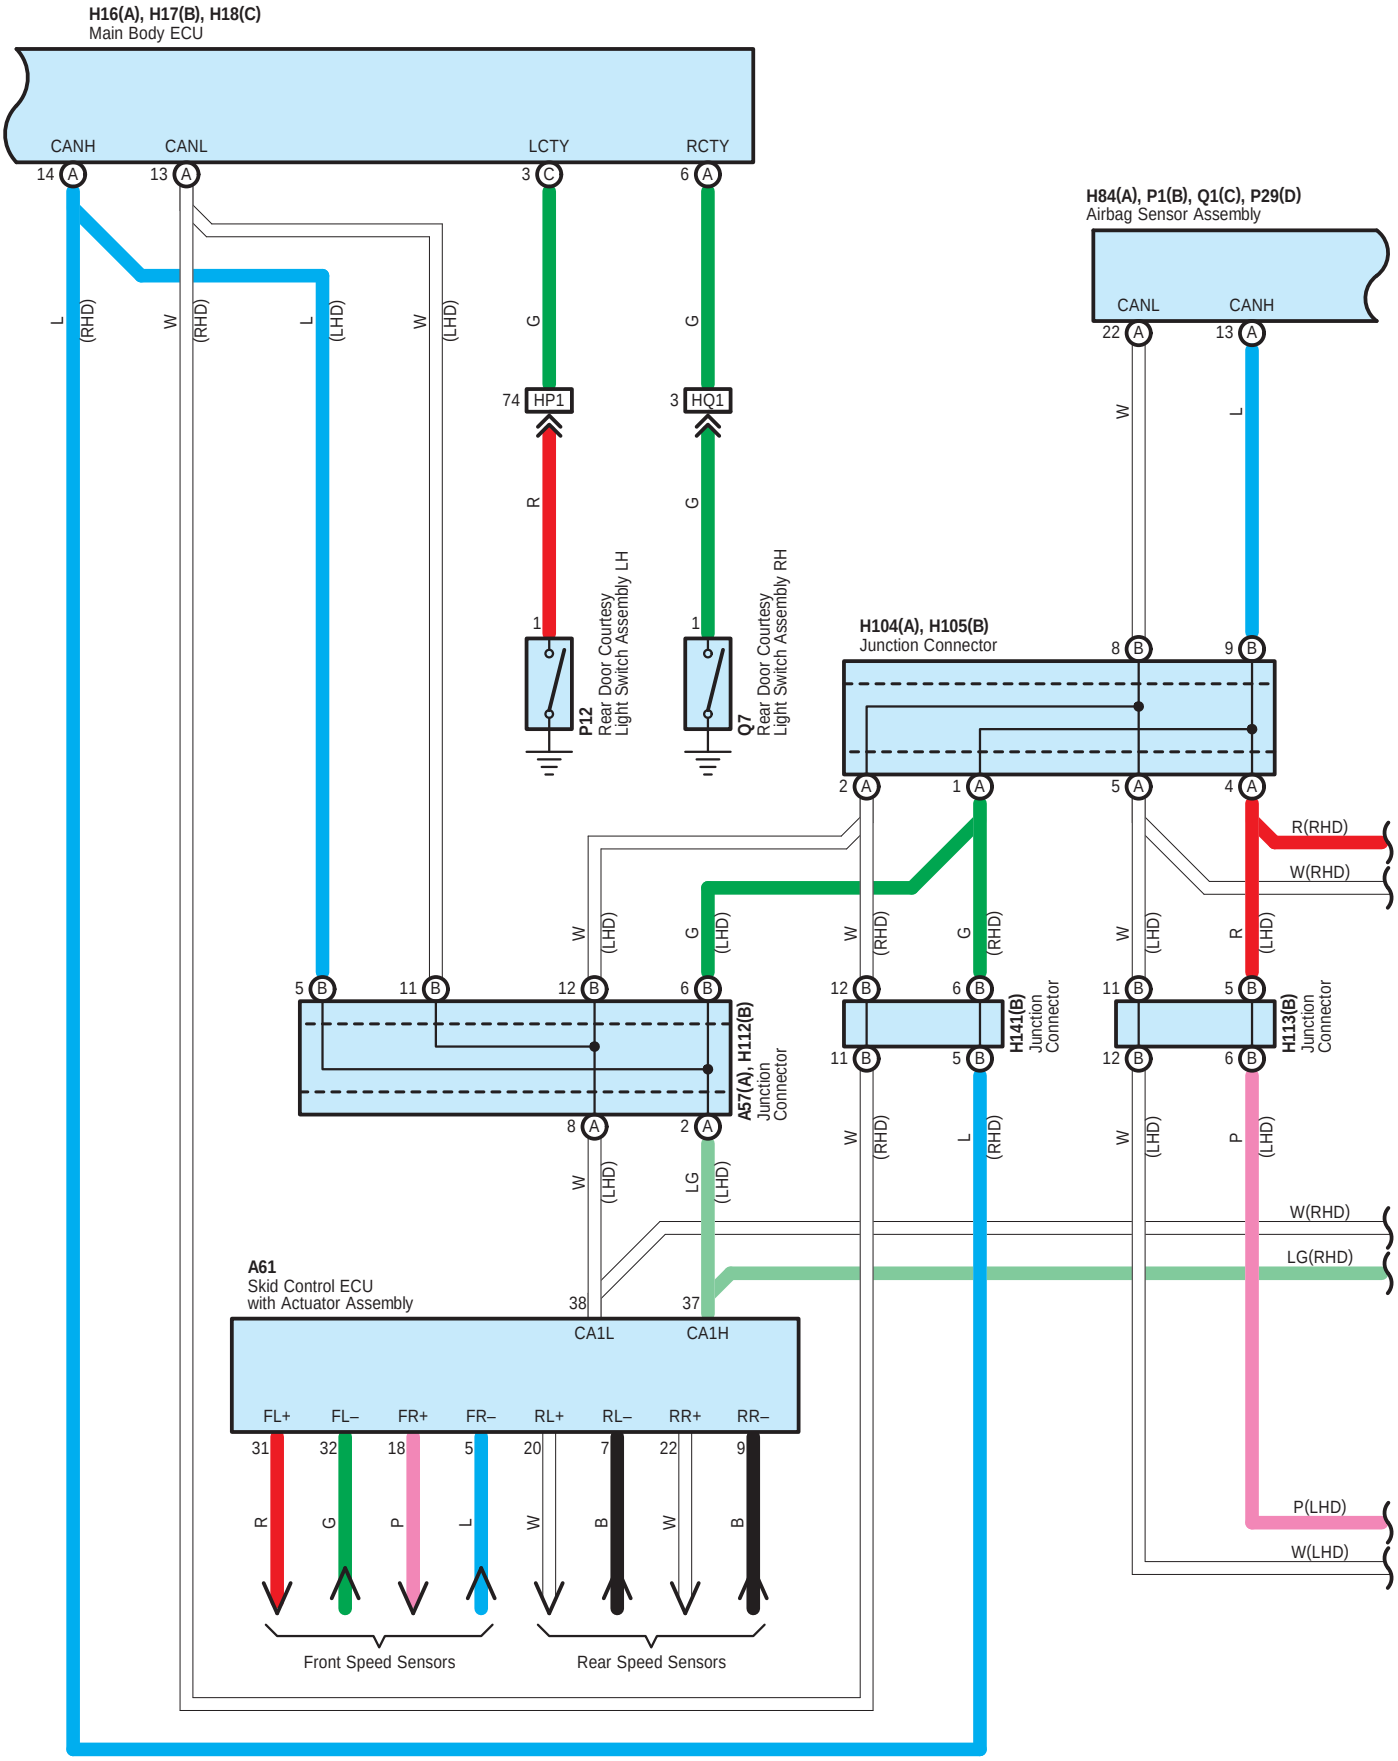
H16(A), H17(B), H18(C)
Main Body ECU
CANH
CANL
LCTY
RCTY
14 A
13 A
3 C
6 A
L (RHD)
W (RHD)
L (LHD)
W (LHD)
G
G
74 HP1
3 HQ1
R
G
1
1
P12
Rear Door Courtesy
Light Switch Assembly LH
Q7
Rear Door Courtesy
Light Switch Assembly RH
H84(A), P1(B), Q1(C), P29(D)
Airbag Sensor Assembly
CANL
CANH
22 A
13 A
W
L
H104(A), H105(B)
Junction Connector
8 B
9 B
2 A
1 A
5 A
4 A
R(RHD)
W(RHD)
W (LHD)
G (LHD)
W (RHD)
G (RHD)
W (LHD)
R (LHD)
5 B
11 B
12 B
6 B
12 B
6 B
11 B
5 B
A57(A), H112(B)
Junction
Connector
H141(B)
Junction
Connector
H113(B)
Junction
Connector
8 A
2 A
11 B
5 B
12 B
6 B
W (LHD)
LG (LHD)
W (RHD)
L (RHD)
W (LHD)
P (LHD)
W(RHD)
LG(RHD)
A61
Skid Control ECU
with Actuator Assembly
38
37
CA1L
CA1H
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
31
32
18
5
20
7
22
9
R
G
P
L
W
B
W
B
P(LHD)
W(LHD)
Front Speed Sensors
Rear Speed Sensors

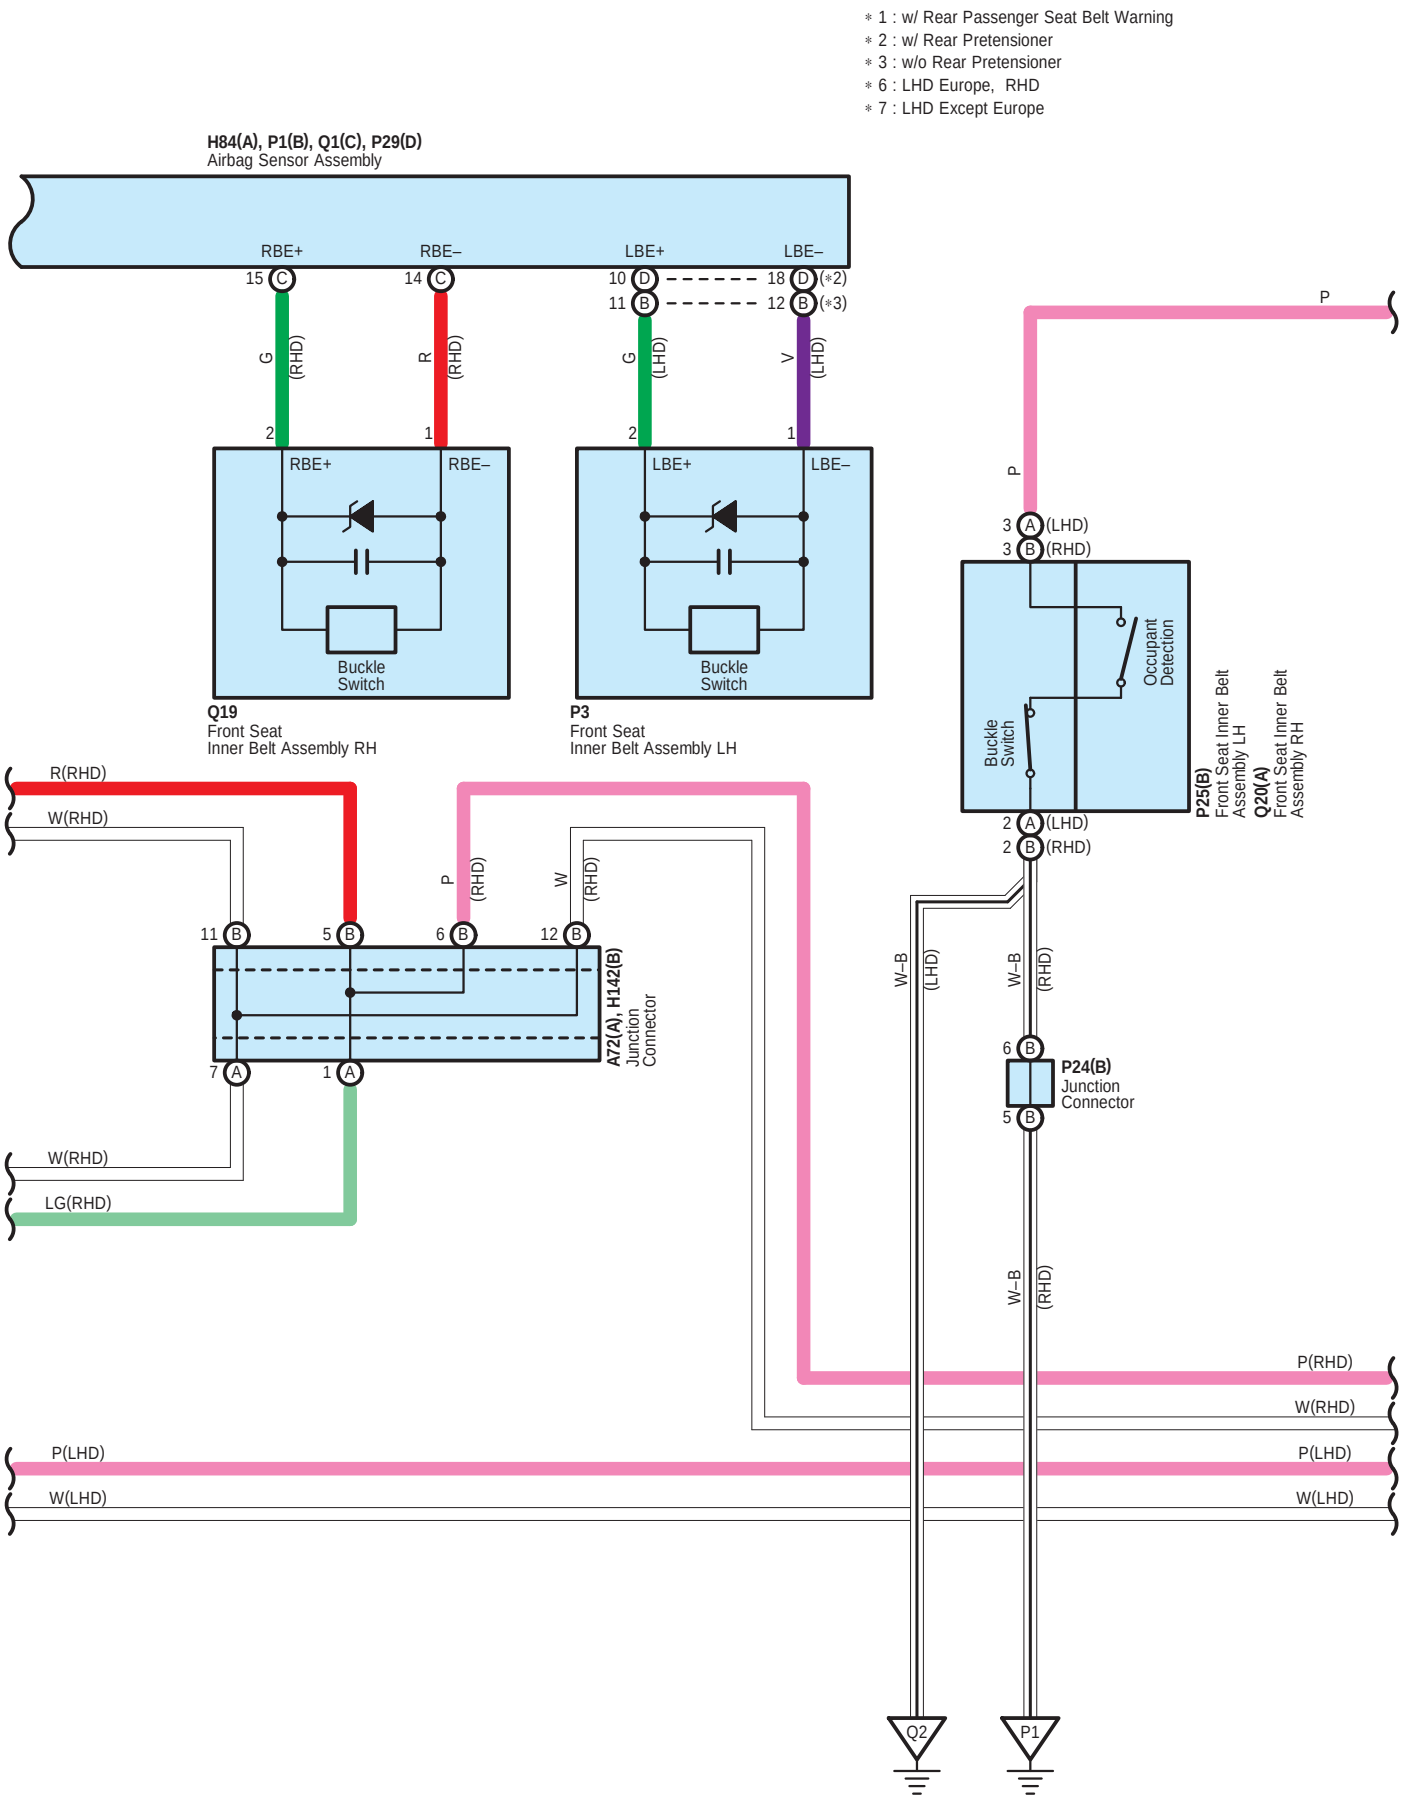
∗ 1 : w/ Rear Passenger Seat Belt Warning
∗ 2 : w/ Rear Pretensioner
∗ 3 : w/o Rear Pretensioner
∗ 6 : LHD Europe, RHD
∗ 7 : LHD Except Europe
H84(A), P1(B), Q1(C), P29(D)
Airbag Sensor Assembly
RBE+
RBE–
LBE+
LBE–
15 C
14 C
10 D
18 D (∗2)
11 B
12 B (∗3)
G (RHD)
R (RHD)
G (LHD)
V (LHD)
2
1
2
1
RBE+
RBE–
LBE+
LBE–
Buckle Switch
Buckle Switch
Q19
Front Seat
Inner Belt Assembly RH
P3
Front Seat
Inner Belt Assembly LH
P
3 A (LHD)
3 B (RHD)
Occupant Detection
Buckle Switch
2 A (LHD)
2 B (RHD)
P25(B)
Front Seat Inner Belt Assembly LH
Q20(A)
Front Seat Inner Belt Assembly RH
R(RHD)
W(RHD)
P (RHD)
W (RHD)
11 B
5 B
6 B
12 B
7 A
1 A
A72(A), H142(B)
Junction Connector
W(RHD)
LG(RHD)
W–B (LHD)
W–B (RHD)
6 B
5 B
P24(B)
Junction Connector
W–B (RHD)
P(RHD)
W(RHD)
P(LHD)
W(LHD)
P(LHD)
W(LHD)
Q2
P1

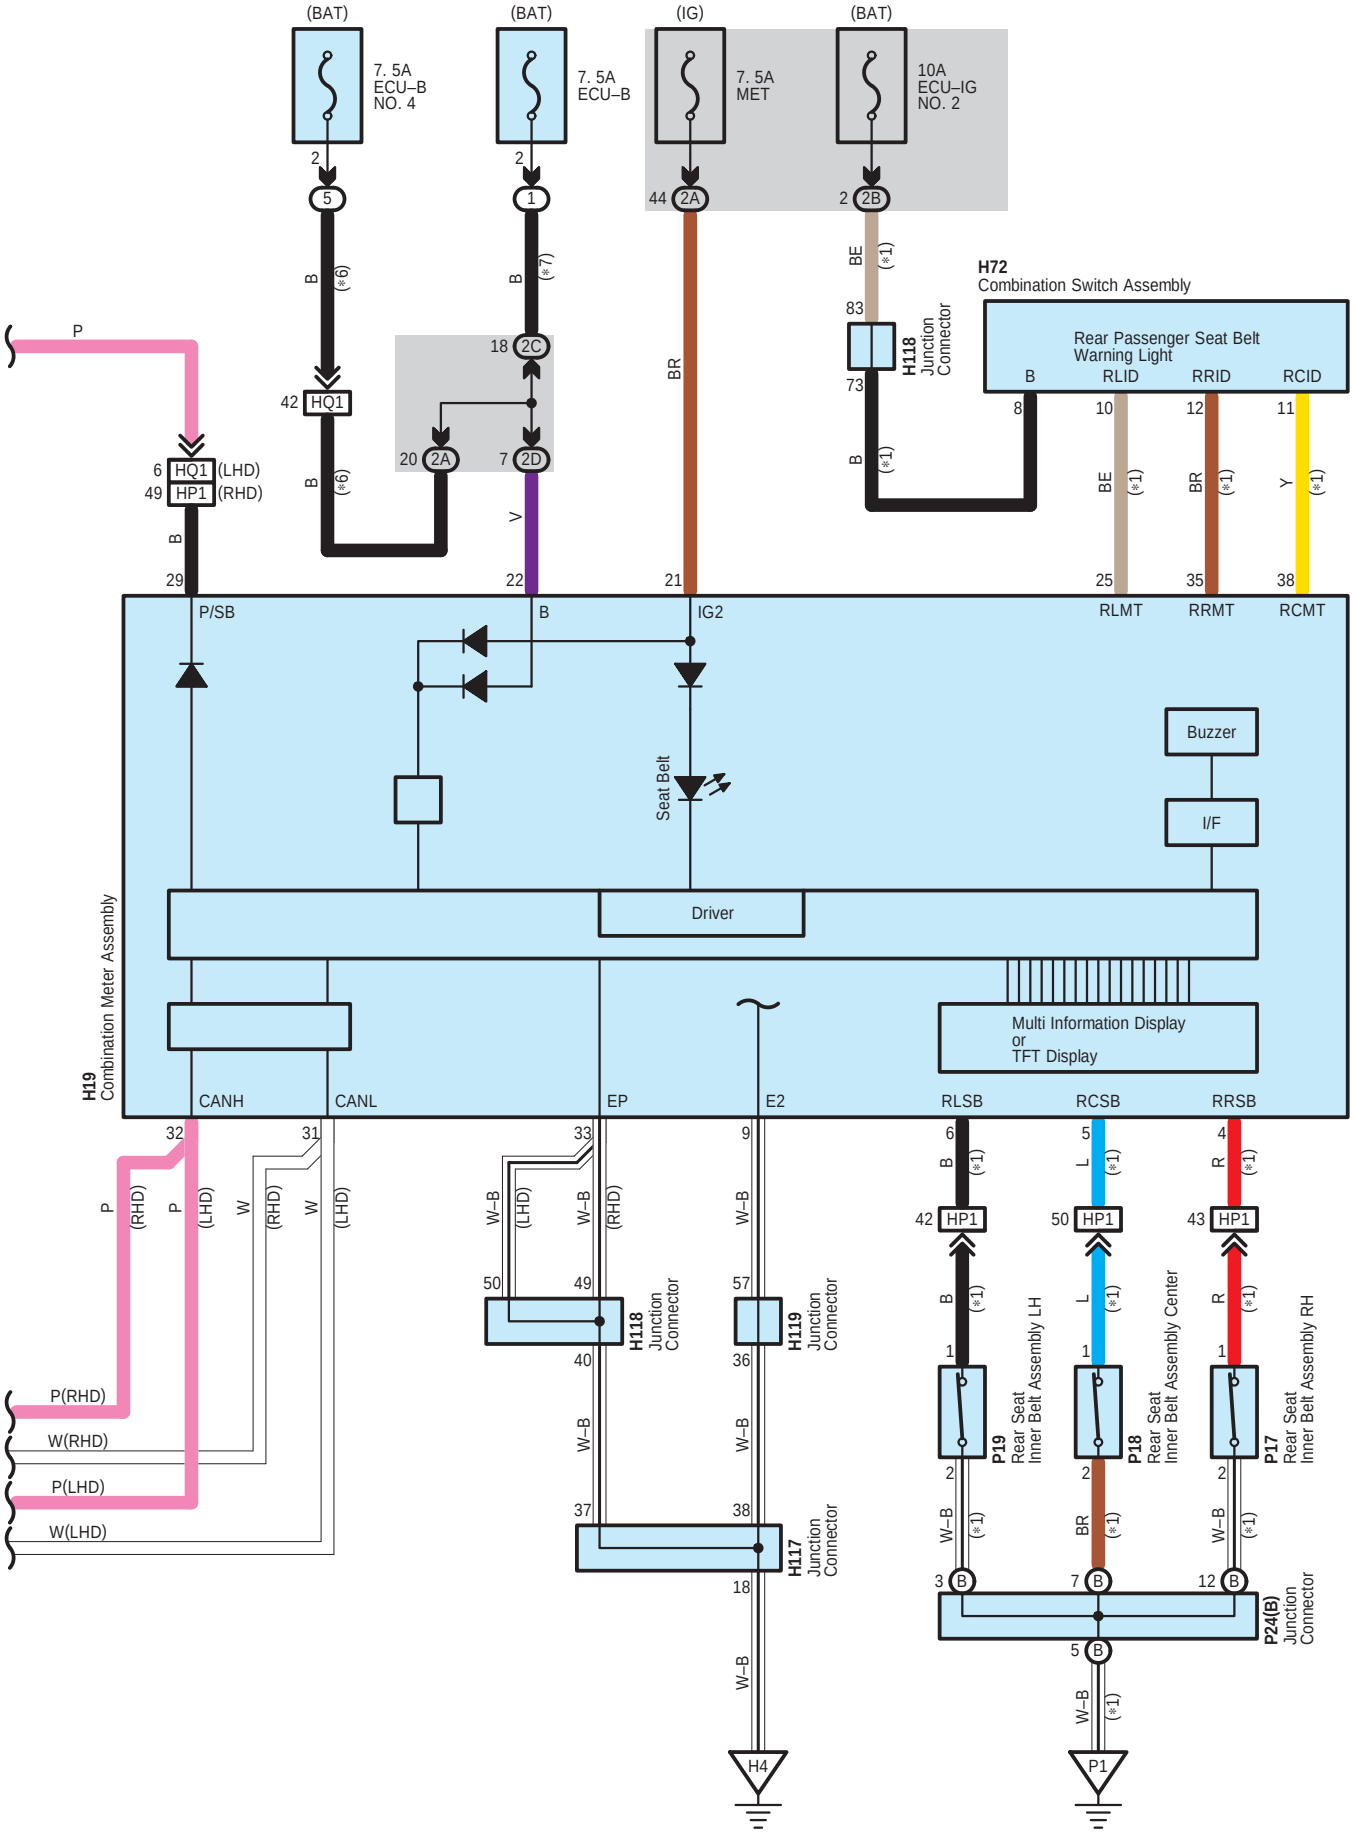
(BAT)
7. 5A
ECU–B
NO. 4
(BAT)
7. 5A
ECU–B
(IG)
7. 5A
MET
(BAT)
10A
ECU–IG
NO. 2
H72
Combination Switch Assembly
Rear Passenger Seat Belt
Warning Light
B
RLID
RRID
RCID
H118
Junction
Connector
HQ1 (LHD)
HP1 (RHD)
P/SB
B
IG2
RLMT
RRMT
RCMT
Buzzer
I/F
Seat Belt
Driver
Multi Information Display
or
TFT Display
H19
Combination Meter Assembly
CANH
CANL
EP
E2
RLSB
RCSB
RRSB
P(RHD)
W(RHD)
P(LHD)
W(LHD)
H118
Junction
Connector
H119
Junction
Connector
H117
Junction
Connector
H4
P19
Rear Seat
Inner Belt Assembly LH
P18
Rear Seat
Inner Belt Assembly Center
P17
Rear Seat
Inner Belt Assembly RH
P24(B)
Junction
Connector
P1

A 57
Blue

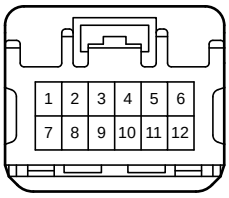

A 61
Gray

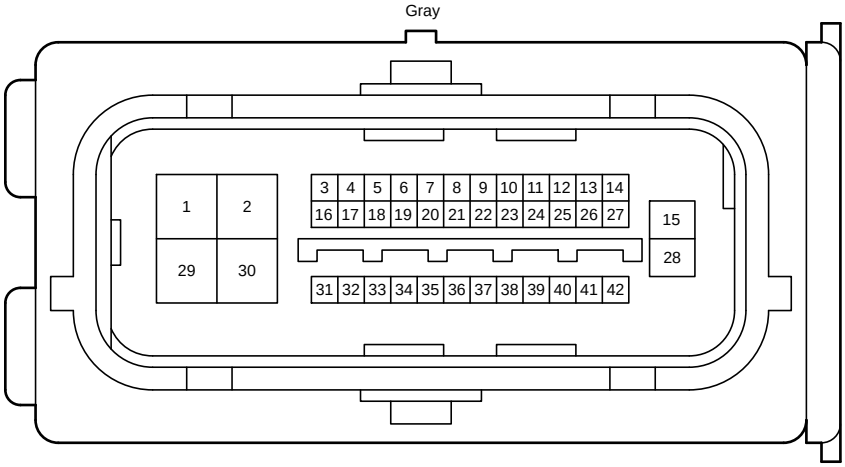

A 72
Blue

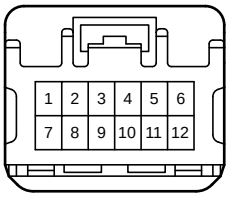

H 16
Black

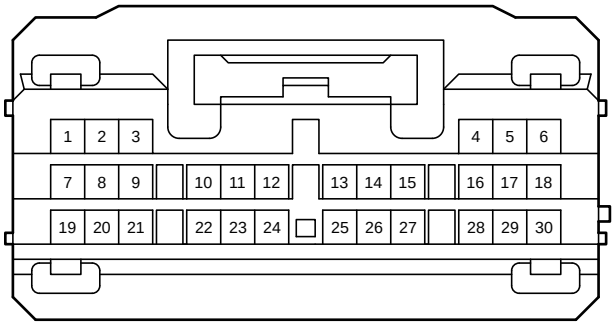

H 17
White

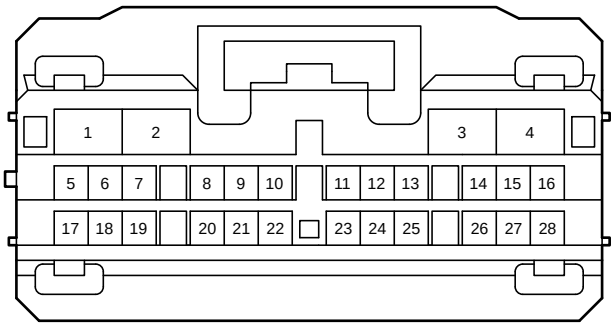

H 18
White

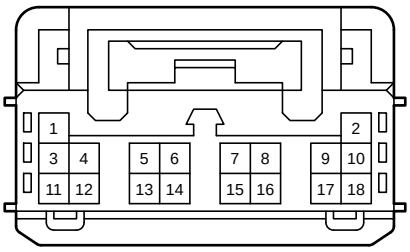

H 19
White

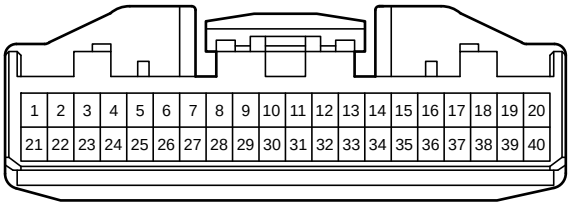

H 72
Black

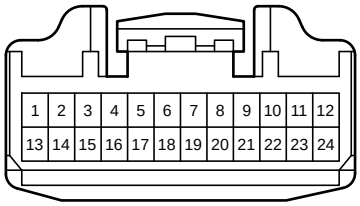

H 84
Yellow

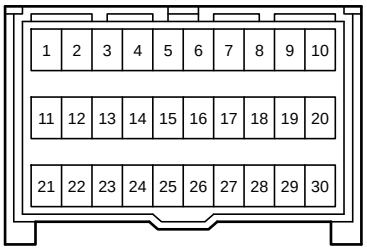

H104
White

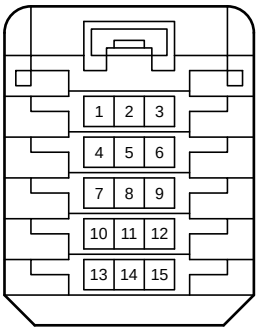

H105
White

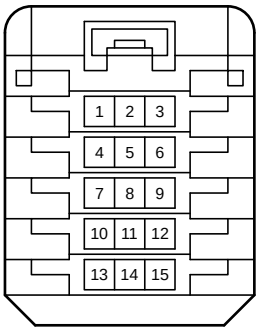

H112
Blue

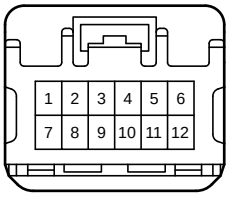

H113
Gray

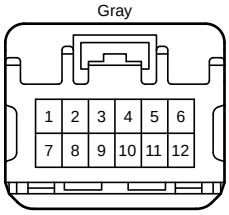

H117
White

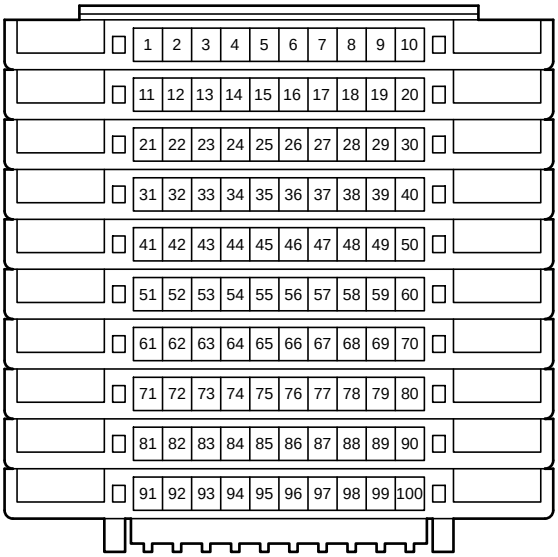

H118
White

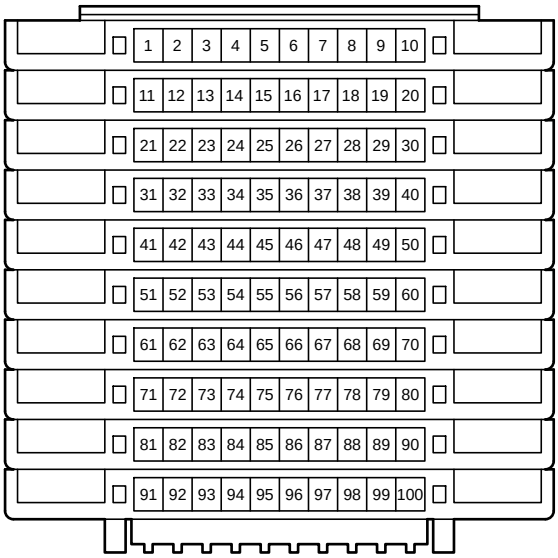

H119
White

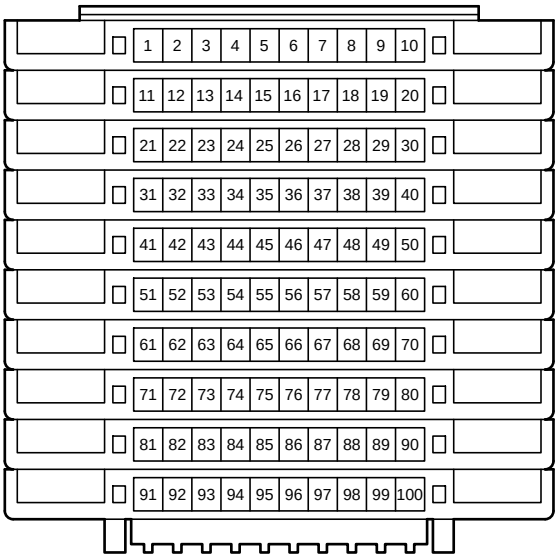

H141
Gray

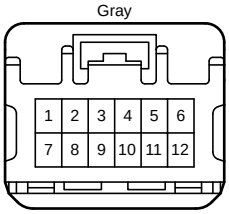

H142
Blue

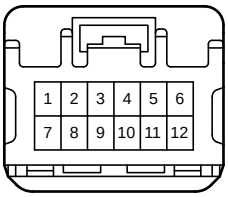

P 1
Yellow

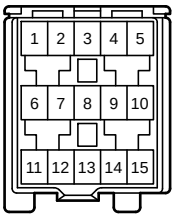

P 3
Gray

P 12
White

P 17
Gray

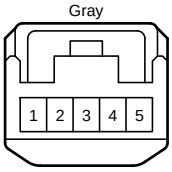

P 18
Black

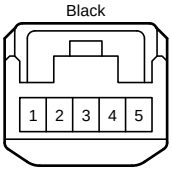

P 19
White

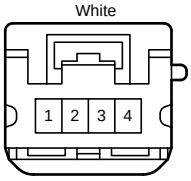

P 24
White

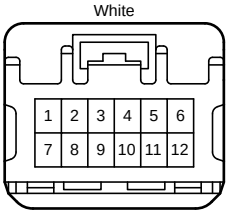

P 25
White

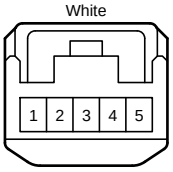

P 29
Yellow

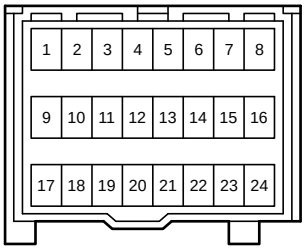

Q 1
Yellow

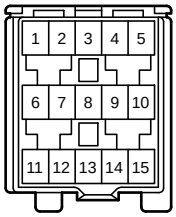

Q 7
White

Q 19
Gray

Q 20
White

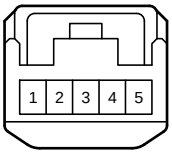

2A
White

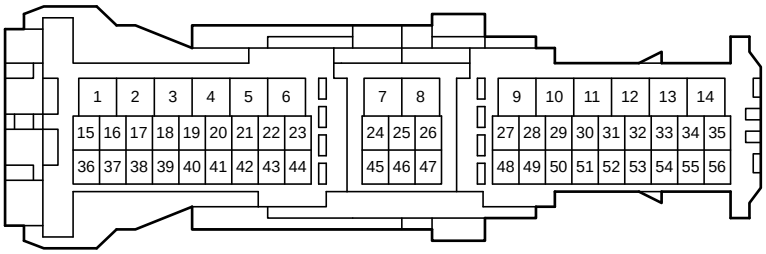

2B
White

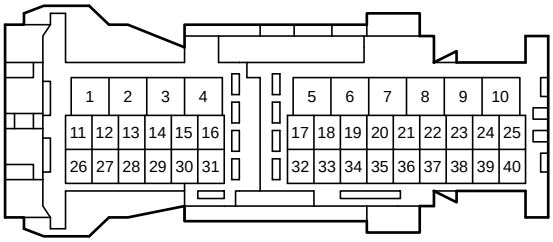

2C
White

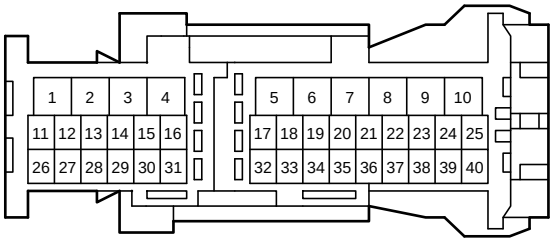

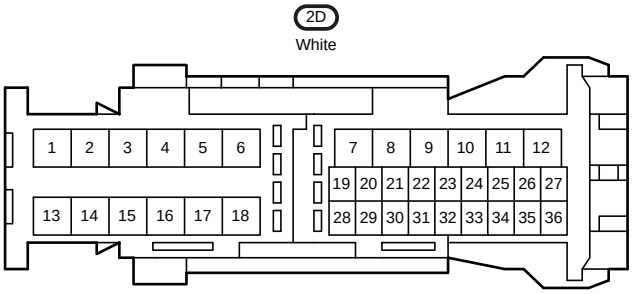
2D
White
1 2 3 4 5 6 7 8 9 10 11 12
13 14 15 16 17 18 19 20 21 22 23 24 25 26 27
28 29 30 31 32 33 34 35 36

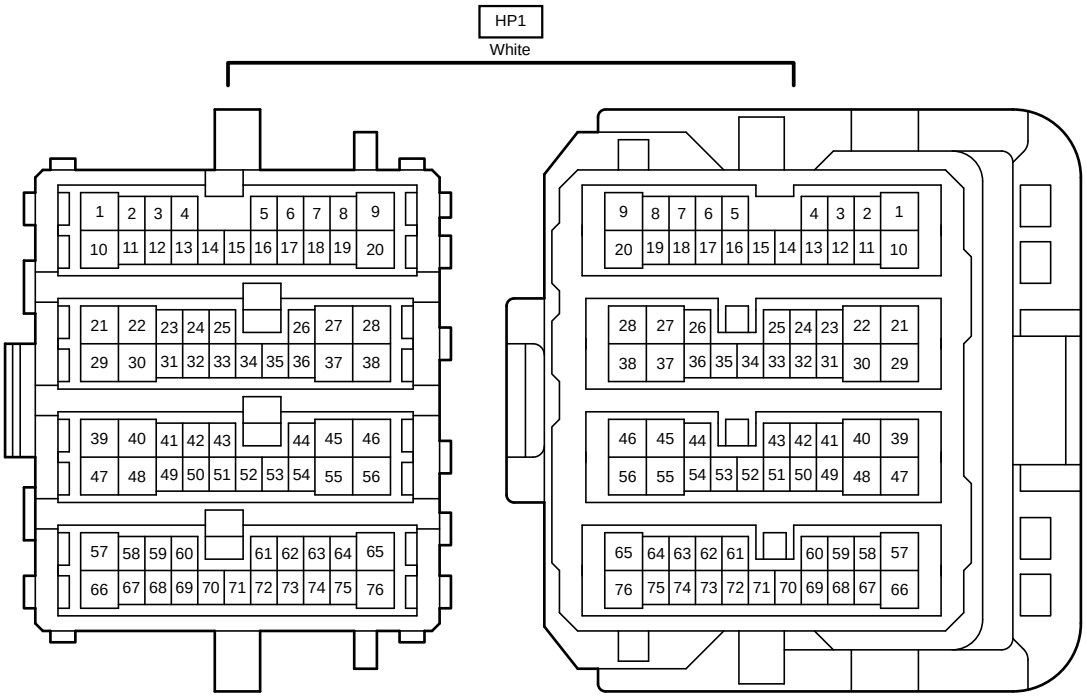
HP1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66

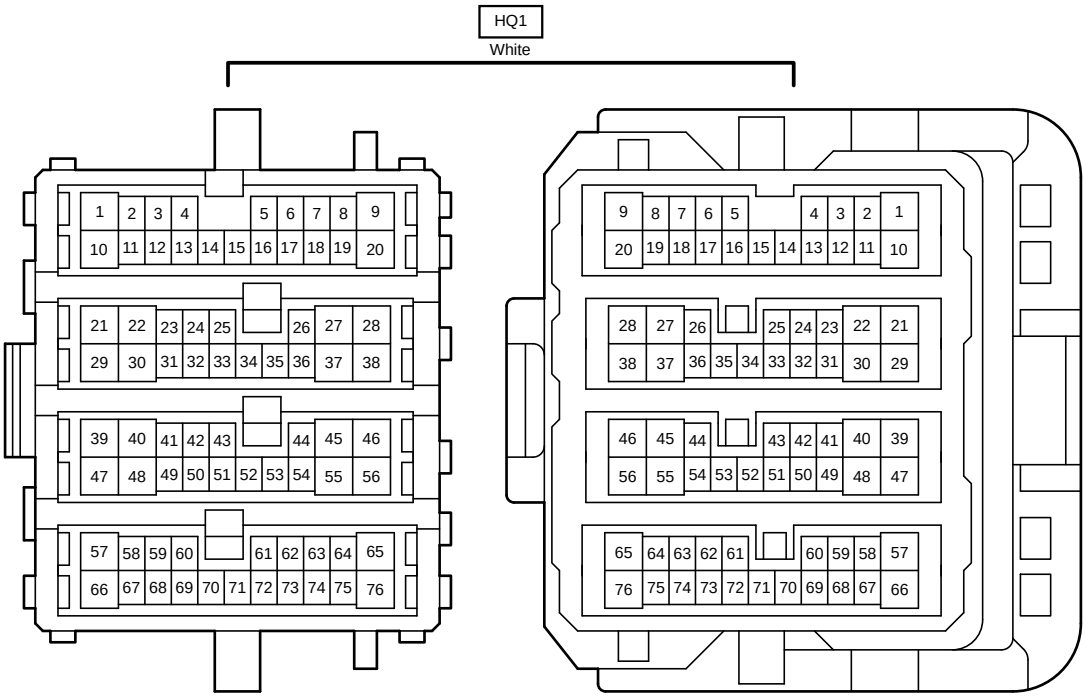
HQ1
White
1 2 3 4 5 6 7 8 9
10 11 12 13 14 15 16 17 18 19 20
21 22 23 24 25 26 27 28
29 30 31 32 33 34 35 36 37 38
39 40 41 42 43 44 45 46
47 48 49 50 51 52 53 54 55 56
57 58 59 60 61 62 63 64 65
66 67 68 69 70 71 72 73 74 75 76
9 8 7 6 5 4 3 2 1
20 19 18 17 16 15 14 13 12 11 10
28 27 26 25 24 23 22 21
38 37 36 35 34 33 32 31 30 29
46 45 44 43 42 41 40 39
56 55 54 53 52 51 50 49 48 47
65 64 63 62 61 60 59 58 57
76 75 74 73 72 71 70 69 68 67 66