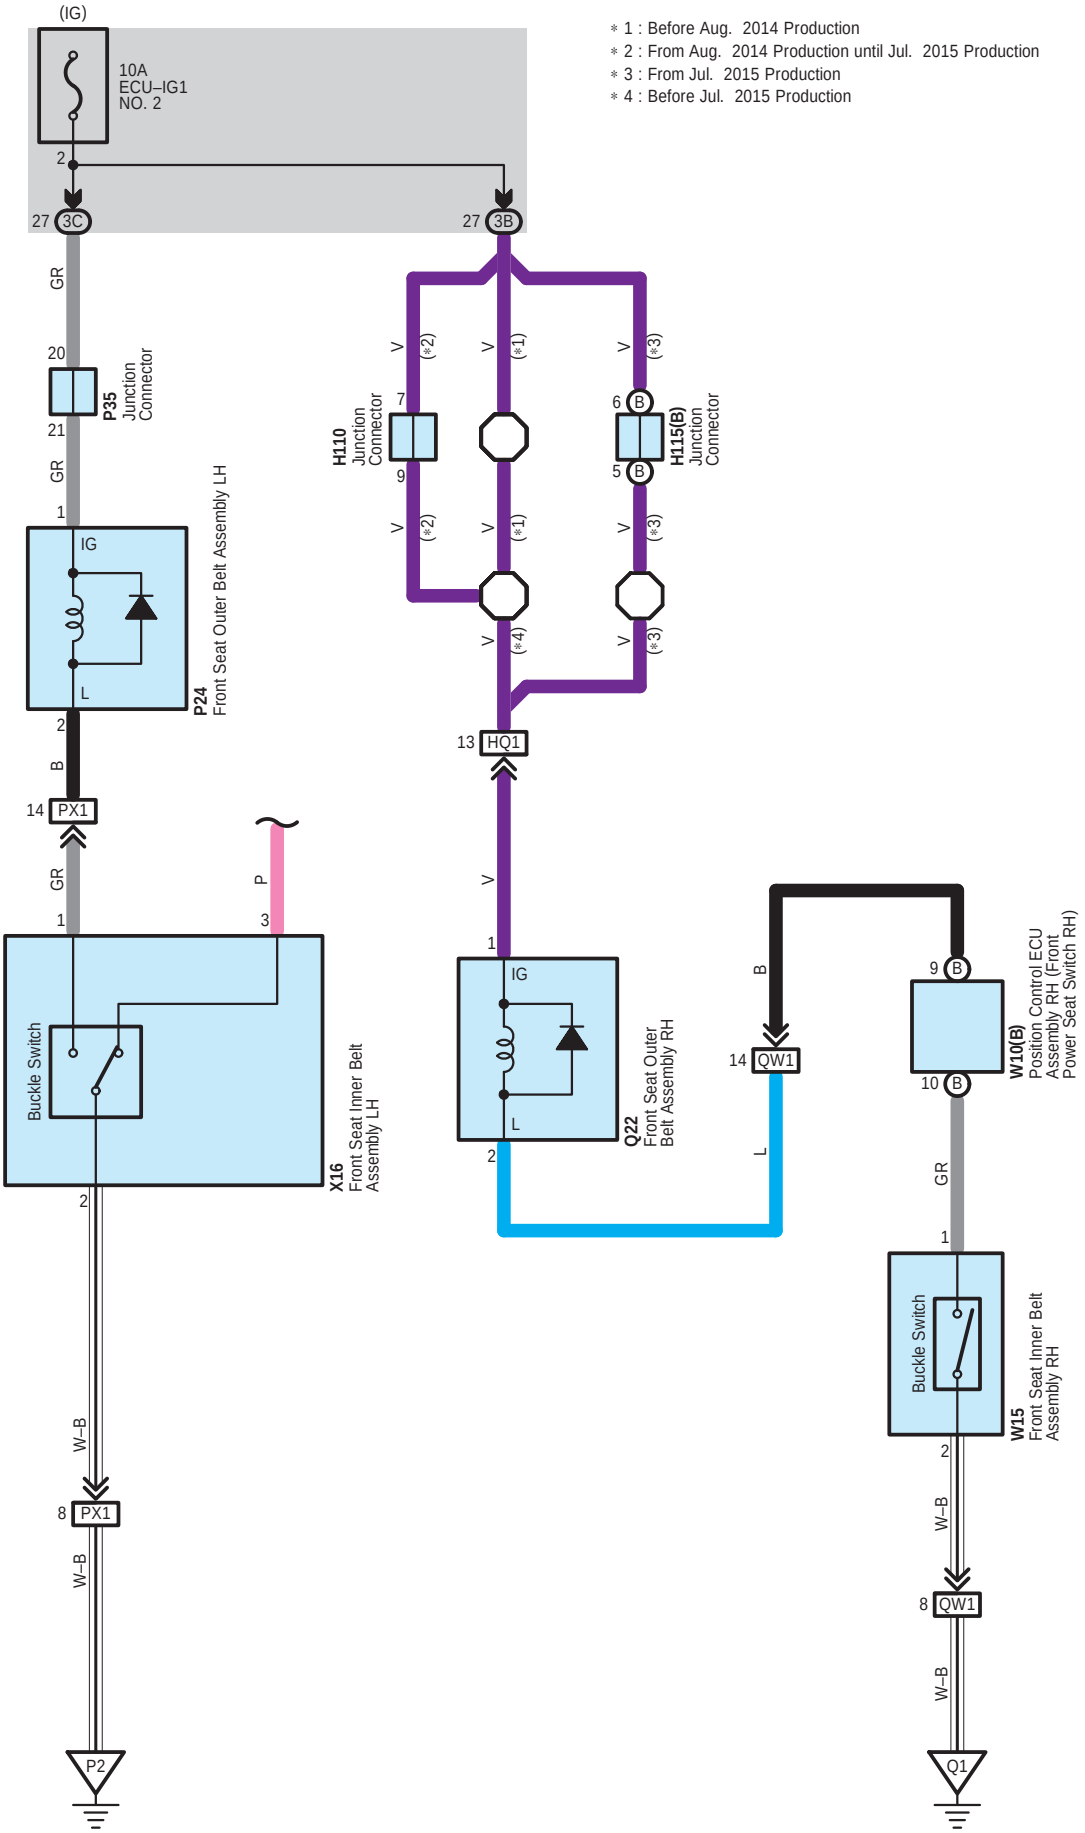
(IG)
10A
ECU–IG1
NO. 2
2
27 3C
27 3B
GR
20
P35
Junction
Connector
21
GR
1
IG
L
P24
Front Seat Outer Belt Assembly LH
2
B
14 PX1
GR
1
P
3
Buckle Switch
X16
Front Seat Inner Belt
Assembly LH
2
W–B
8 PX1
W–B
P2
∗1 : Before Aug. 2014 Production
∗2 : From Aug. 2014 Production until Jul. 2015 Production
∗3 : From Jul. 2015 Production
∗4 : Before Jul. 2015 Production
V
(∗2)
(∗1)
(∗3)
H110
Junction
Connector
7
9
6 B
5 B
H115(B)
Junction
Connector
(∗4)
13 HQ1
V
1
IG
L
2
Q22
Front Seat Outer
Belt Assembly RH
B
14 QW1
L
9 B
10 B
W10(B)
Position Control ECU
Assembly RH (Front
Power Seat Switch RH)
GR
1
Buckle Switch
W15
Front Seat Inner Belt
Assembly RH
2
W–B
8 QW1
W–B
Q1

H110
Black

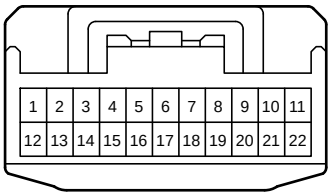

H115
Black

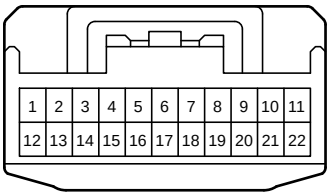

P 24
White



P 35
White

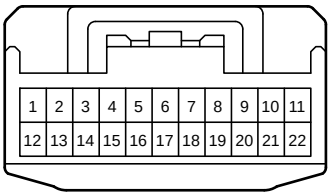

Q 22
White



W 10
White

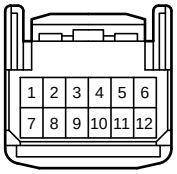

W 15
White

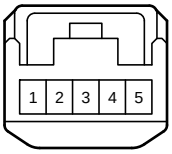

X 16
White

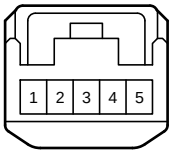

3B
White

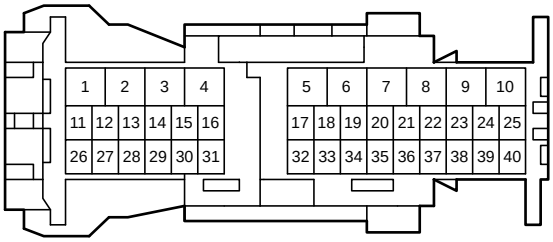

3C
White

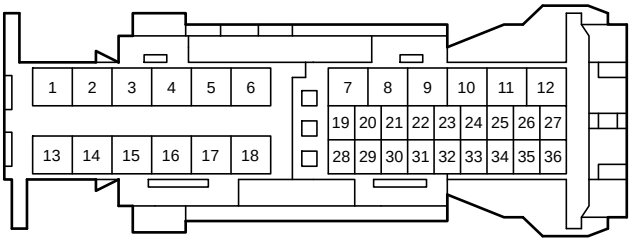

HQ1
White

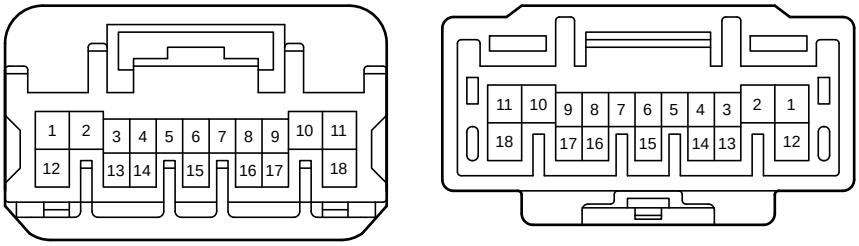

PX1
White

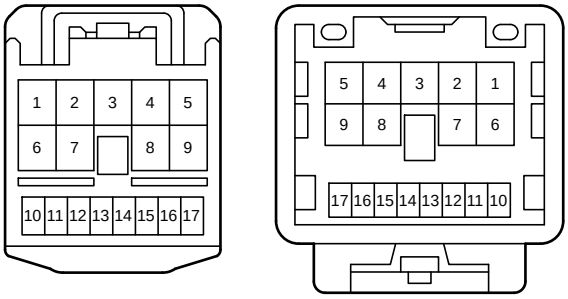
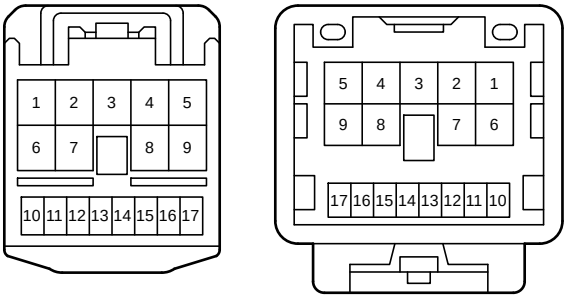
QW1
White