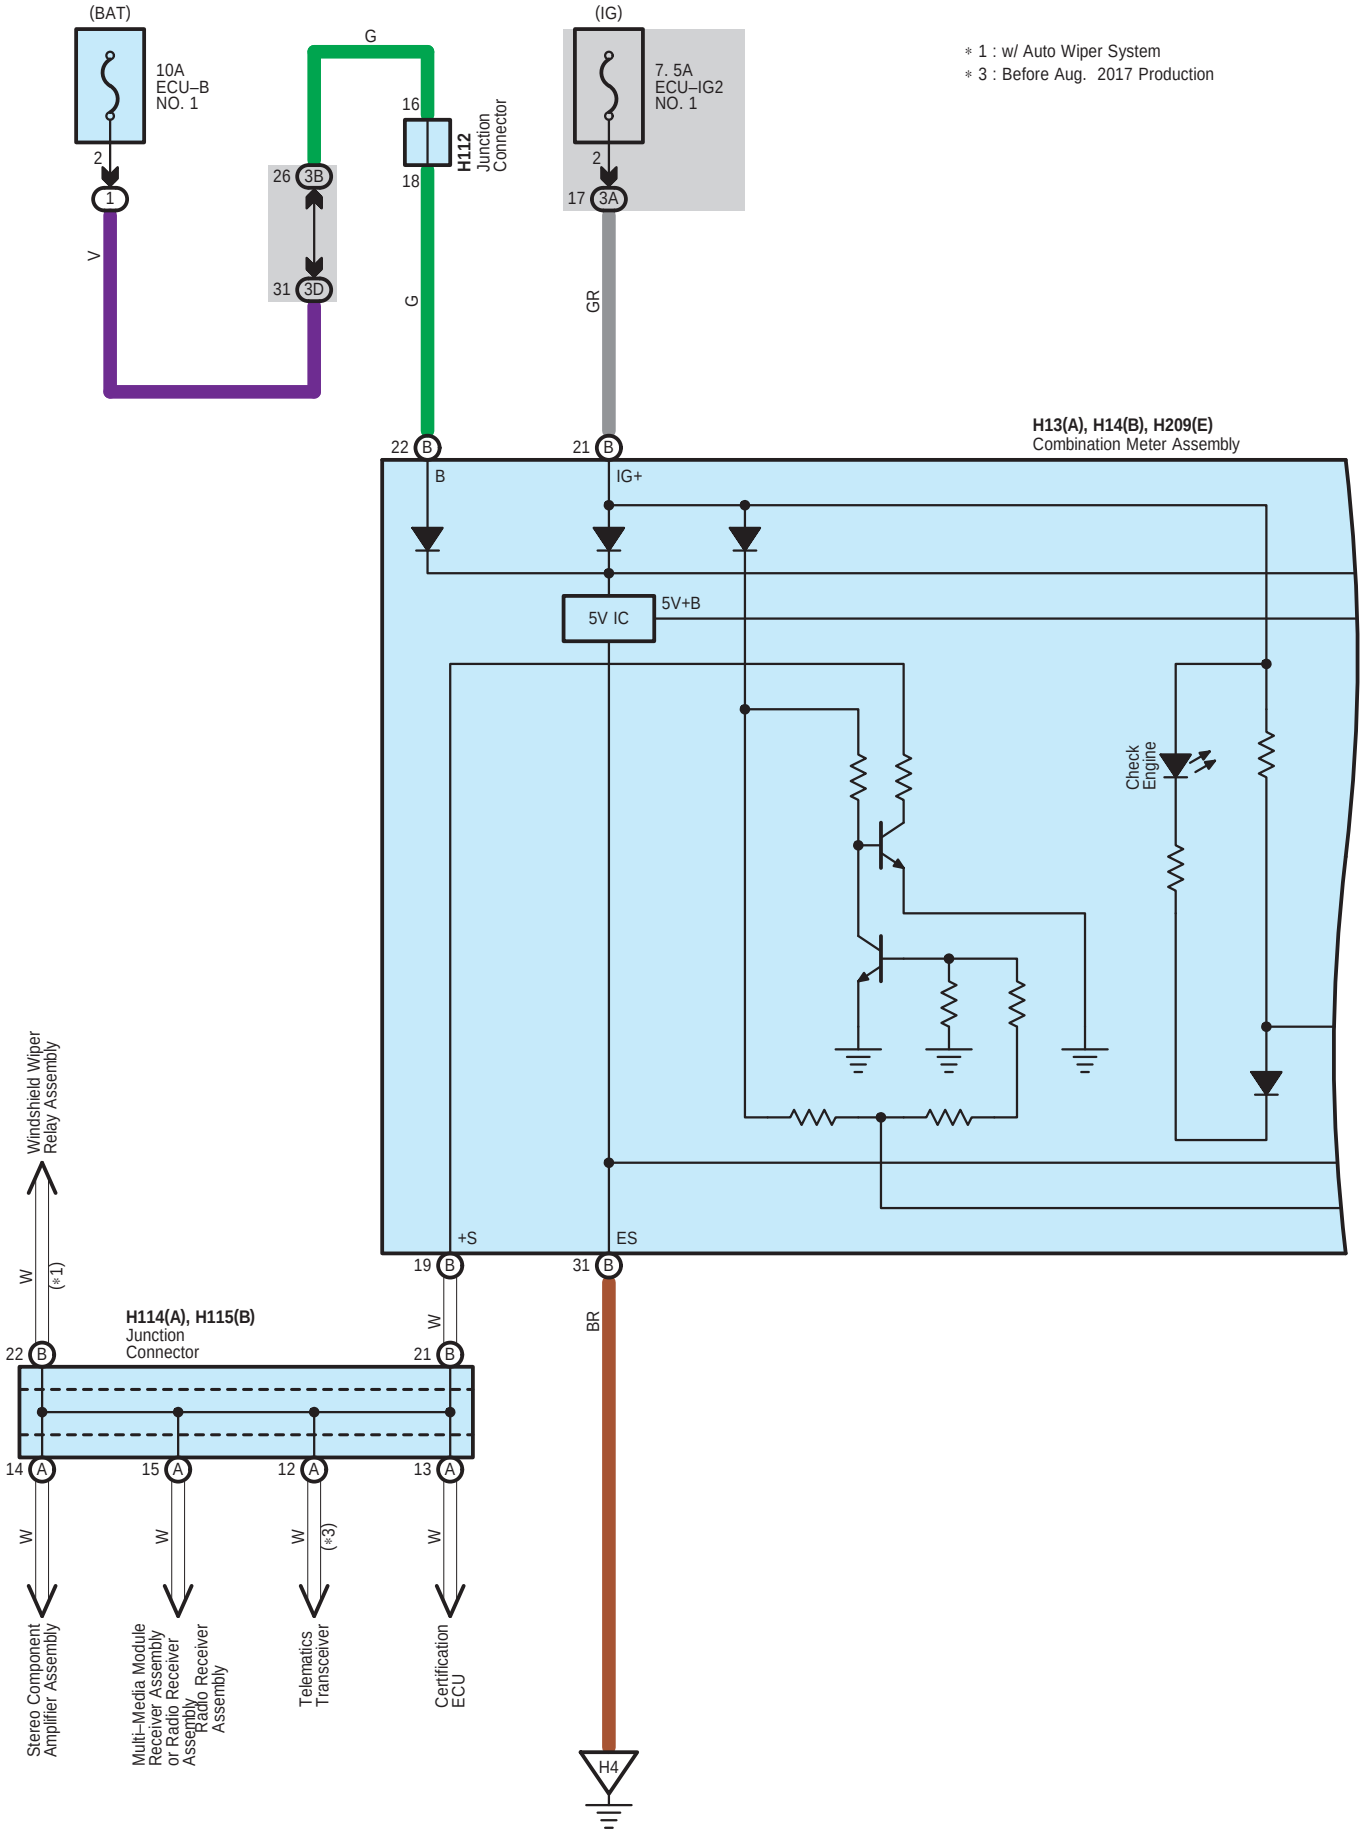
(BAT)
10A
ECU–B
NO. 1
2
1
V
G
26 3B
31 3D
16
18
H112
Junction
Connector
G
(IG)
7. 5A
ECU–IG2
NO. 1
2
17 3A
GR
∗ 1 : w/ Auto Wiper System
∗ 3 : Before Aug. 2017 Production
H13(A), H14(B), H209(E)
Combination Meter Assembly
22 B
21 B
B
IG+
5V IC
5V+B
Check
Engine
+S
ES
19 B
31 B
W
BR
Windshield Wiper
Relay Assembly
W
(∗1)
H114(A), H115(B)
Junction
Connector
22 B
21 B
14 A
15 A
12 A
13 A
W
W
W
(∗3)
W
Stereo Component
Amplifier Assembly
Multi-Media Module
Receiver Assembly
or Radio Receiver
Assembly
Radio Receiver
Assembly
Telematics
Transceiver
Certification
ECU
H4

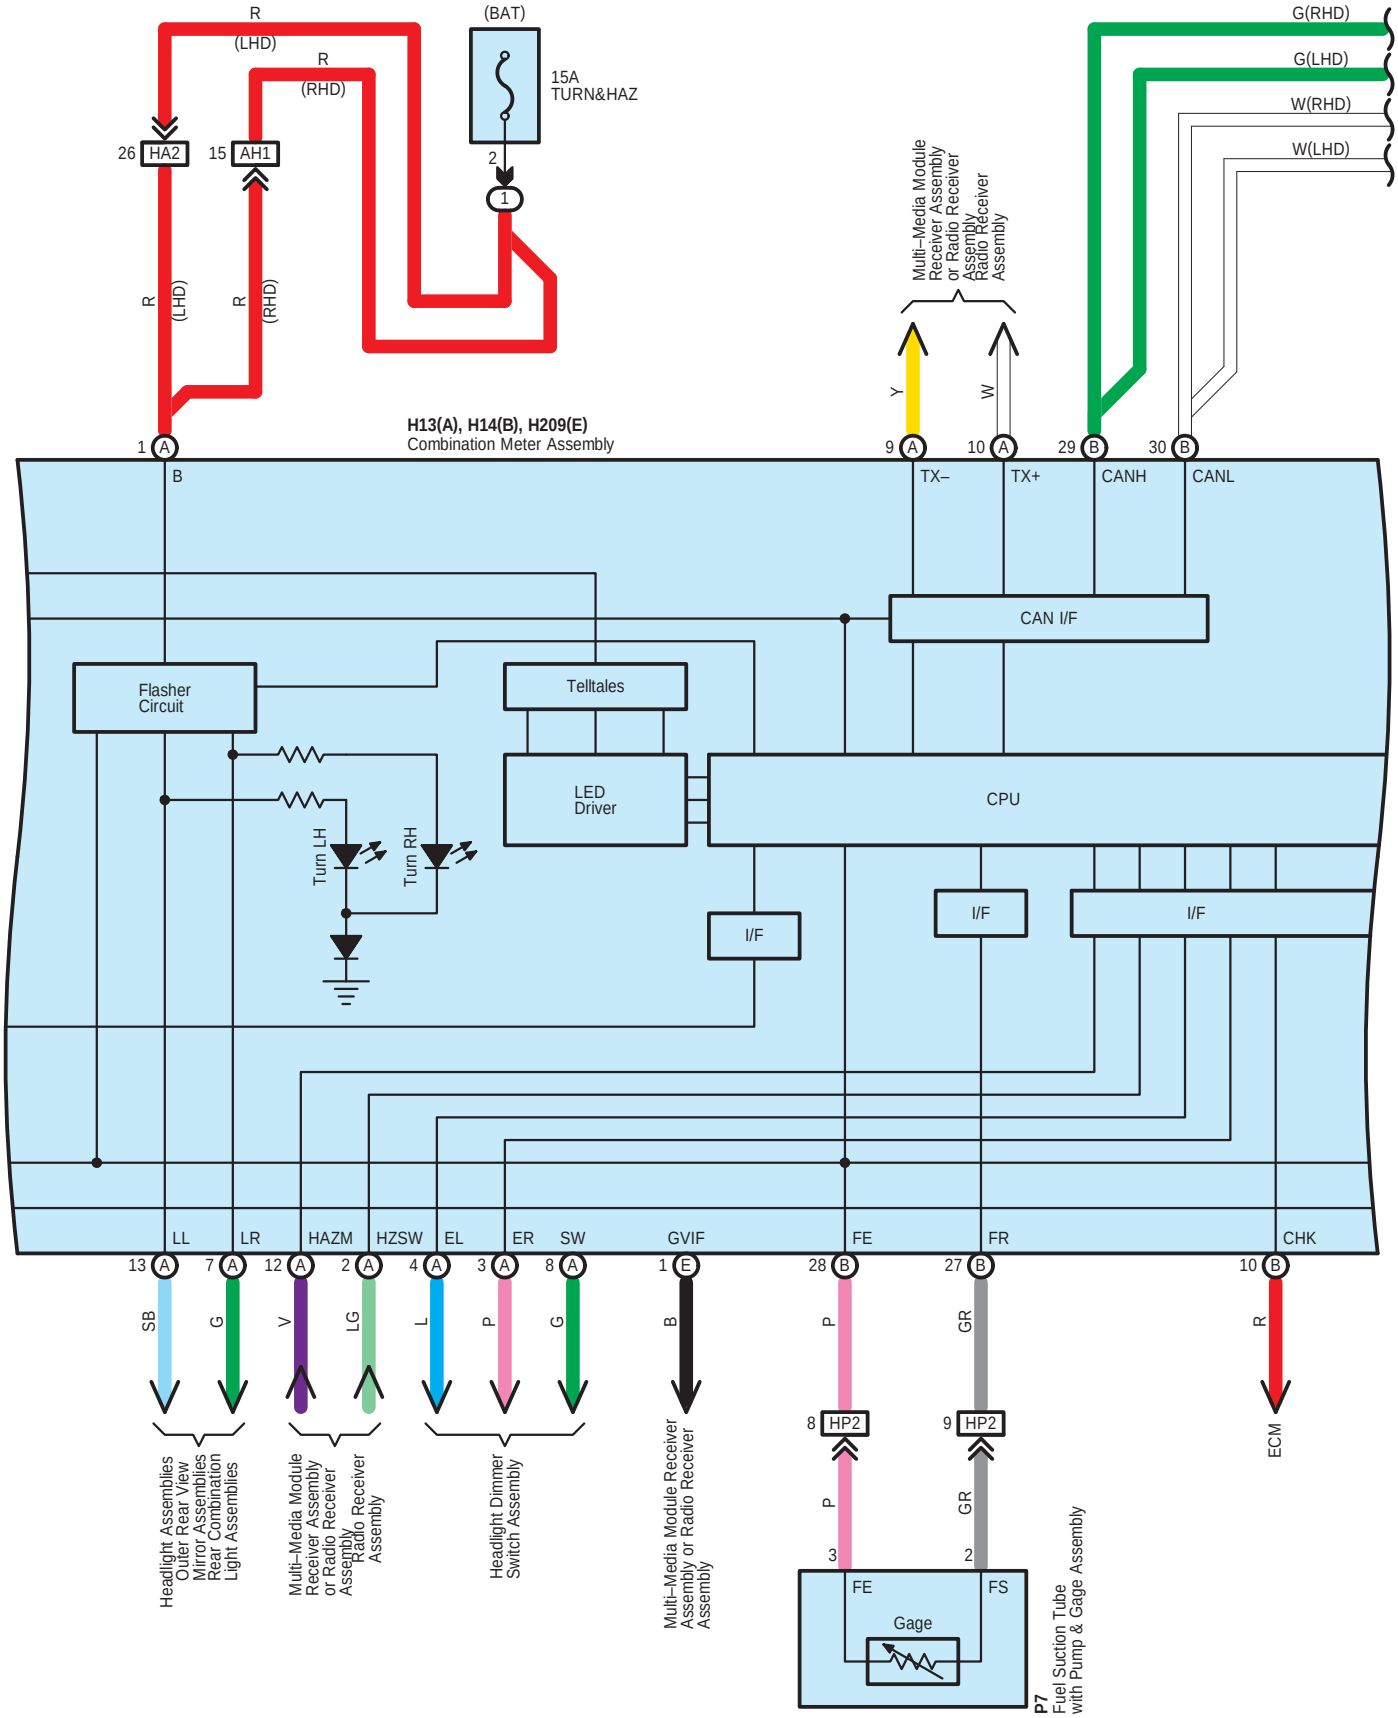
R
(LHD)
R
(RHD)
(BAT)
15A
TURN&HAZ
26 HA2
15 AH1
2
1
R (LHD)
R (RHD)
G(RHD)
G(LHD)
W(RHD)
W(LHD)
Multi-Media Module Receiver Assembly or Radio Receiver Assembly
Radio Receiver Assembly
Y
W
H13(A), H14(B), H209(E)
Combination Meter Assembly
1 A
B
9 A
10 A
29 B
30 B
TX–
TX+
CANH
CANL
CAN I/F
Flasher Circuit
Telltales
LED Driver
CPU
Turn LH
Turn RH
I/F
I/F
I/F
LL
LR
HAZM
HZSW
EL
ER
SW
GVIF
FE
FR
CHK
13 A
7 A
12 A
2 A
4 A
3 A
8 A
1 E
28 B
27 B
10 B
SB
G
V
LG
L
P
G
B
P
GR
R
8 HP2
9 HP2
P
GR
3
2
FE
FS
Gage
P7
Fuel Suction Tube with Pump & Gage Assembly
ECM
Headlight Assemblies
Outer Rear View Mirror Assemblies
Rear Combination Light Assemblies
Multi-Media Module Receiver Assembly or Radio Receiver Assembly
Radio Receiver Assembly
Headlight Dimmer Switch Assembly
Multi-Media Module Receiver Assembly or Radio Receiver Assembly

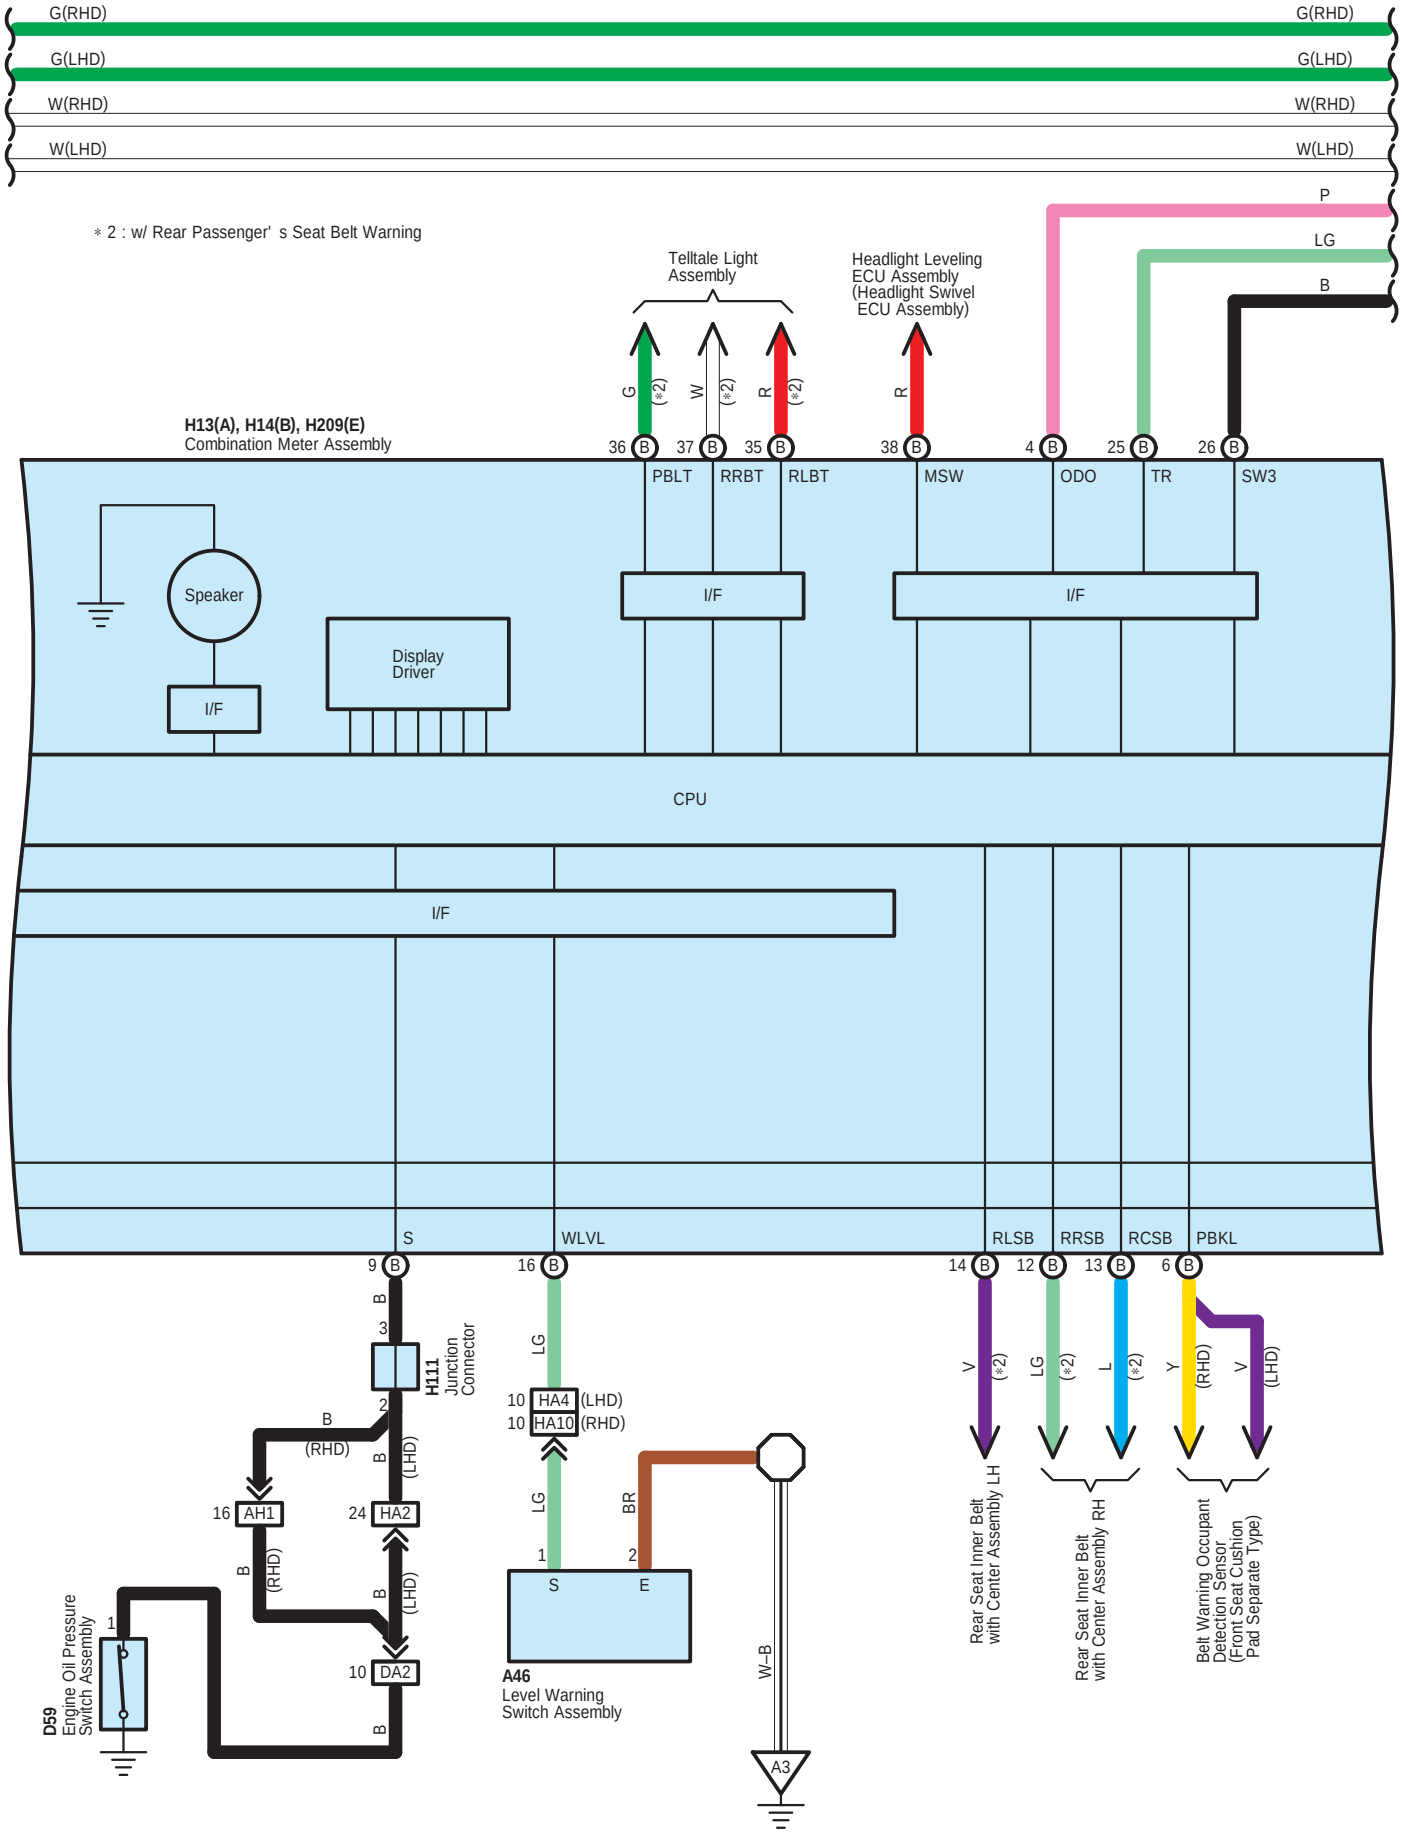
G(RHD)
G(LHD)
W(RHD)
W(LHD)
＊2 : w/ Rear Passenger' s Seat Belt Warning
Telltale Light Assembly
Headlight Leveling ECU Assembly (Headlight Swivel ECU Assembly)
P
LG
B
G
W
R
(＊2)
H13(A), H14(B), H209(E)
Combination Meter Assembly
36 B
37 B
35 B
38 B
4 B
25 B
26 B
PBLT
RRBT
RLBT
MSW
ODO
TR
SW3
Speaker
I/F
Display Driver
CPU
S
WLVL
RLSB
RRSB
RCSB
PBKL
9 B
16 B
14 B
12 B
13 B
6 B
H111 Junction Connector
HA4 (LHD)
HA10 (RHD)
AH1
HA2
DA2
D59 Engine Oil Pressure Switch Assembly
A46 Level Warning Switch Assembly
E
W–B
A3
Rear Seat Inner Belt with Center Assembly LH
Rear Seat Inner Belt with Center Assembly RH
Belt Warning Occupant Detection Sensor (Front Seat Cushion Pad Separate Type)
(RHD)
(LHD)

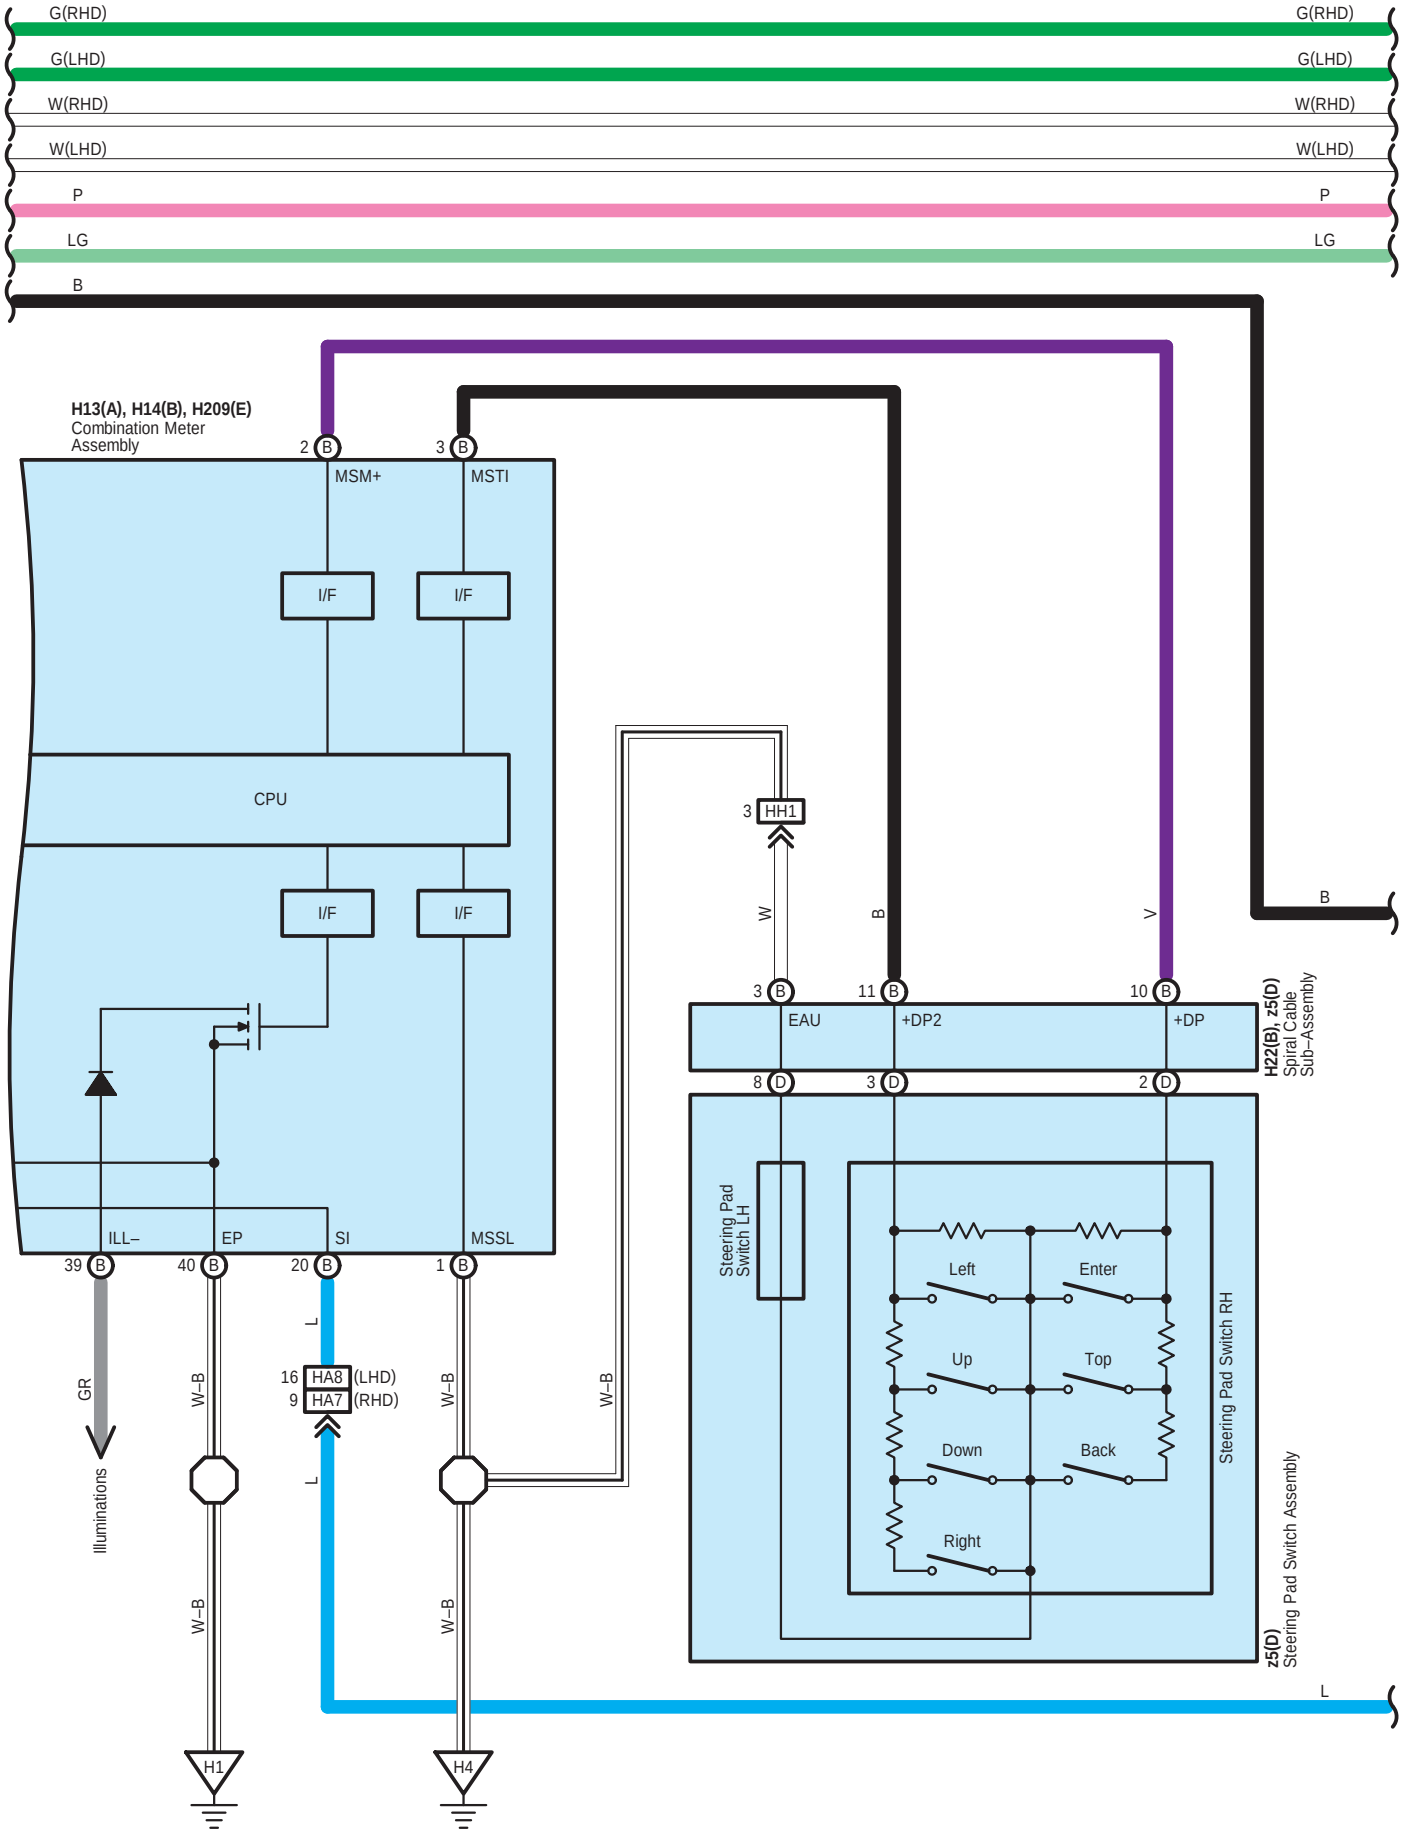
G(RHD)
G(LHD)
W(RHD)
W(LHD)
P
LG
B
H13(A), H14(B), H209(E)
Combination Meter
Assembly
2 B
3 B
MSM+
MSTI
I/F
I/F
CPU
I/F
I/F
ILL–
EP
SI
MSSL
39 B
40 B
20 B
1 B
GR
Illuminations
W–B
W–B
L
16 HA8 (LHD)
9 HA7 (RHD)
L
W–B
W–B
W–B
H1
H4
3 HH1
W
B
V
B
3 B
11 B
10 B
EAU
+DP2
+DP
H22(B), z5(D)
Spiral Cable
Sub–Assembly
8 D
3 D
2 D
Steering Pad
Switch LH
Left
Enter
Up
Top
Down
Back
Right
Steering Pad Switch RH
z5(D)
Steering Pad Switch Assembly
L

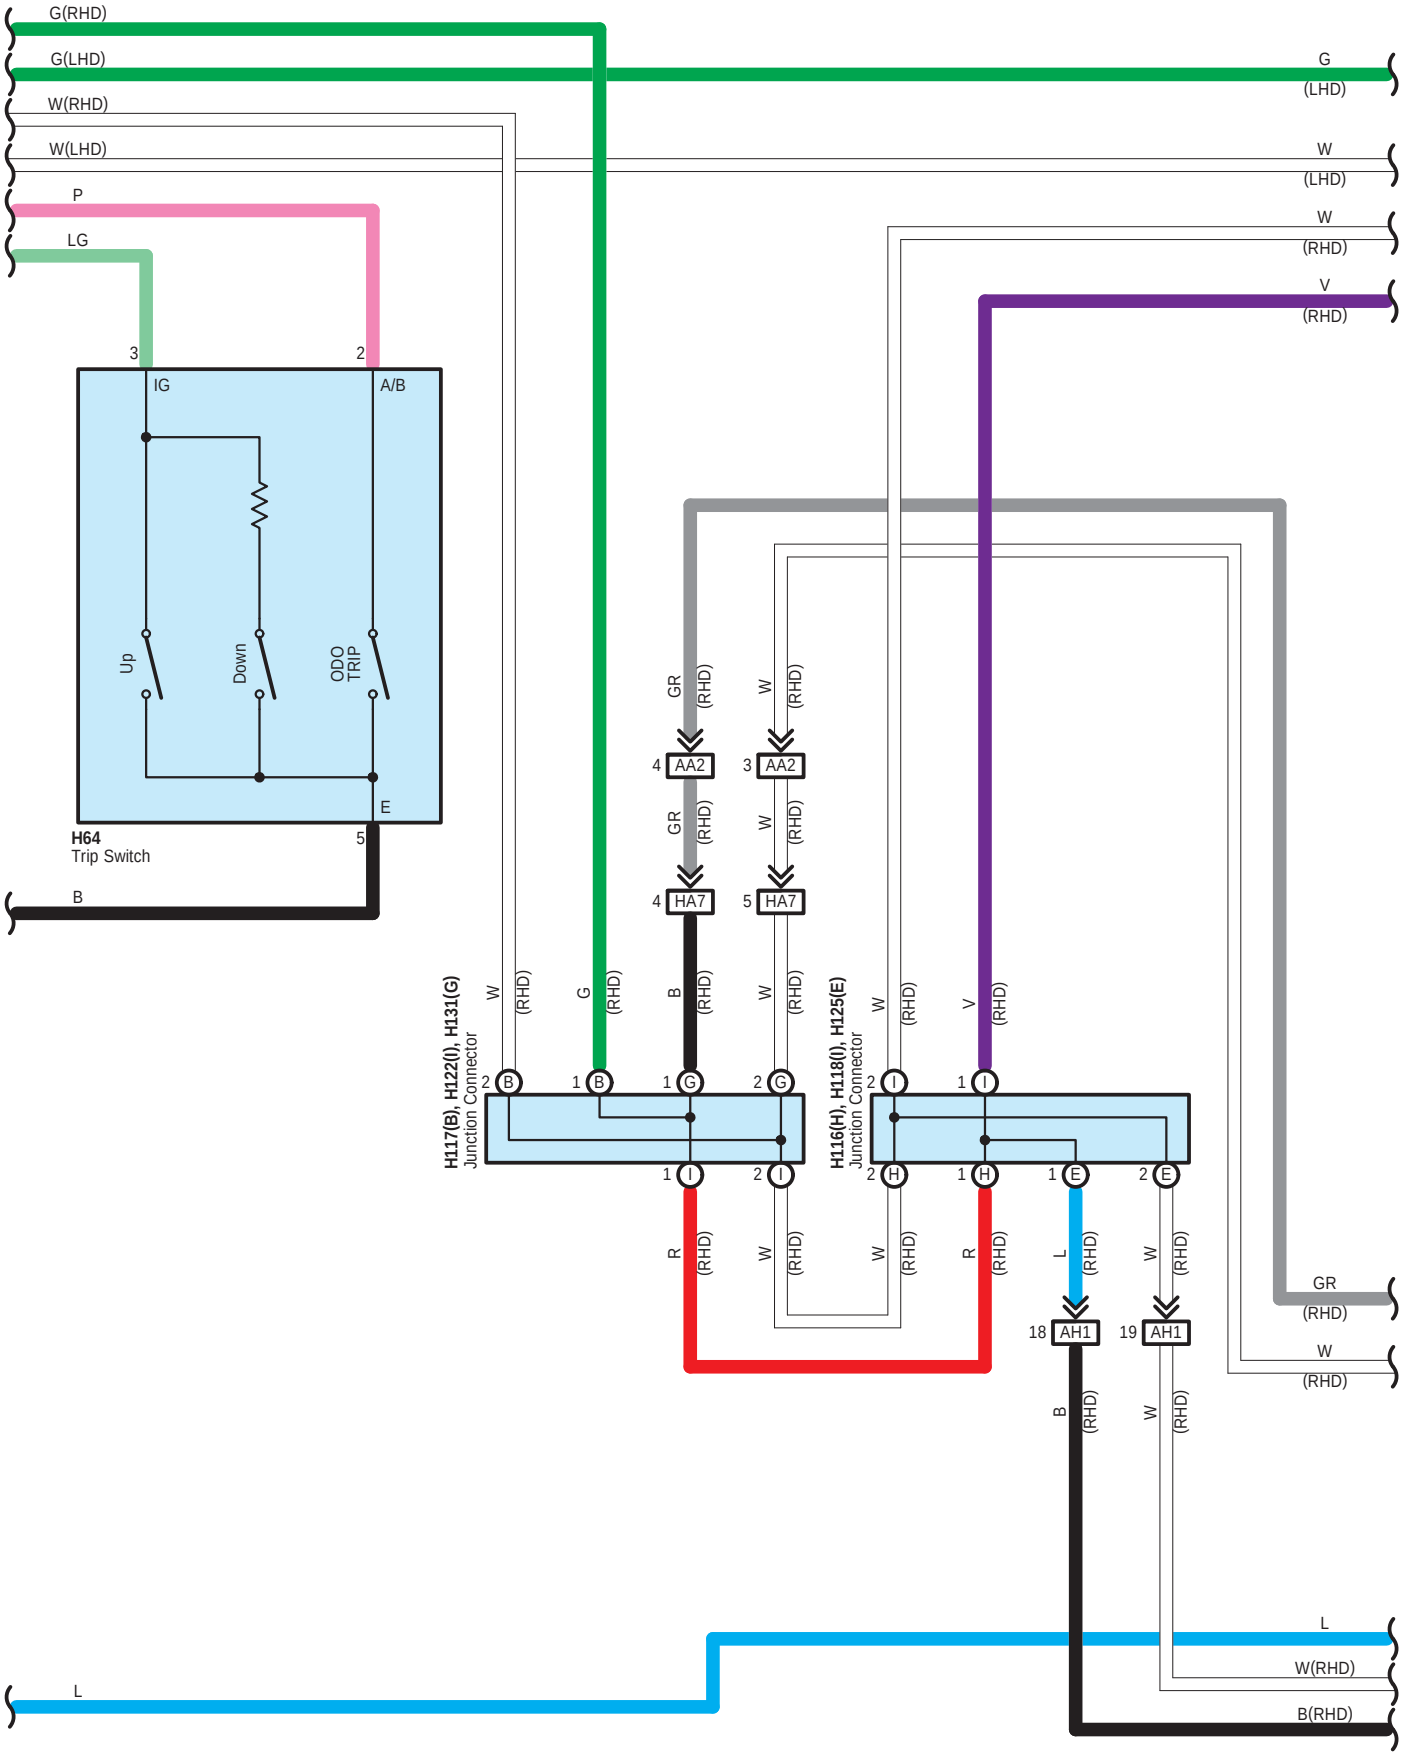
G(RHD)
G(LHD)
W(RHD)
W(LHD)
P
LG
G (LHD)
W (LHD)
W (RHD)
V (RHD)
3
2
IG
A/B
Up
Down
ODO TRIP
E
5
H64
Trip Switch
B
GR (RHD)
W (RHD)
4 AA2
3 AA2
4 HA7
5 HA7
H117(B), H122(I), H131(G)
Junction Connector
H116(H), H118(I), H125(E)
Junction Connector
R (RHD)
L (RHD)
18 AH1
19 AH1
GR (RHD)
W (RHD)
L
W(RHD)
B(RHD)

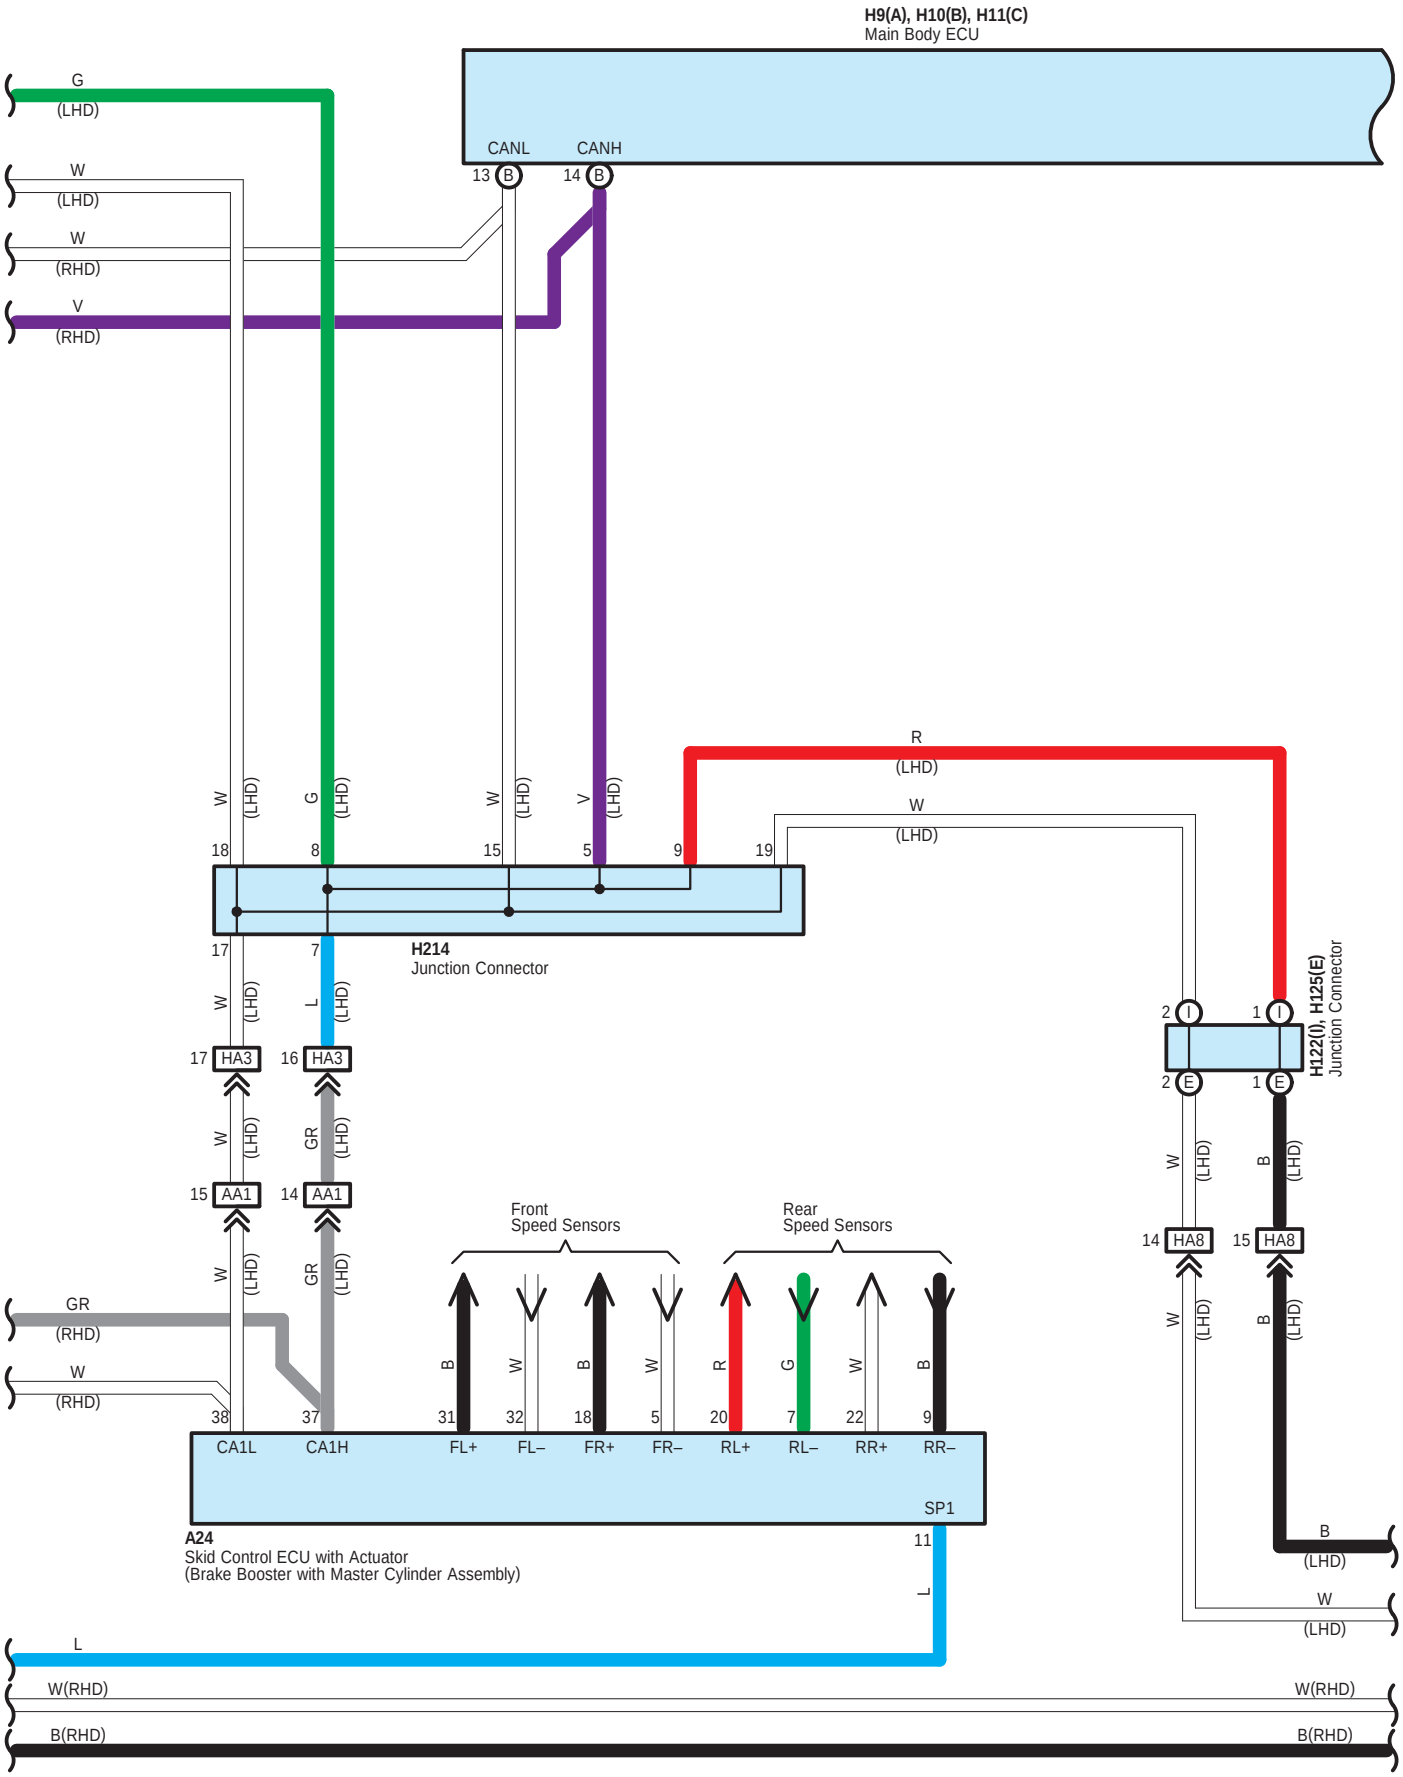
H9(A), H10(B), H11(C)
Main Body ECU
CANL
CANH
13 B
14 B
G (LHD)
W (LHD)
W (RHD)
V (RHD)
R (LHD)
W (LHD)
W (LHD)
G (LHD)
W (LHD)
V (LHD)
18
8
15
5
9
19
H214
Junction Connector
17
7
W (LHD)
L (LHD)
17 HA3
16 HA3
W (LHD)
GR (LHD)
15 AA1
14 AA1
W (LHD)
GR (LHD)
GR (RHD)
W (RHD)
38
37
CA1L
CA1H
Front
Speed Sensors
Rear
Speed Sensors
B
W
B
W
R
G
W
B
31
32
18
5
20
7
22
9
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
SP1
11
A24
Skid Control ECU with Actuator
(Brake Booster with Master Cylinder Assembly)
L
L
H122(I), H125(E)
Junction Connector
2 I
1 I
2 E
1 E
W (LHD)
B (LHD)
14 HA8
15 HA8
W (LHD)
B (LHD)
B (LHD)
W (LHD)
W(RHD)
B(RHD)
W(RHD)
B(RHD)

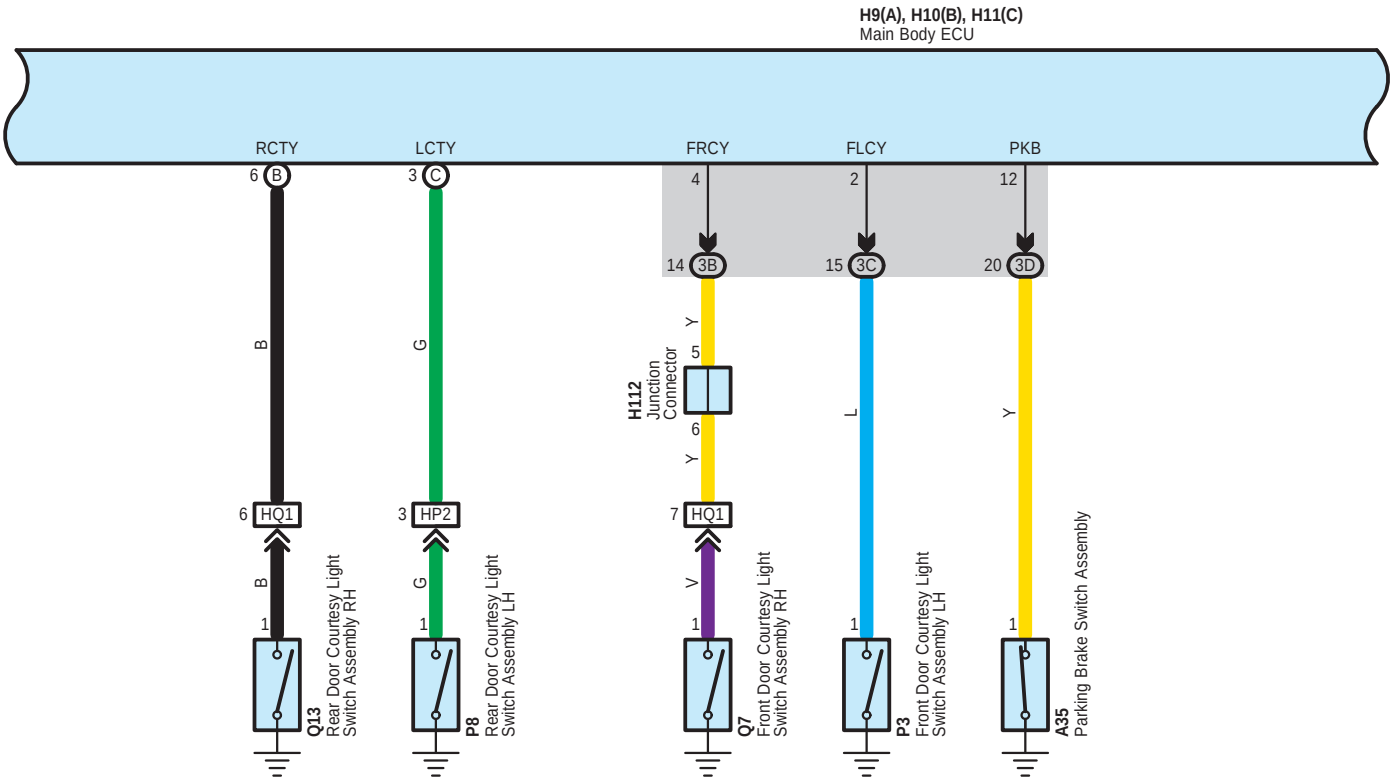
H9(A), H10(B), H11(C)
Main Body ECU
RCTY
LCTY
FRCY
FLCY
PKB
6 B
3 C
4
2
12
14 3B
15 3C
20 3D
B
G
Y
5
H112
Junction
Connector
6
Y
L
Y
6 HQ1
3 HP2
7 HQ1
B
G
V
1
1
1
1
1
Q13
Rear Door Courtesy Light
Switch Assembly RH
P8
Rear Door Courtesy Light
Switch Assembly LH
Q7
Front Door Courtesy Light
Switch Assembly RH
P3
Front Door Courtesy Light
Switch Assembly LH
A35
Parking Brake Switch Assembly

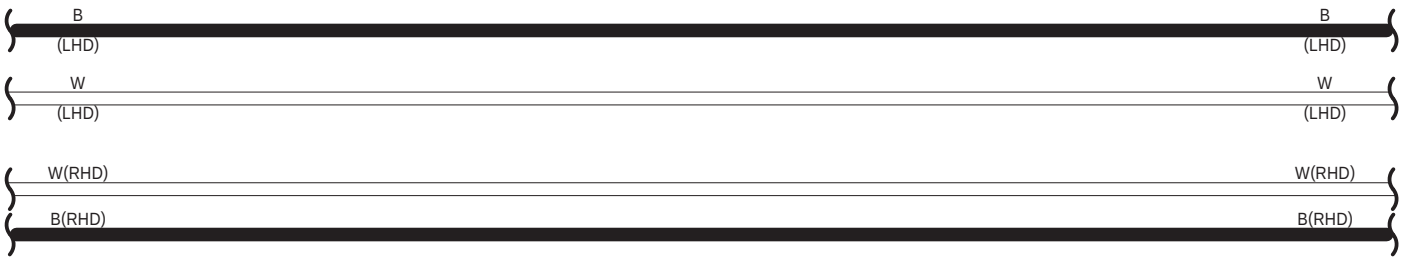
B
(LHD)
B
(LHD)
W
(LHD)
W
(LHD)
W(RHD)
W(RHD)
B(RHD)
B(RHD)

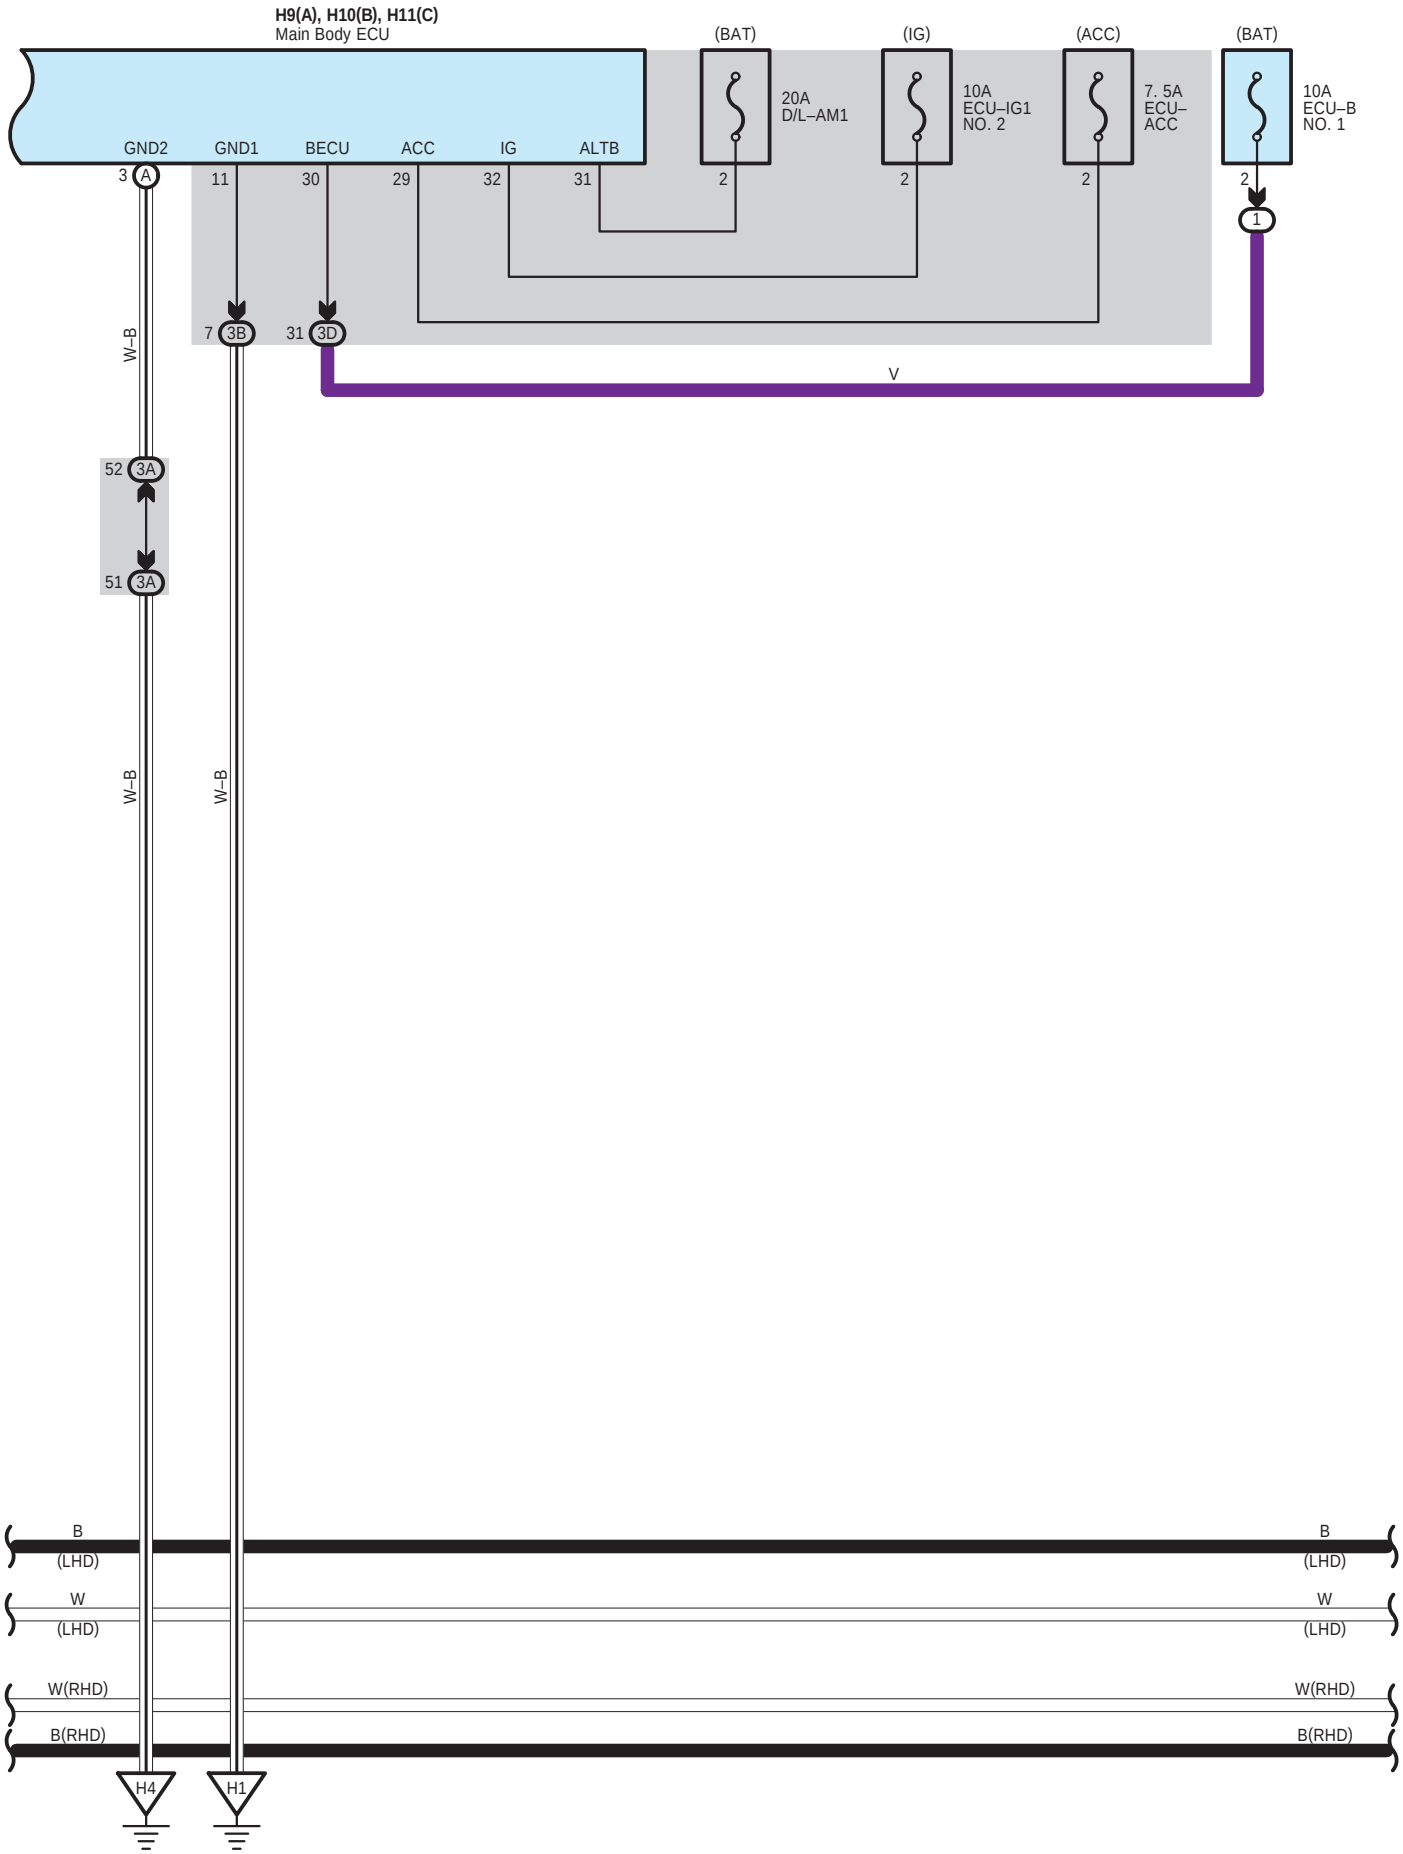
H9(A), H10(B), H11(C)
Main Body ECU
GND2
GND1
BECU
ACC
IG
ALTB
(BAT)
(IG)
(ACC)
(BAT)
20A
D/L–AM1
10A
ECU–IG1
NO. 2
7. 5A
ECU–
ACC
10A
ECU–B
NO. 1
3 A
11
30
29
32
31
2
2
2
2
1
7 3B
31 3D
V
W–B
52 3A
51 3A
W–B
W–B
B
(LHD)
W
(LHD)
W(RHD)
B(RHD)
B
(LHD)
W
(LHD)
W(RHD)
B(RHD)
H4
H1

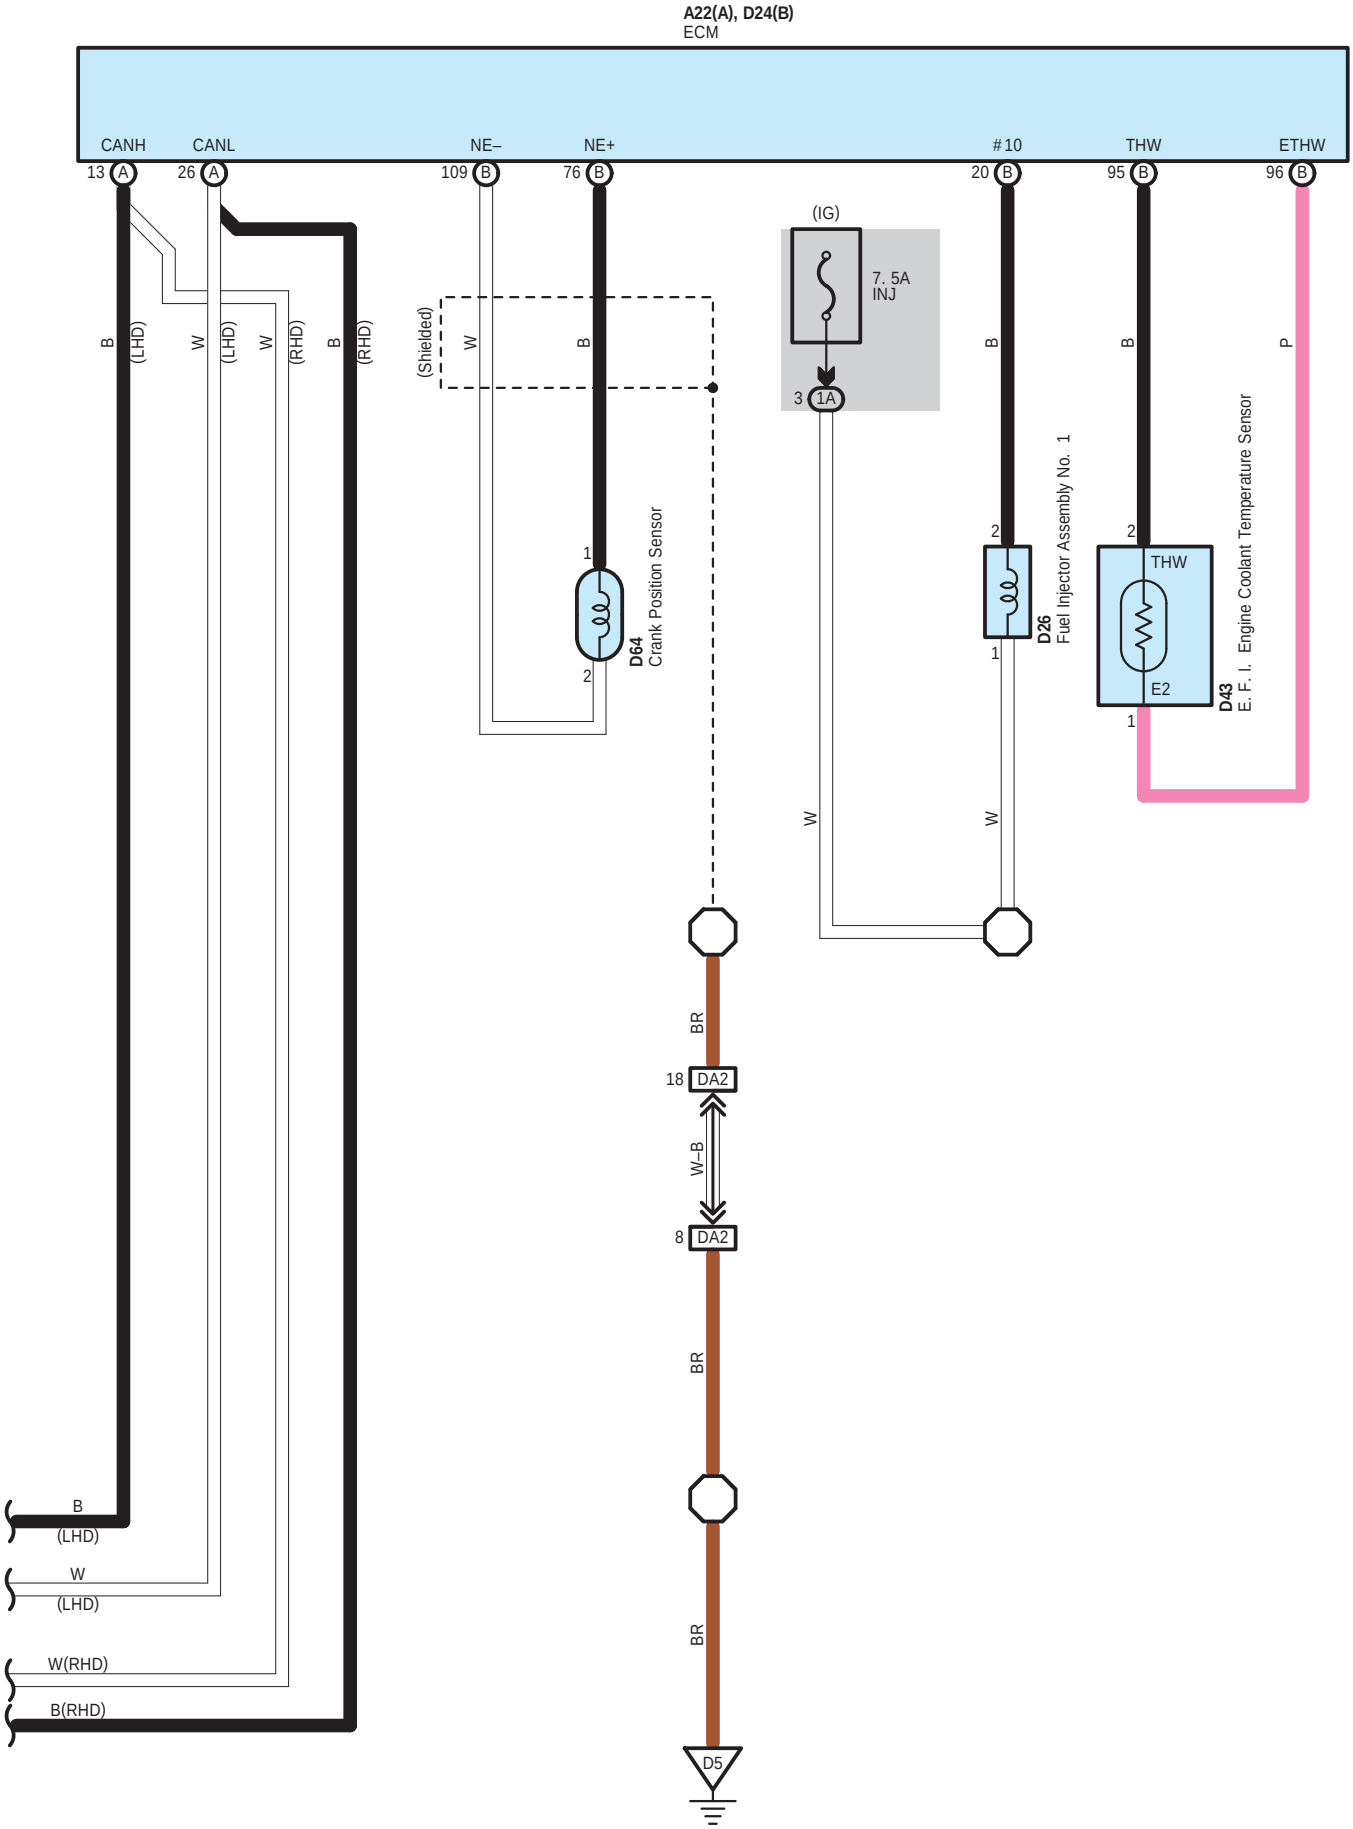
A22(A), D24(B)
ECM
CANH
CANL
NE–
NE+
#10
THW
ETHW
13 A
26 A
109 B
76 B
20 B
95 B
96 B
(IG)
7. 5A
INJ
3 1A
B
(LHD)
W
(LHD)
W
(RHD)
B
(RHD)
(Shielded)
W
B
B
B
P
1
2
D64
Crank Position Sensor
2
1
D26
Fuel Injector Assembly No. 1
2
THW
E2
1
D43
E. F. I. Engine Coolant Temperature Sensor
W
W
BR
18 DA2
W–B
8 DA2
BR
BR
D5
B
(LHD)
W
(LHD)
W(RHD)
B(RHD)

A 22
Black

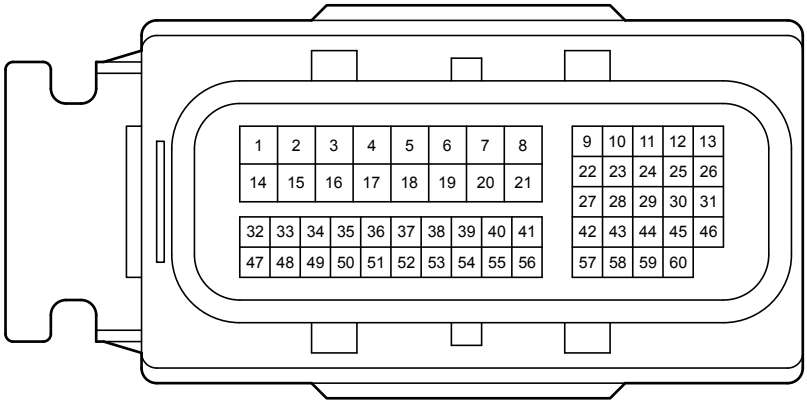

A 24
Black

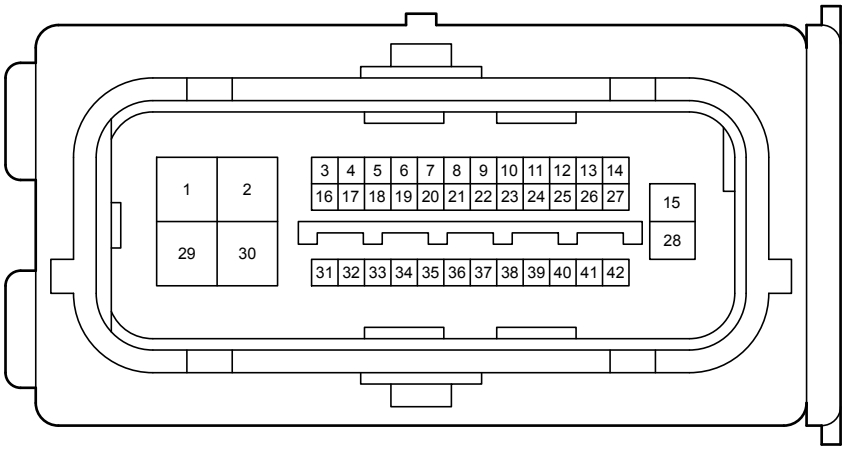

A 35
White

A 46
Black

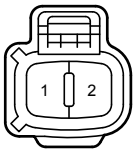

D 24
Black

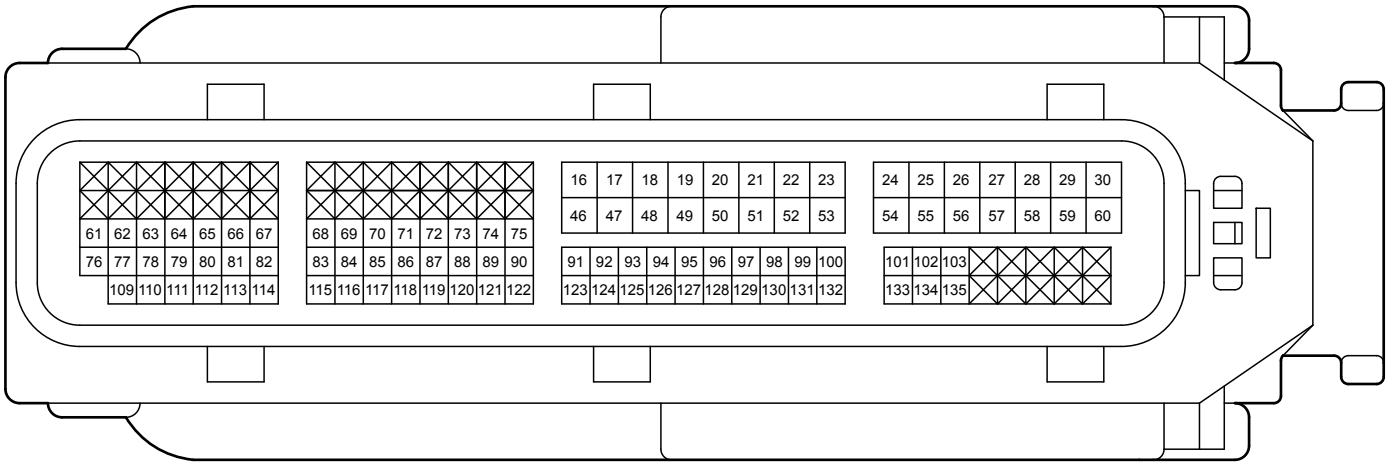

D 26
Black



D 43
Black

D 59
Gray

D 64
Black

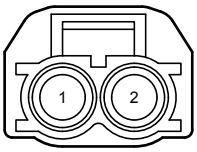

H 9
White

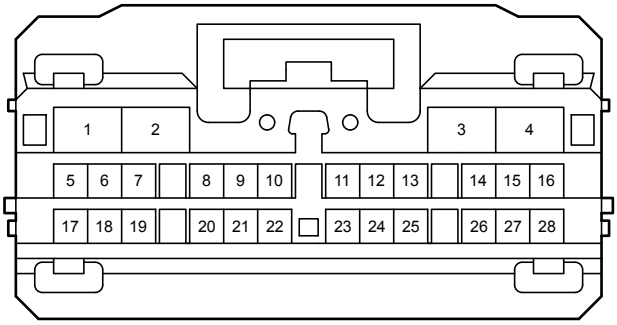

H 10
White

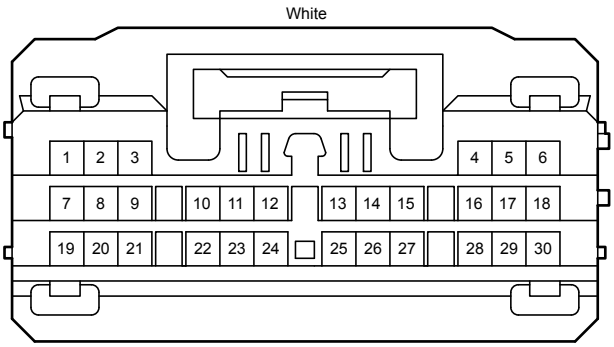

H 11
White

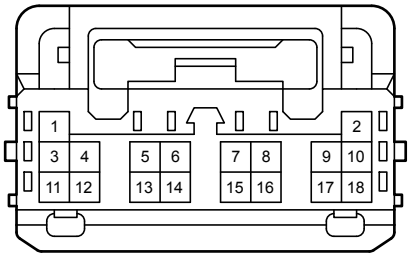

H 13
Black

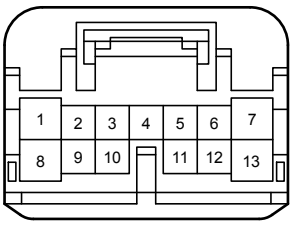

H 14
Black

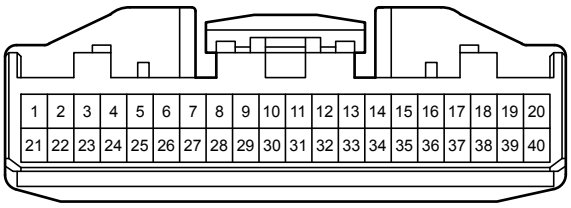

H 22
Black

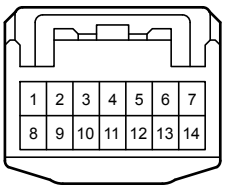

H 64
Black

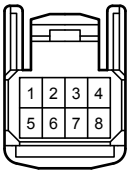

H111
Gray

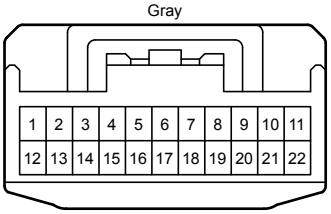

H112
White

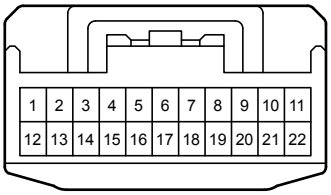

H114
Black

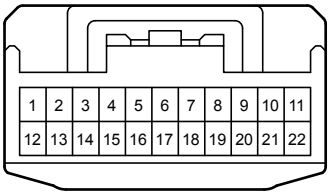

H115
Black

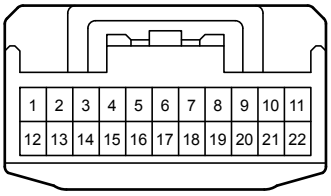

H116
White



H117
White



H118
White



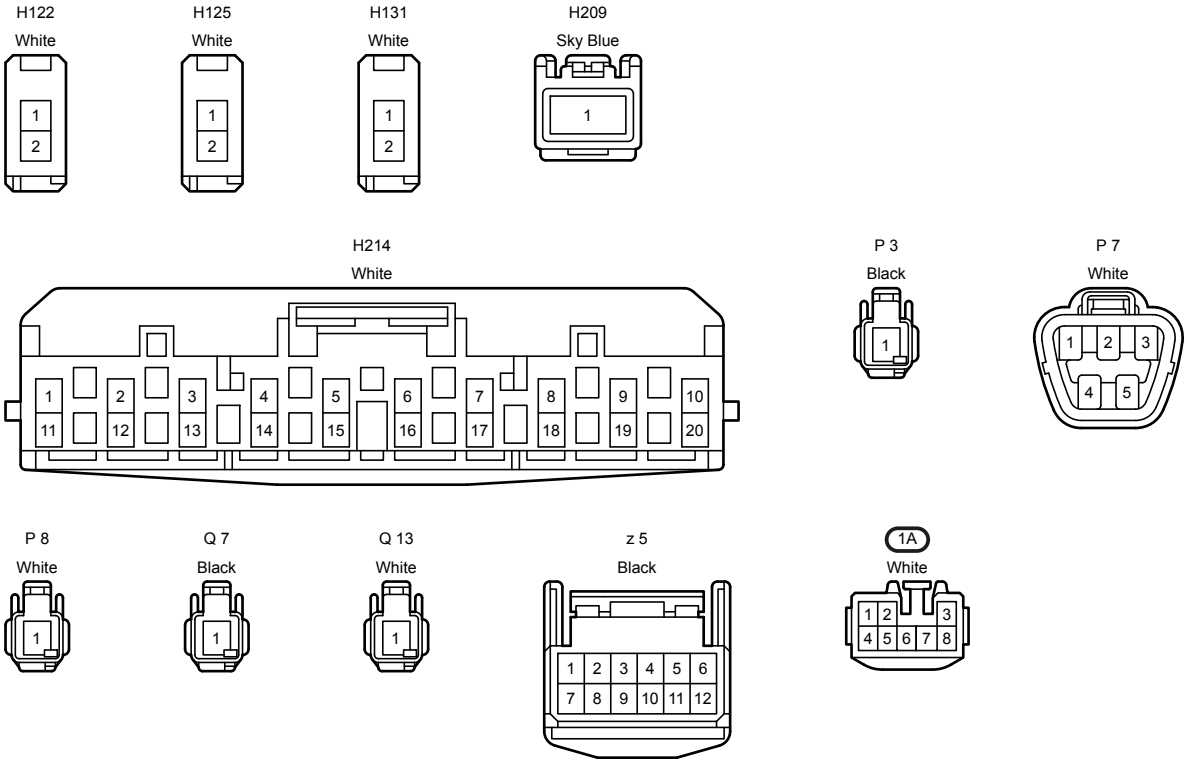
H122
White
H125
White
H131
White
H209
Sky Blue
H214
White
P 3
Black
P 7
White
P 8
White
Q 7
Black
Q 13
White
z 5
Black
1A
White

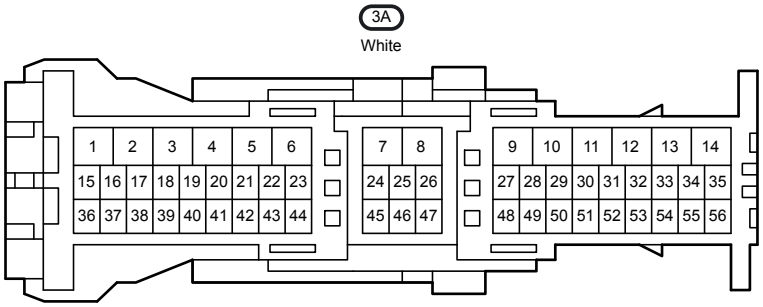
3A
White

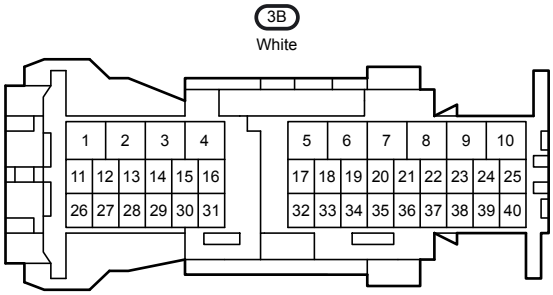
3B
White

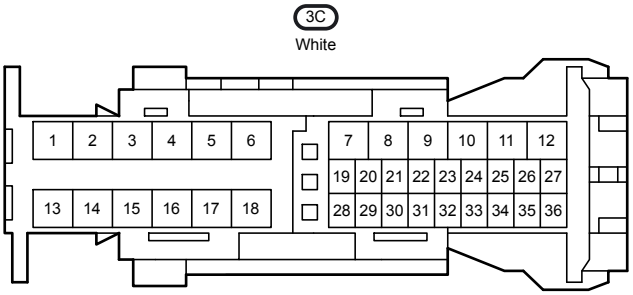
3C
White

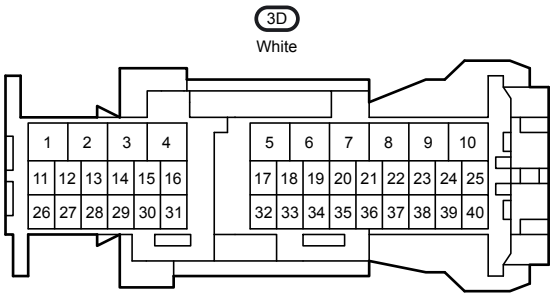
3D
White

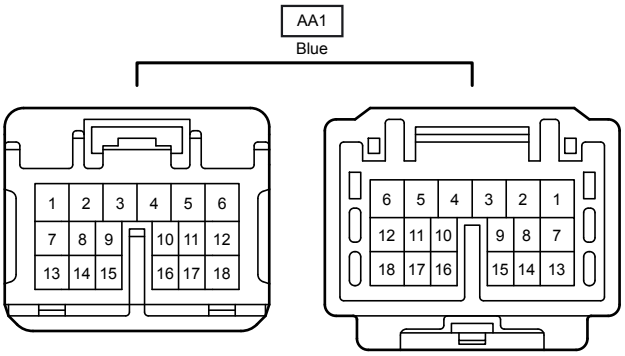
AA1
Blue

AA2
White

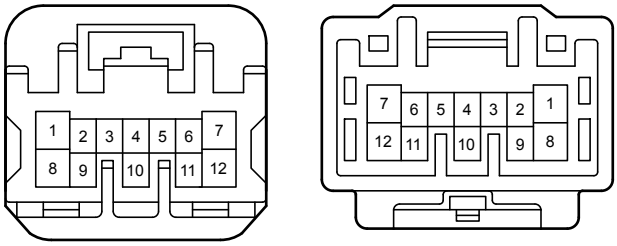

AH1
White

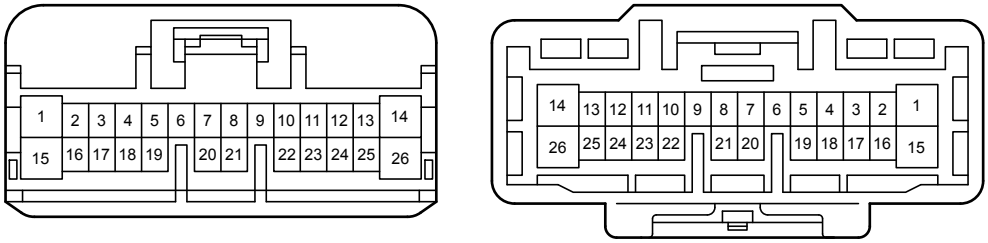

DA2
White

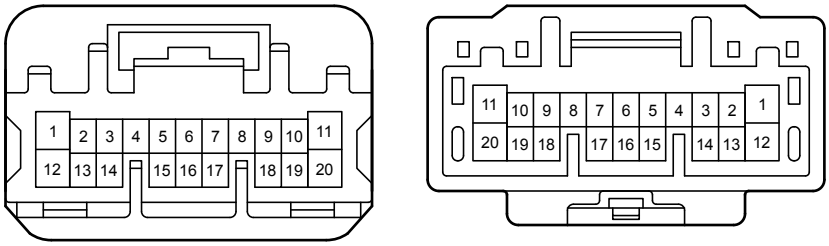

HA2
Blue

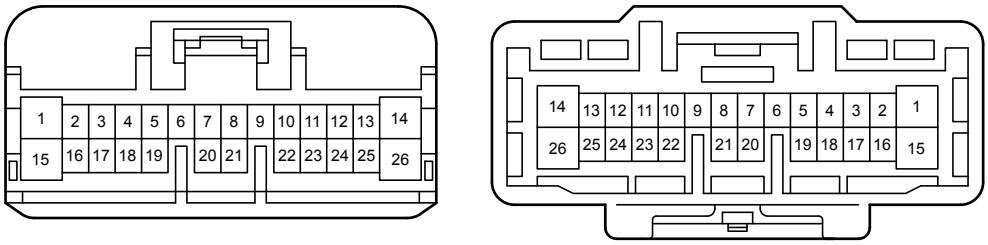

HA3
Gray

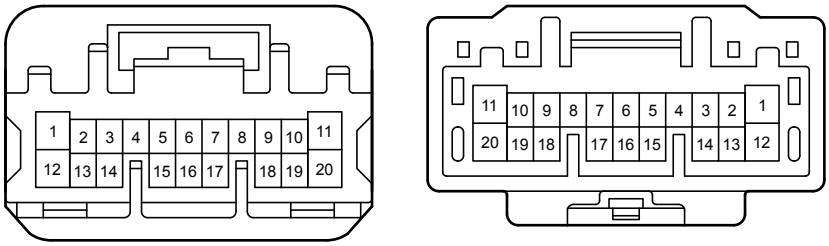

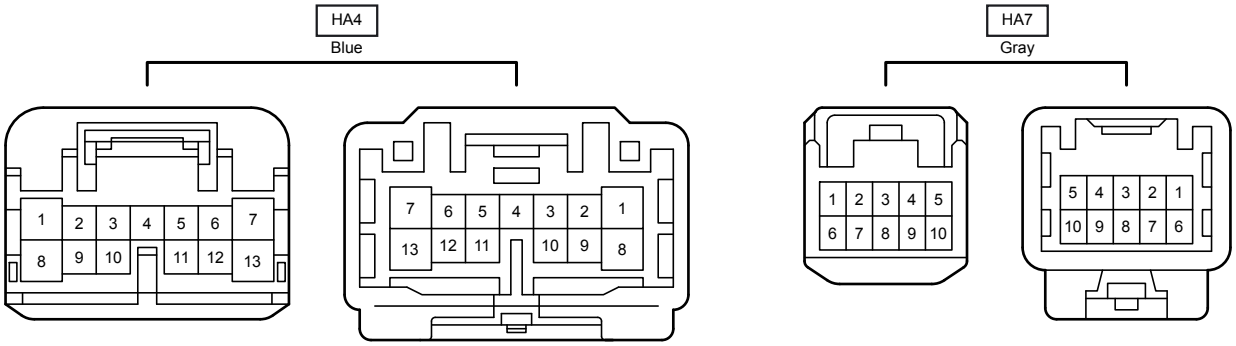
HA4
Blue
HA7
Gray

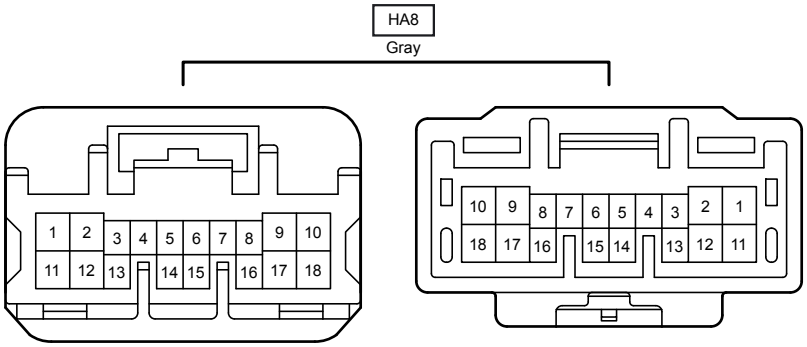
HA8
Gray

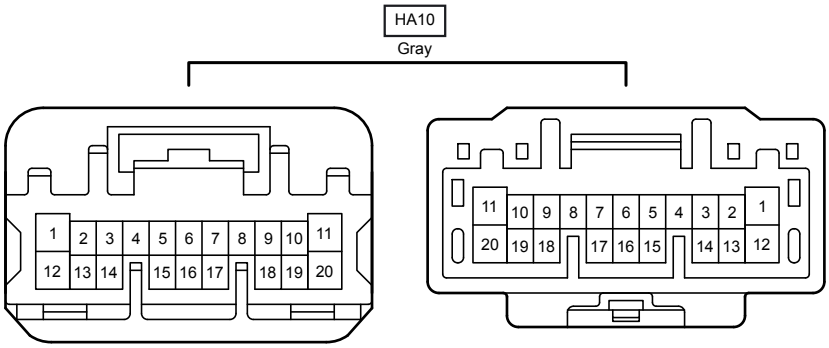
HA10
Gray

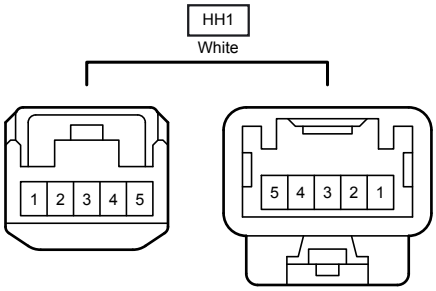
HH1
White

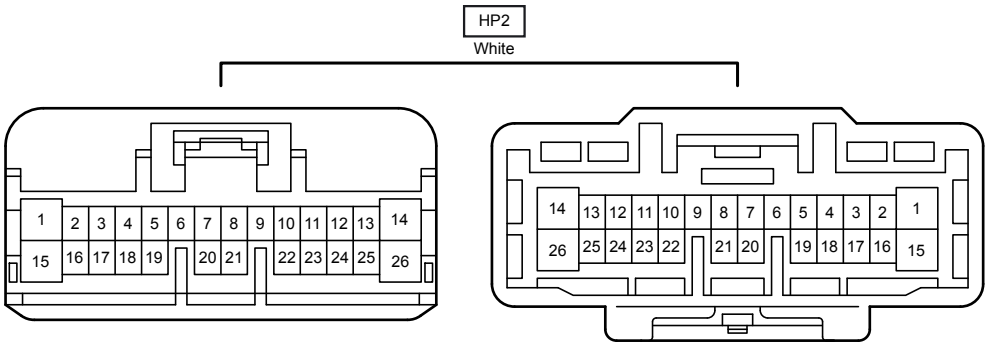
HP2
White

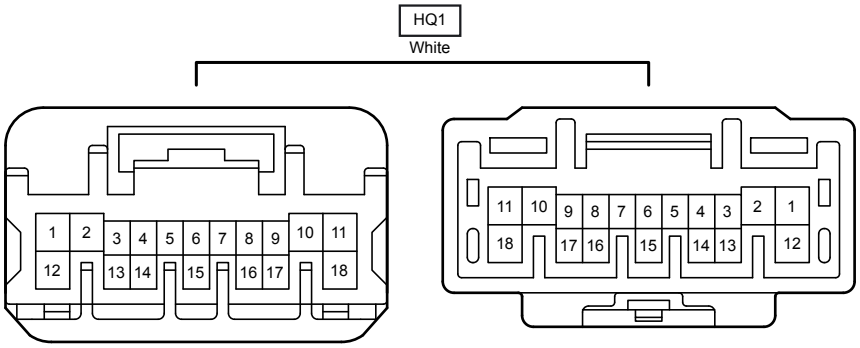
HQ1
White
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
11
10
9
8
7
6
5
4
3
2
1
18
17
16
15
14
13
12