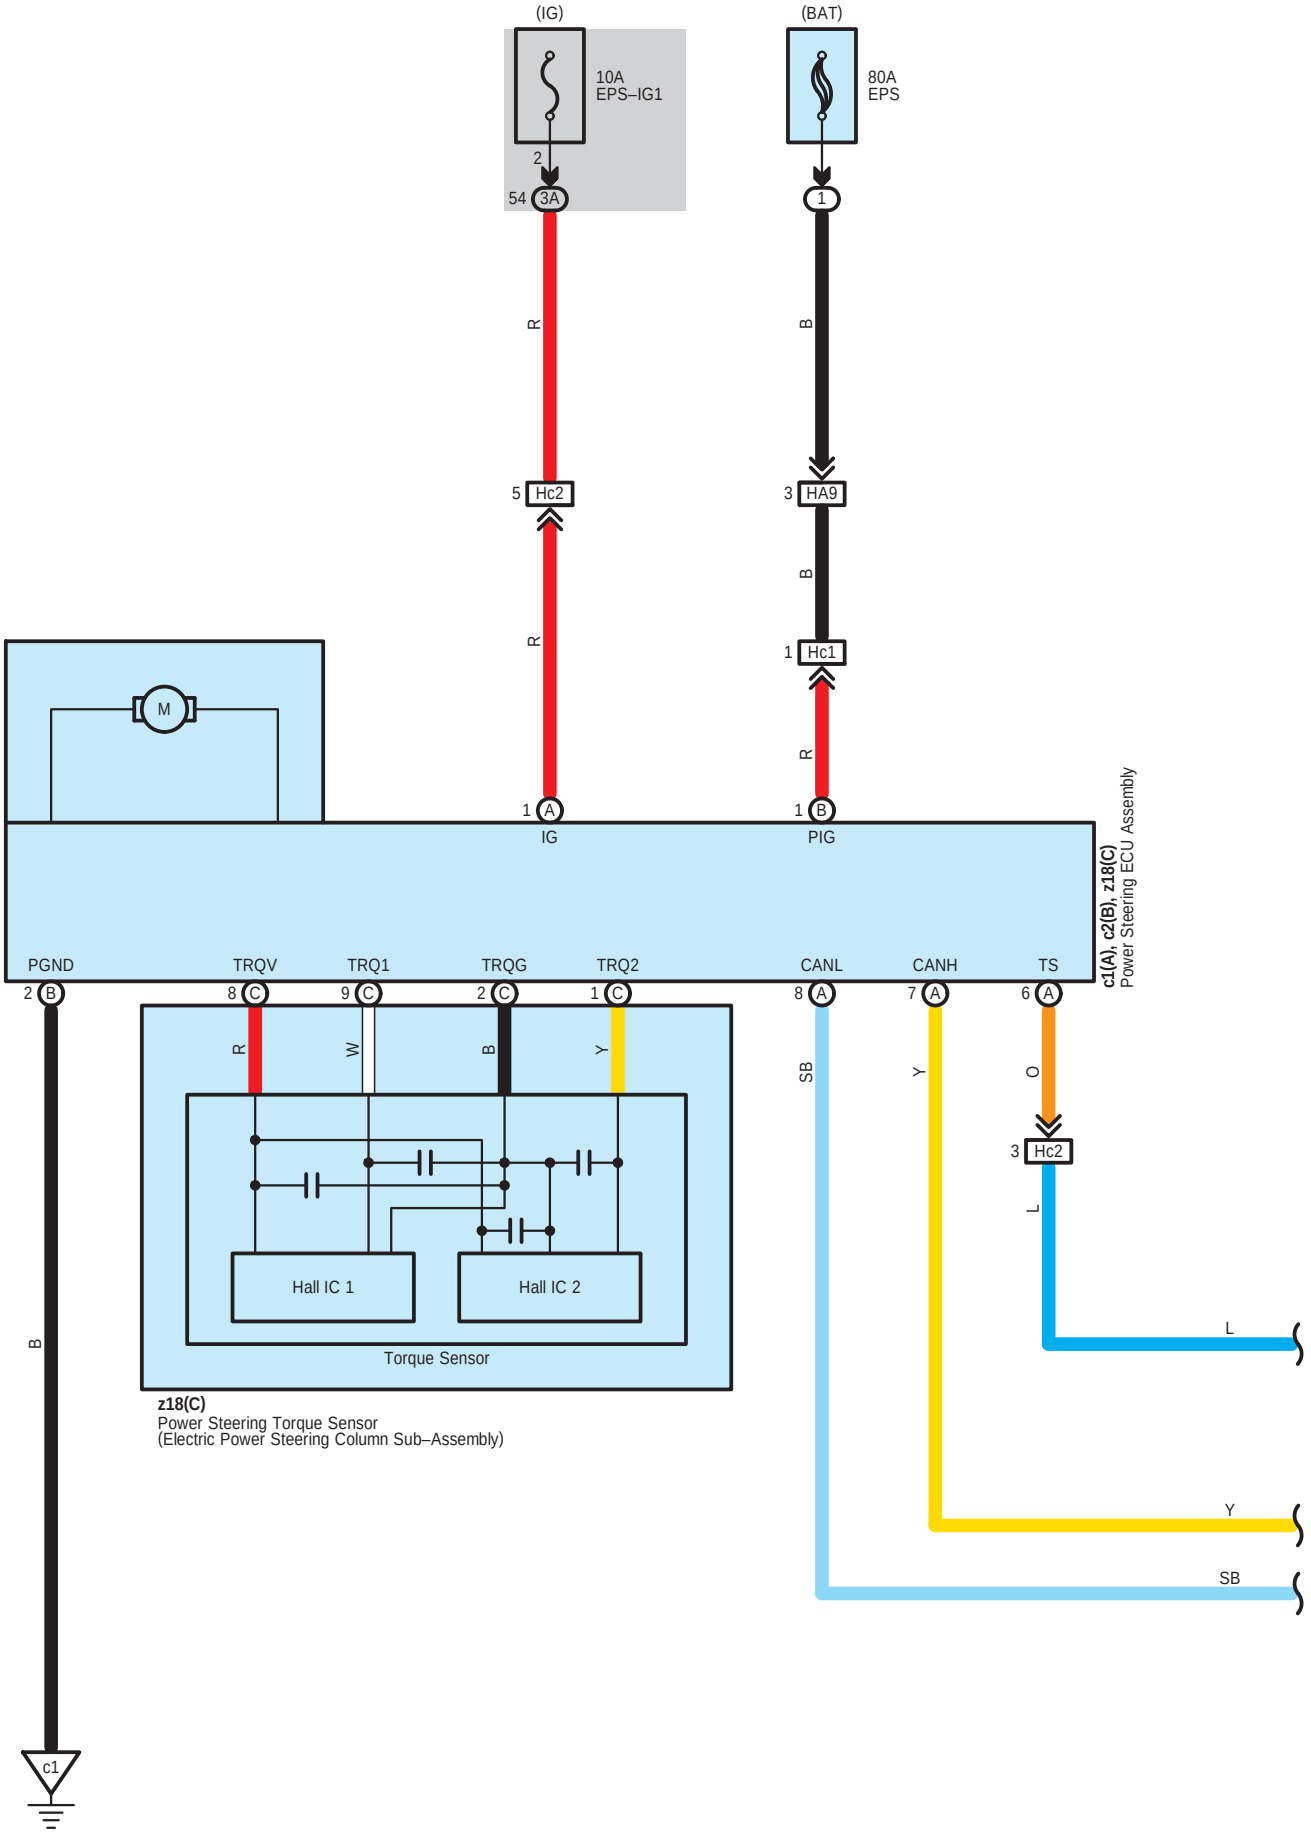
(IG)
10A
EPS–IG1
2
54 3A
(BAT)
80A
EPS
1
R
B
5 Hc2
3 HA9
B
R
1 Hc1
R
M
1 A
IG
1 B
PIG
c1(A), c2(B), z18(C)
Power Steering ECU Assembly
PGND
TRQV
TRQ1
TRQG
TRQ2
CANL
CANH
TS
2 B
8 C
9 C
2 C
1 C
8 A
7 A
6 A
R
W
B
Y
SB
Y
O
3 Hc2
L
Hall IC 1
Hall IC 2
Torque Sensor
z18(C)
Power Steering Torque Sensor
(Electric Power Steering Column Sub–Assembly)
B
L
Y
SB
c1

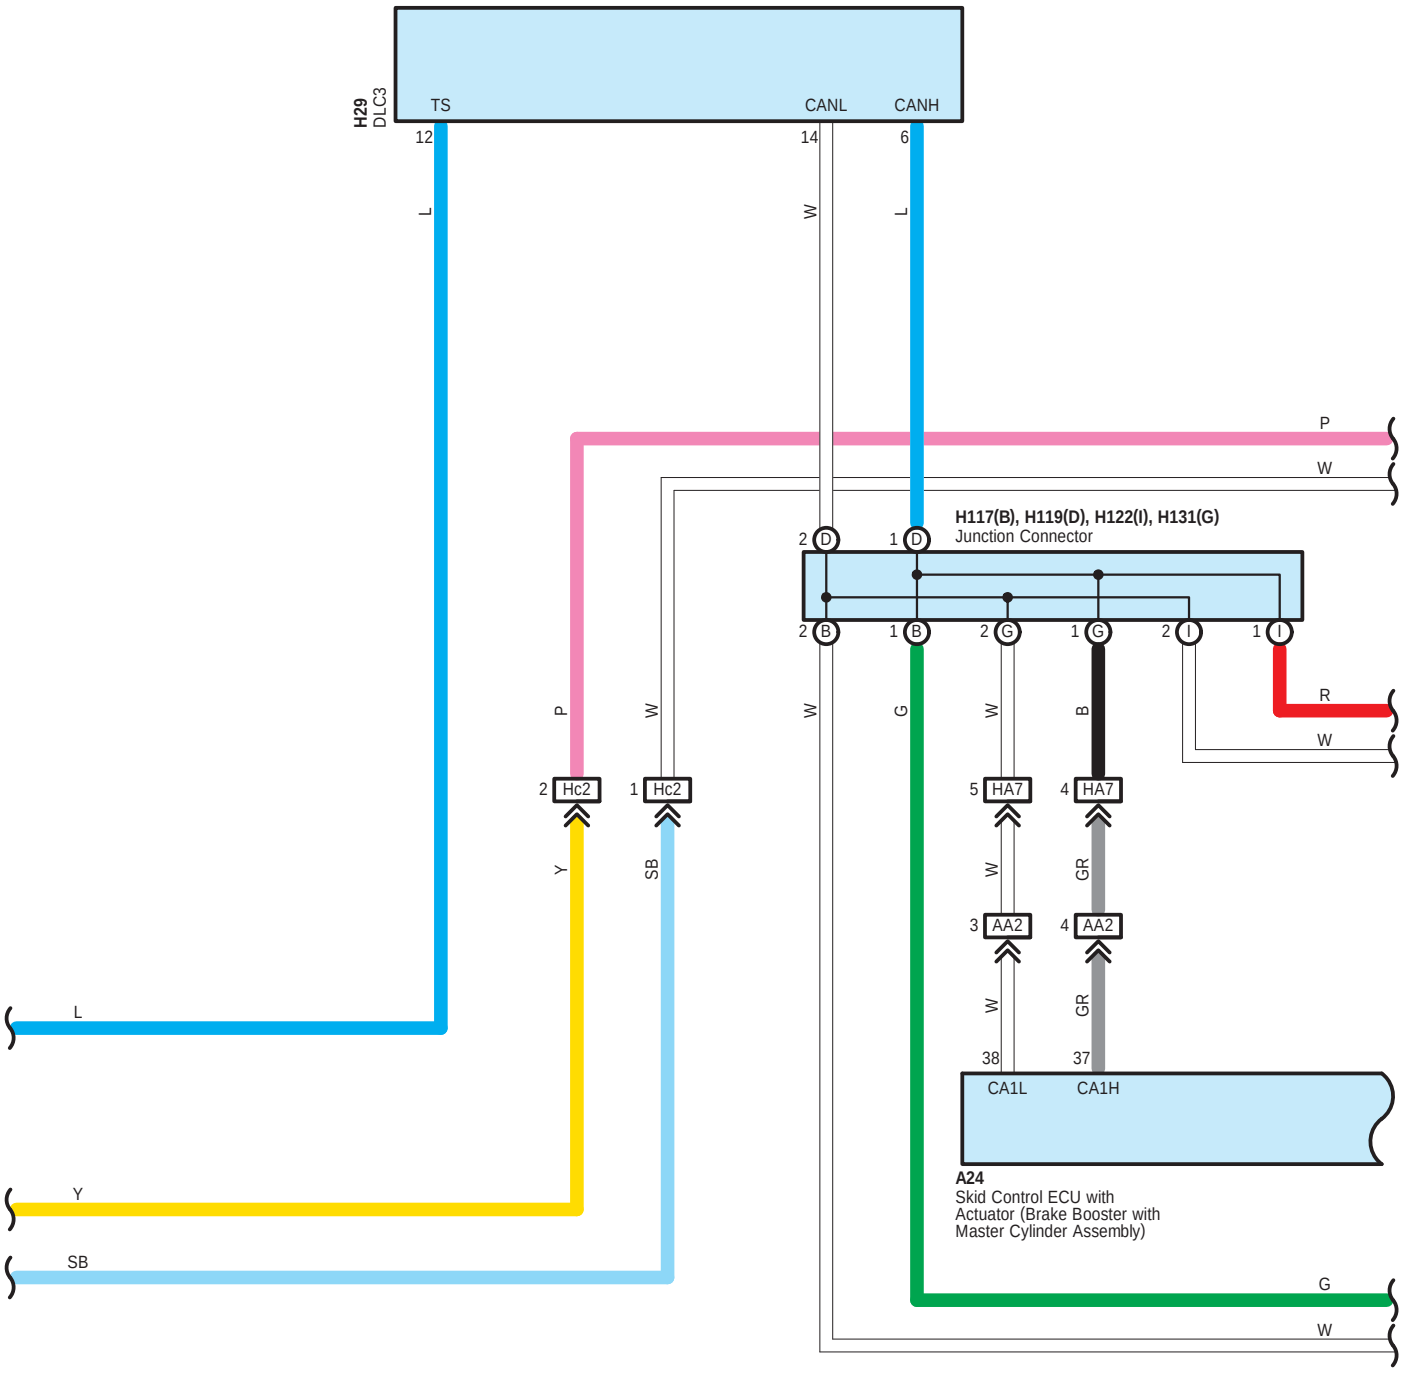
H29
DLC3
TS
CANL
CANH
12
14
6
L
W
L
P
W
H117(B), H119(D), H122(I), H131(G)
Junction Connector
2 D
1 D
2 B
1 B
2 G
1 G
2 I
1 I
R
W
P
W
W
G
W
B
2 Hc2
1 Hc2
5 HA7
4 HA7
Y
SB
W
GR
3 AA2
4 AA2
W
GR
38
37
CA1L
CA1H
A24
Skid Control ECU with
Actuator (Brake Booster with
Master Cylinder Assembly)
L
Y
SB
G
W

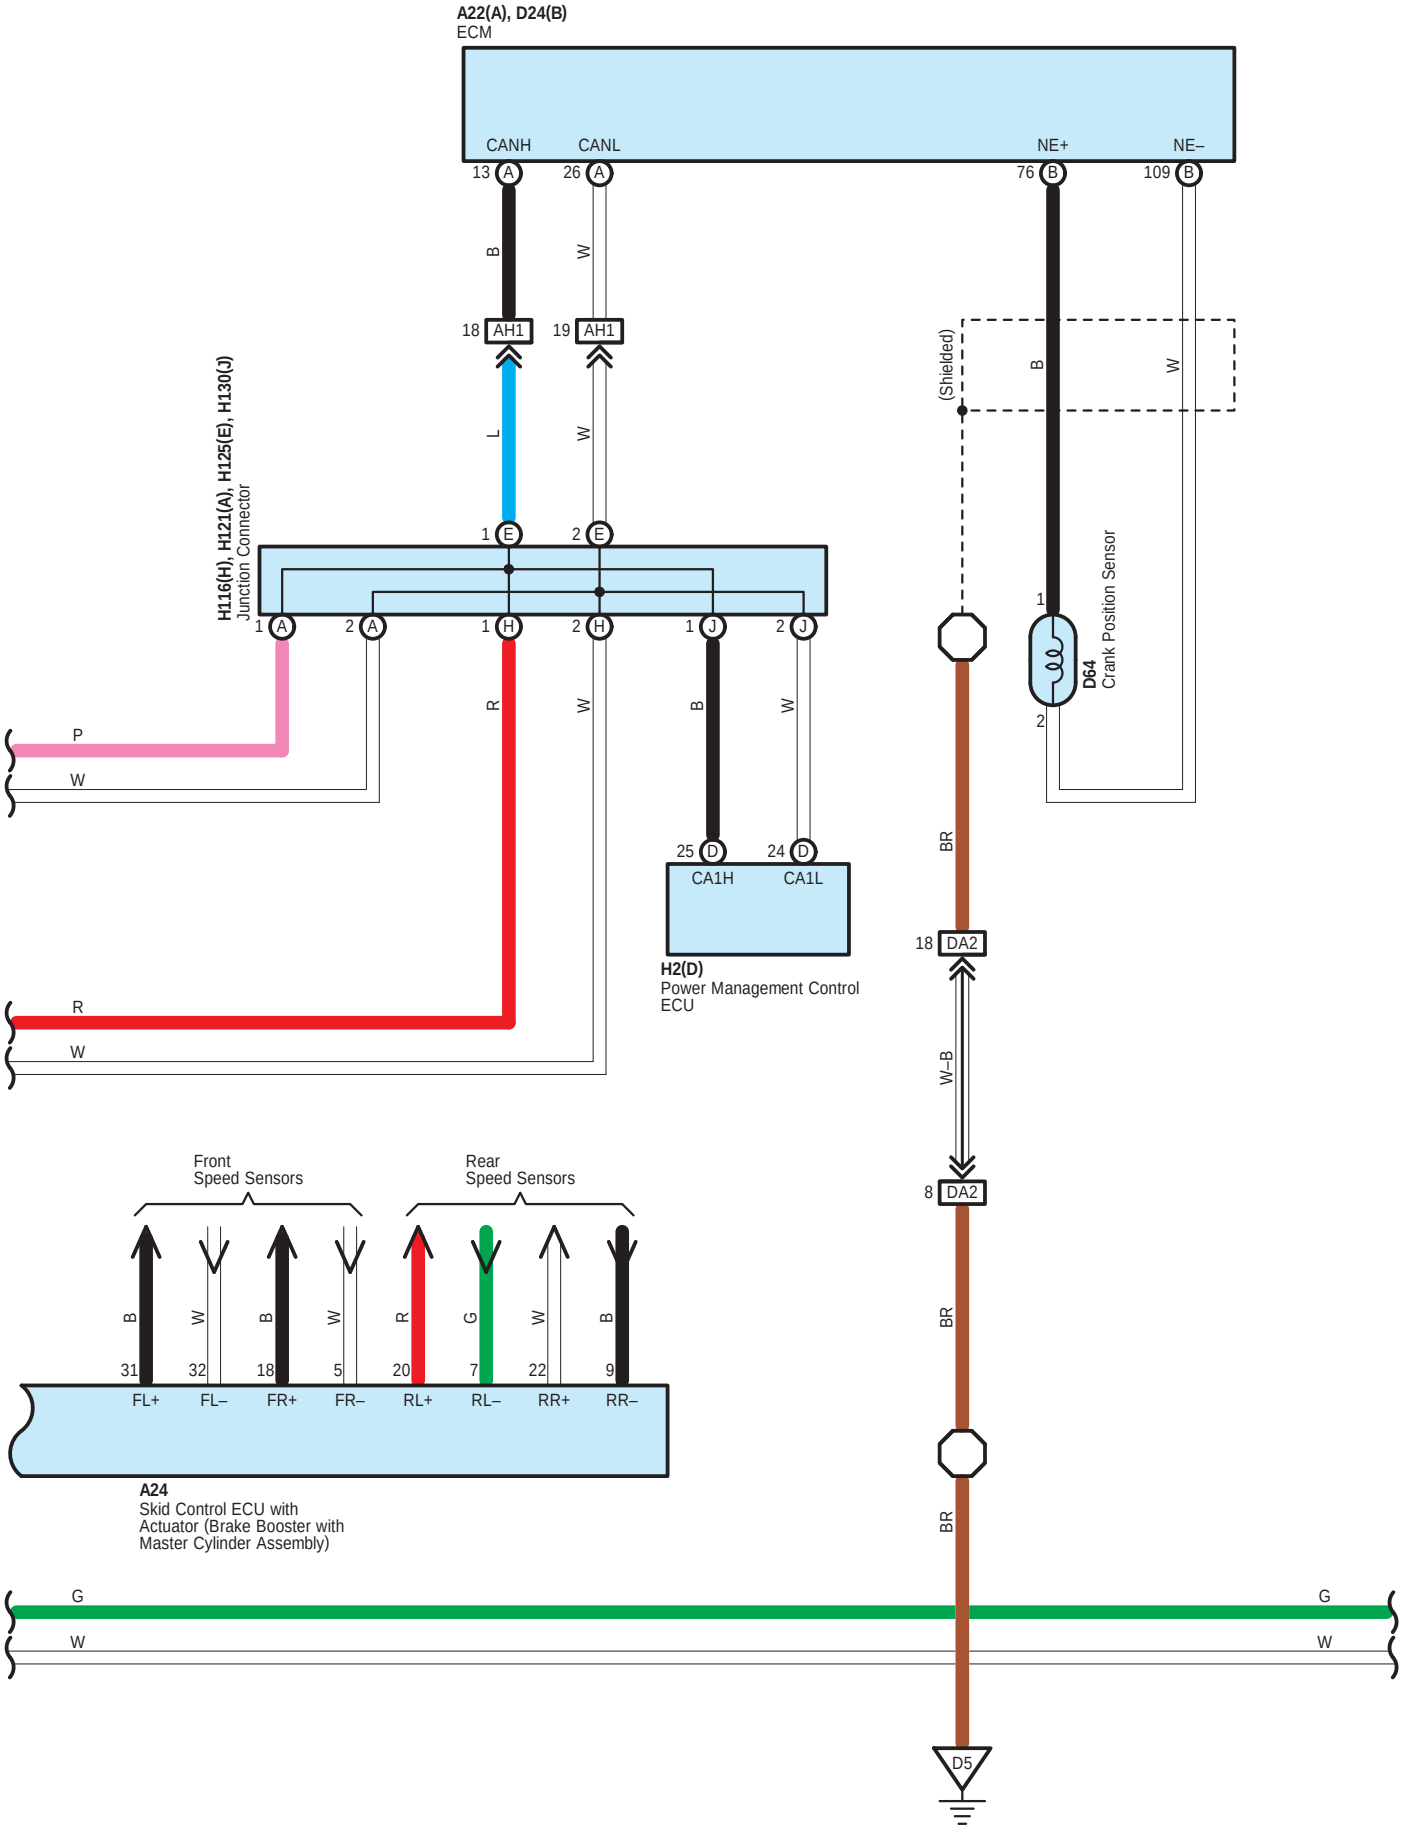
A22(A), D24(B)
ECM
CANH
CANL
NE+
NE–
13 A
26 A
76 B
109 B
B
W
18 AH1
19 AH1
(Shielded)
B
W
L
W
H116(H), H121(A), H125(E), H130(J)
Junction Connector
1 E
2 E
1 A
2 A
1 H
2 H
1 J
2 J
1
D64
Crank Position Sensor
2
R
W
B
W
P
W
25 D
24 D
CA1H
CA1L
H2(D)
Power Management Control
ECU
BR
18 DA2
R
W
W–B
8 DA2
Front
Speed Sensors
Rear
Speed Sensors
B
W
B
W
R
G
W
B
31
32
18
5
20
7
22
9
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
A24
Skid Control ECU with
Actuator (Brake Booster with
Master Cylinder Assembly)
BR
BR
G
W
G
W
D5

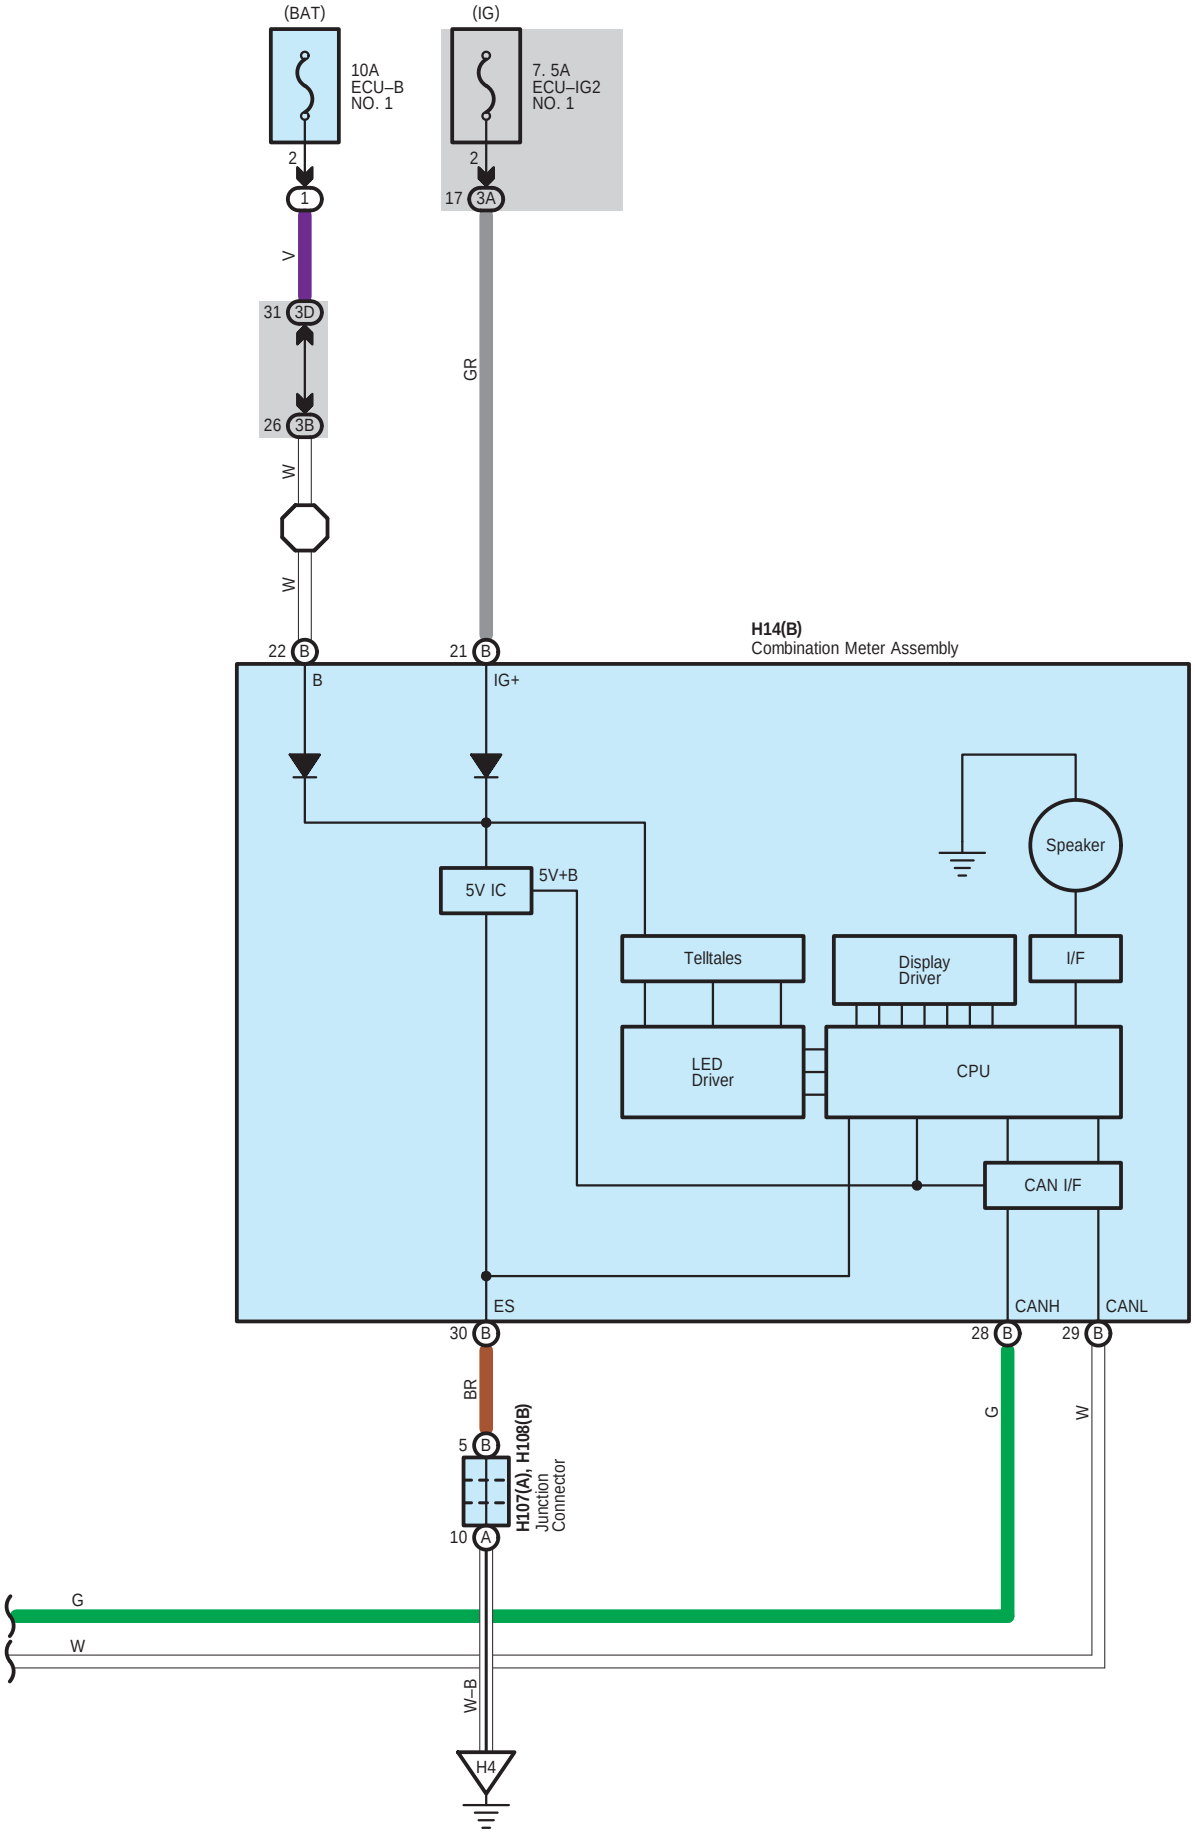
(BAT)
(IG)
10A
ECU–B
NO. 1
7. 5A
ECU–IG2
NO. 1
2
1
V
31 3D
26 3B
W
W
17 3A
GR
22 B
21 B
H14(B)
Combination Meter Assembly
B
IG+
5V IC
5V+B
Speaker
Telltales
Display
Driver
I/F
LED
Driver
CPU
CAN I/F
ES
CANH
CANL
30 B
28 B
29 B
BR
G
W
5 B
10 A
H107(A), H108(B)
Junction
Connector
G
W
W–B
H4

A 22

Black

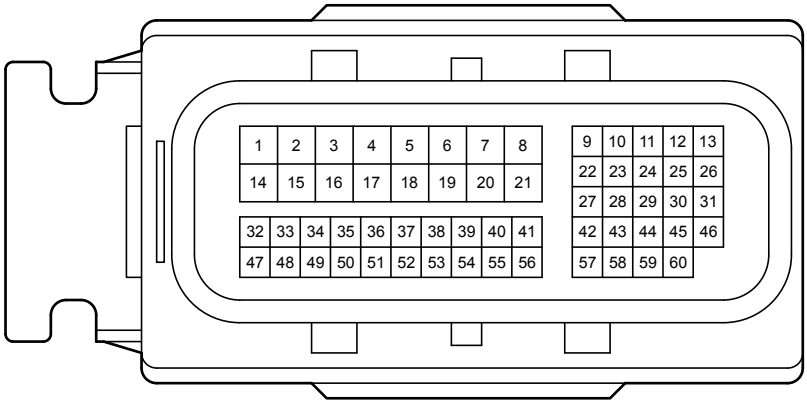

A 24

Black

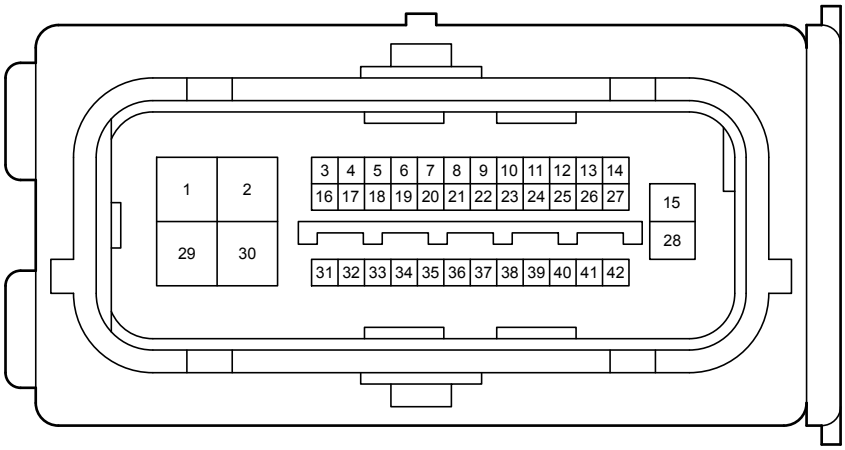

D 24

Black

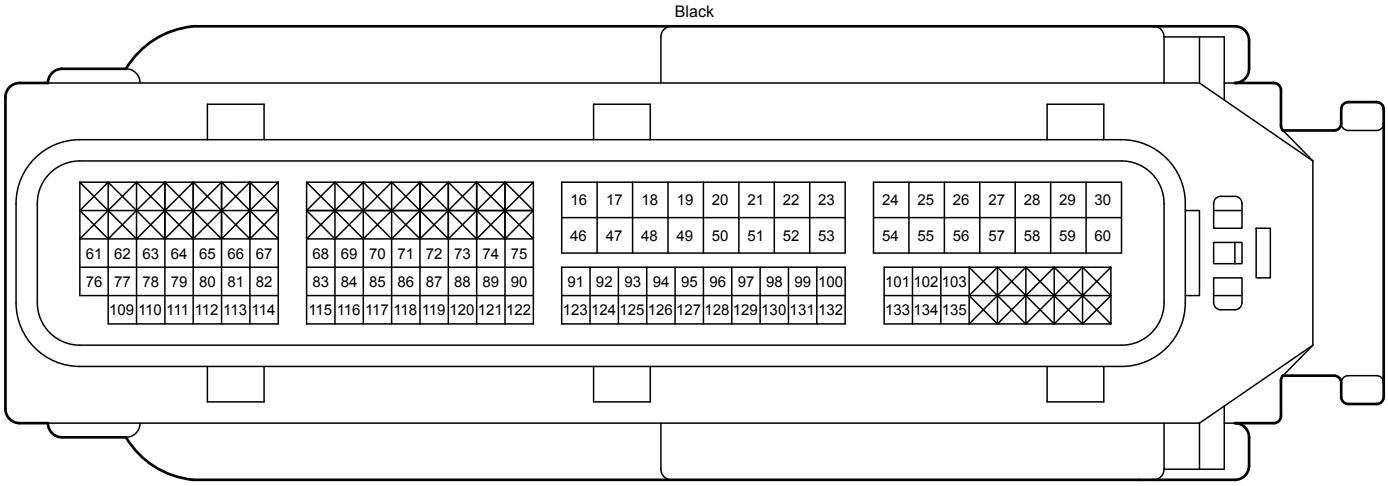

D 64
Black

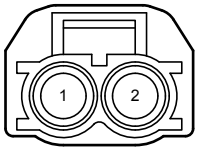

H 2
Gray

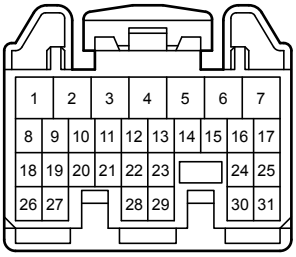

H 14
Black

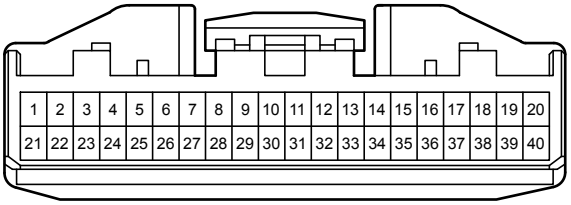

H 29
Black

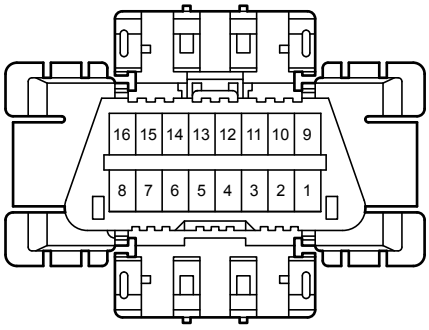

H107
Gray

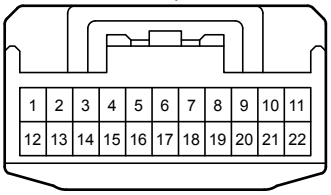

H108
Gray

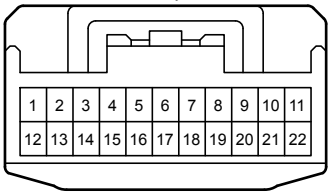

H116
White



H117
White



H119
White



H121
White



H122
White



H125
White



H130
White



H131
White



c 1
Black

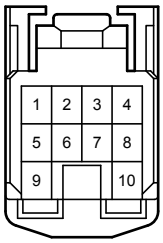

c 2
White

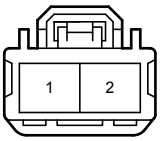

z 18
White

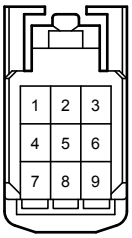

3A
White

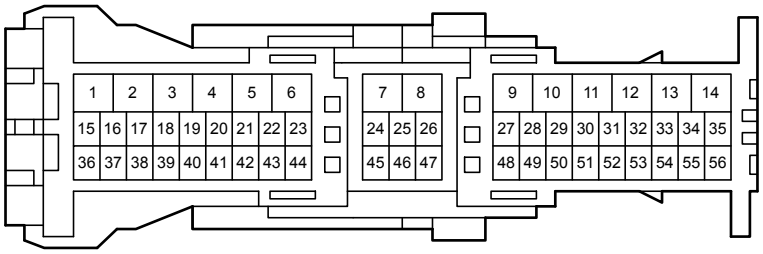

3B
White

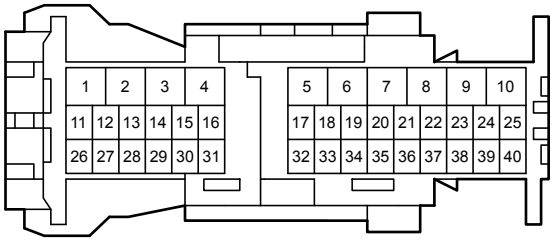

3D
White

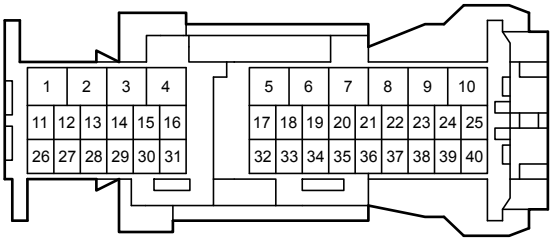

AA2
White

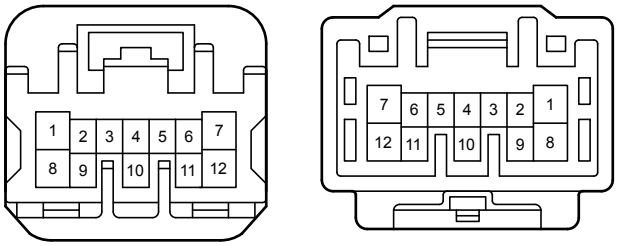

AH1
White

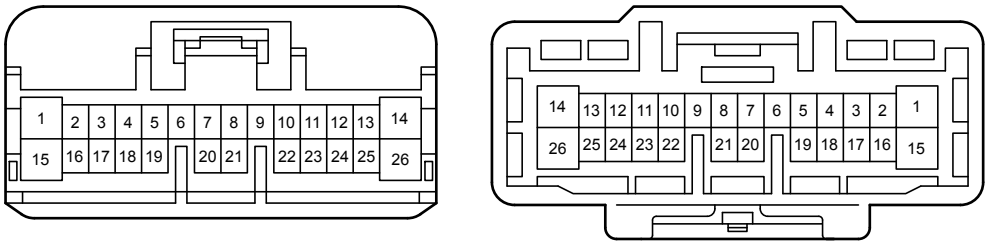

DA2
White

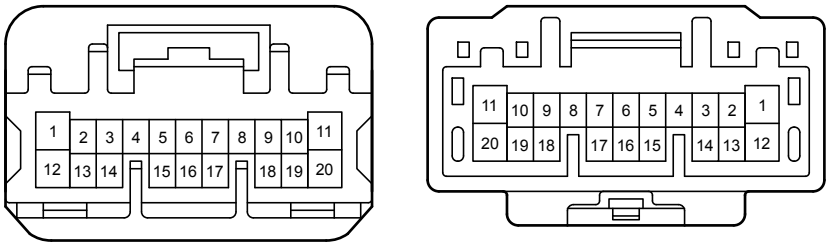

HA7
Gray

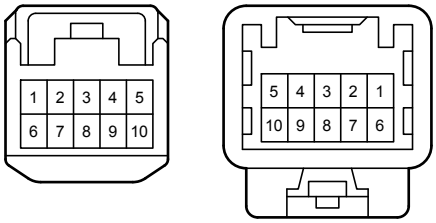

HA9
Blue

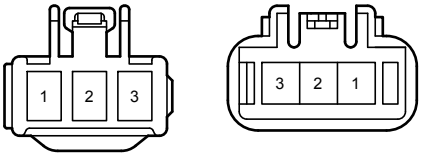

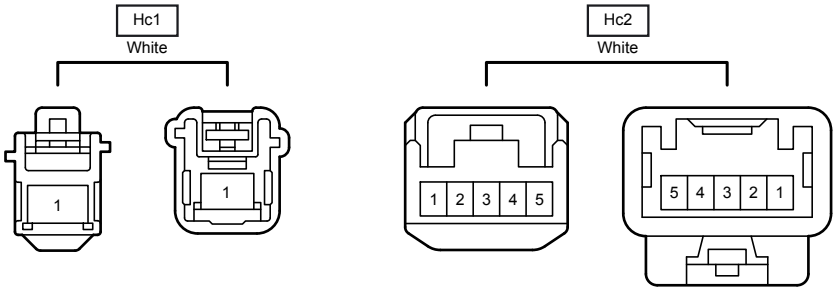
Hc1
White
1
1
Hc2
White
1 2 3 4 5
5 4 3 2 1