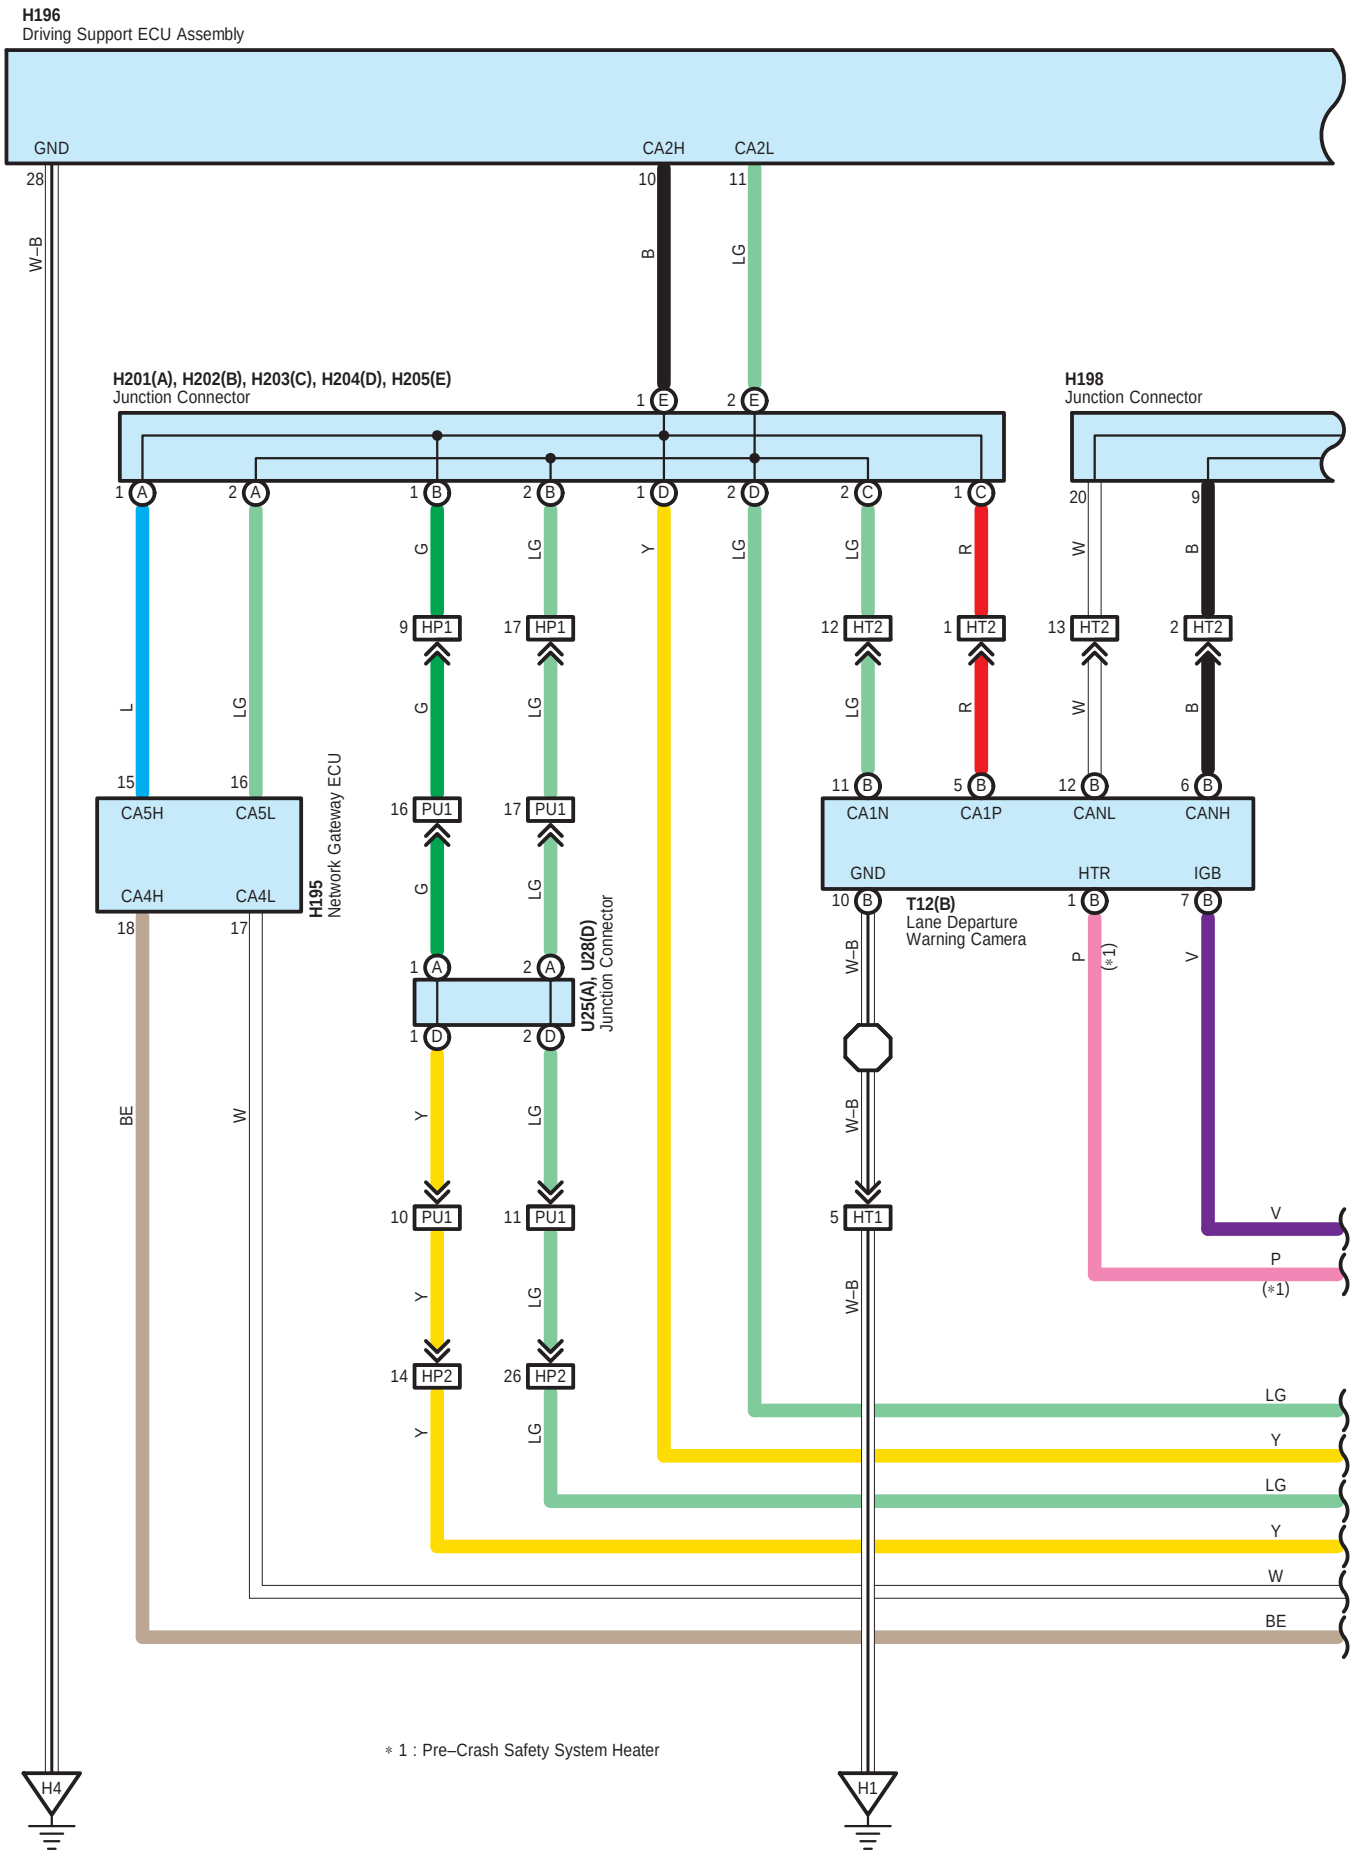

* 1 : Pre–Crash Safety System Heater

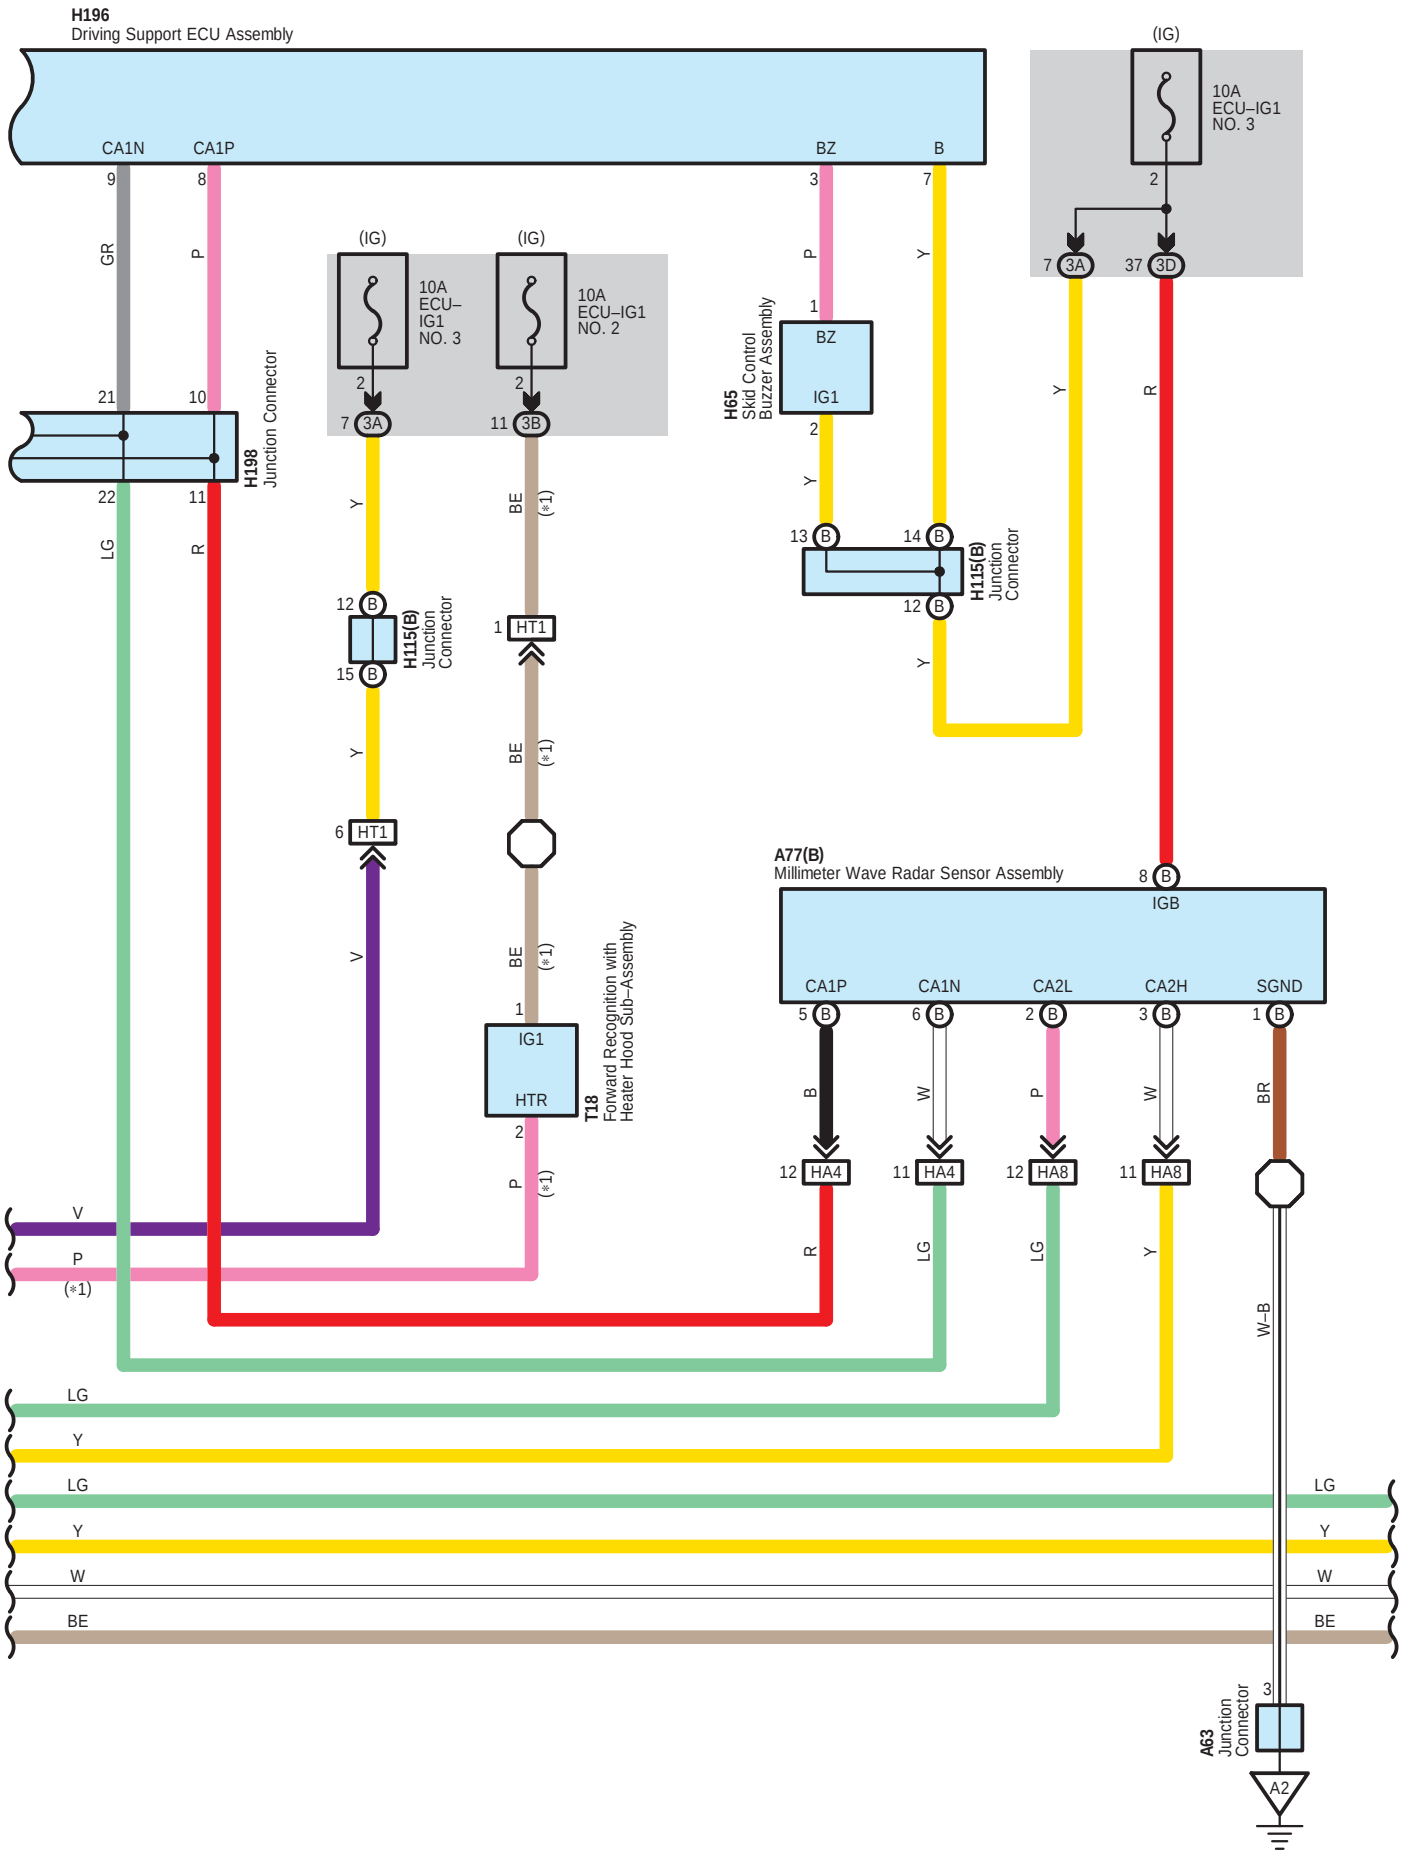
H196
Driving Support ECU Assembly
CA1N
CA1P
BZ
B
9
8
3
7
GR
P
P
Y
(IG)
10A
ECU–IG1
NO. 3
(IG)
10A
ECU–IG1
NO. 2
(IG)
10A
ECU–IG1
NO. 3
2
7 3A
2
11 3B
2
7 3A
37 3D
H65
Skid Control
Buzzer Assembly
1
BZ
IG1
2
Y
21
10
H198
Junction Connector
22
11
LG
R
Y
BE (*1)
Y
R
13 B
14 B
12 B
H115(B)
Junction
Connector
12 B
15 B
H115(B)
Junction
Connector
1 HT1
Y
BE (*1)
6 HT1
V
BE (*1)
1
IG1
HTR
2
P (*1)
T18
Forward Recognition with
Heater Hood Sub–Assembly
A77(B)
Millimeter Wave Radar Sensor Assembly
8 B
IGB
CA1P
CA1N
CA2L
CA2H
SGND
5 B
6 B
2 B
3 B
1 B
B
W
P
W
BR
12 HA4
11 HA4
12 HA8
11 HA8
R
LG
LG
Y
W–B
V
P
(*1)
LG
Y
LG
Y
W
BE
LG
Y
W
BE
3
A63
Junction
Connector
A2

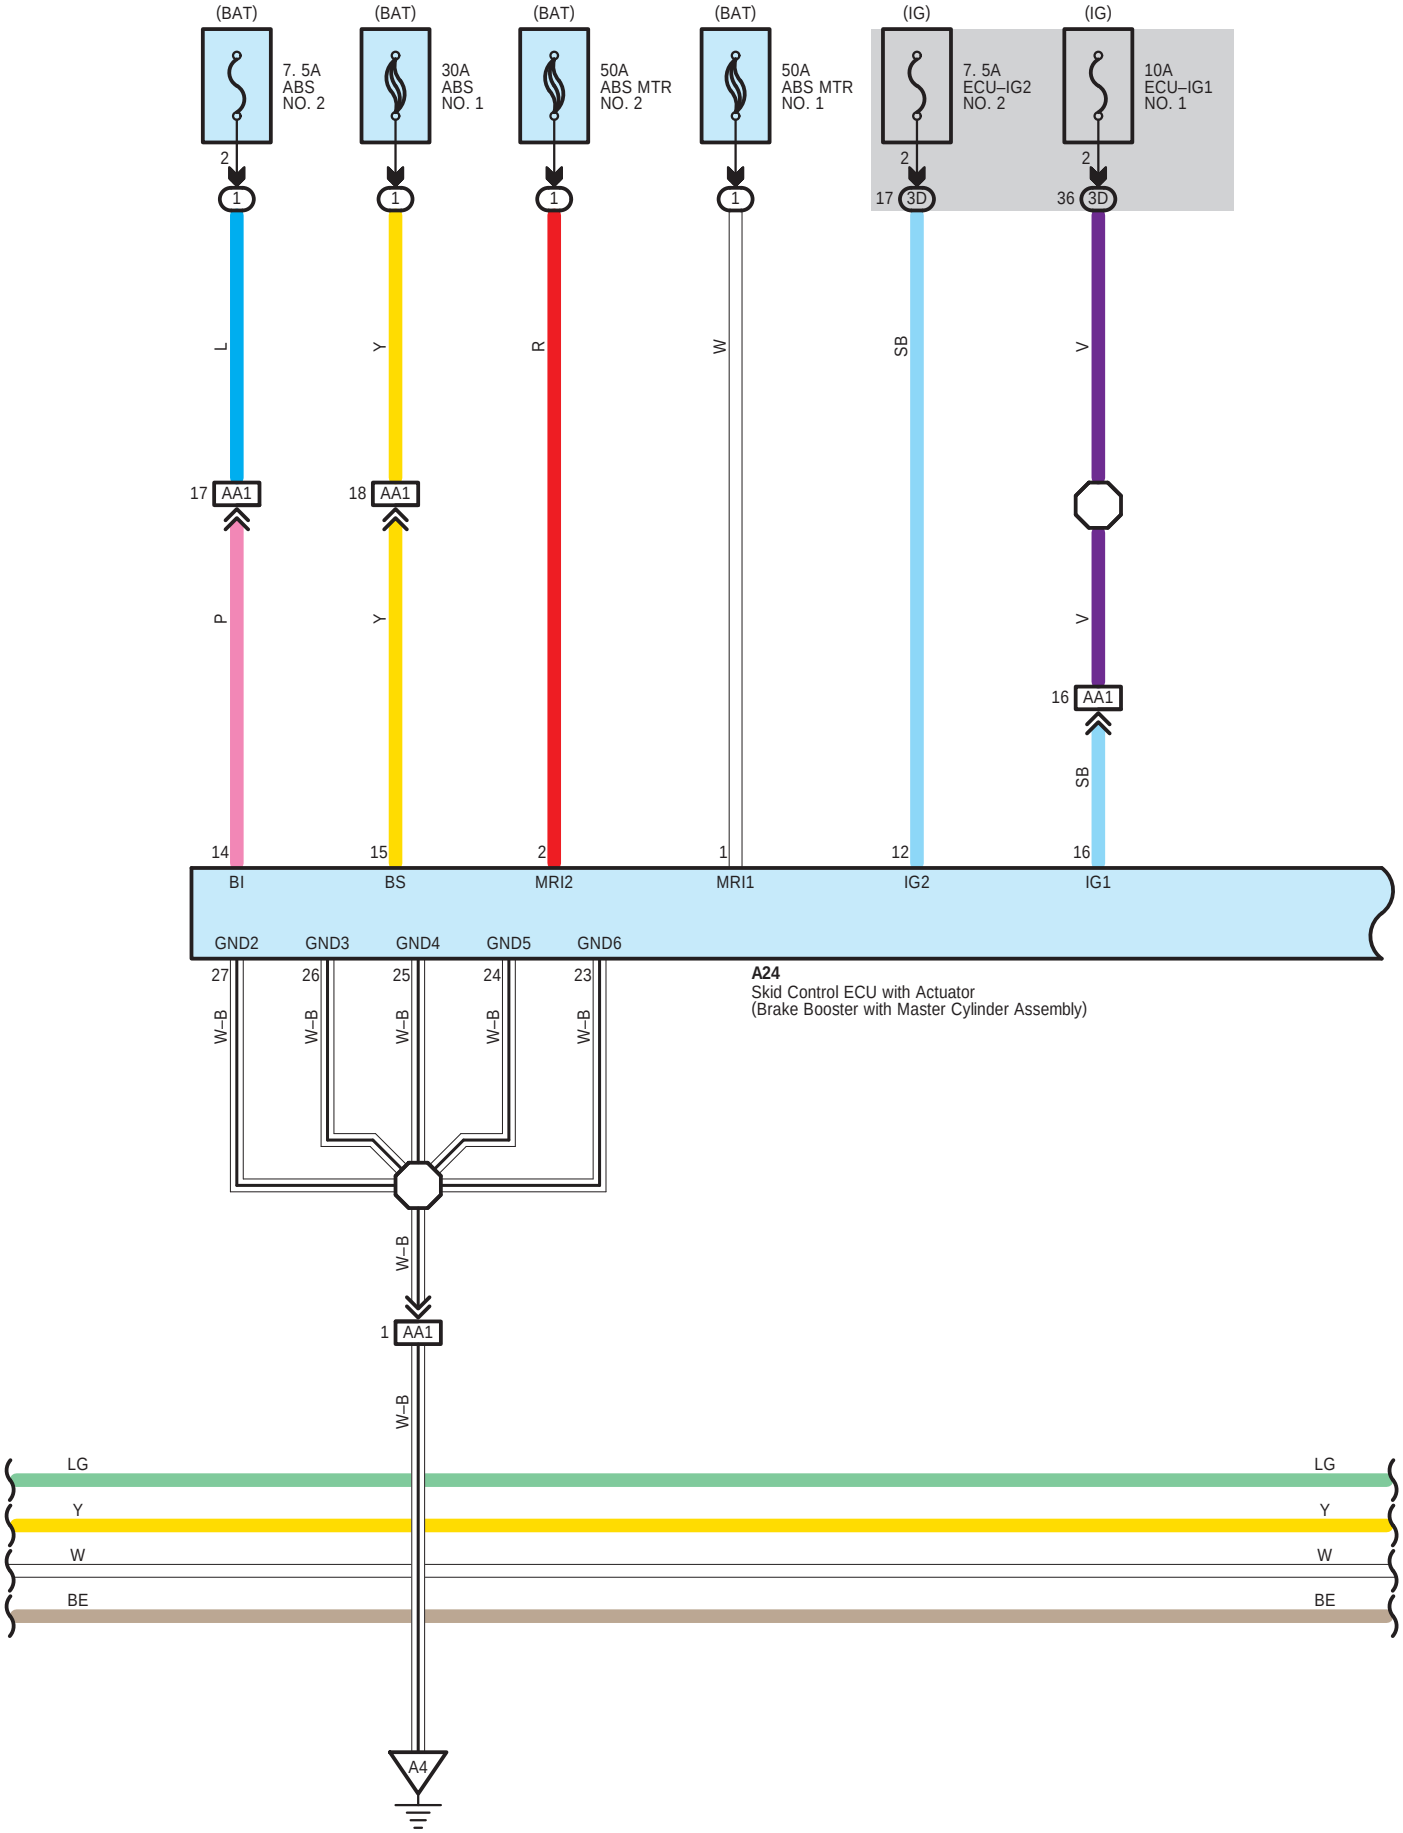
(BAT)
7. 5A
ABS
NO. 2
(BAT)
30A
ABS
NO. 1
(BAT)
50A
ABS MTR
NO. 2
(BAT)
50A
ABS MTR
NO. 1
(IG)
7. 5A
ECU–IG2
NO. 2
(IG)
10A
ECU–IG1
NO. 1
2
1
17 3D
36 3D
L
Y
R
W
SB
V
17 AA1
18 AA1
16 AA1
P
14
15
2
1
12
16
BI
BS
MRI2
MRI1
IG2
IG1
GND2
GND3
GND4
GND5
GND6
27
26
25
24
23
W–B
A24
Skid Control ECU with Actuator
(Brake Booster with Master Cylinder Assembly)
LG
Y
W
BE
A4

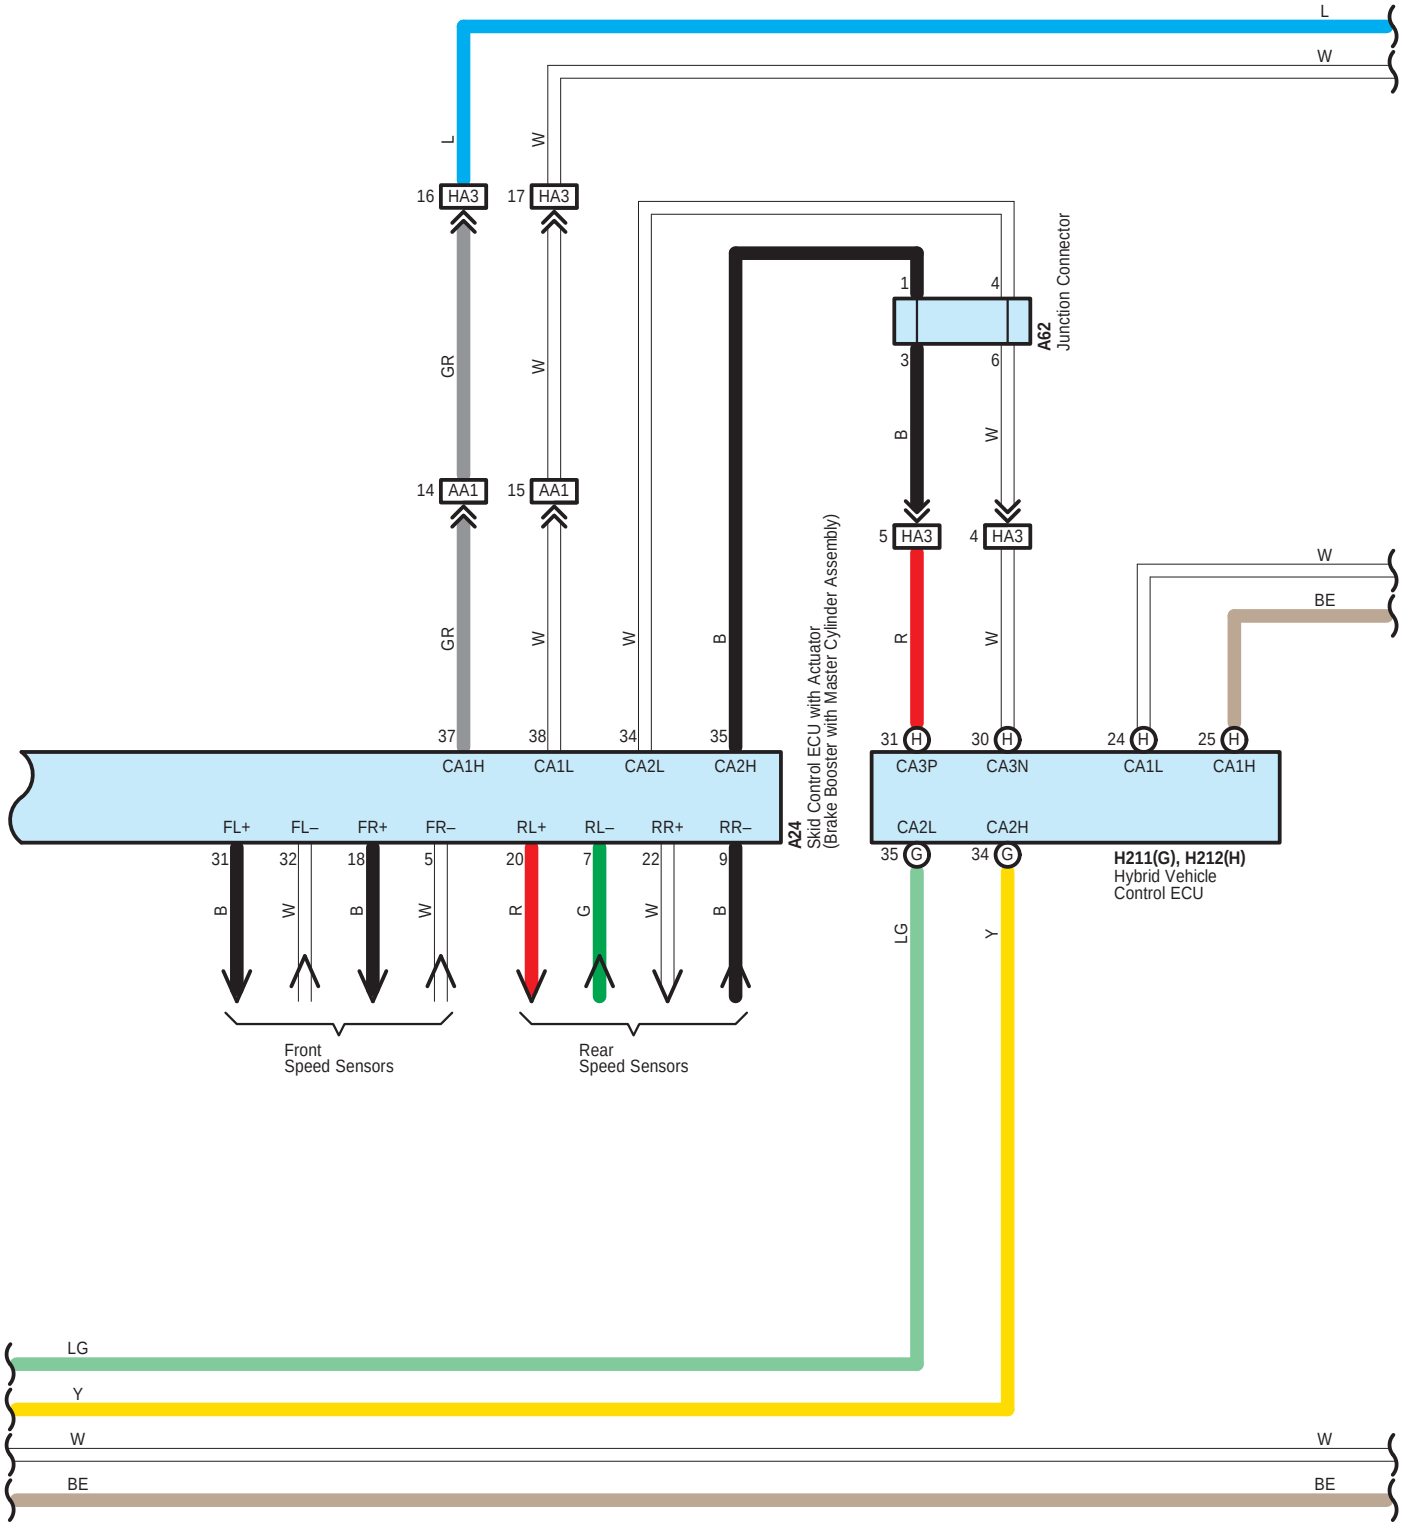
L
W
16 HA3
17 HA3
GR
W
14 AA1
15 AA1
1
4
3
6
A62
Junction Connector
B
W
5 HA3
4 HA3
R
W
W
BE
37
38
34
35
CA1H
CA1L
CA2L
CA2H
A24
Skid Control ECU with Actuator
(Brake Booster with Master Cylinder Assembly)
31 H
30 H
24 H
25 H
CA3P
CA3N
CA1L
CA1H
CA2L
CA2H
35 G
34 G
H211(G), H212(H)
Hybrid Vehicle
Control ECU
FL+
FL–
FR+
FR–
RL+
RL–
RR+
RR–
31
32
18
5
20
7
22
9
B
W
B
W
R
G
W
B
LG
Y
Front
Speed Sensors
Rear
Speed Sensors
LG
Y
W
BE
W
BE

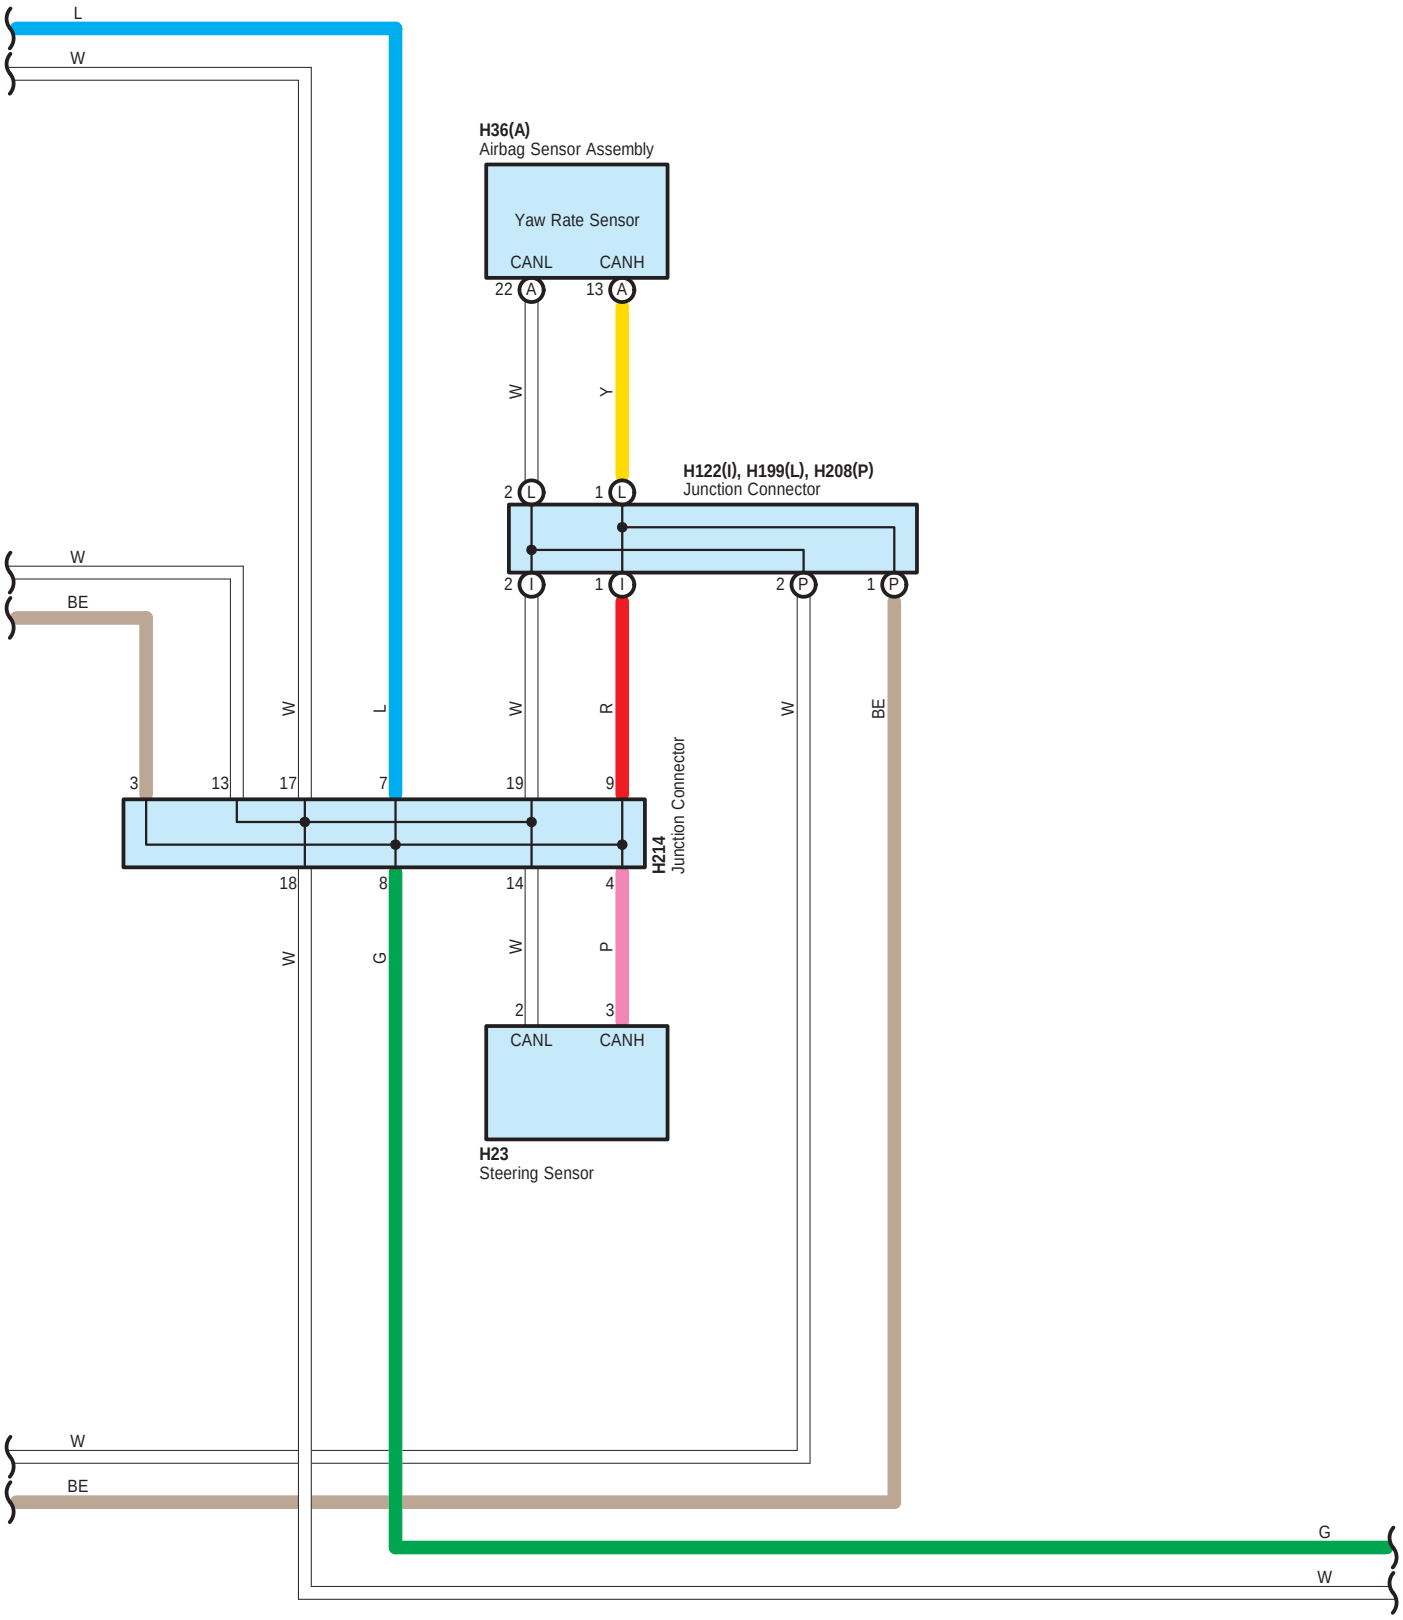
L
W
H36(A)
Airbag Sensor Assembly
Yaw Rate Sensor
CANL
CANH
22 A
13 A
W
Y
H122(I), H199(L), H208(P)
Junction Connector
2 L
1 L
W
BE
2 I
1 I
2 P
1 P
W
L
W
R
W
BE
3
13
17
7
19
9
H214
Junction Connector
18
8
14
4
W
G
W
P
2
3
CANL
CANH
H23
Steering Sensor
W
BE
G
W

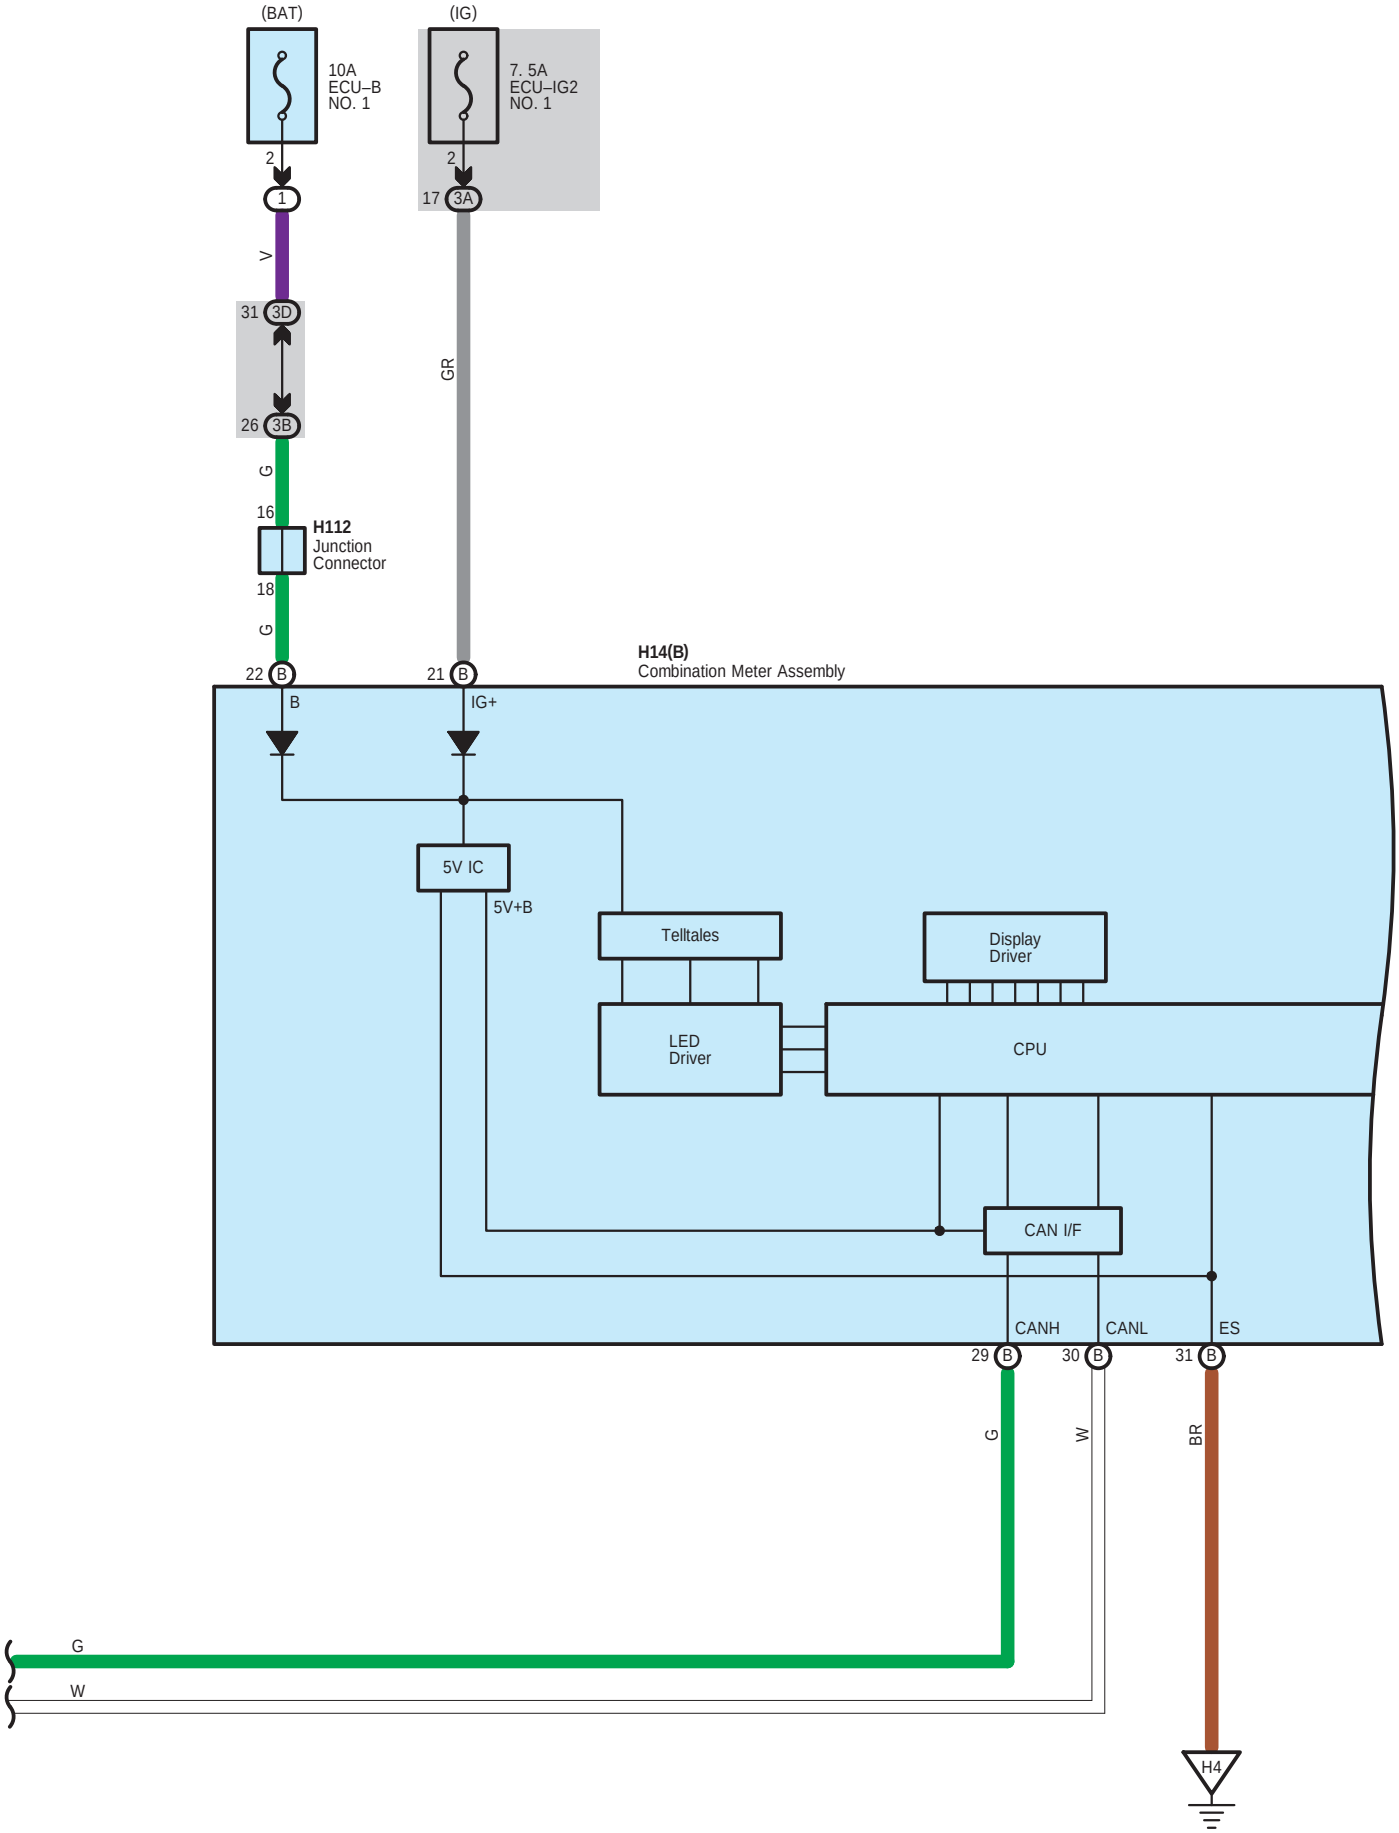
(BAT)
(IG)
10A
ECU–B
NO. 1
7. 5A
ECU–IG2
NO. 1
2
1
V
31 3D
26 3B
G
16
H112
Junction
Connector
18
G
2
17 3A
GR
22 B
21 B
B
IG+
H14(B)
Combination Meter Assembly
5V IC
5V+B
Telltales
LED
Driver
Display
Driver
CPU
CAN I/F
CANH
CANL
ES
29 B
30 B
31 B
G
W
BR
G
W
H4

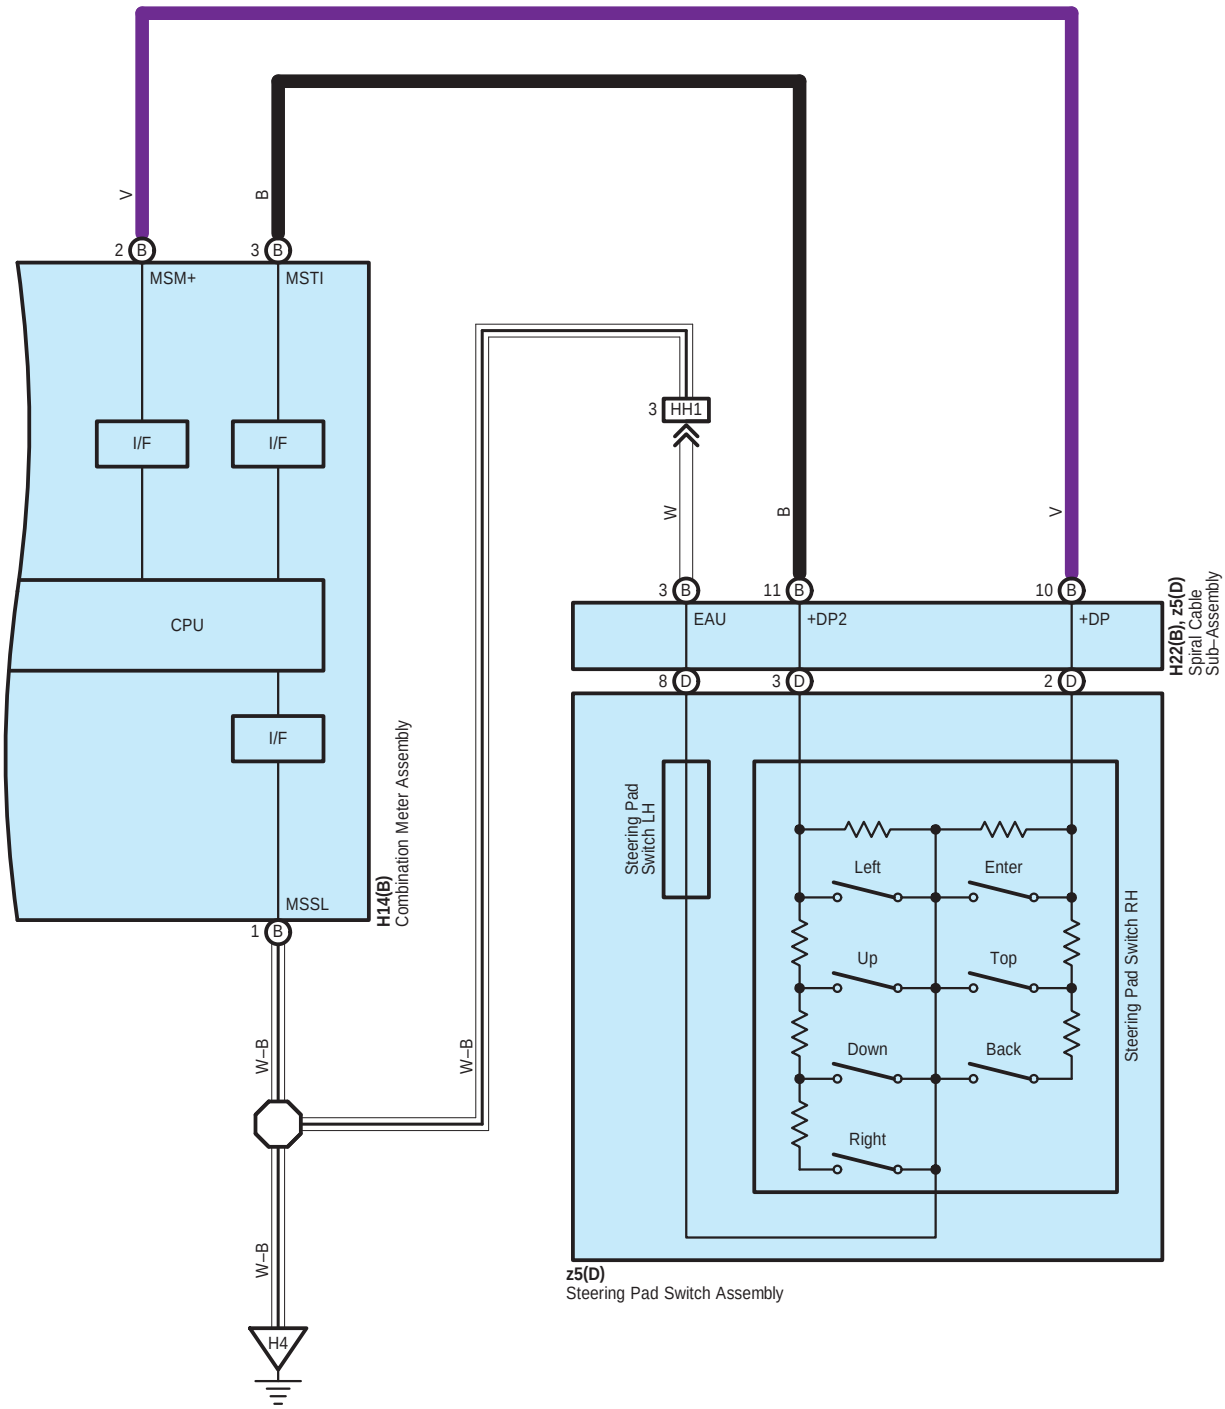
V
B
2 B
3 B
MSM+
MSTI
I/F
I/F
CPU
I/F
MSSL
1 B
H14(B)
Combination Meter Assembly
W–B
W–B
W–B
H4
3 HH1
W
B
V
3 B
11 B
10 B
EAU
+DP2
+DP
H22(B), z5(D)
Spiral Cable
Sub–Assembly
8 D
3 D
2 D
Steering Pad
Switch LH
Left
Enter
Up
Top
Down
Back
Right
Steering Pad Switch RH
z5(D)
Steering Pad Switch Assembly

A 24
Black

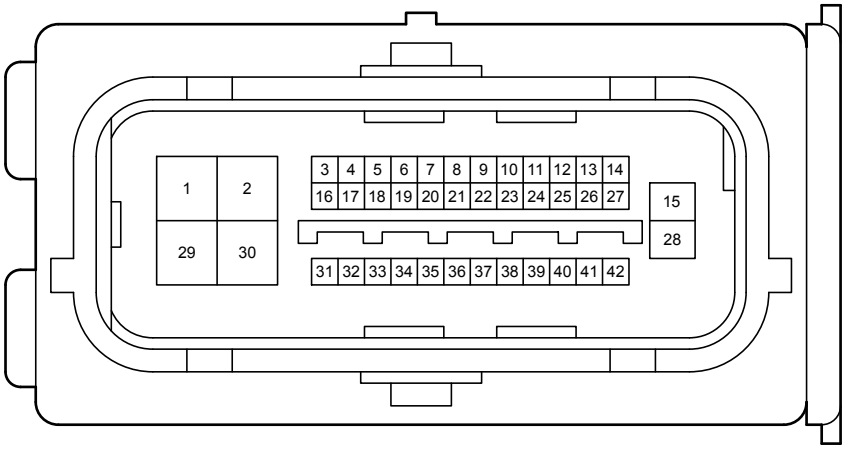

A 62
White

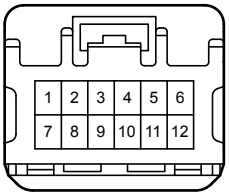

A 63
Gray

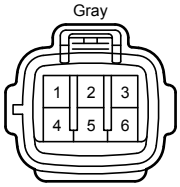

A 77
Black

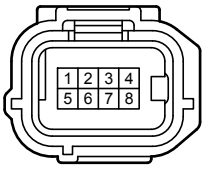

H 14
Black

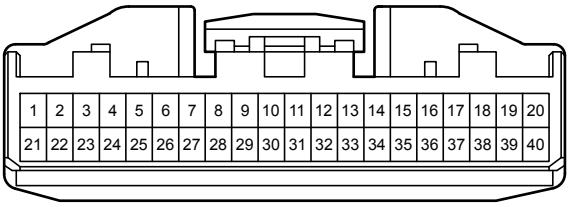

H 22
Black

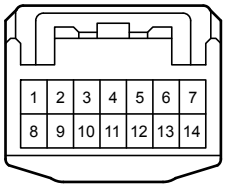

H 23
Blue

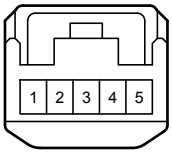

H 36
Yellow

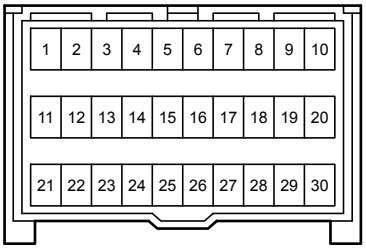

H 65
Blue



H112
White

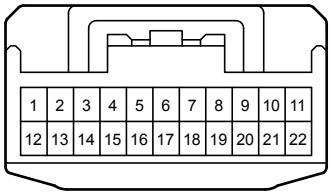

H115
Black

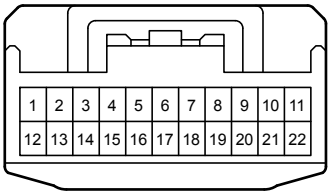

H122
White



H195
Black

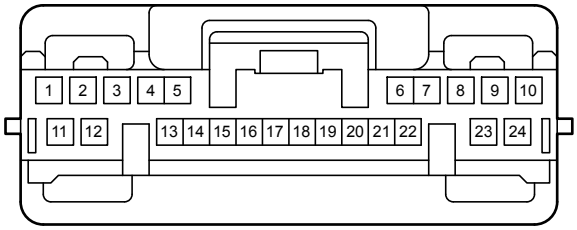

H196
White

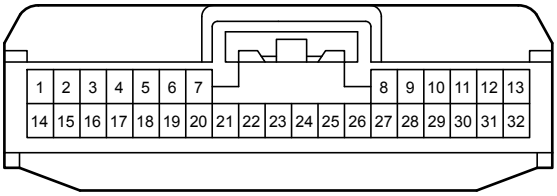

H198
Black

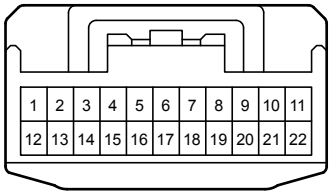

H199
White



H201
White



H202
White



H203
White



H204
White



H205
White



H208
White



H211
Gray

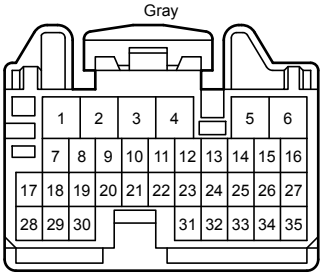

H212
Gray

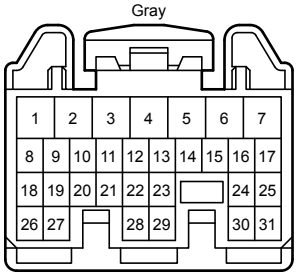

H214
White

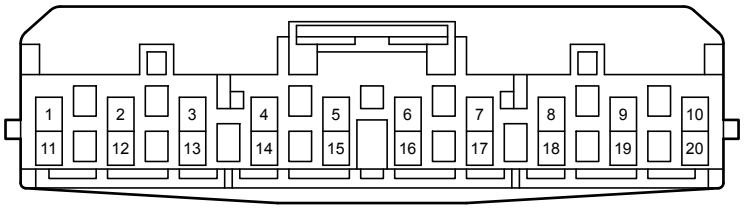

T 12
Gray

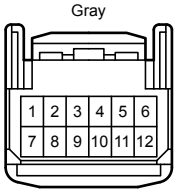

T 18
Black



U 25
White



U 28
White



z 5
Black

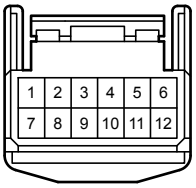

3A
White

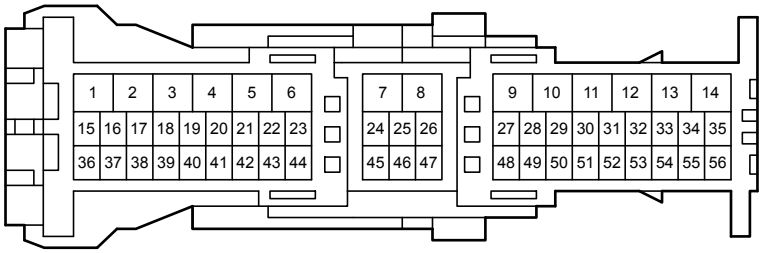

3B
White

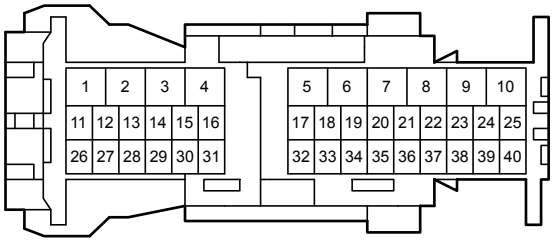

3D
White

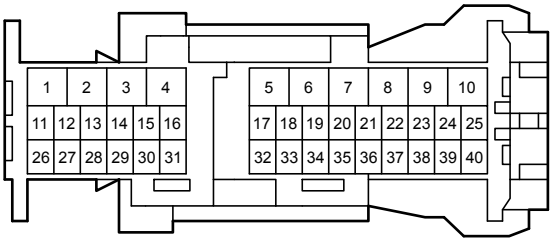

AA1
Blue

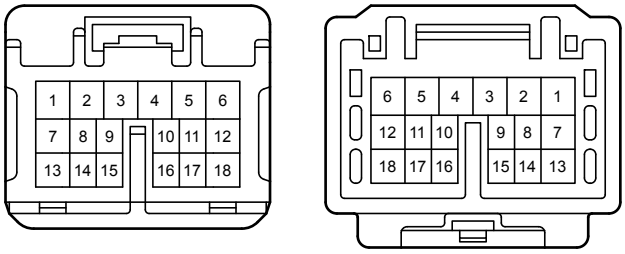

HA3
Gray

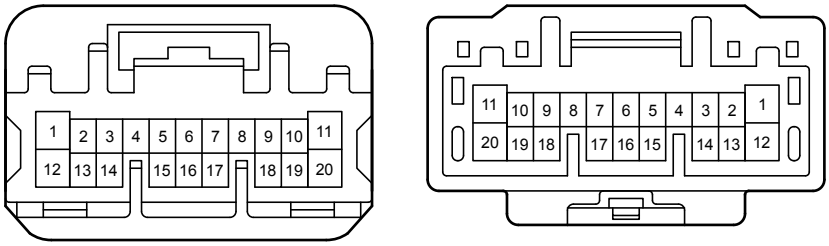

HA4
Blue

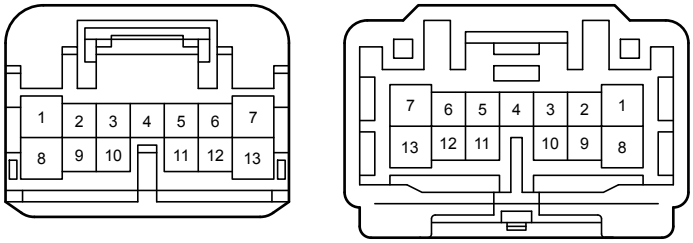

HA8
Gray

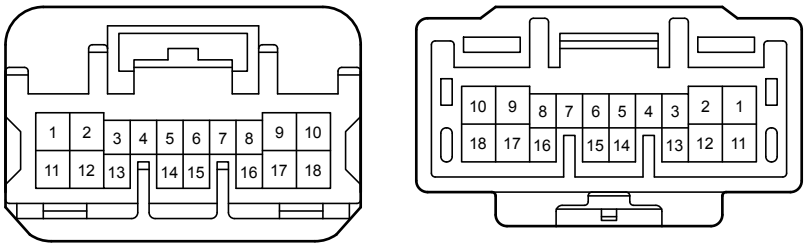

HH1
White

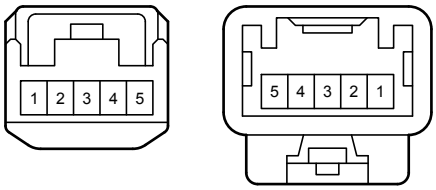

HP1
White

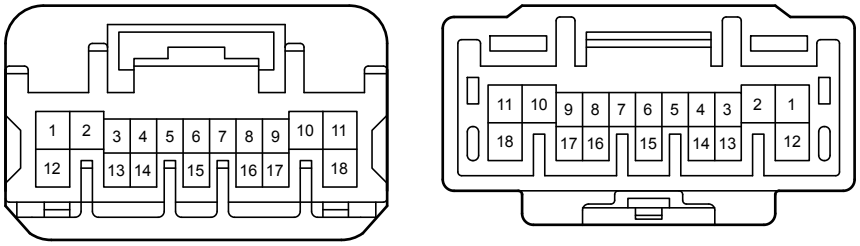

HP2
White

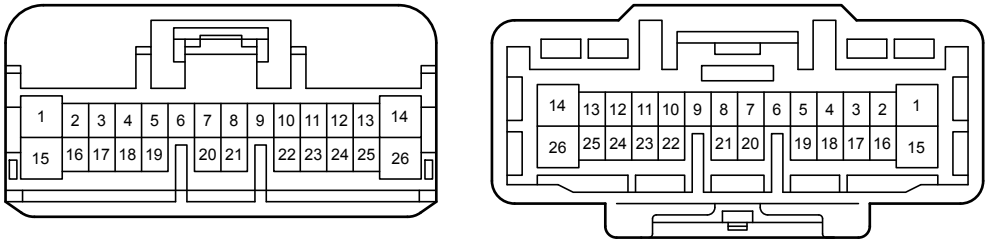

HT1
White

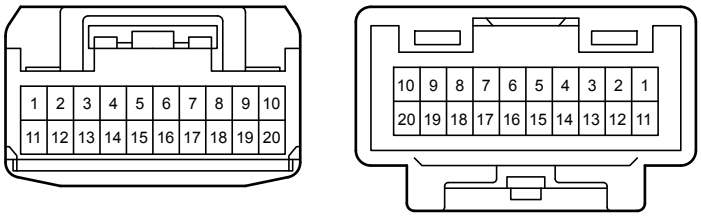

HT2
Gray

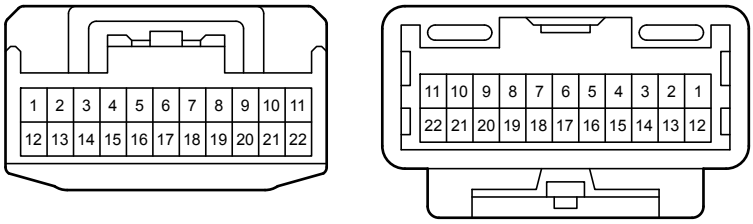
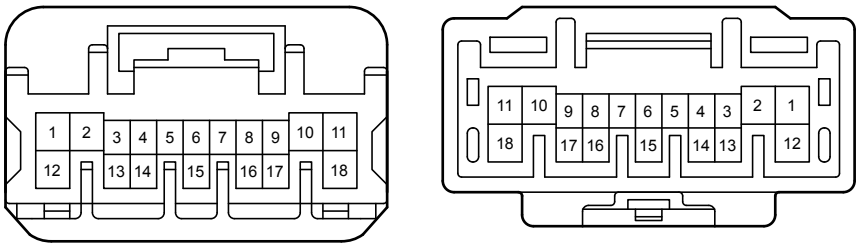
PU1
White